




MANUAL PERGOLA WALL MOUNTED 2 POSTS

ELECTRIC 3×4m

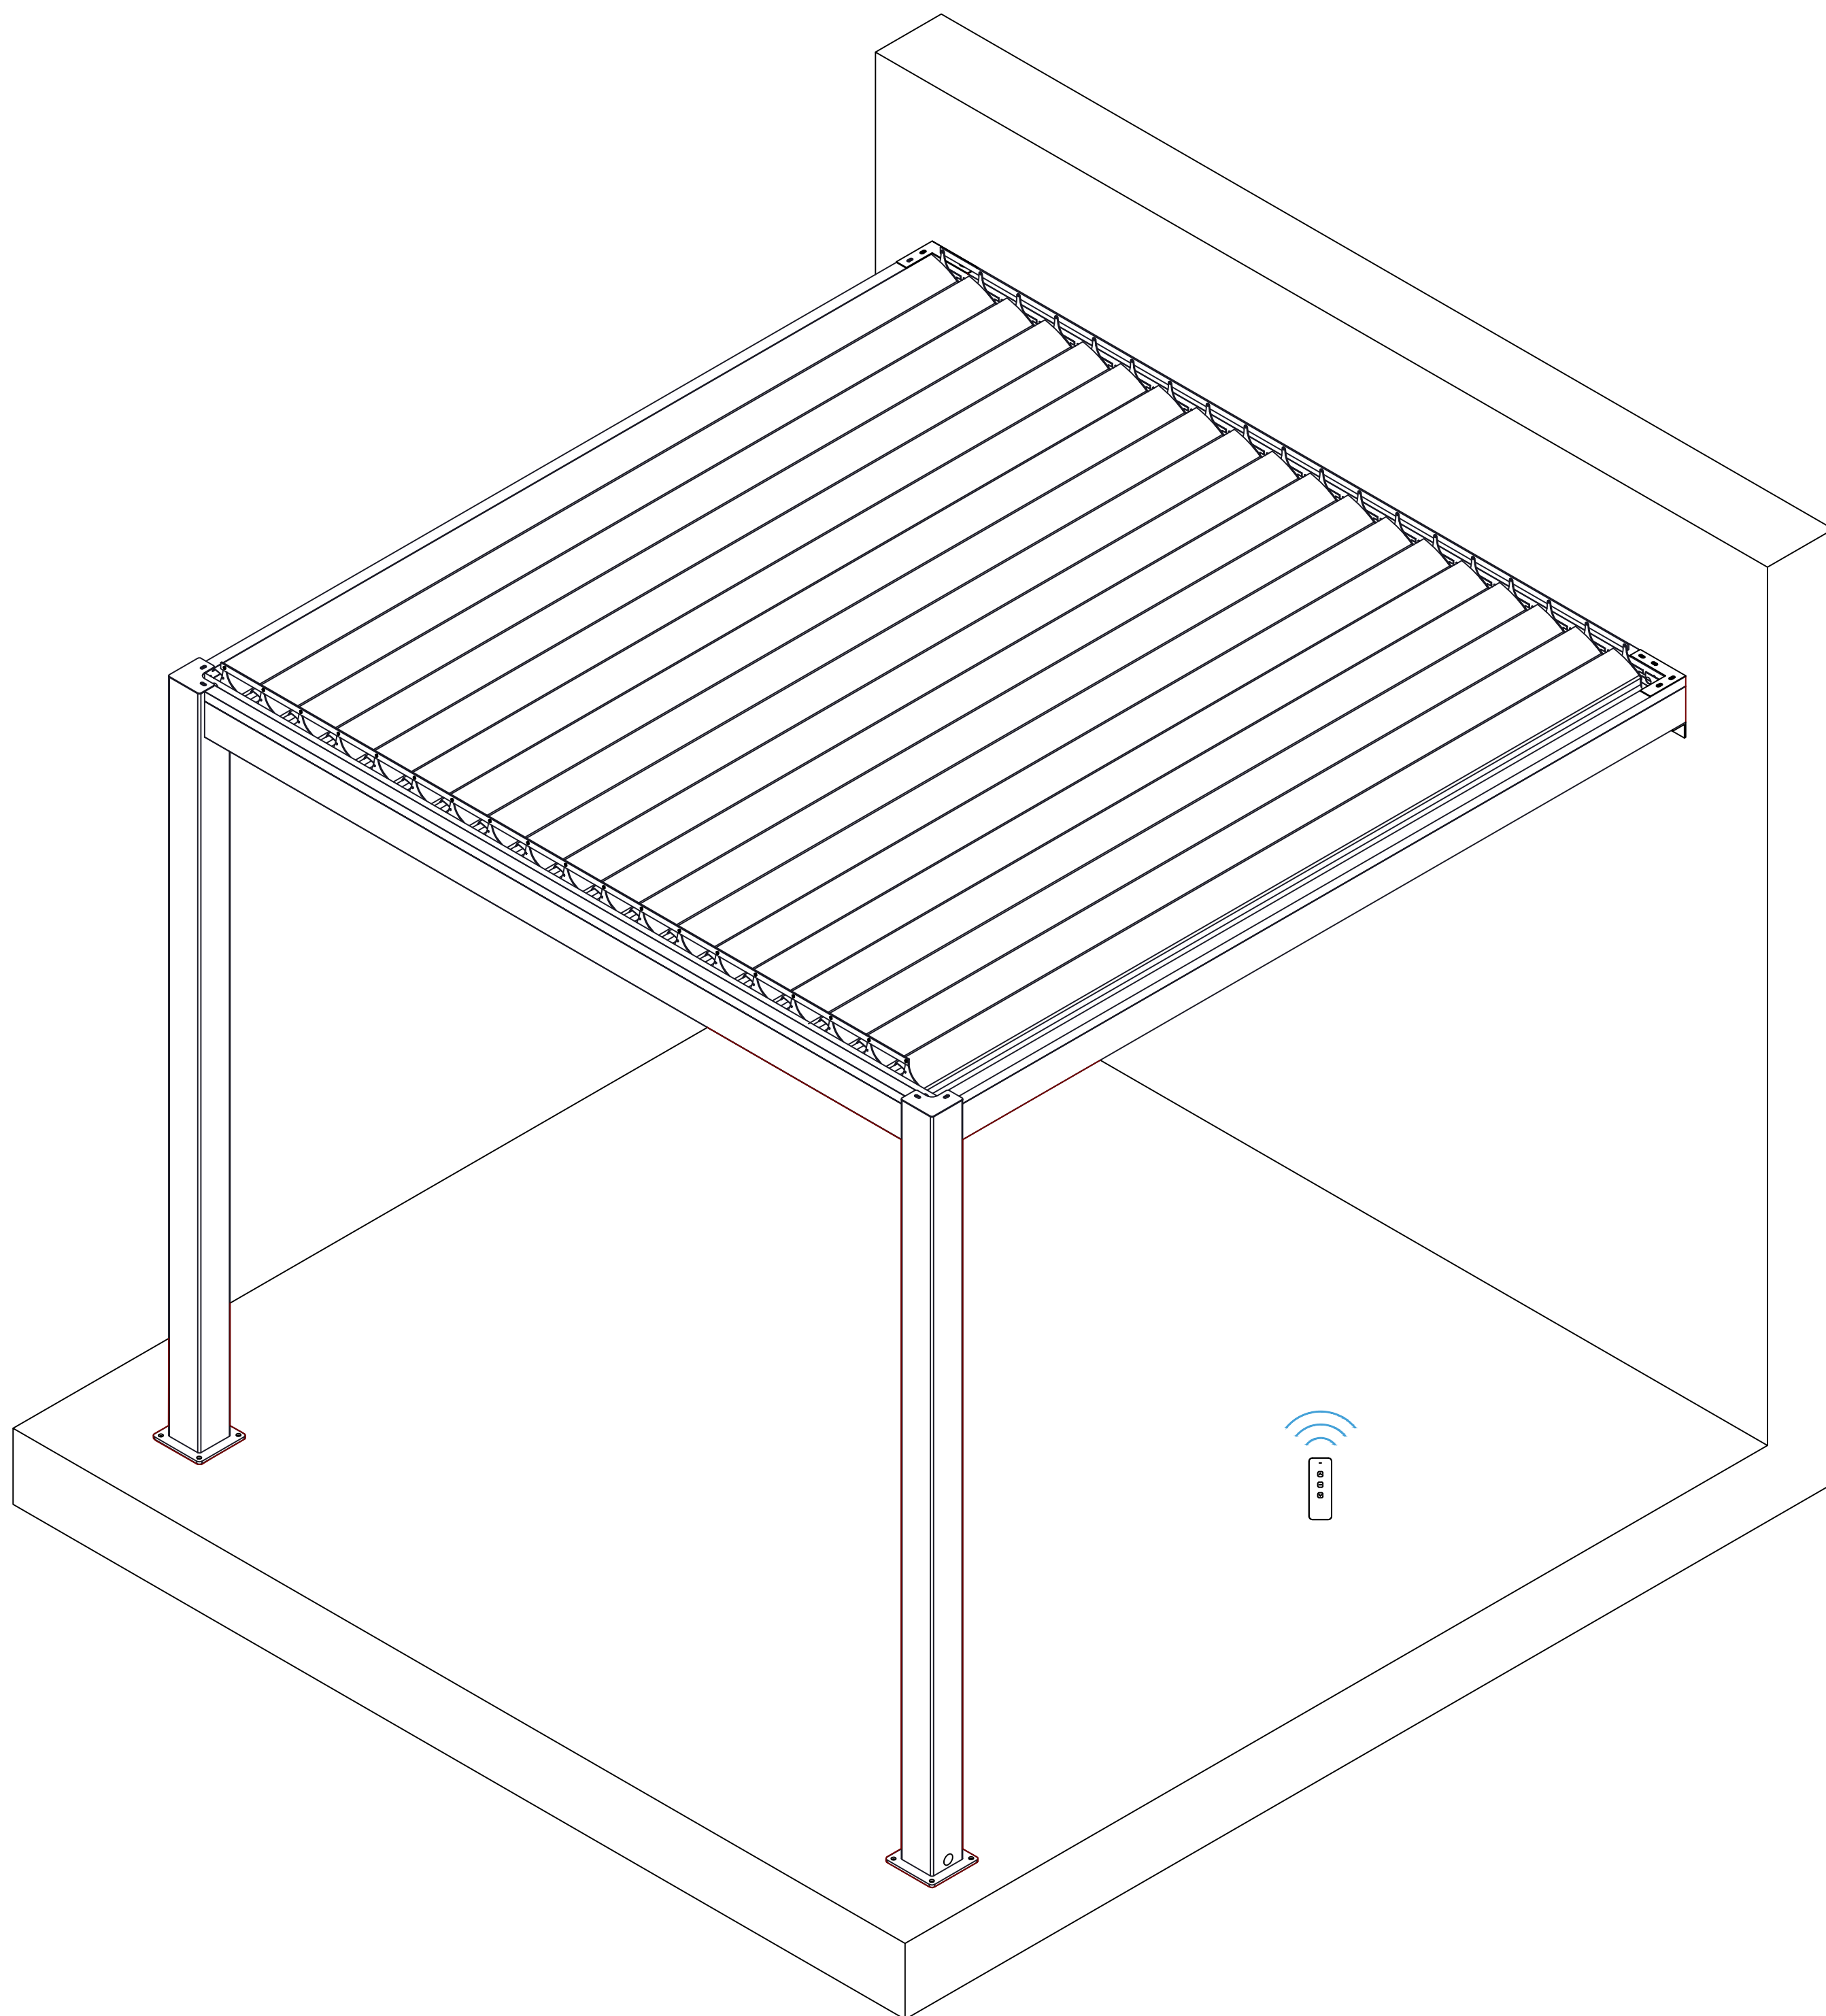










Installation and Wind Management Guidelines

1.Installation on Various Surfaces

For WPC (Wood Plastic Composite), antiseptic wood, ceramic, or stone flooring, it is essential to either concrete the post directly or construct a 50cm concrete foundation beneath the base plate to secure it firmly.


2.Wind Management

In the event of strong winds, the louvers must be opened to maintain proper air circulation and minimise wind resistance.”





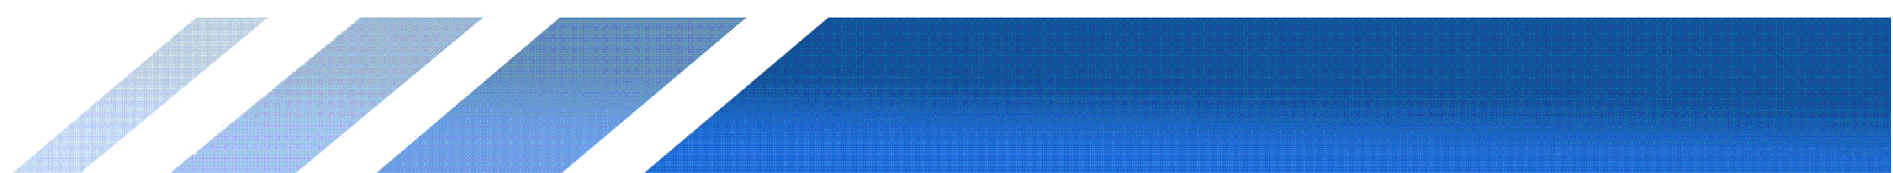
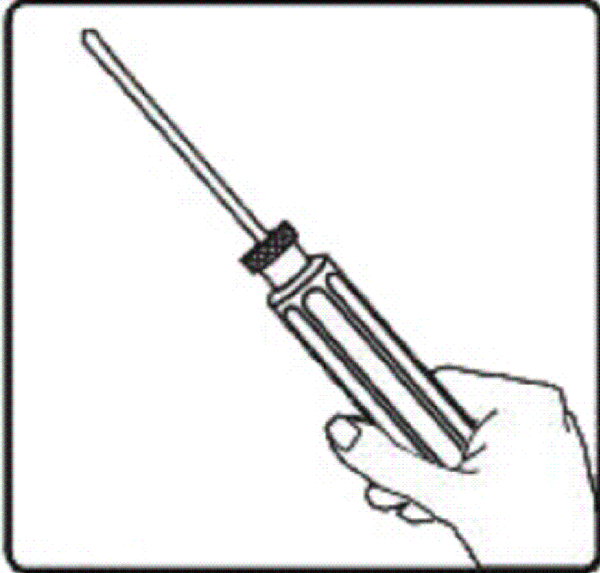
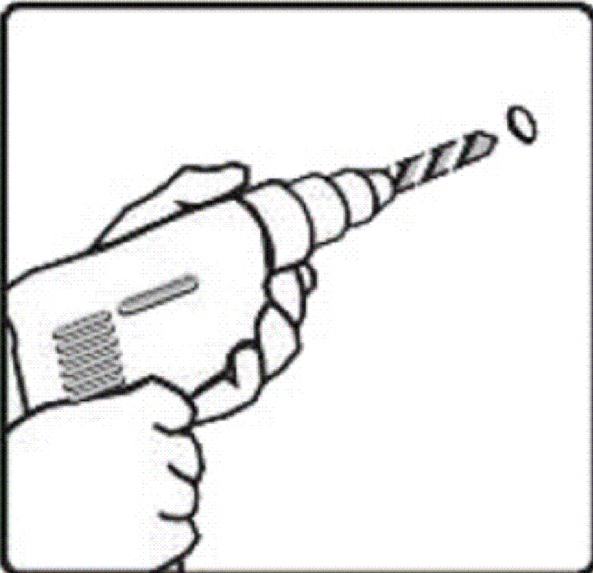
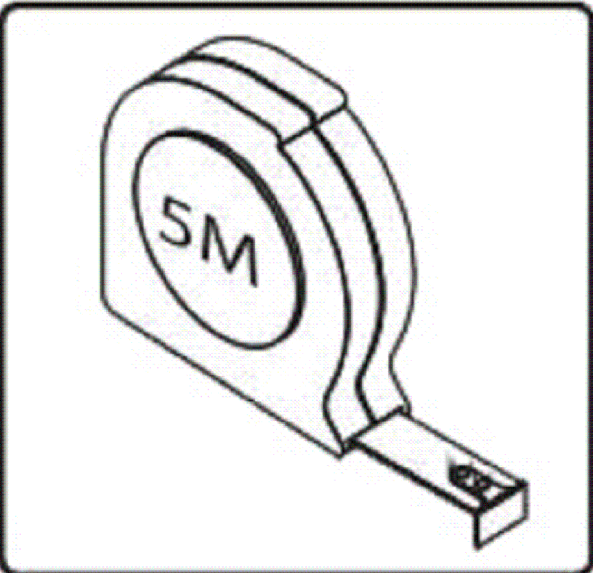
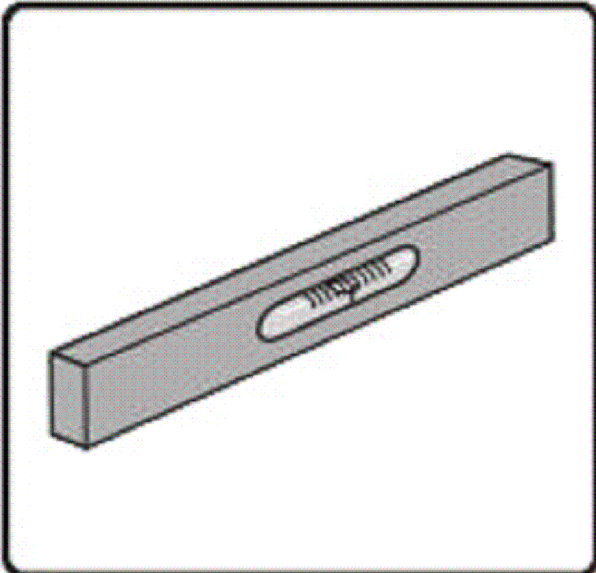
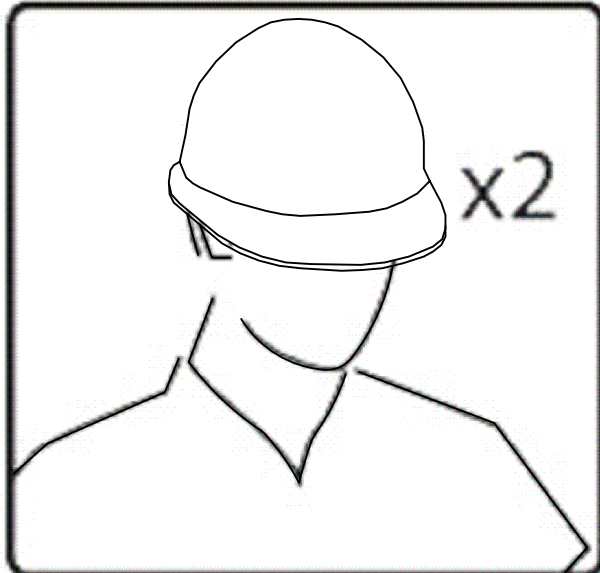
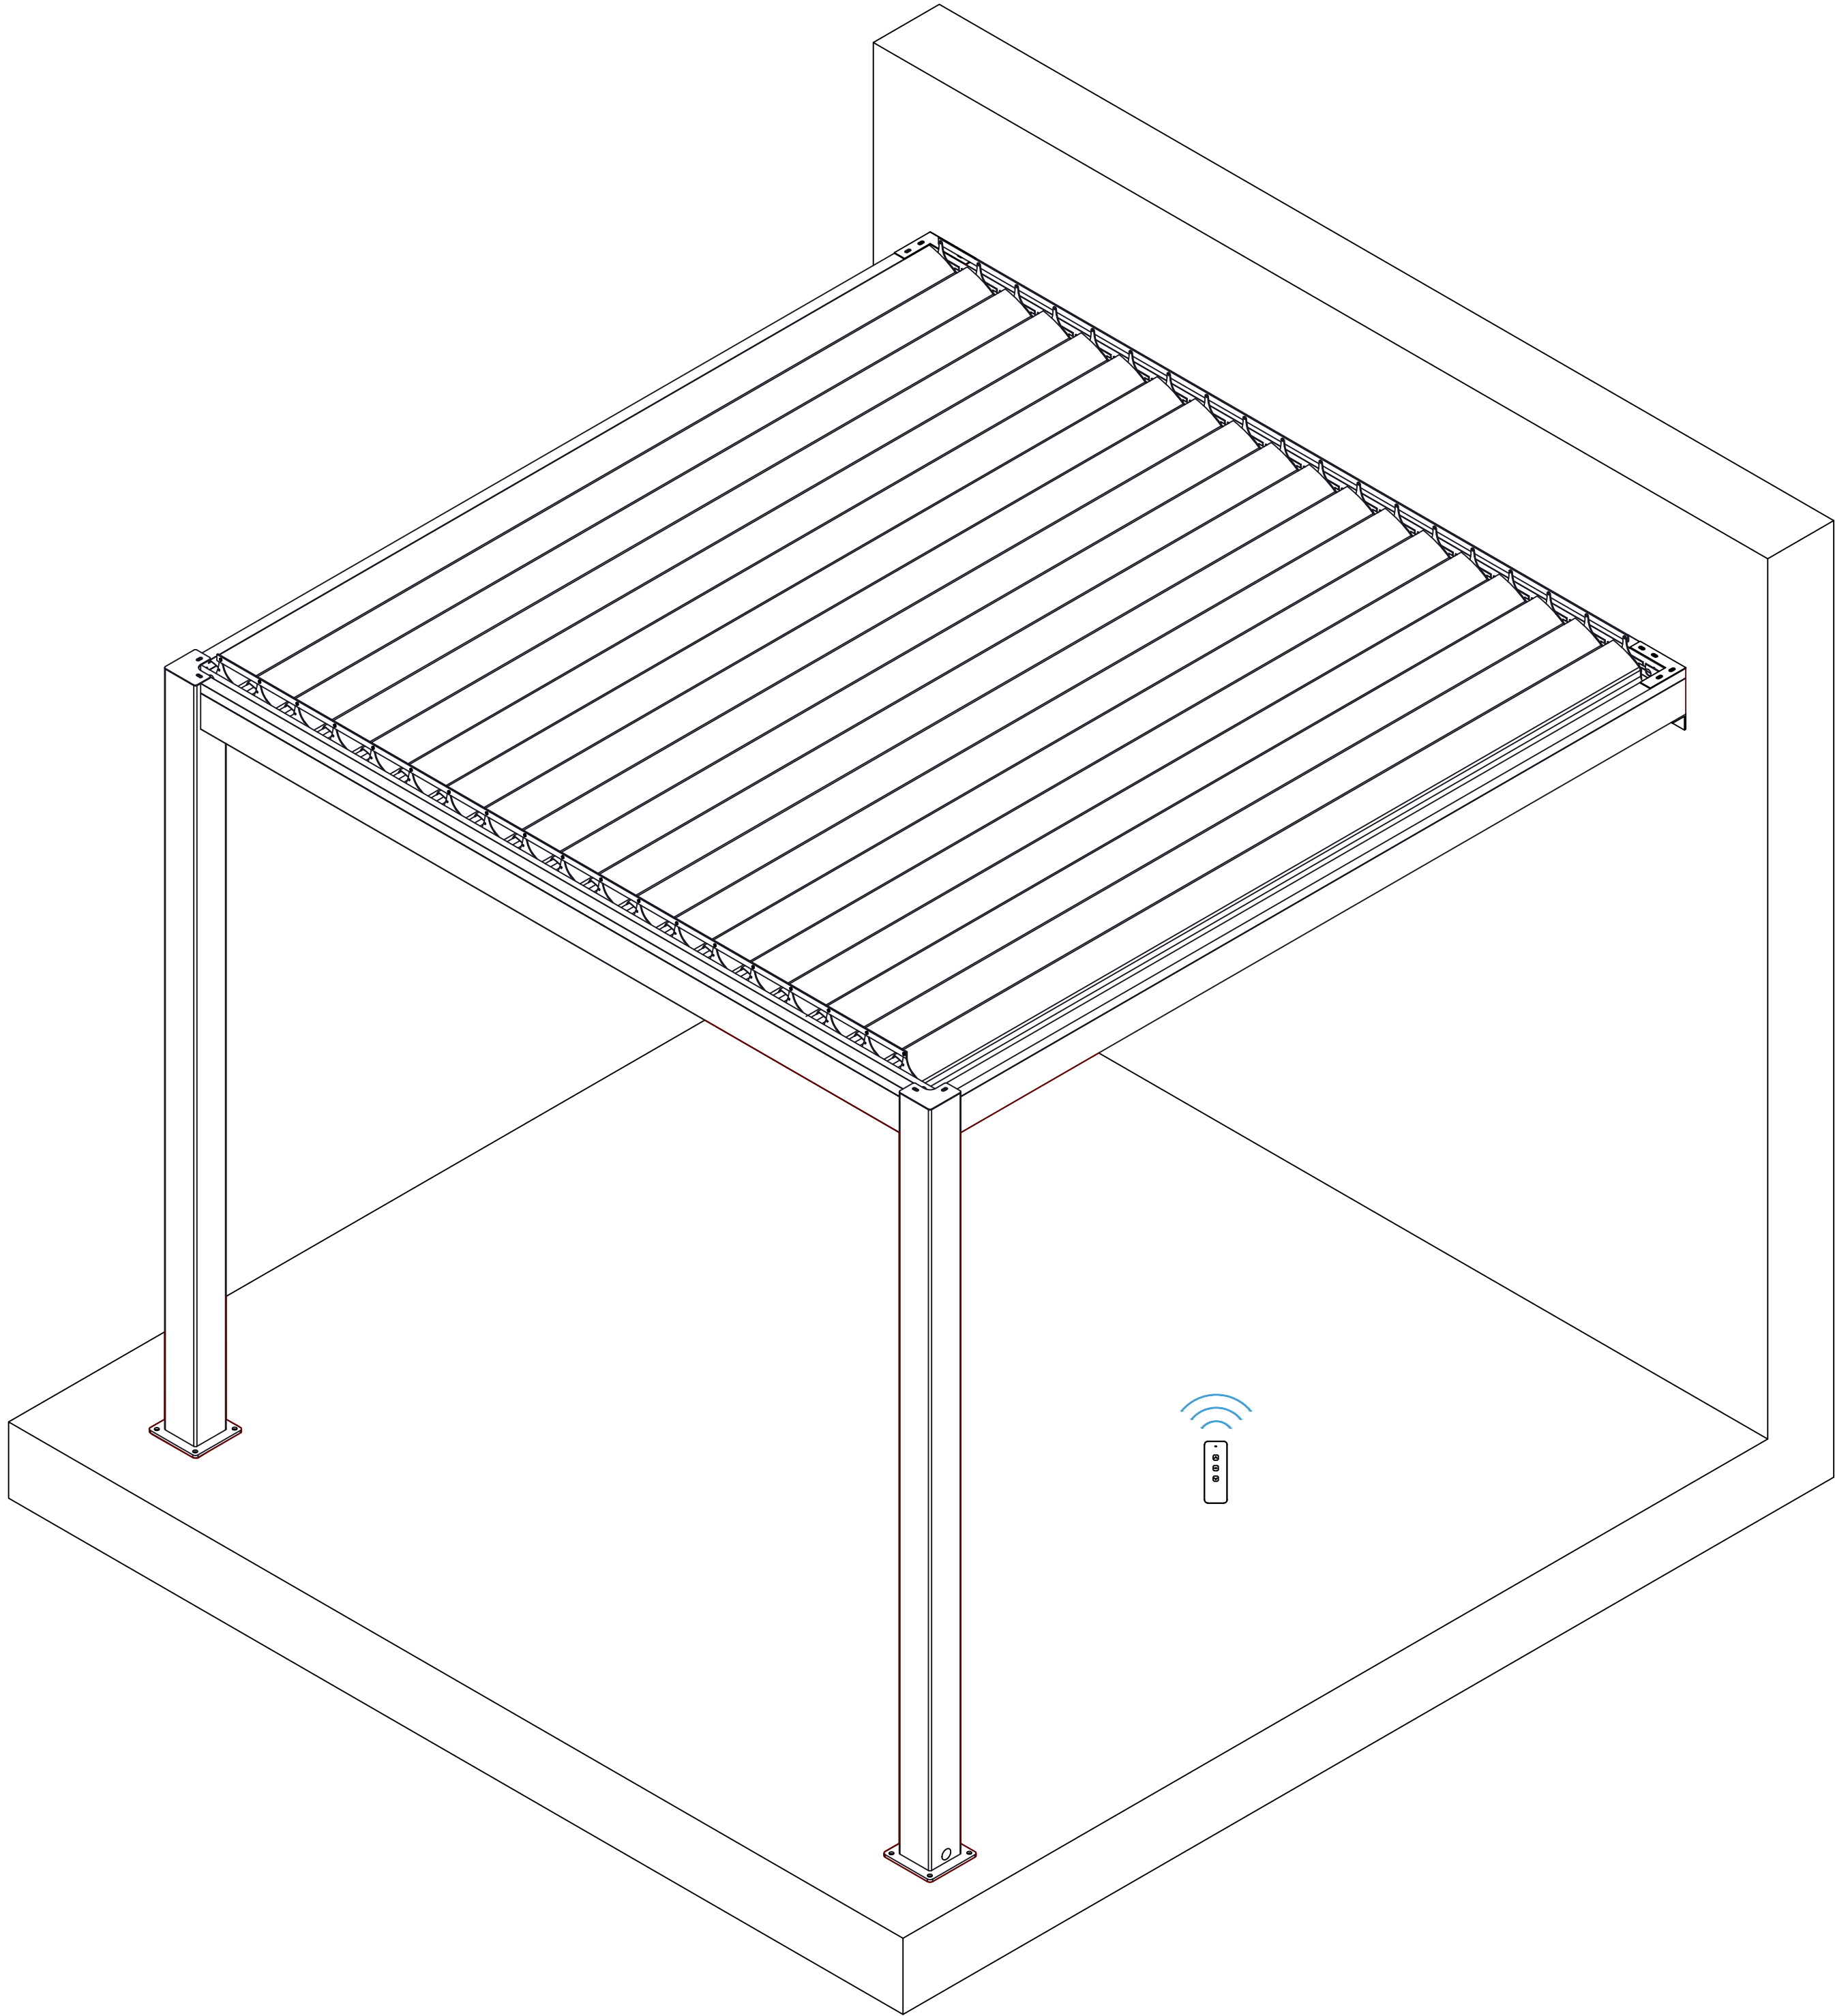





	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	1B-01	2	1B-11	2	1B-51	132+
	1B-13	2	1B-14	1	1B-15	1
	1B-18	1	1B-19	12+	1B-20	66+
	1B-21	8	1B-22	12+	1B-23	18+
	1B-24	1	1B-36	8	1B-38	4
	1B-39	12+	1B-40	2	1B-41	2
	1B-42	8	1B-30	1	1B-31	1
	1B-48	32+	1B-49	33+	1B-50	1
	1B-12	2	1B-35	2	1B-67	14+
Carton 2/4	1B-02	1	1B-03	1	1B-04	2
	1B-05/ 05B	4	1B-08	2	1B-09	2
	1B-34	1	1B-29	2		
Carton 3/4	1B-06	12				
Carton 4/4	1B-06	21				

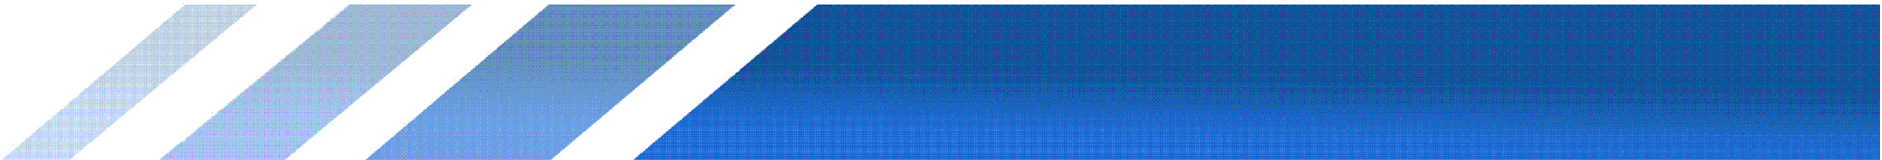

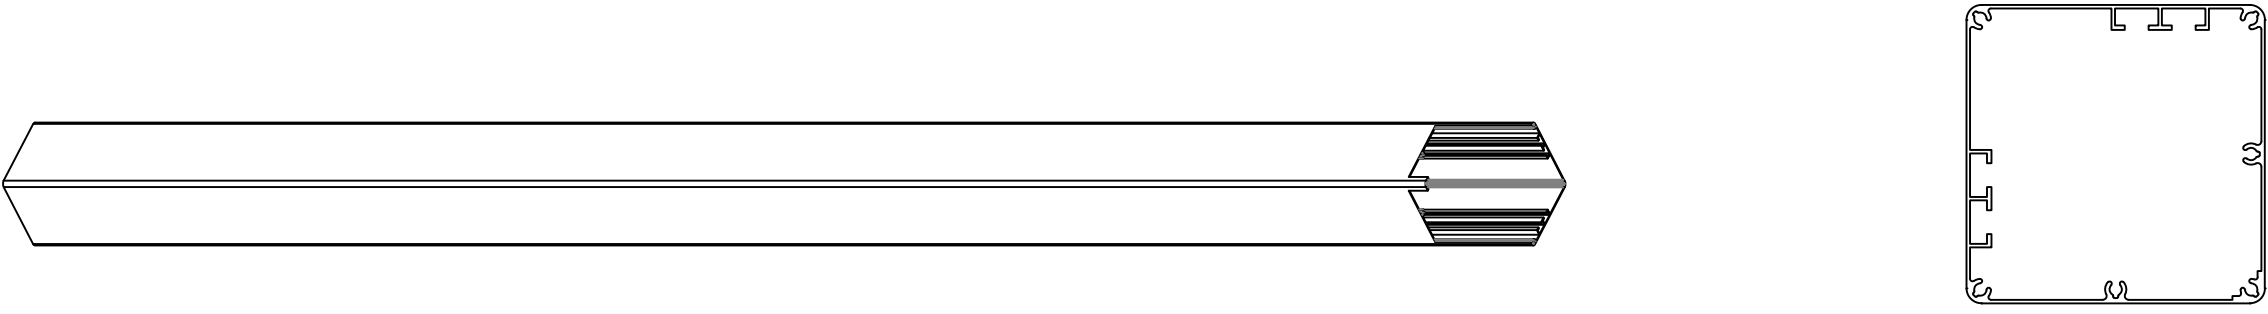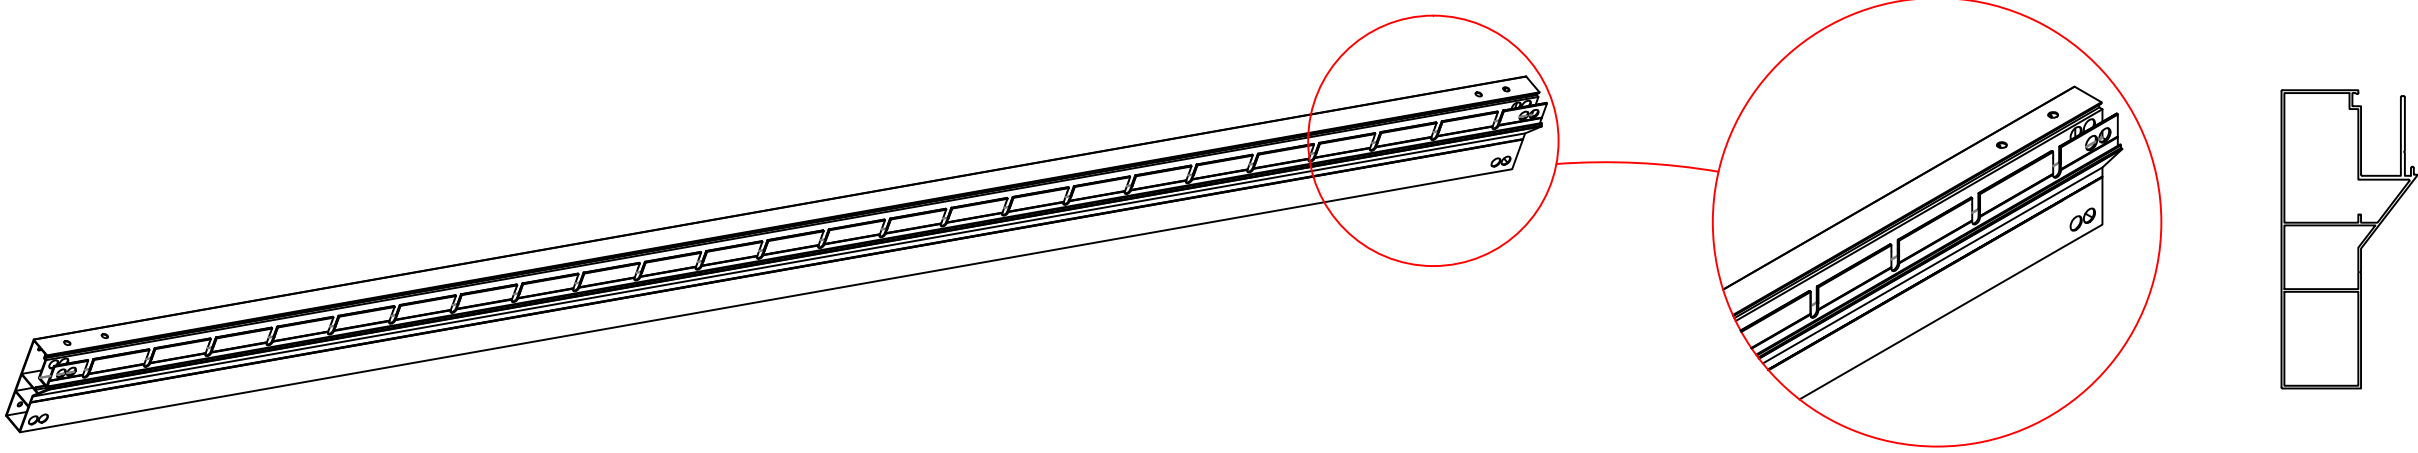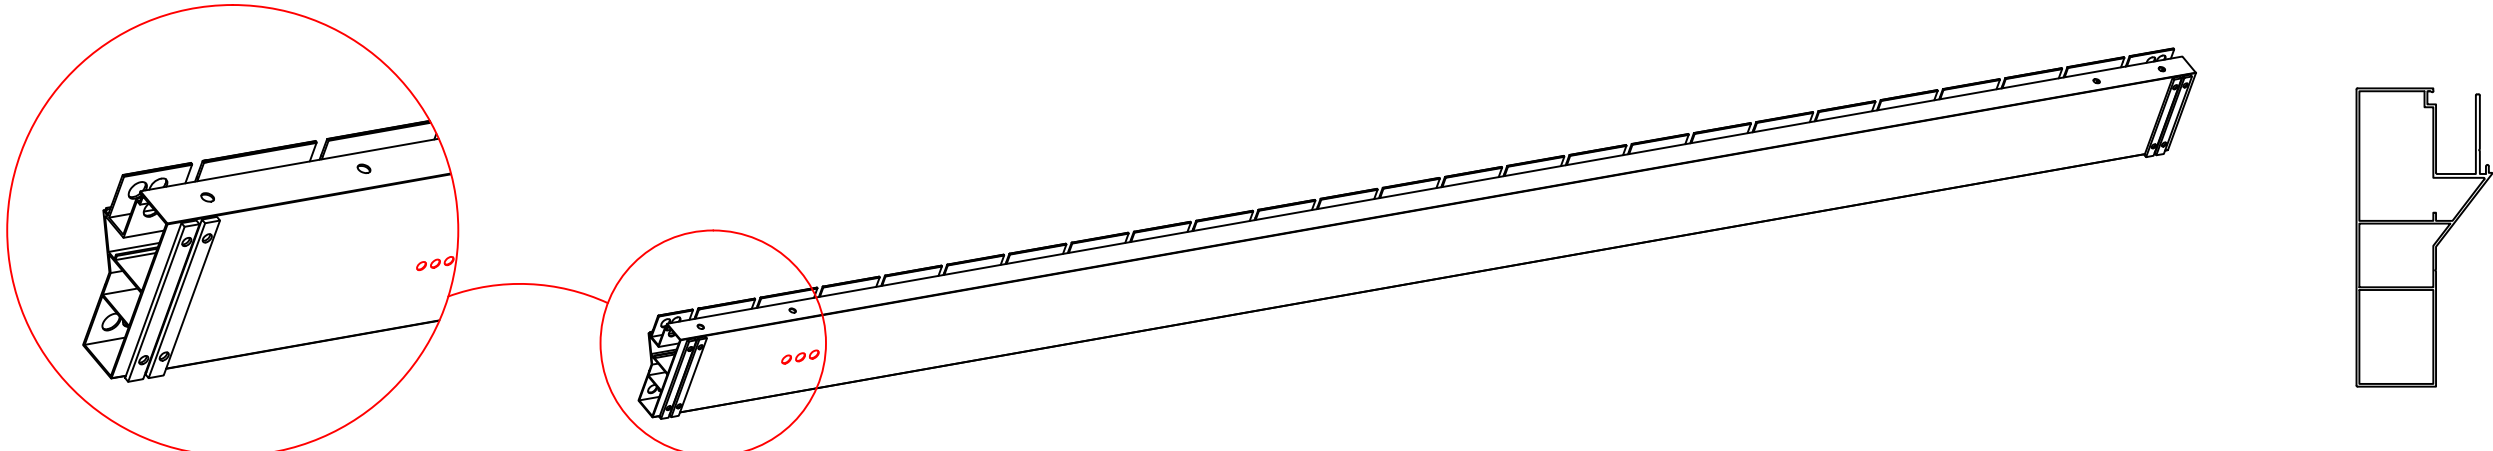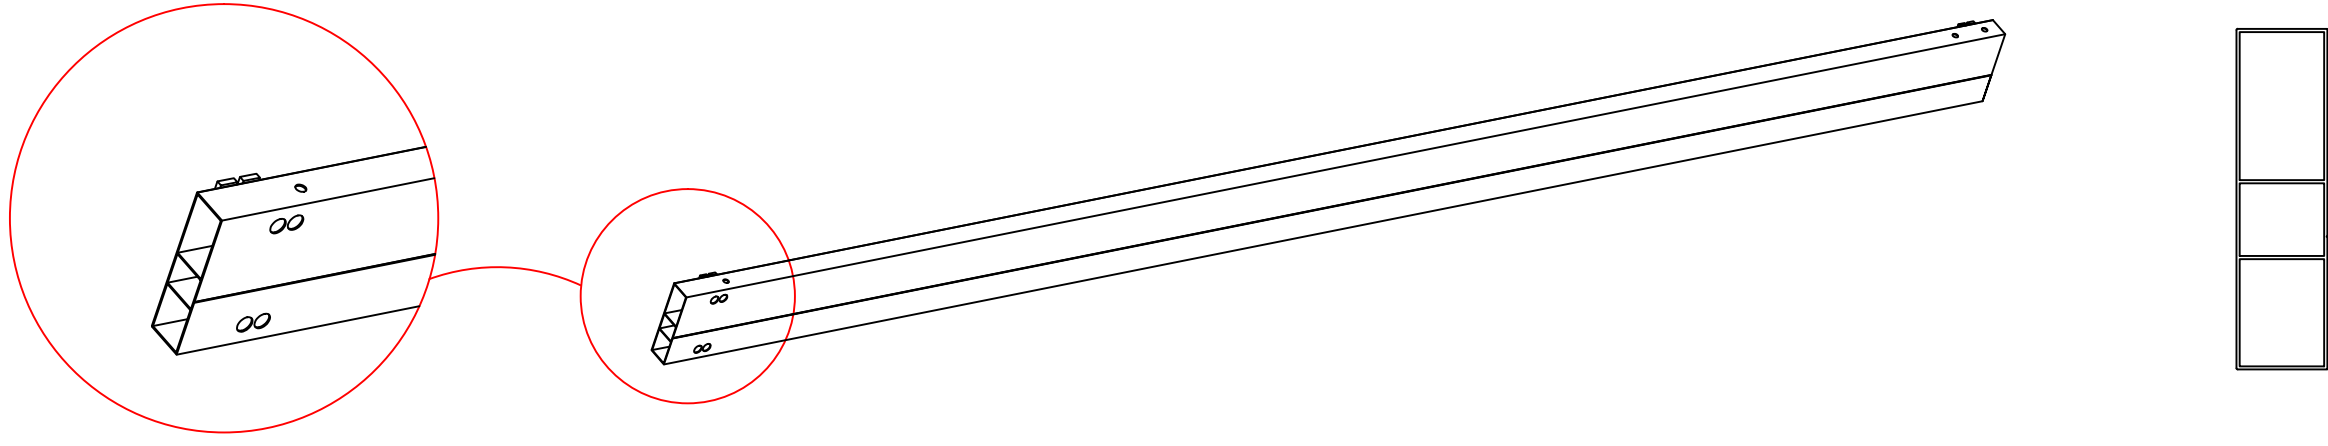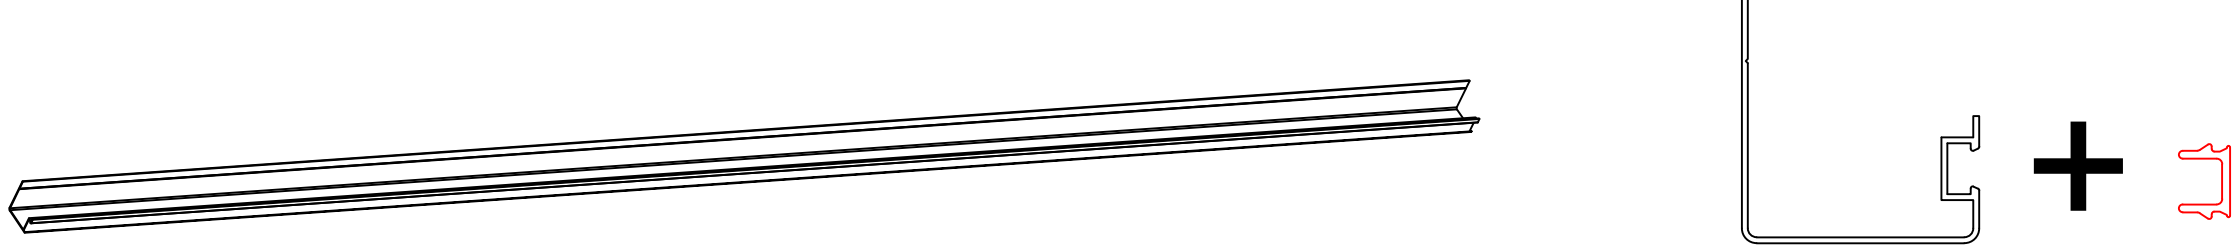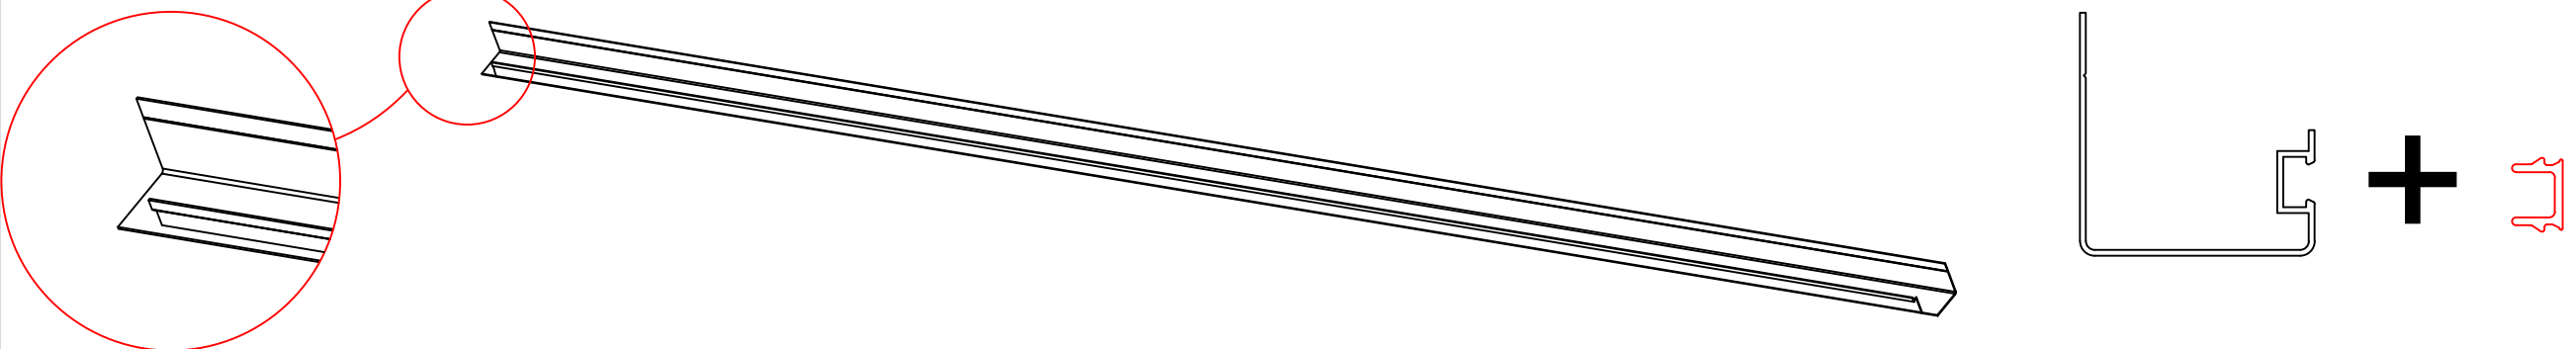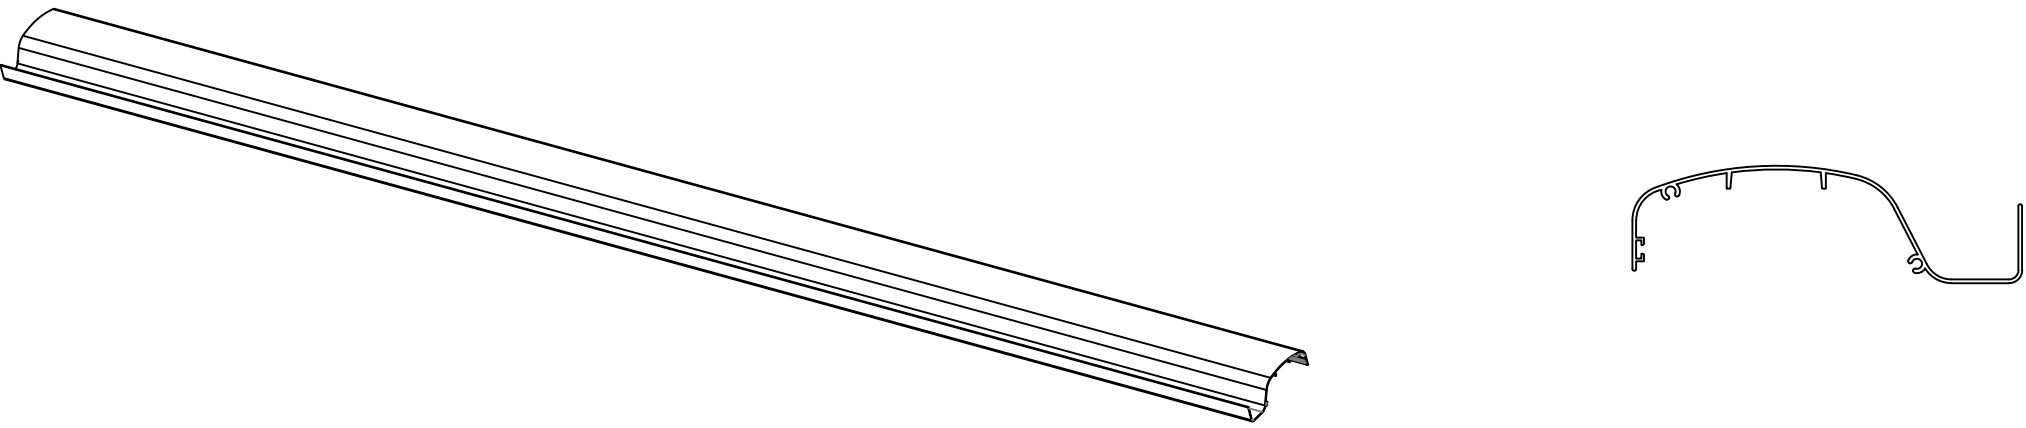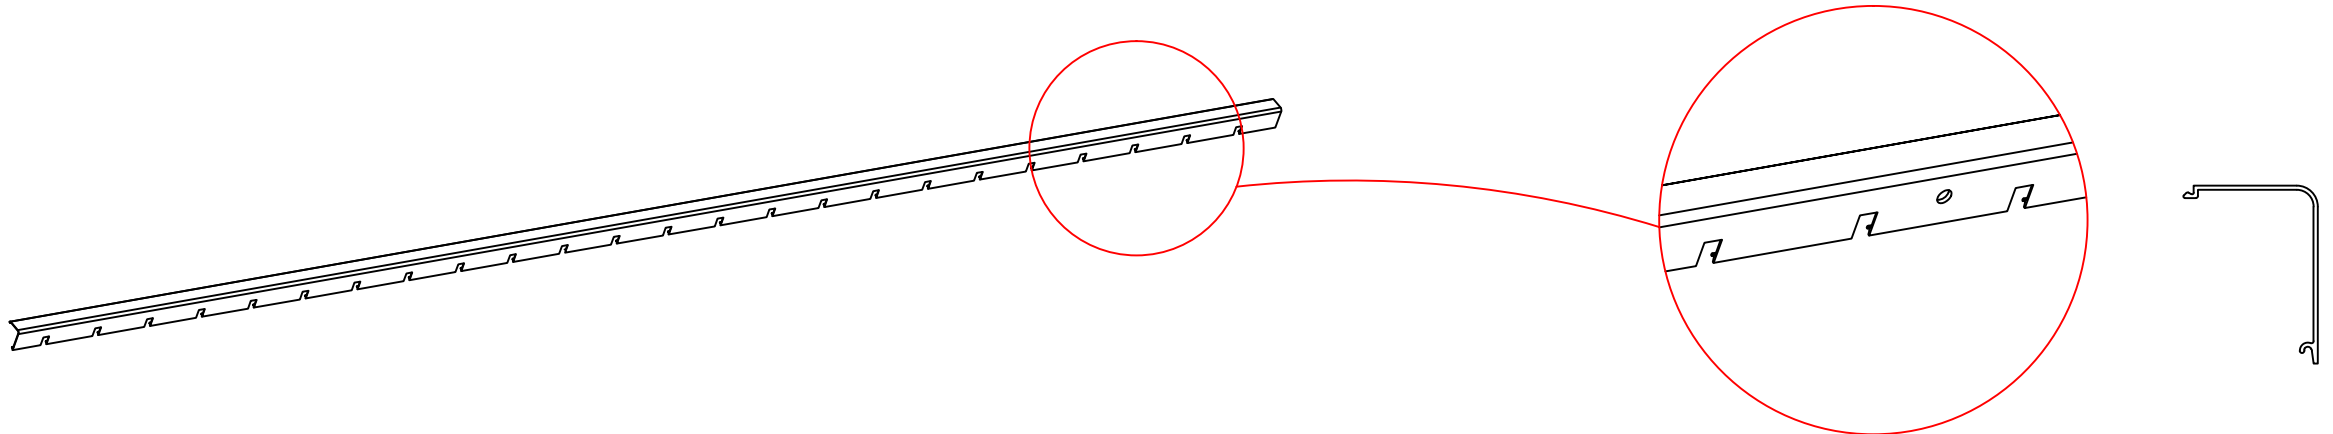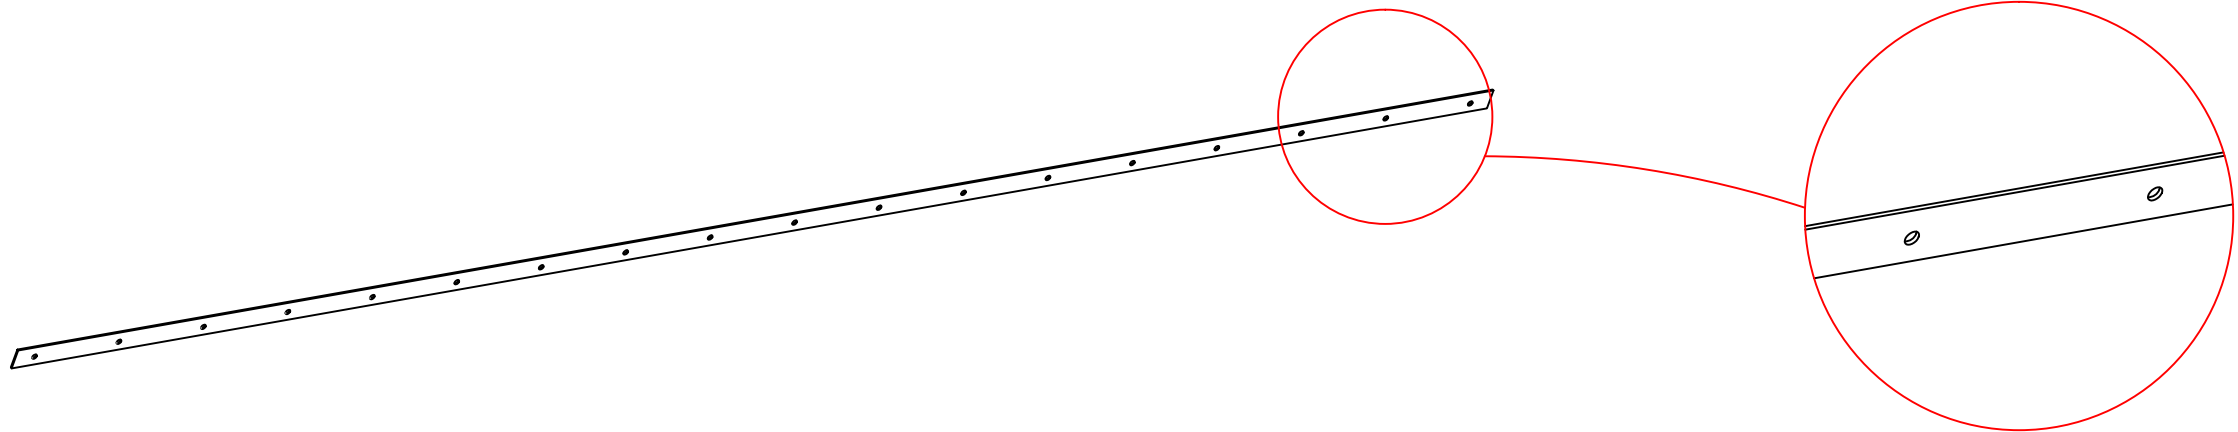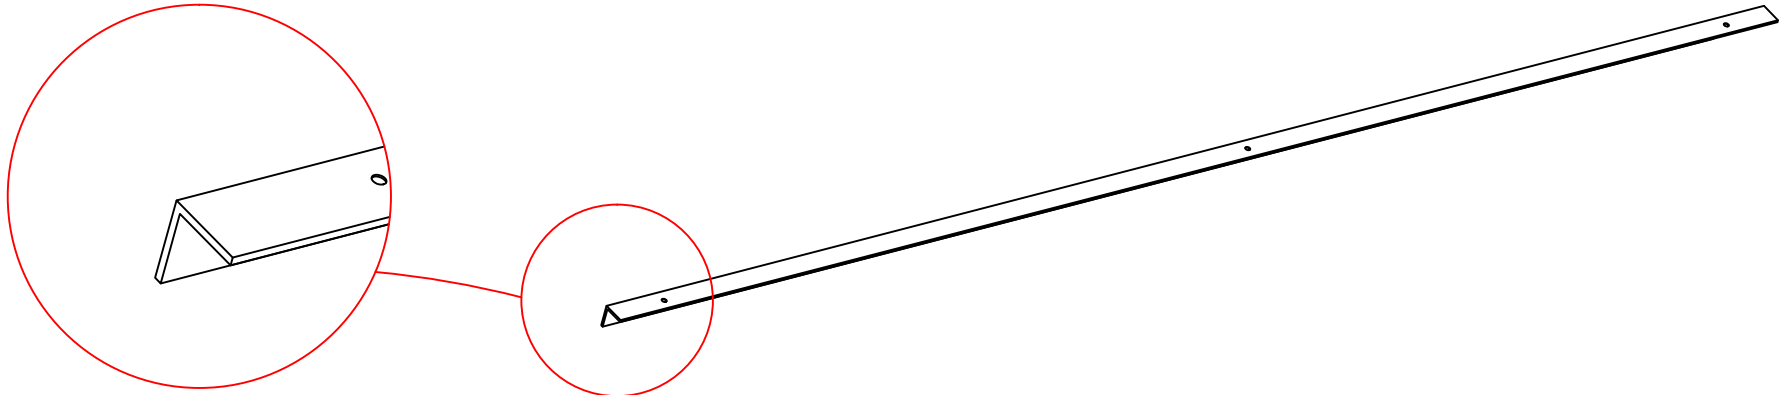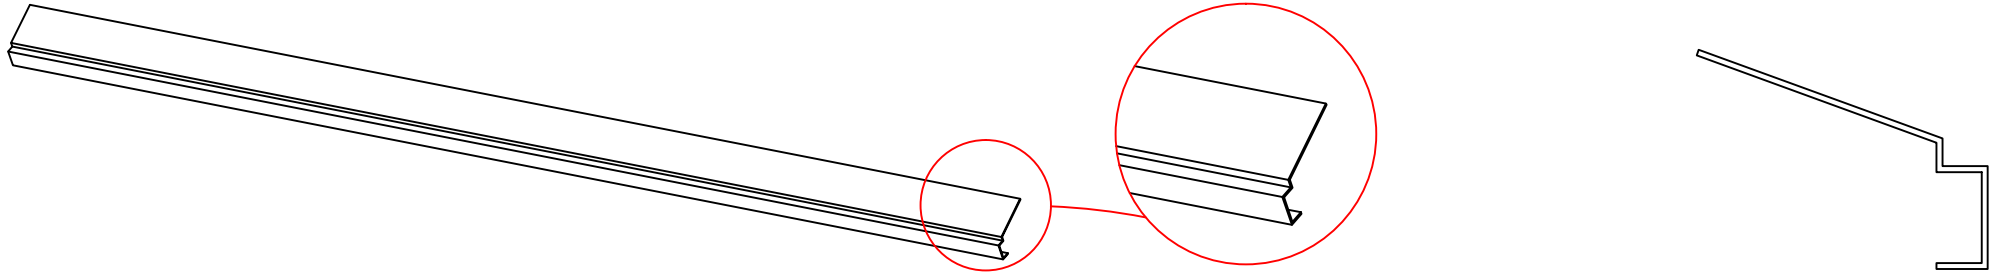


Item	Drawings	Qty
1B-01		2
1B-02		1
1B-03		1
1B-04		2
1B-05		3
1B-05B		1
1B-06		33
1B-08		2
1B-09		2
1B-34		1
1B-29		2

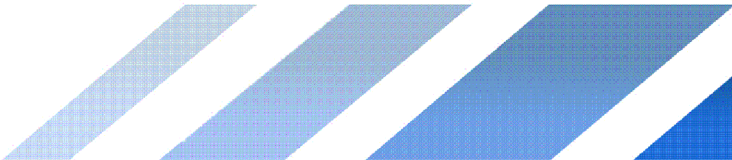




Item	Drawings	Qty
1B-11		2
1B-12		2
1B-13		2
1B-14		1
1B-15		1
1B-18		1
1B-19		12+
1B-20		66+
1B-21		8
1B-22		12+
1B-23		18+
1B-24		1
1B-35		2


Item	Drawings	Qty
1B-30		1
1B-31		1
1B-36		8
1B-39		12+
1B-38		4
1B-40		2
1B-41		2
1B-42		8
1B-48		32+
1B-49		33+
1B-50		1
1B-51		132+
1B-67		14+

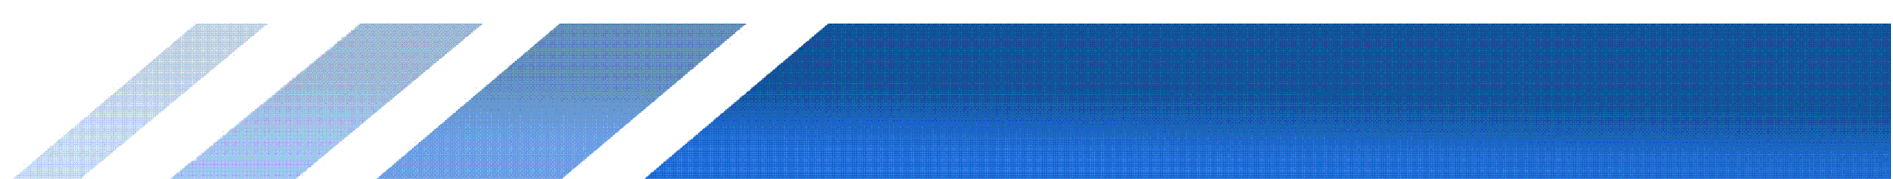

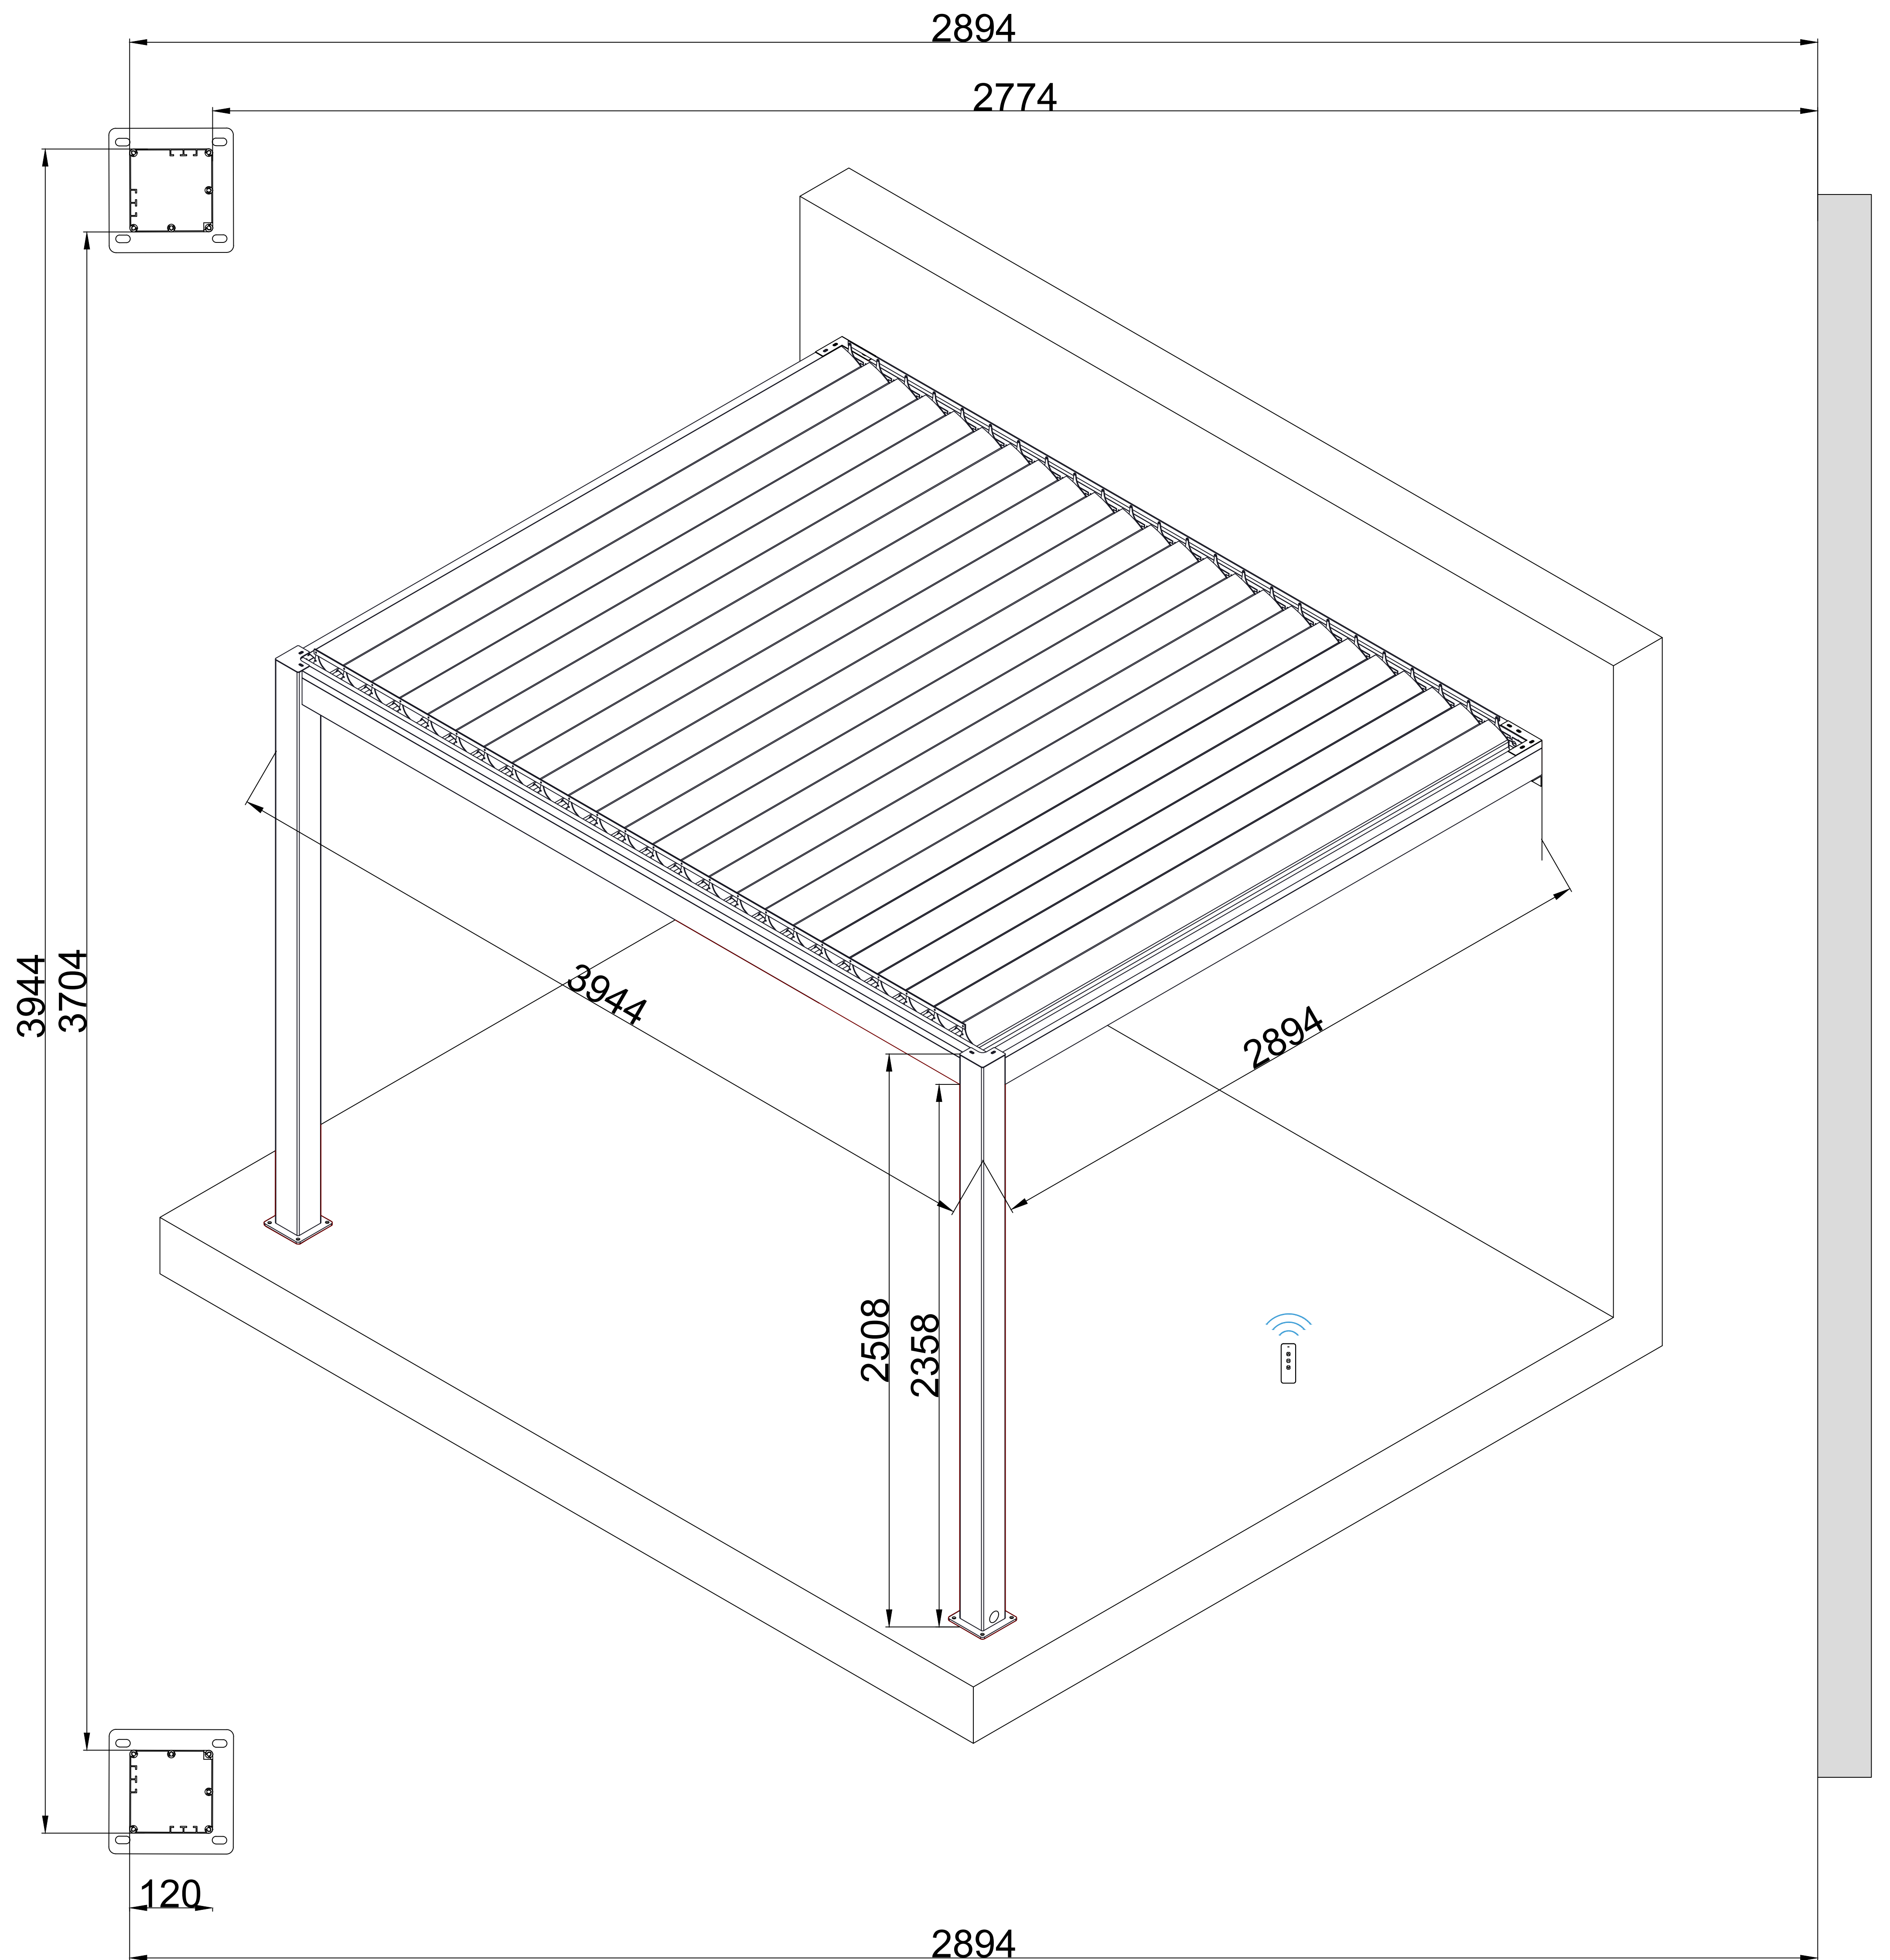


Warning :
In Snow / Wind season or in case of
snow / wind forecast open up your
shutters in vertical position to avoid
any damaging on your pergola.


3X4-4

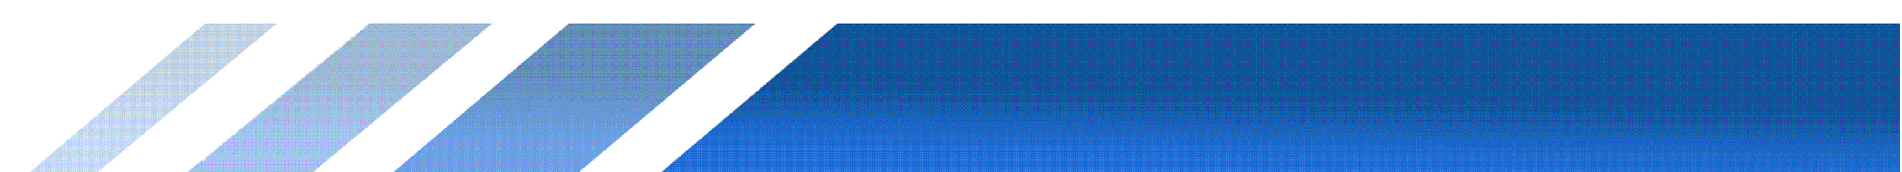

Motor Wires Diagram - The control box is on the post

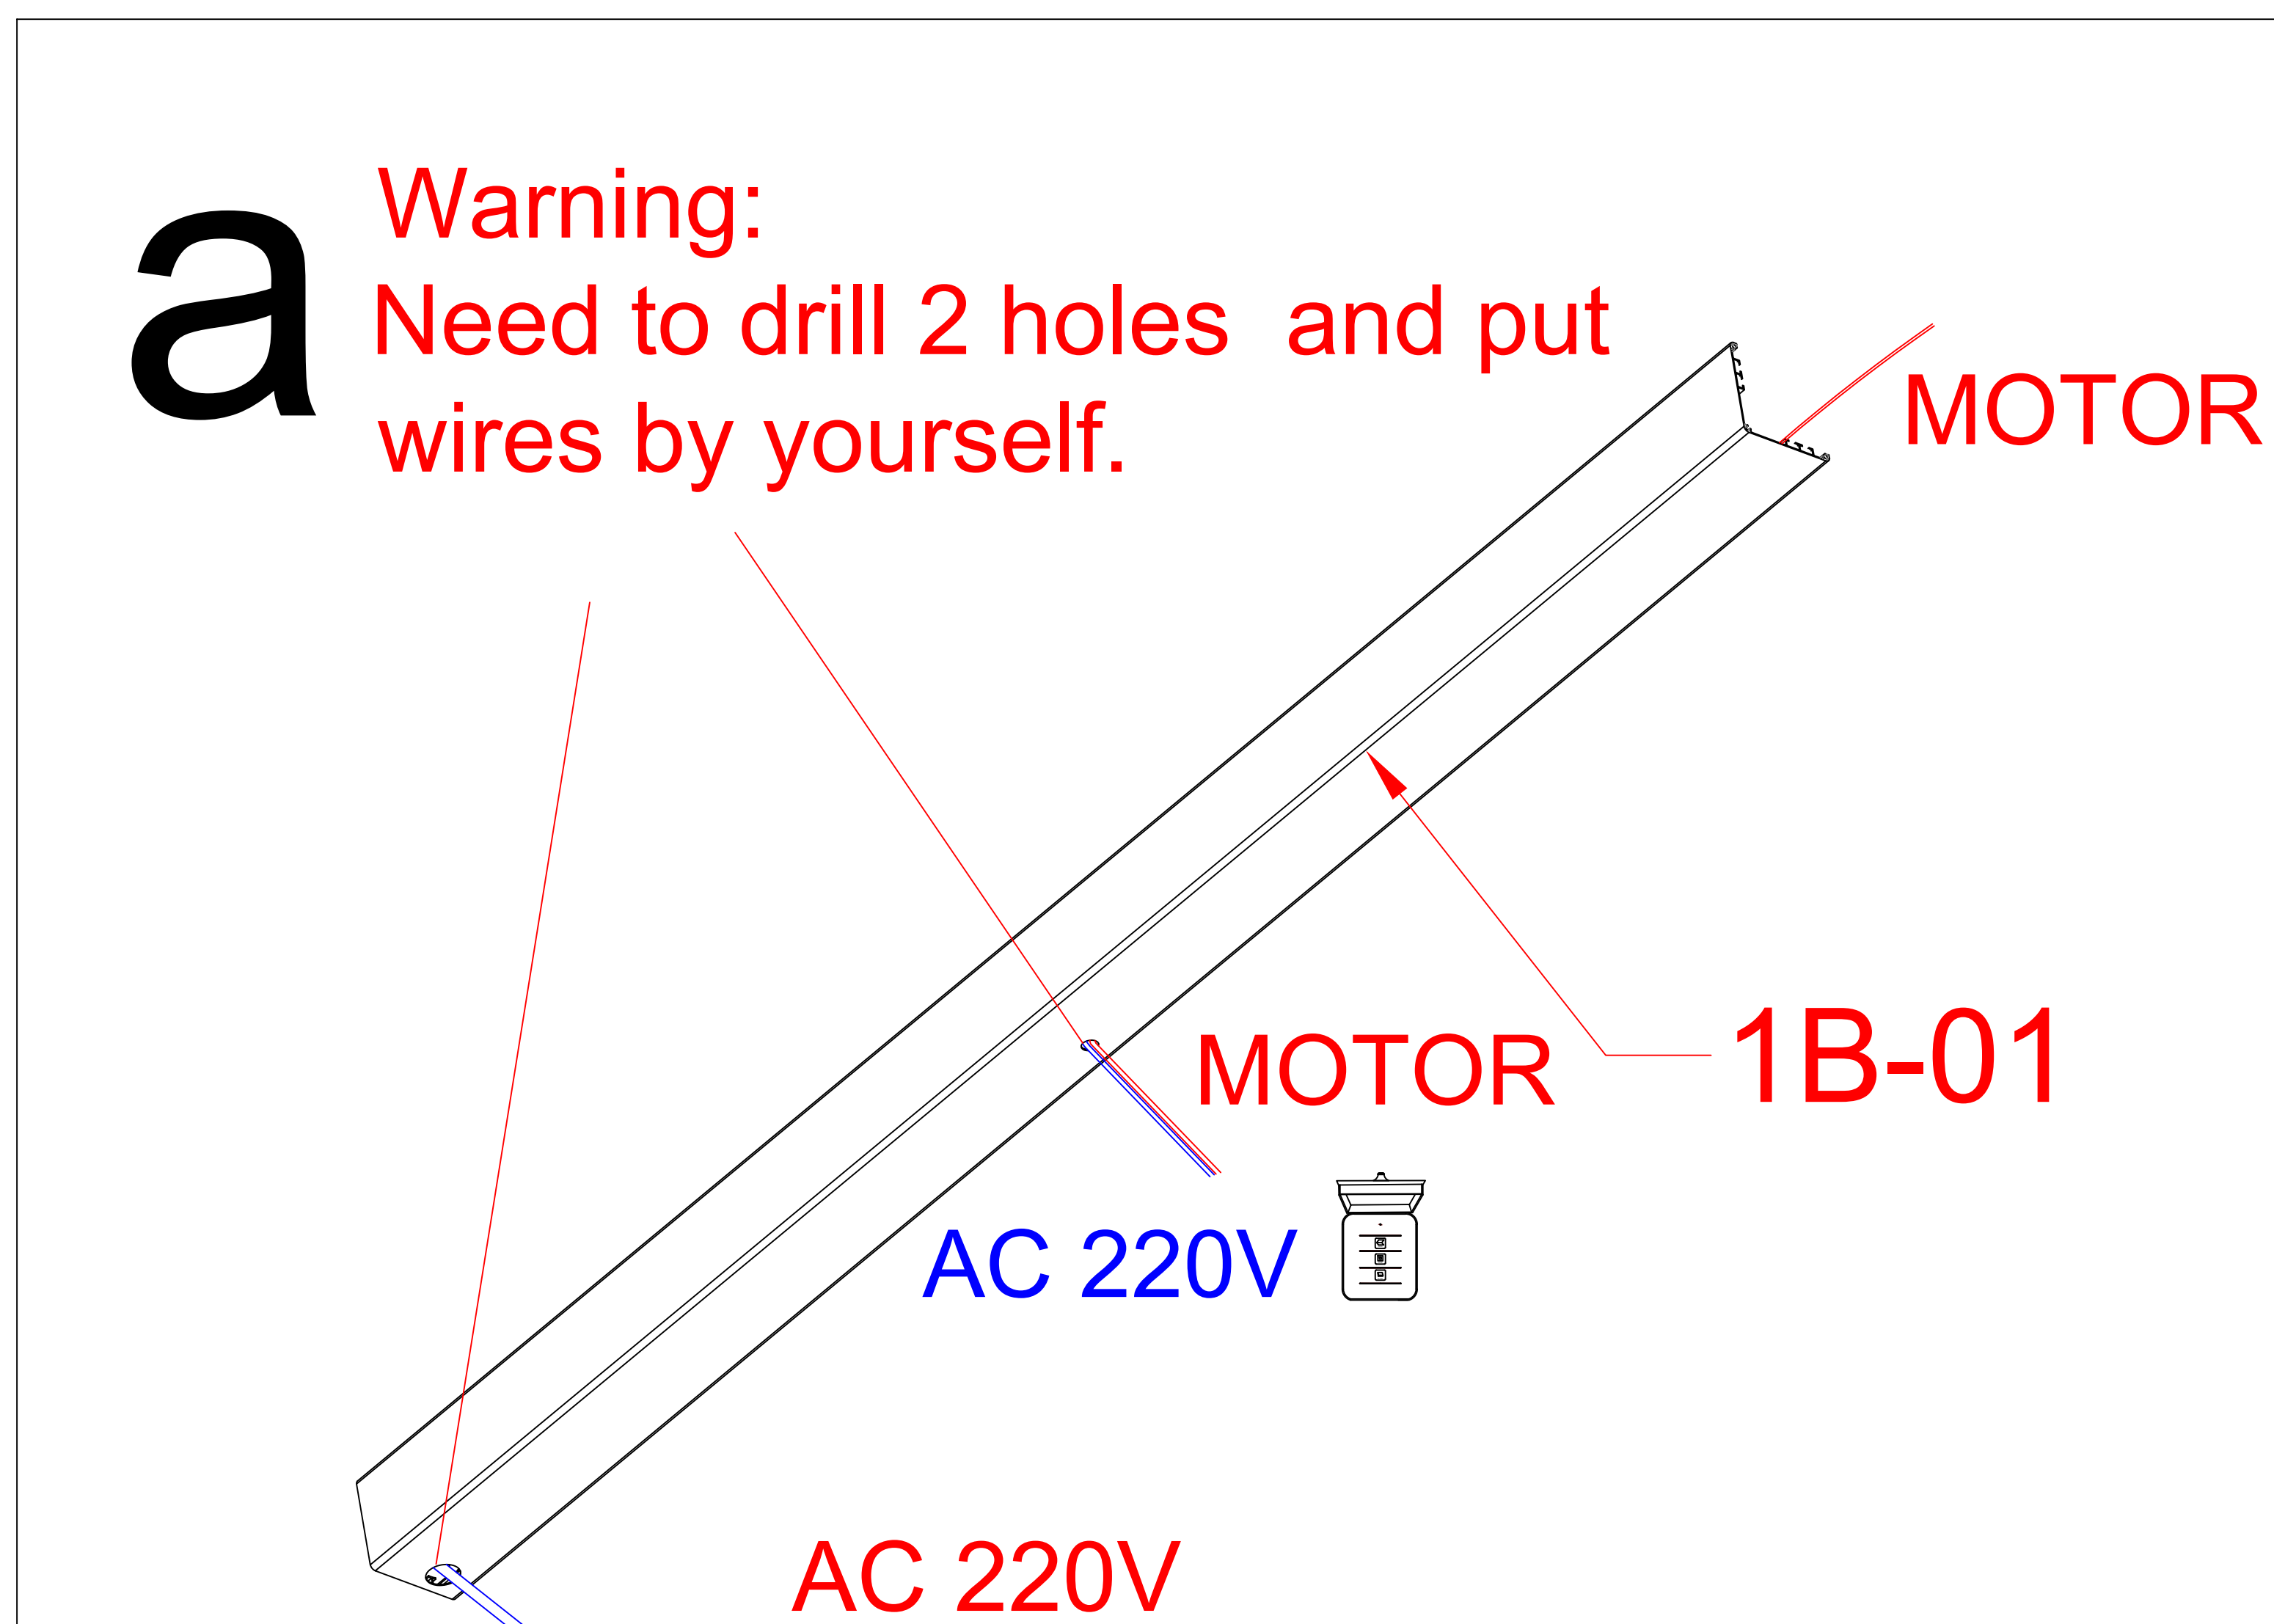

**Pls reserve
at least 10cm
cable here.**

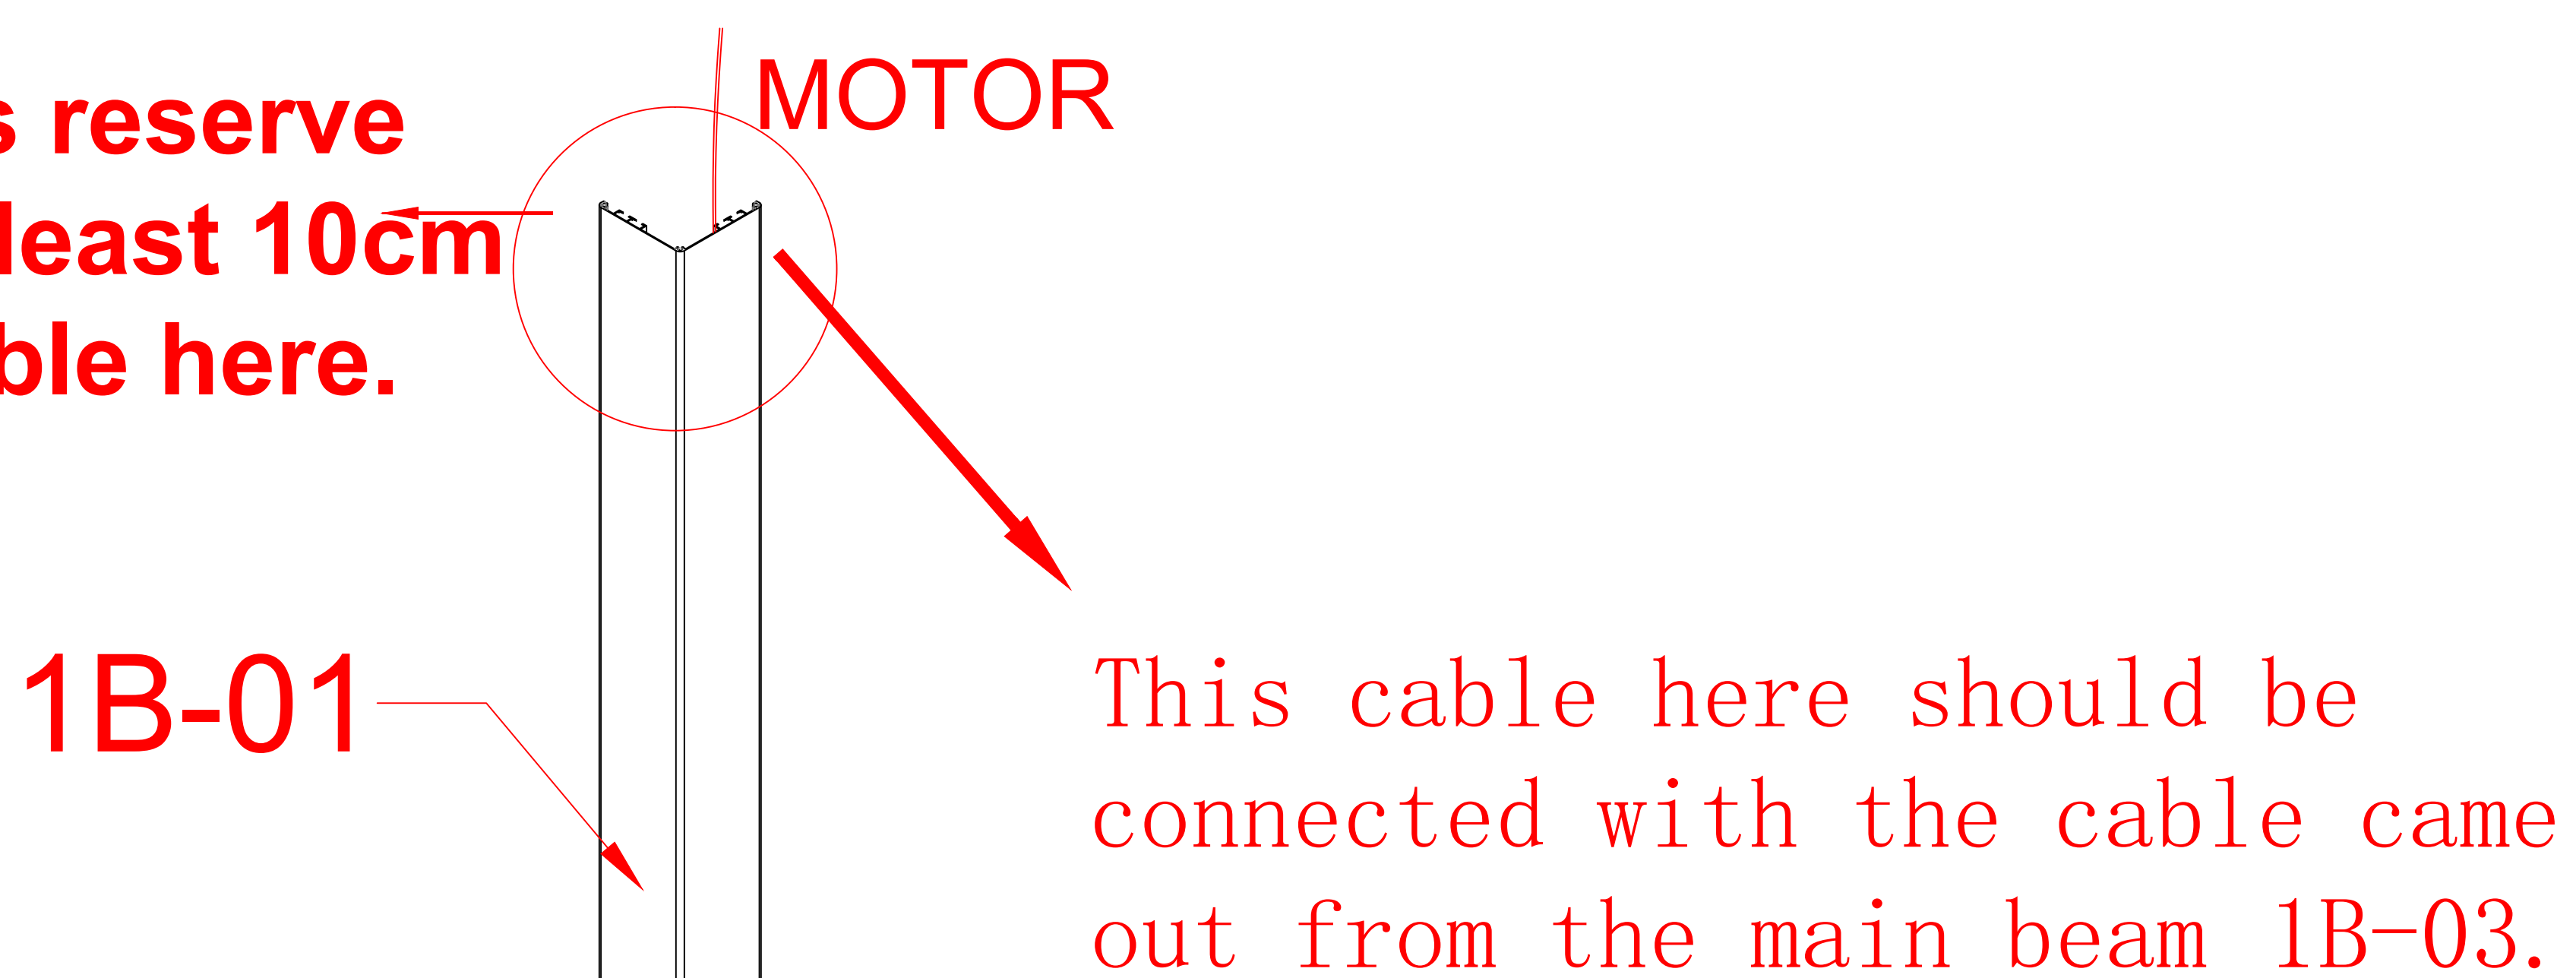



Hole


Please bring cables (1.5M), power cords (1.5M) and plug, and then put cables and power cords into the post.

Hole



AC 220V

Motor Wires Diagram - The control box is not on the post

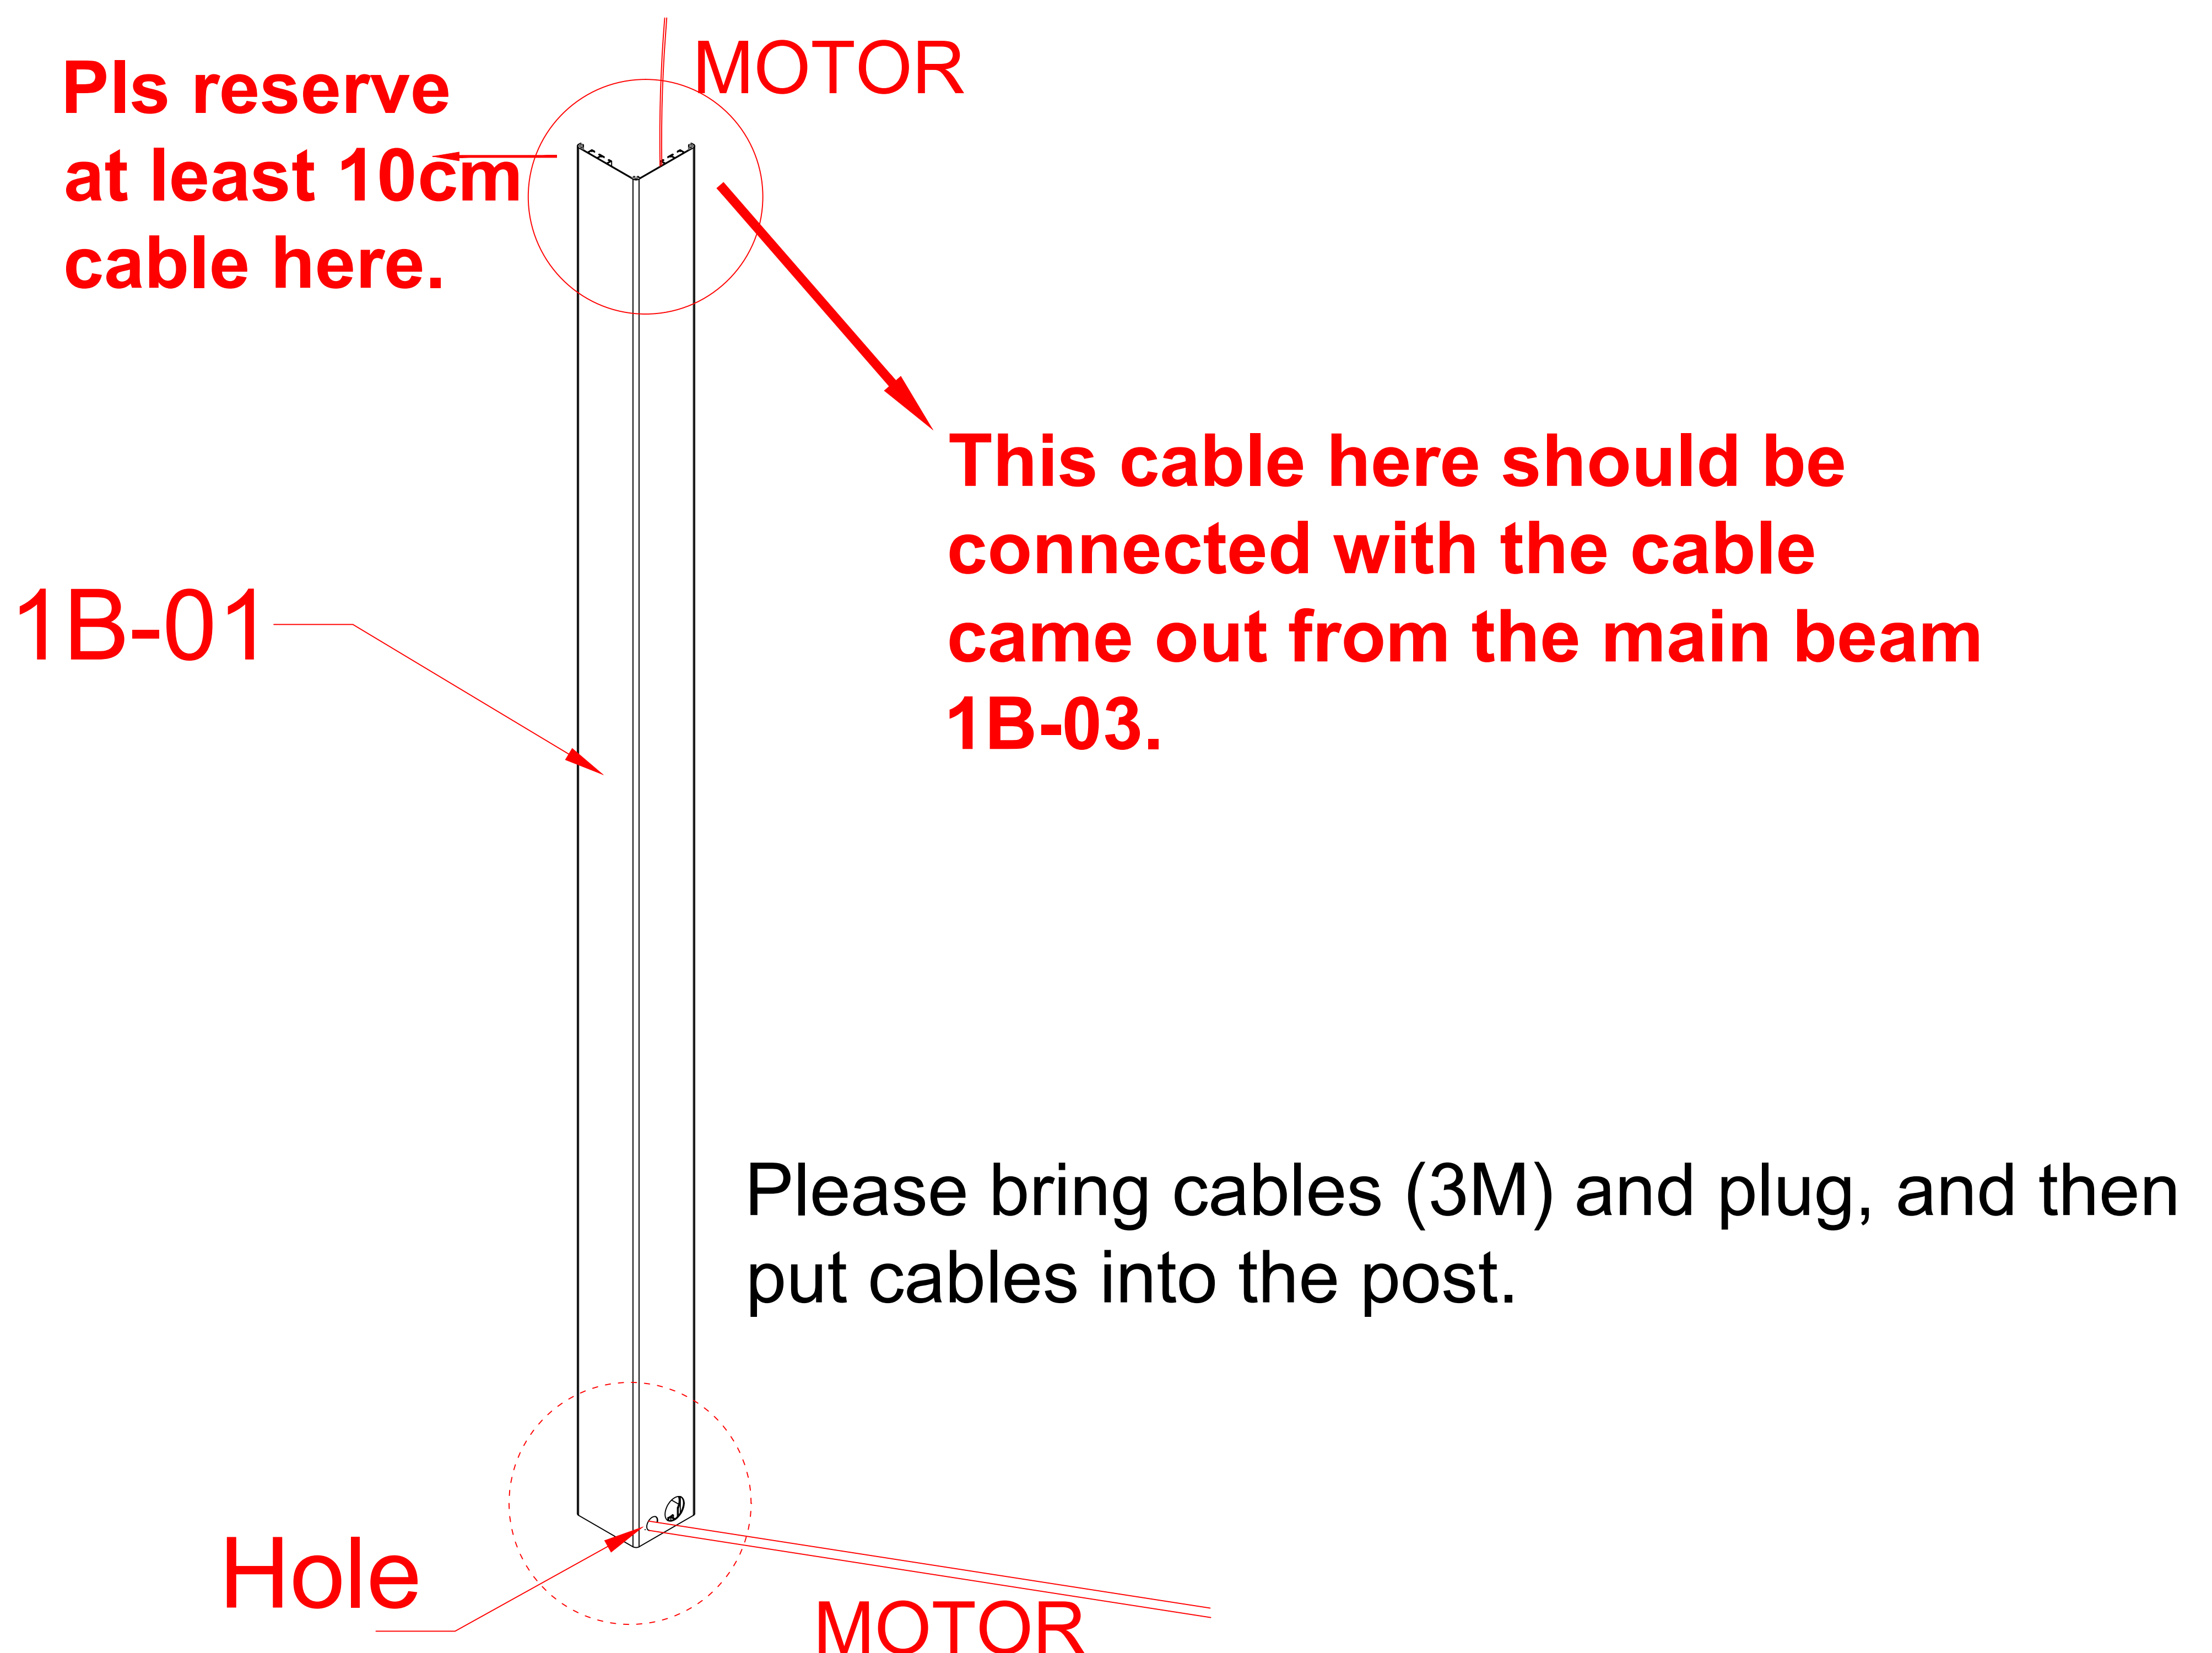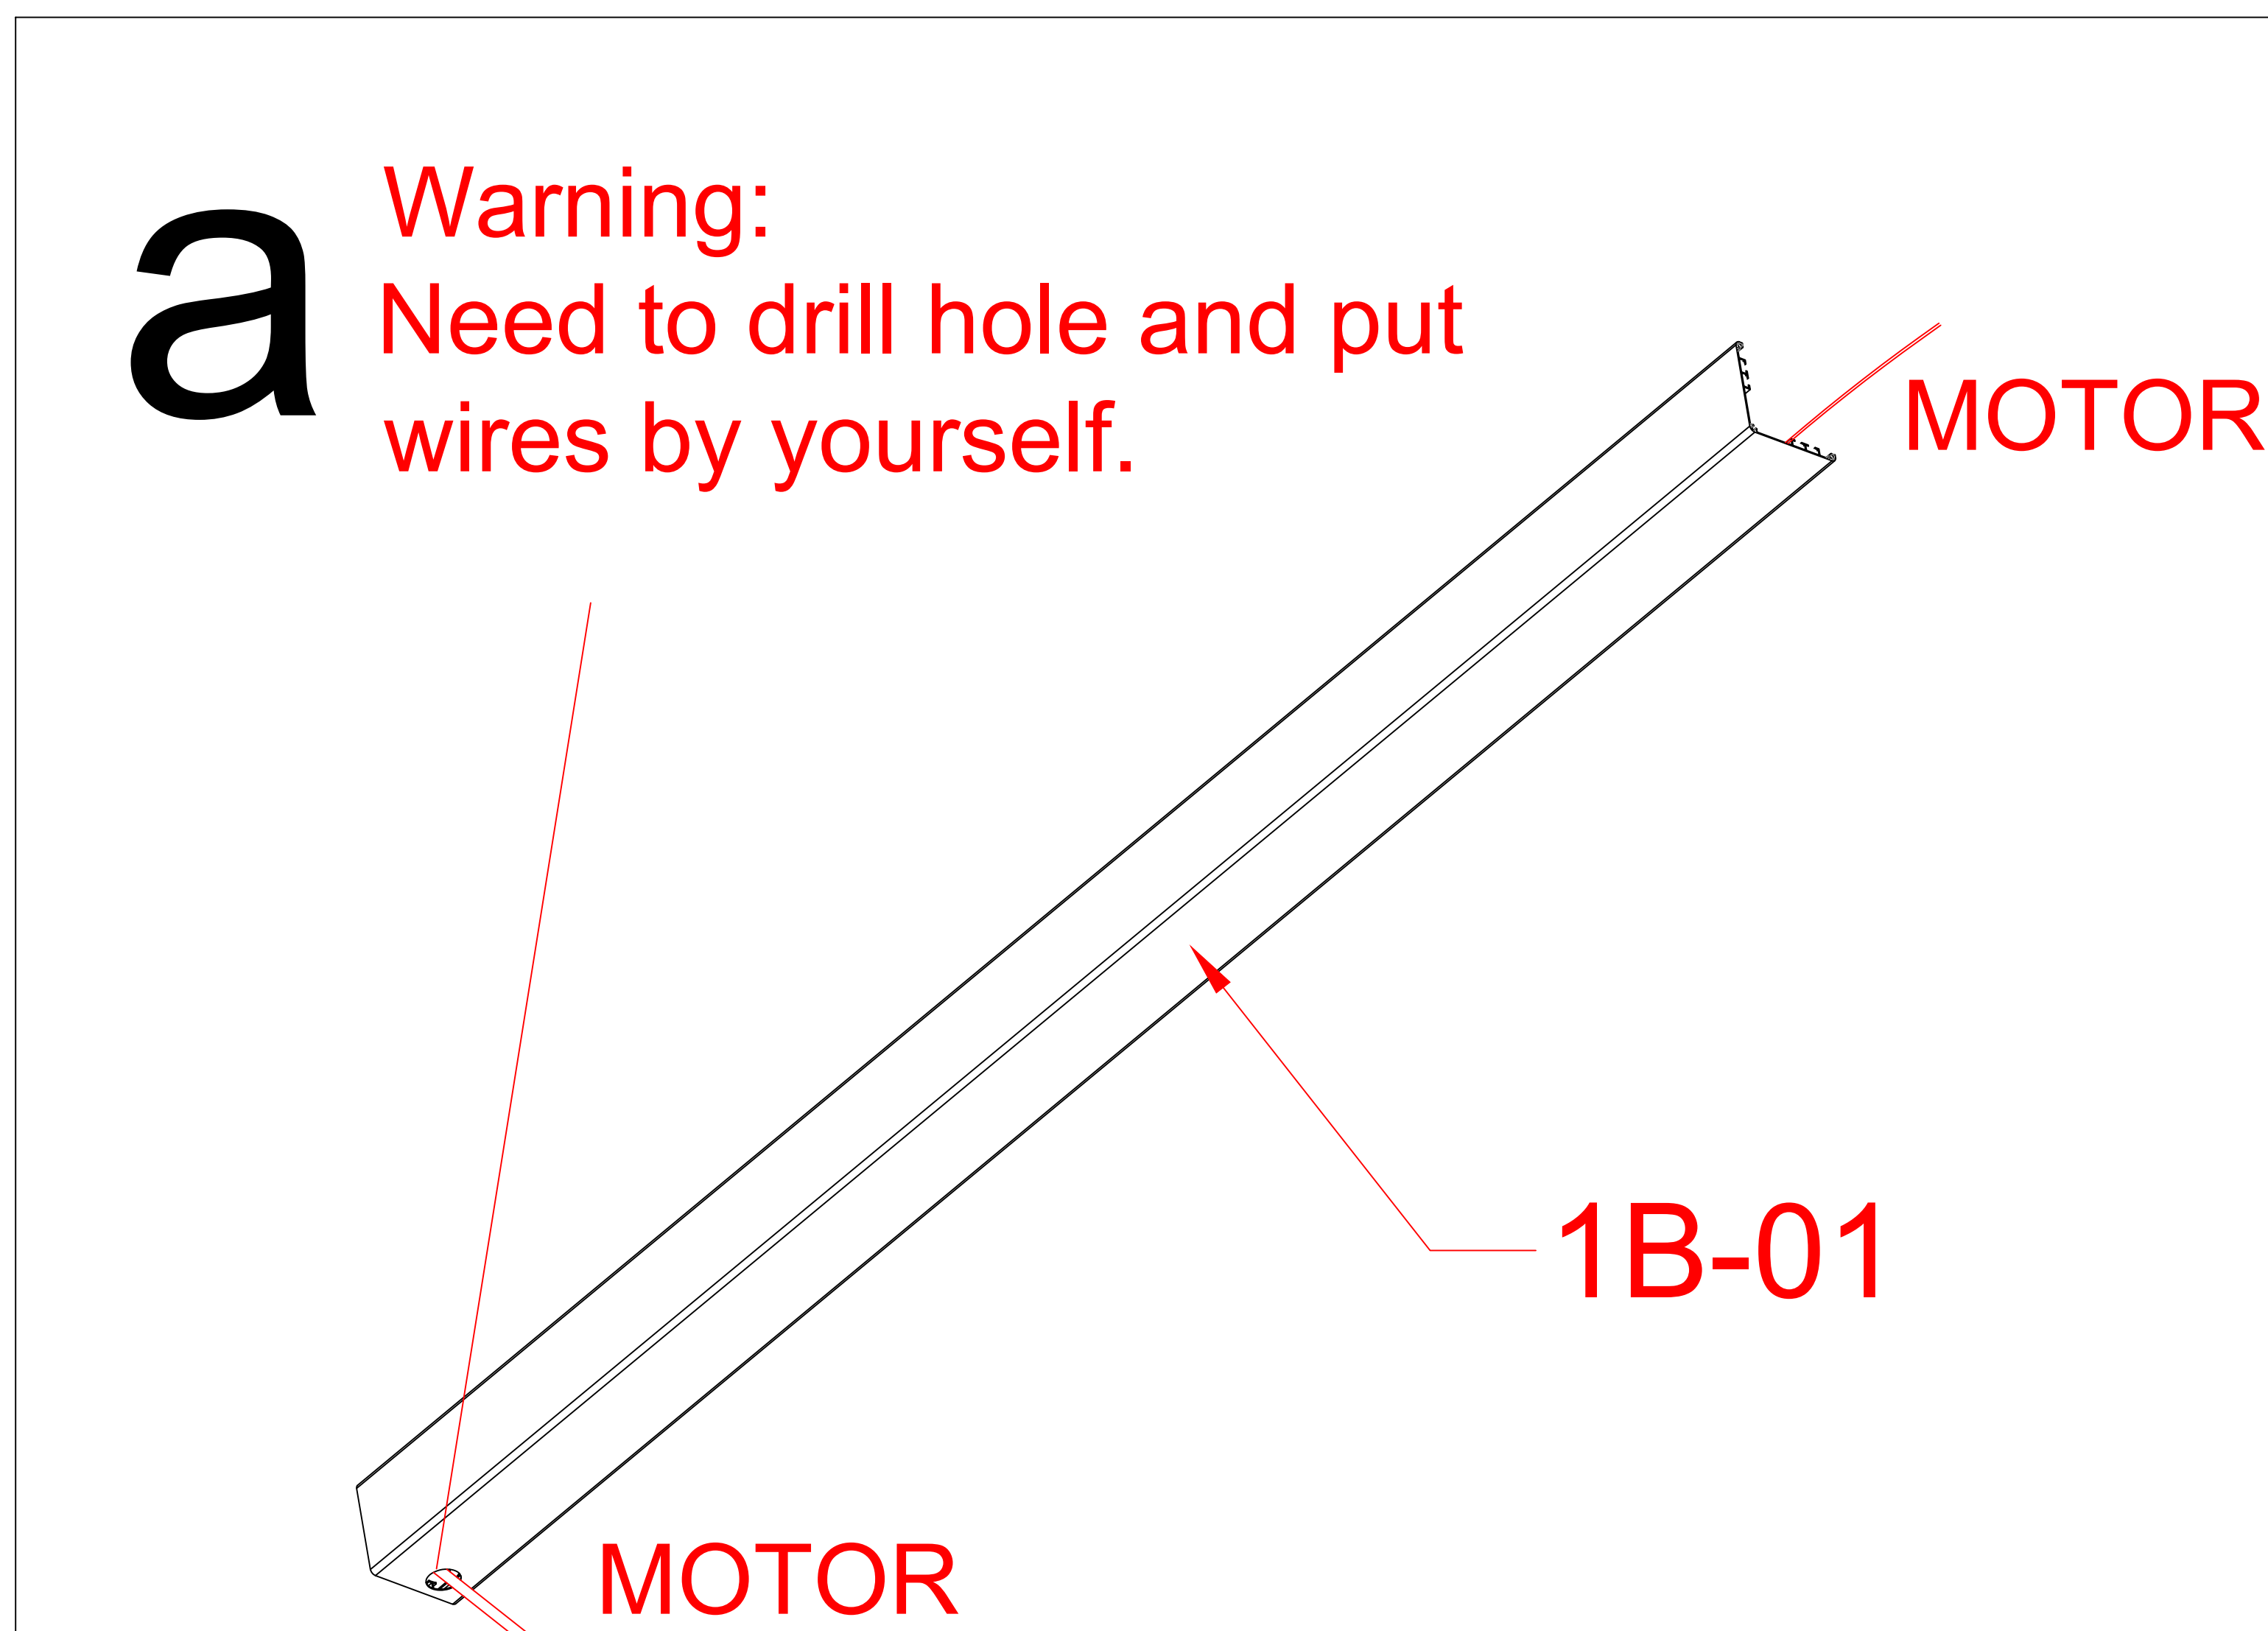


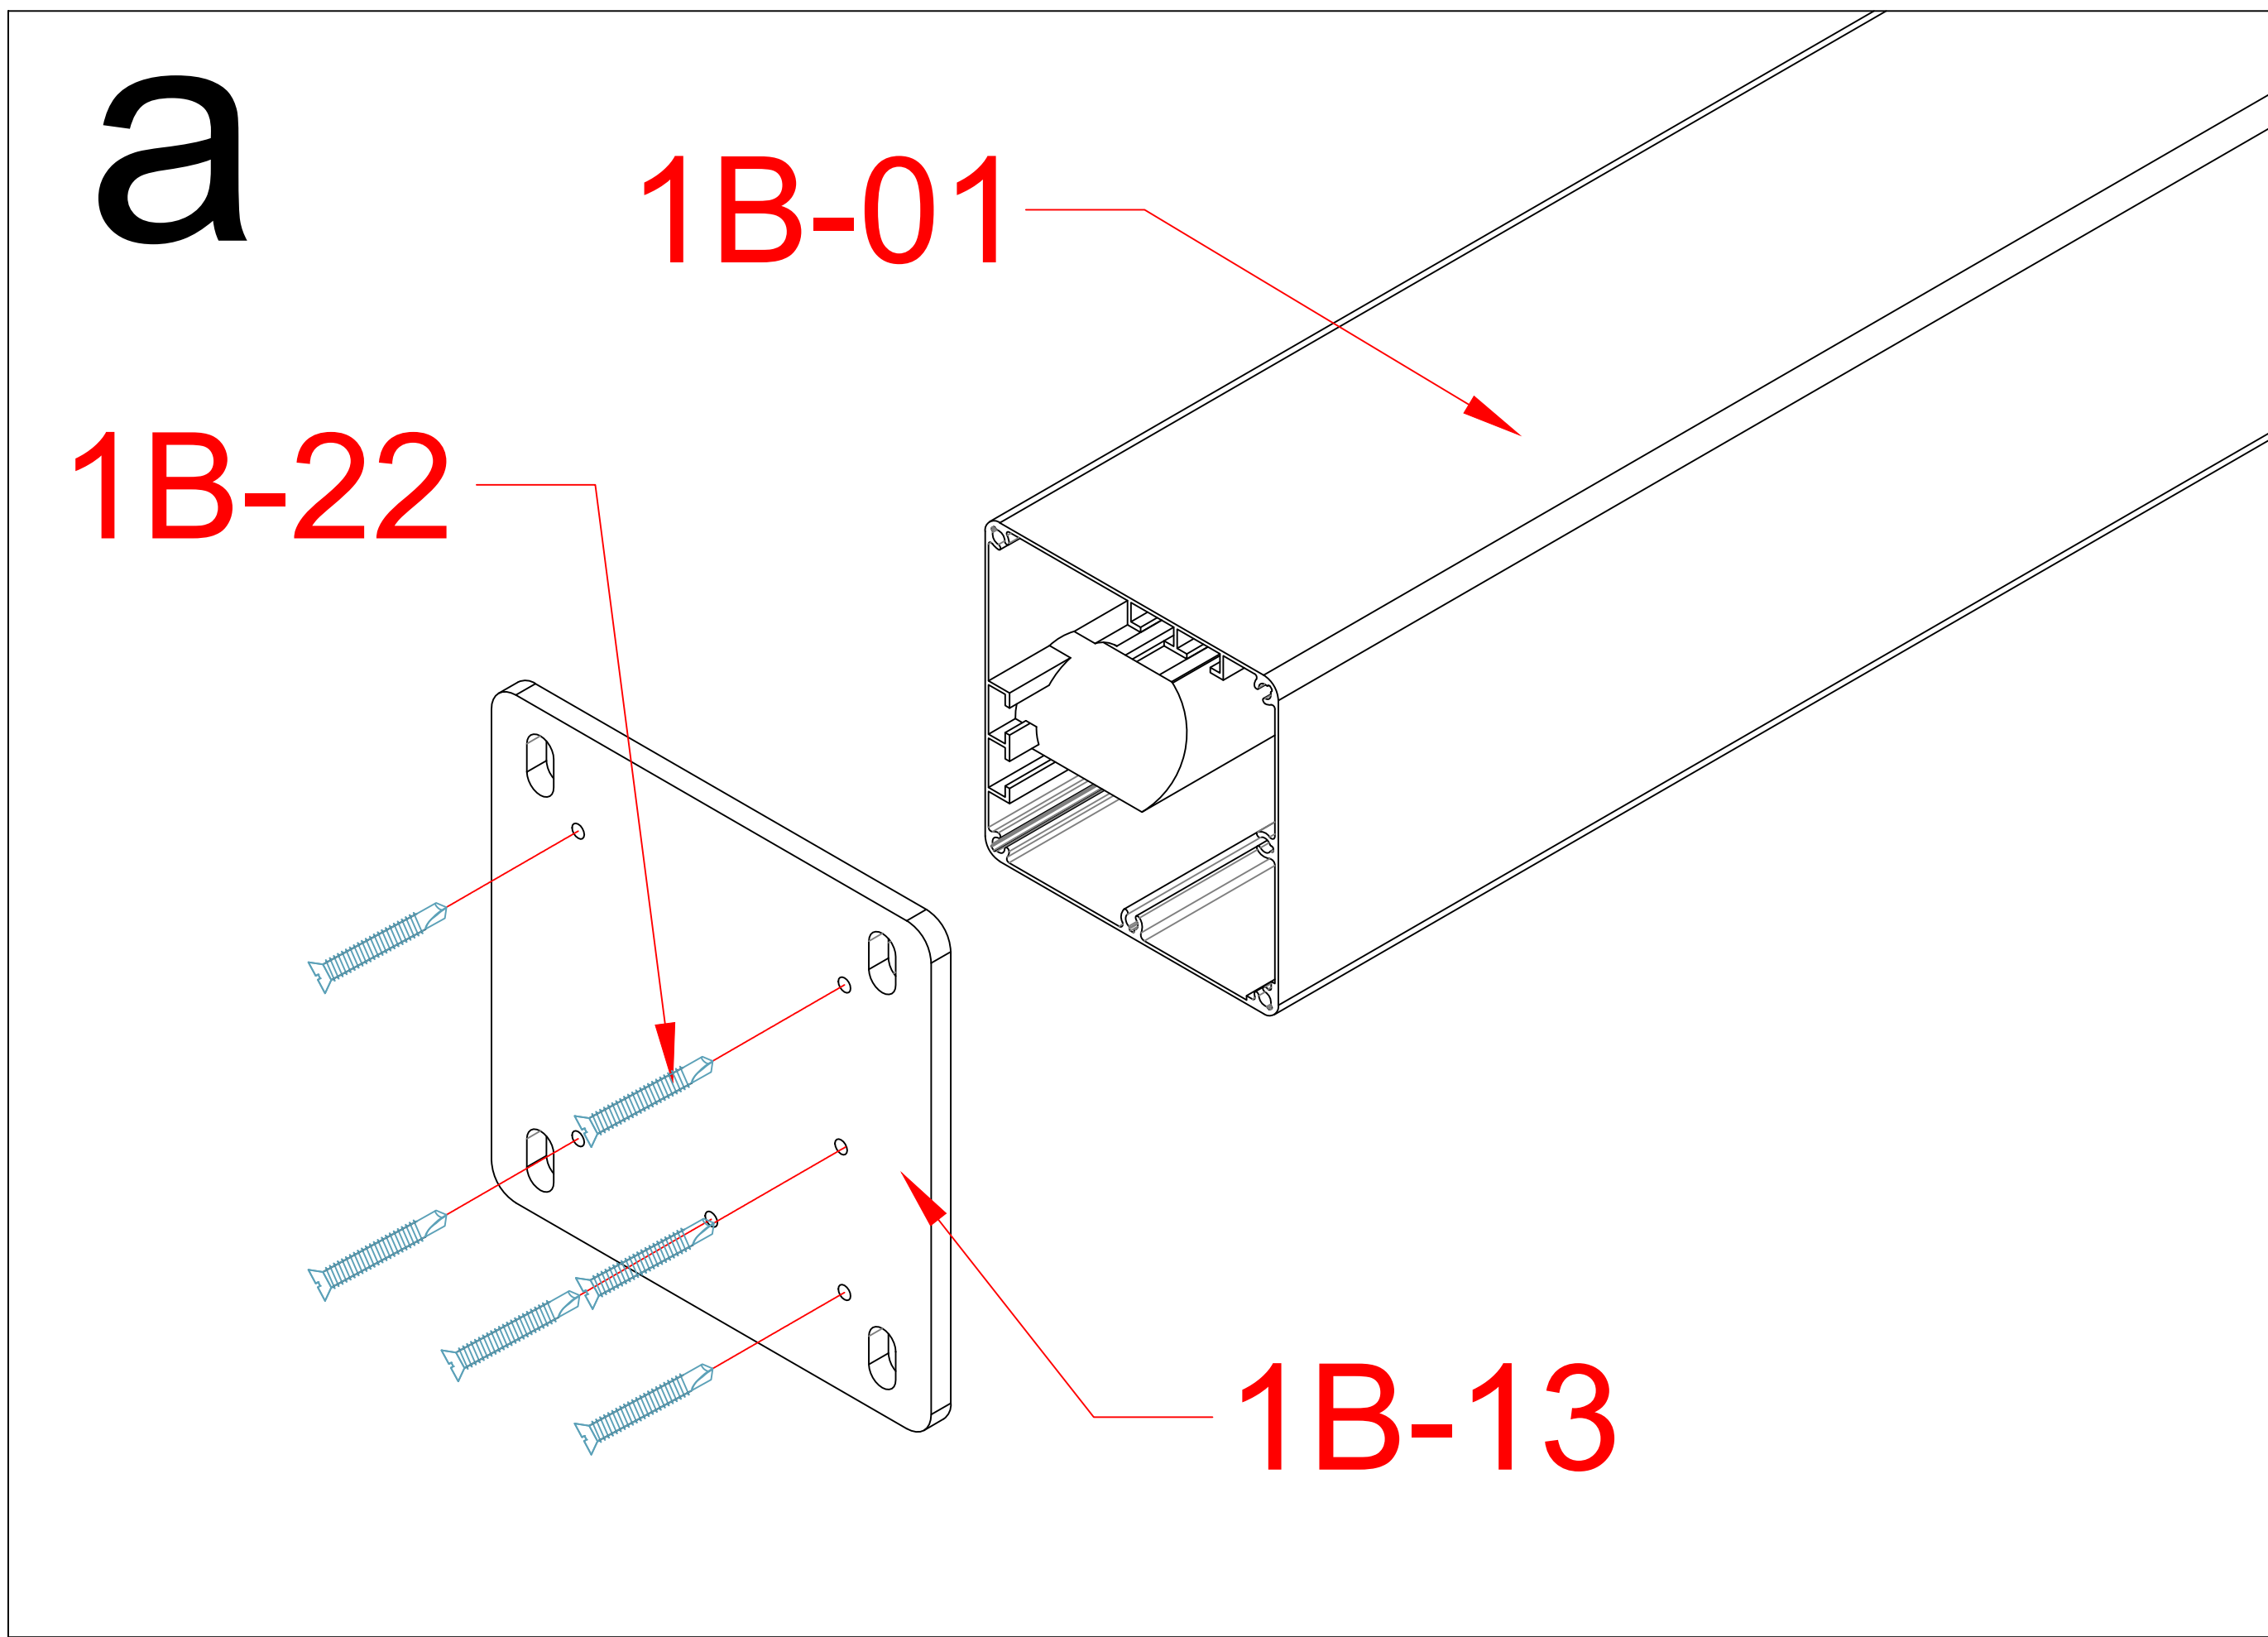


If there are electrical components including motor, blinds or LED light, Set the wire through the post firstly, otherwise it would be very difficult to do so after pergola was assembled.

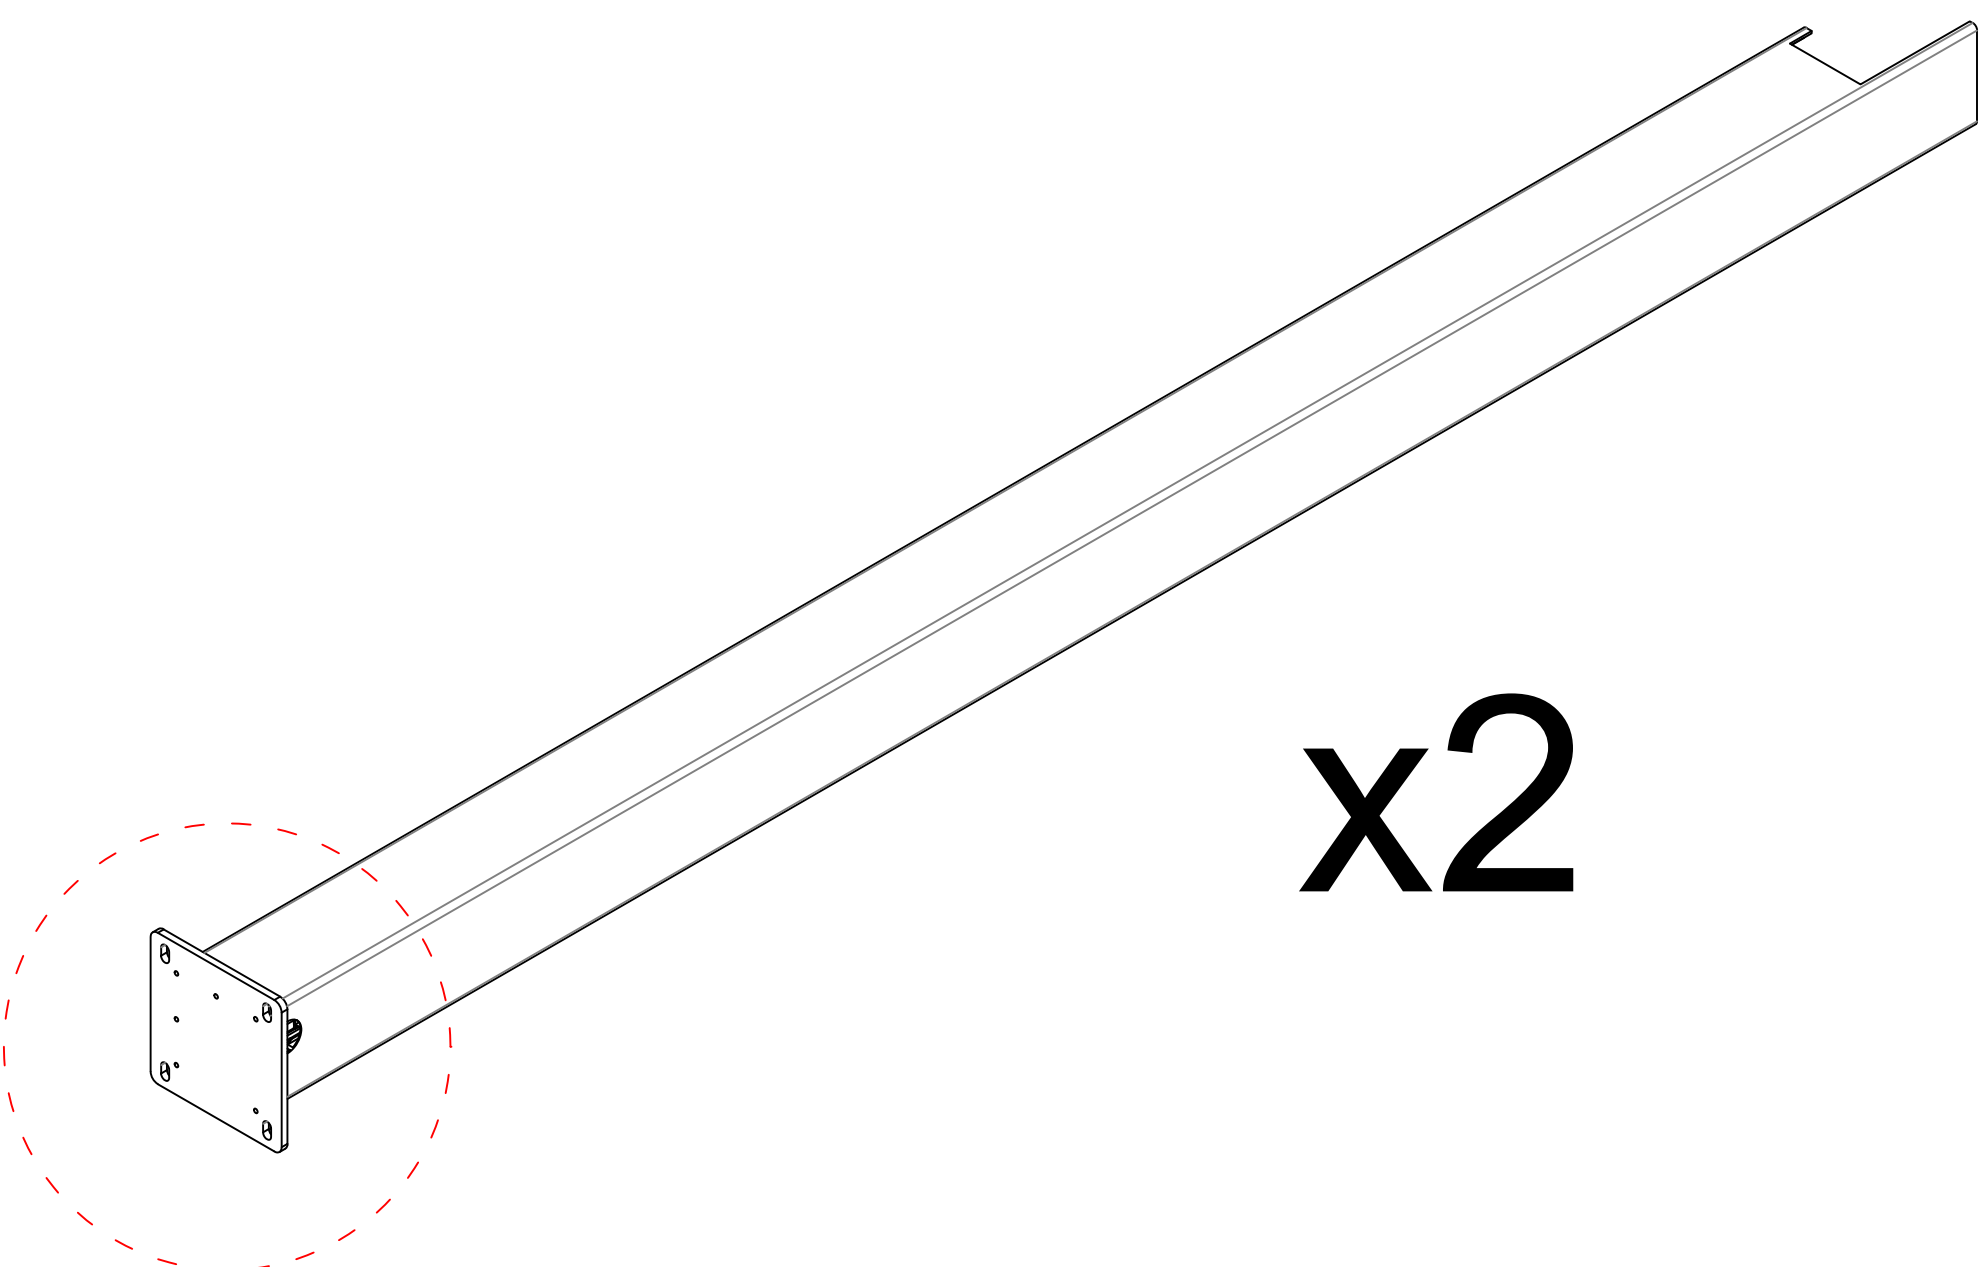
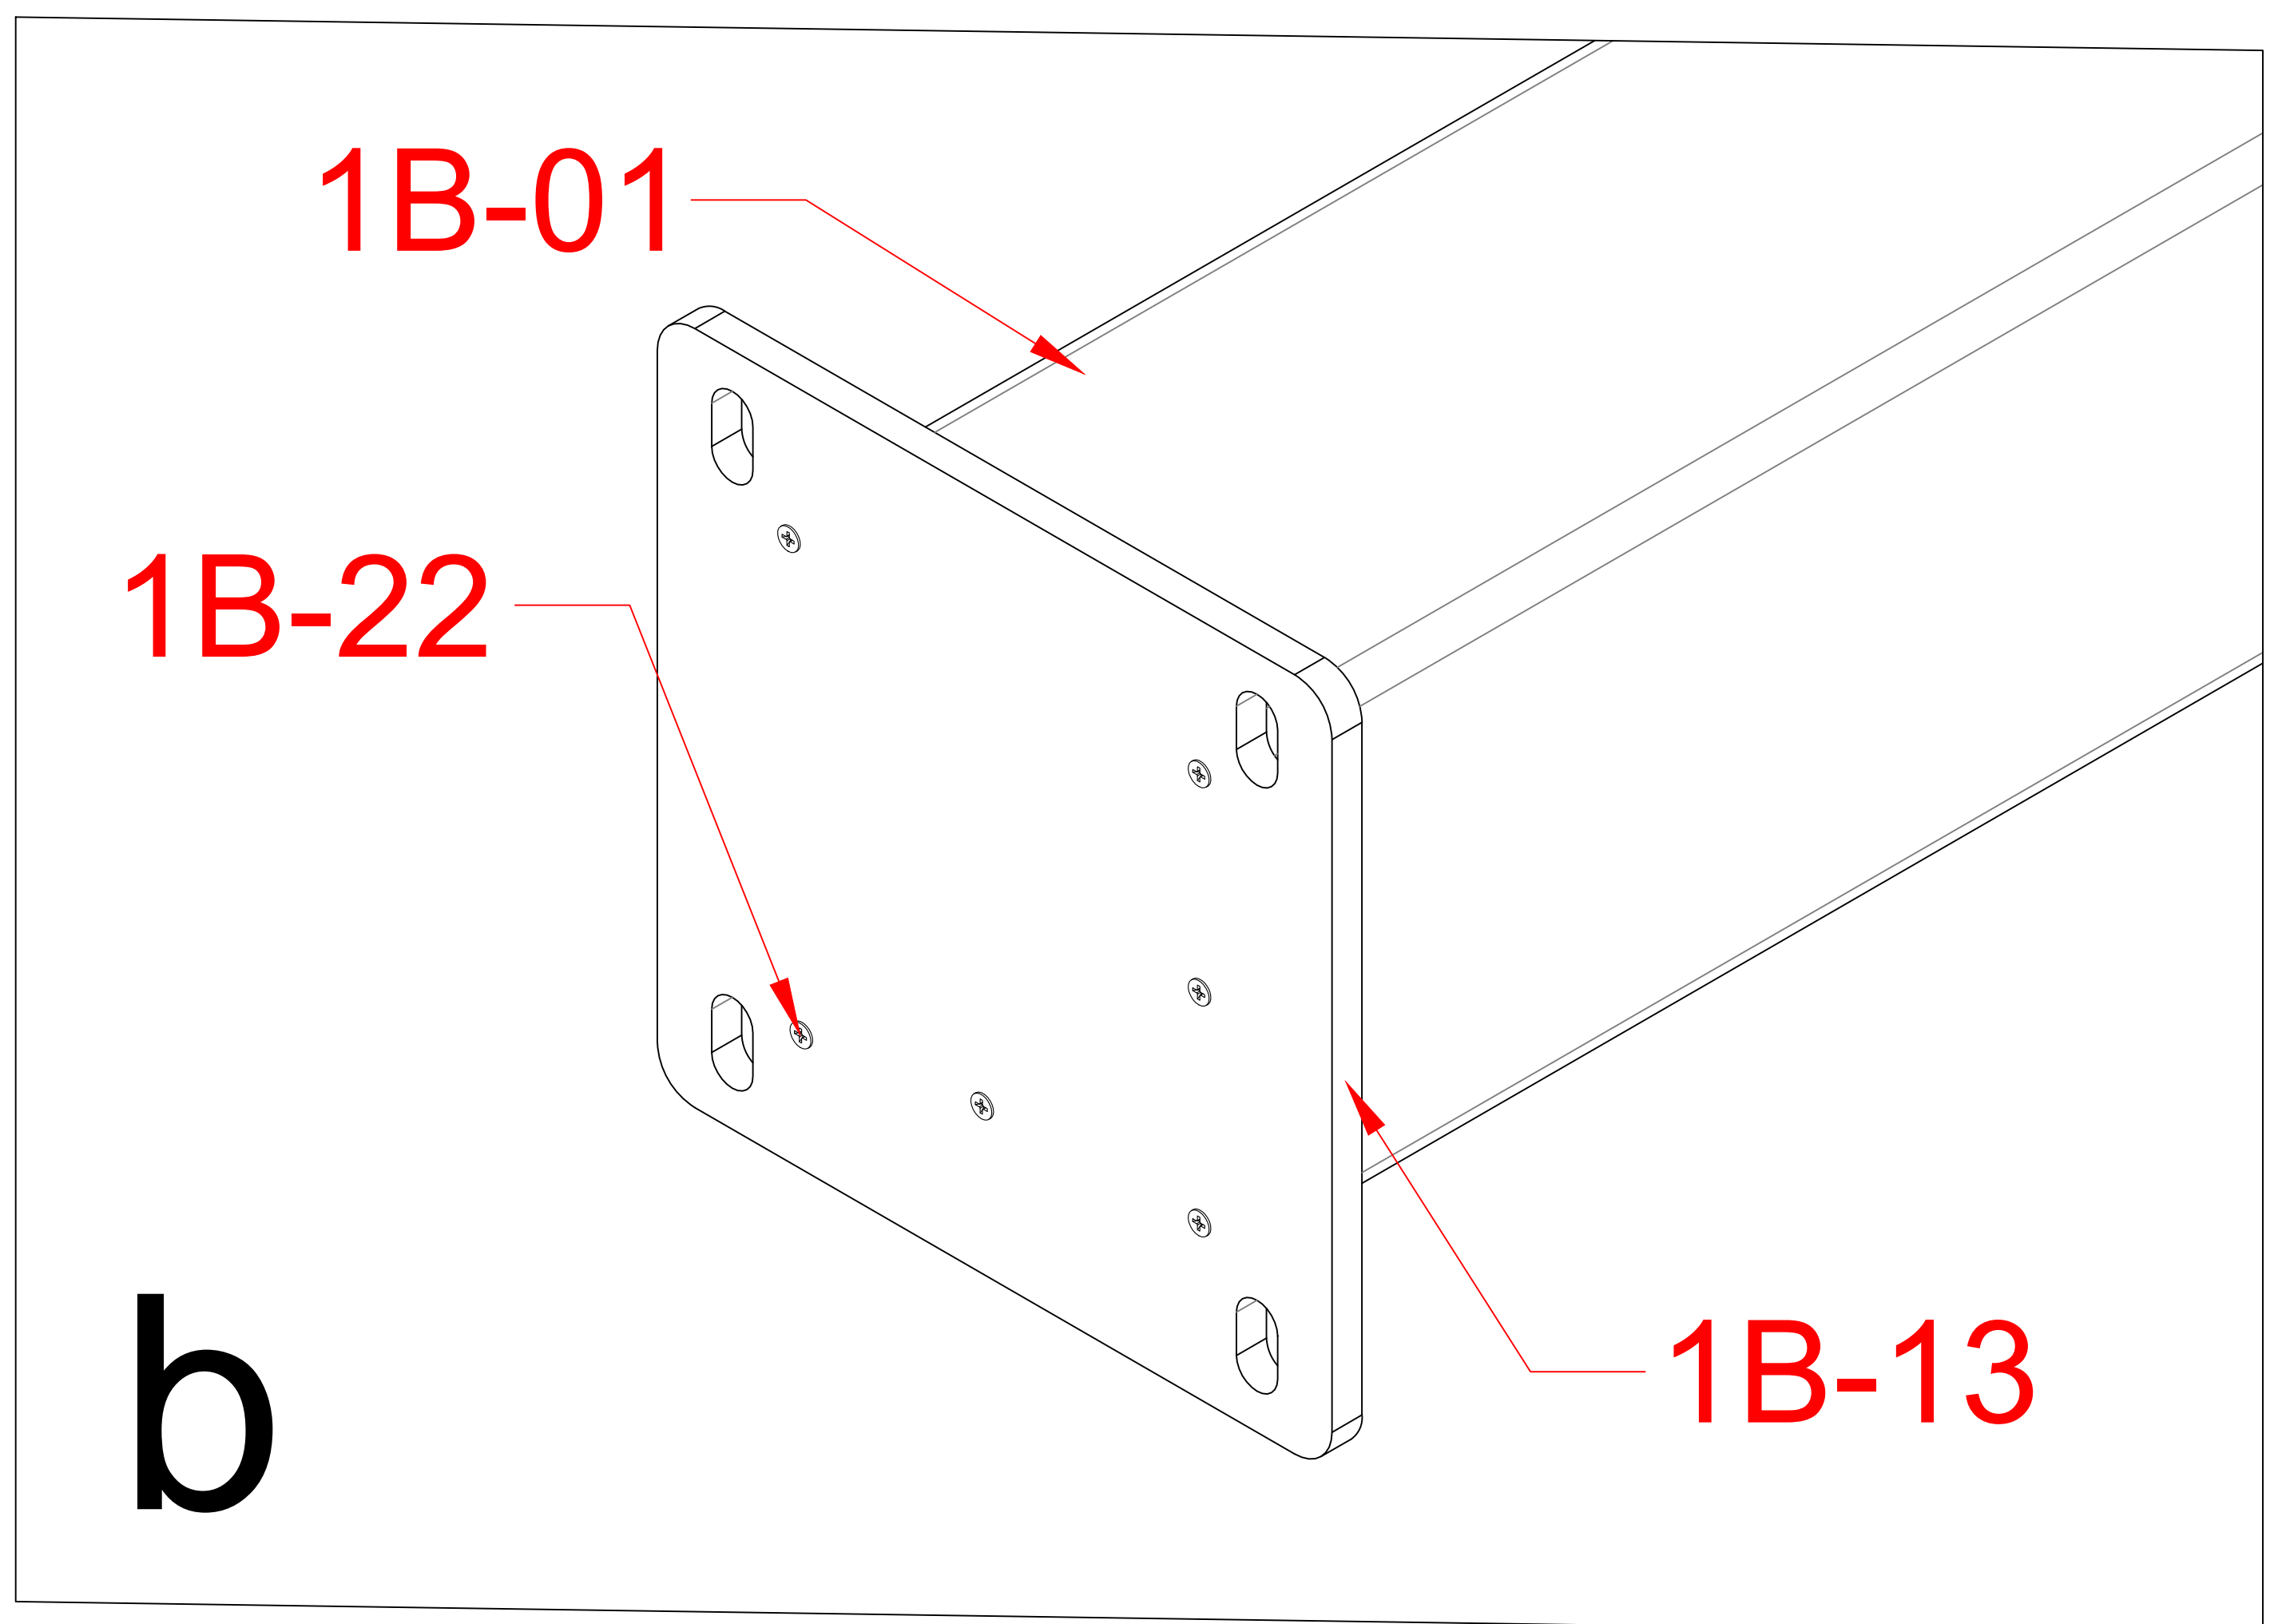


1B-01		2
1B-13		2
1B-22		12

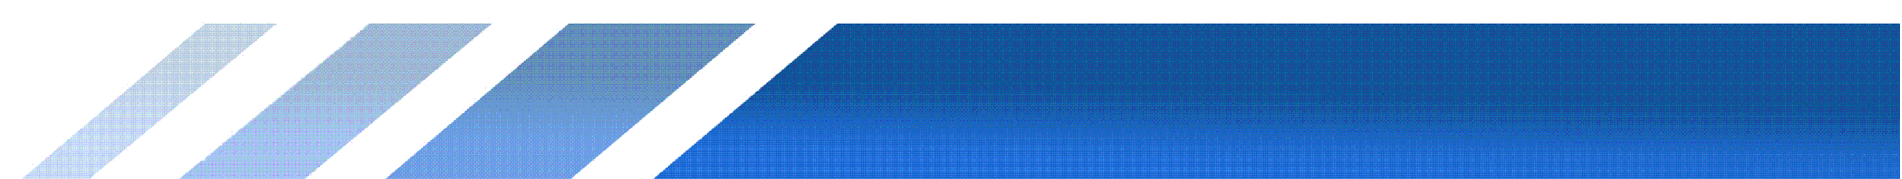





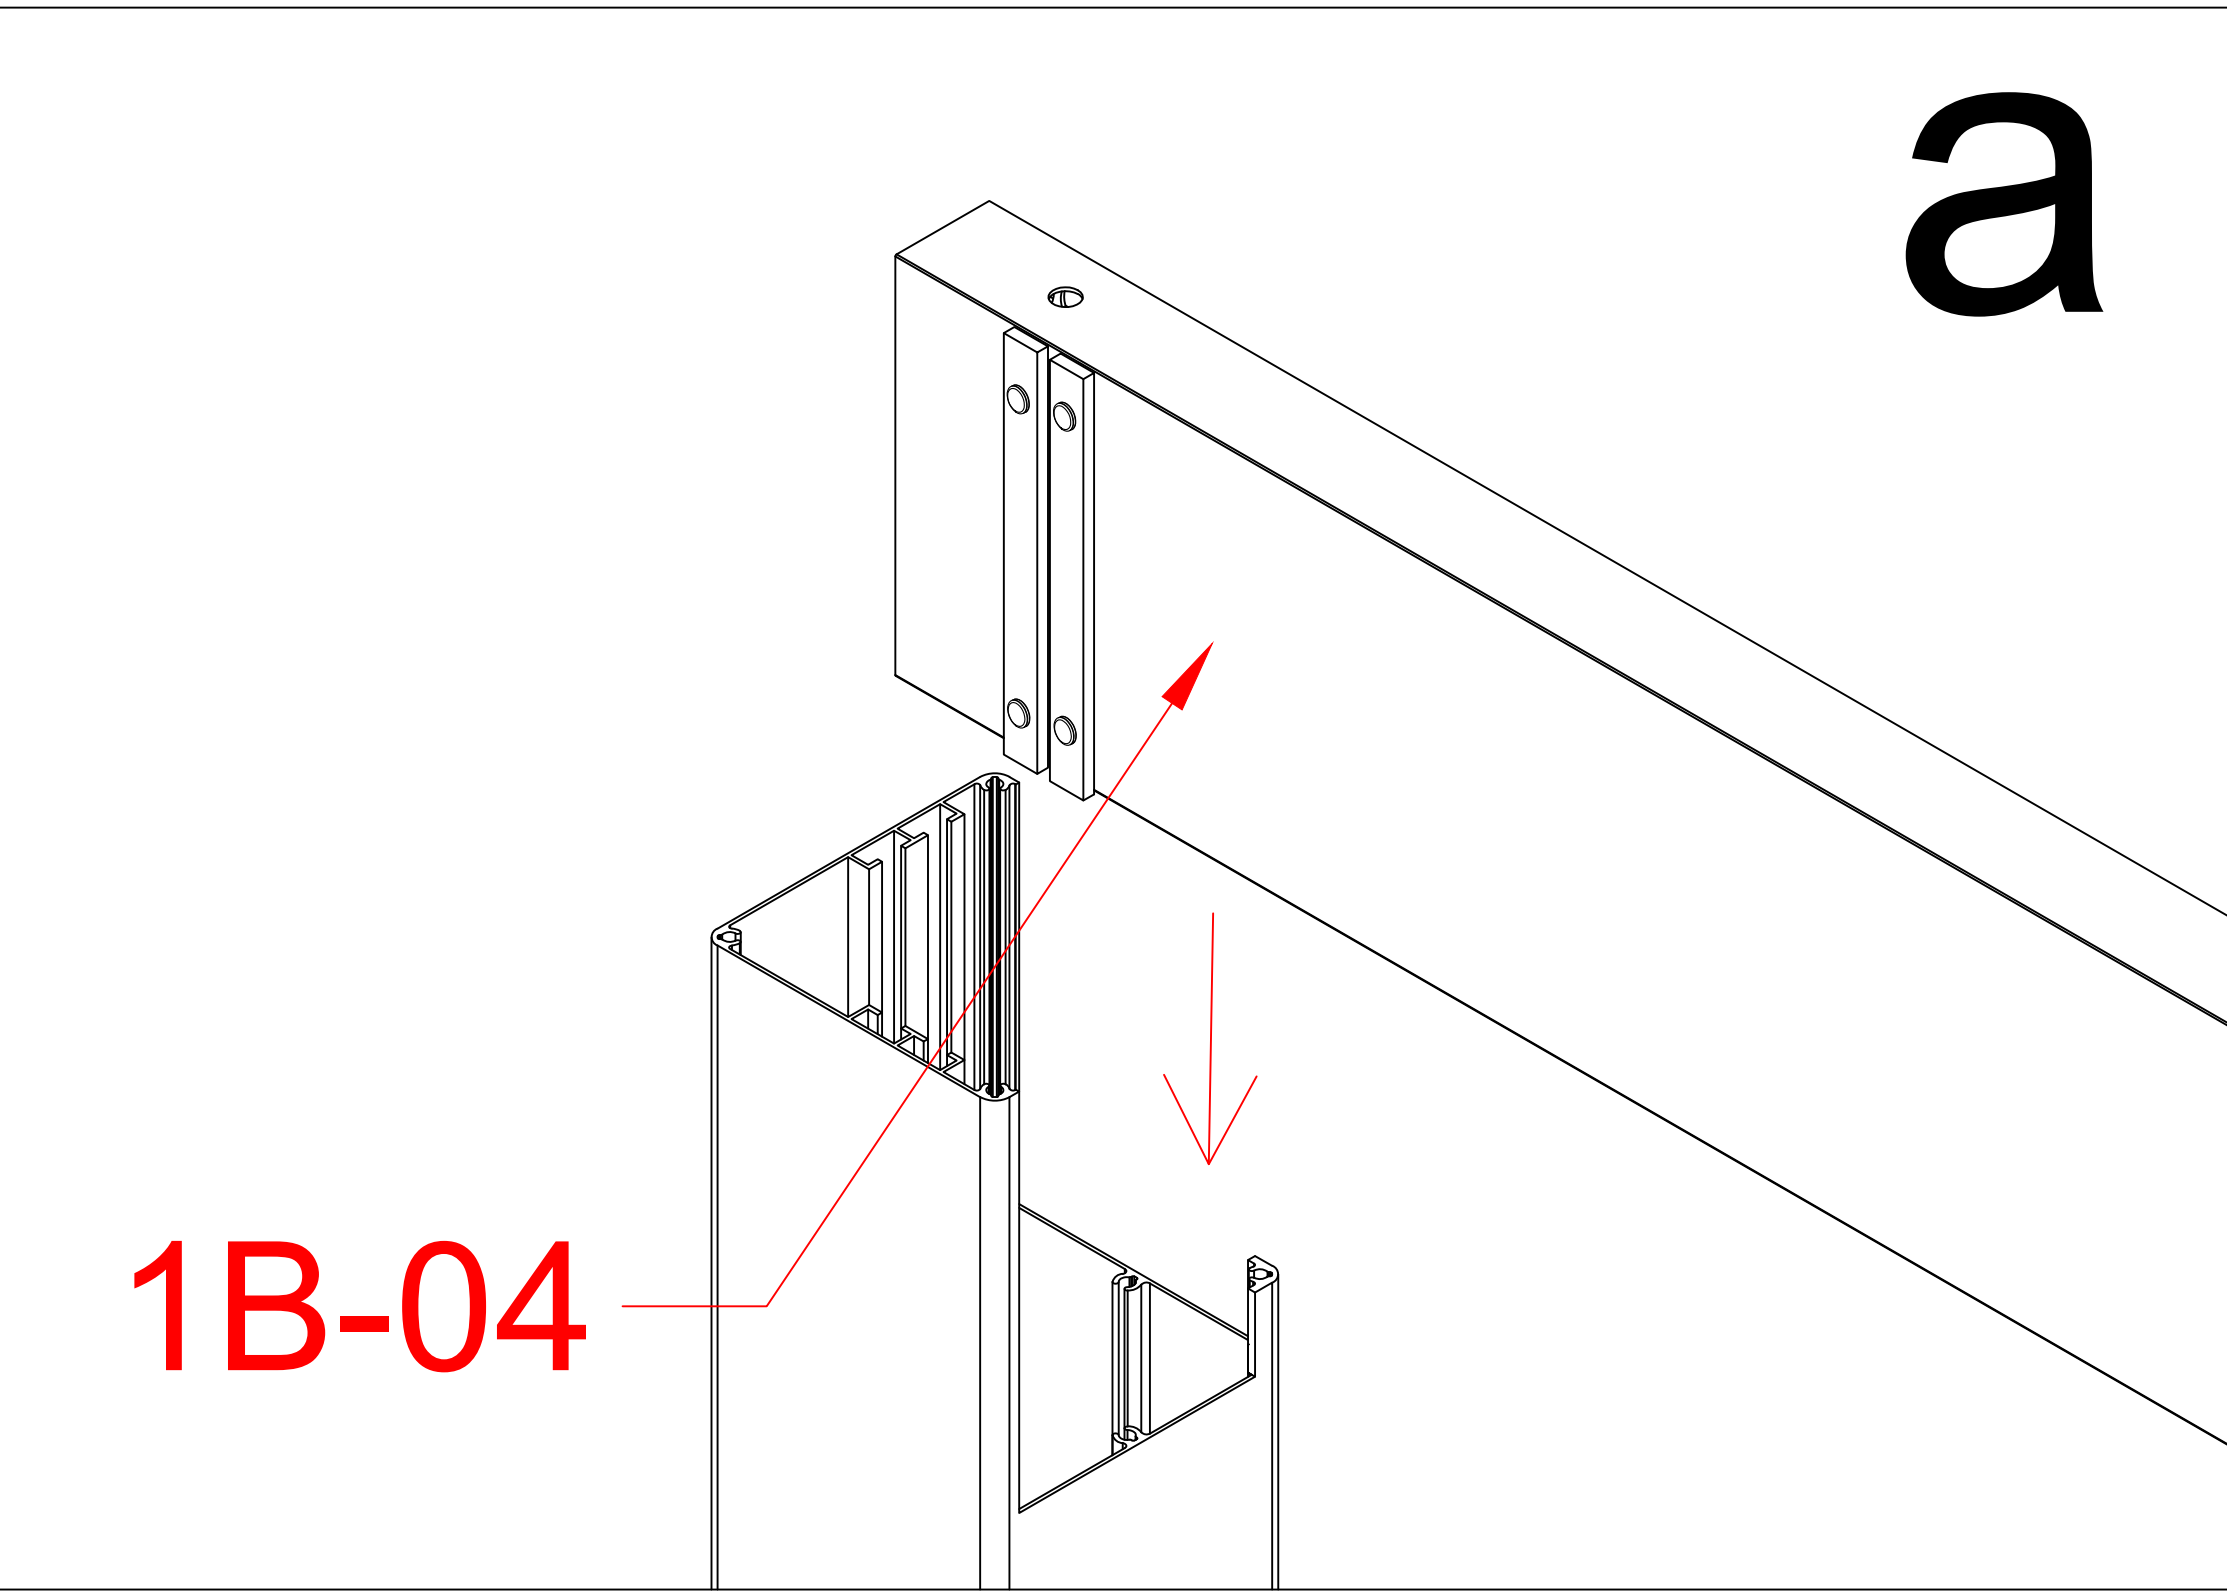




a

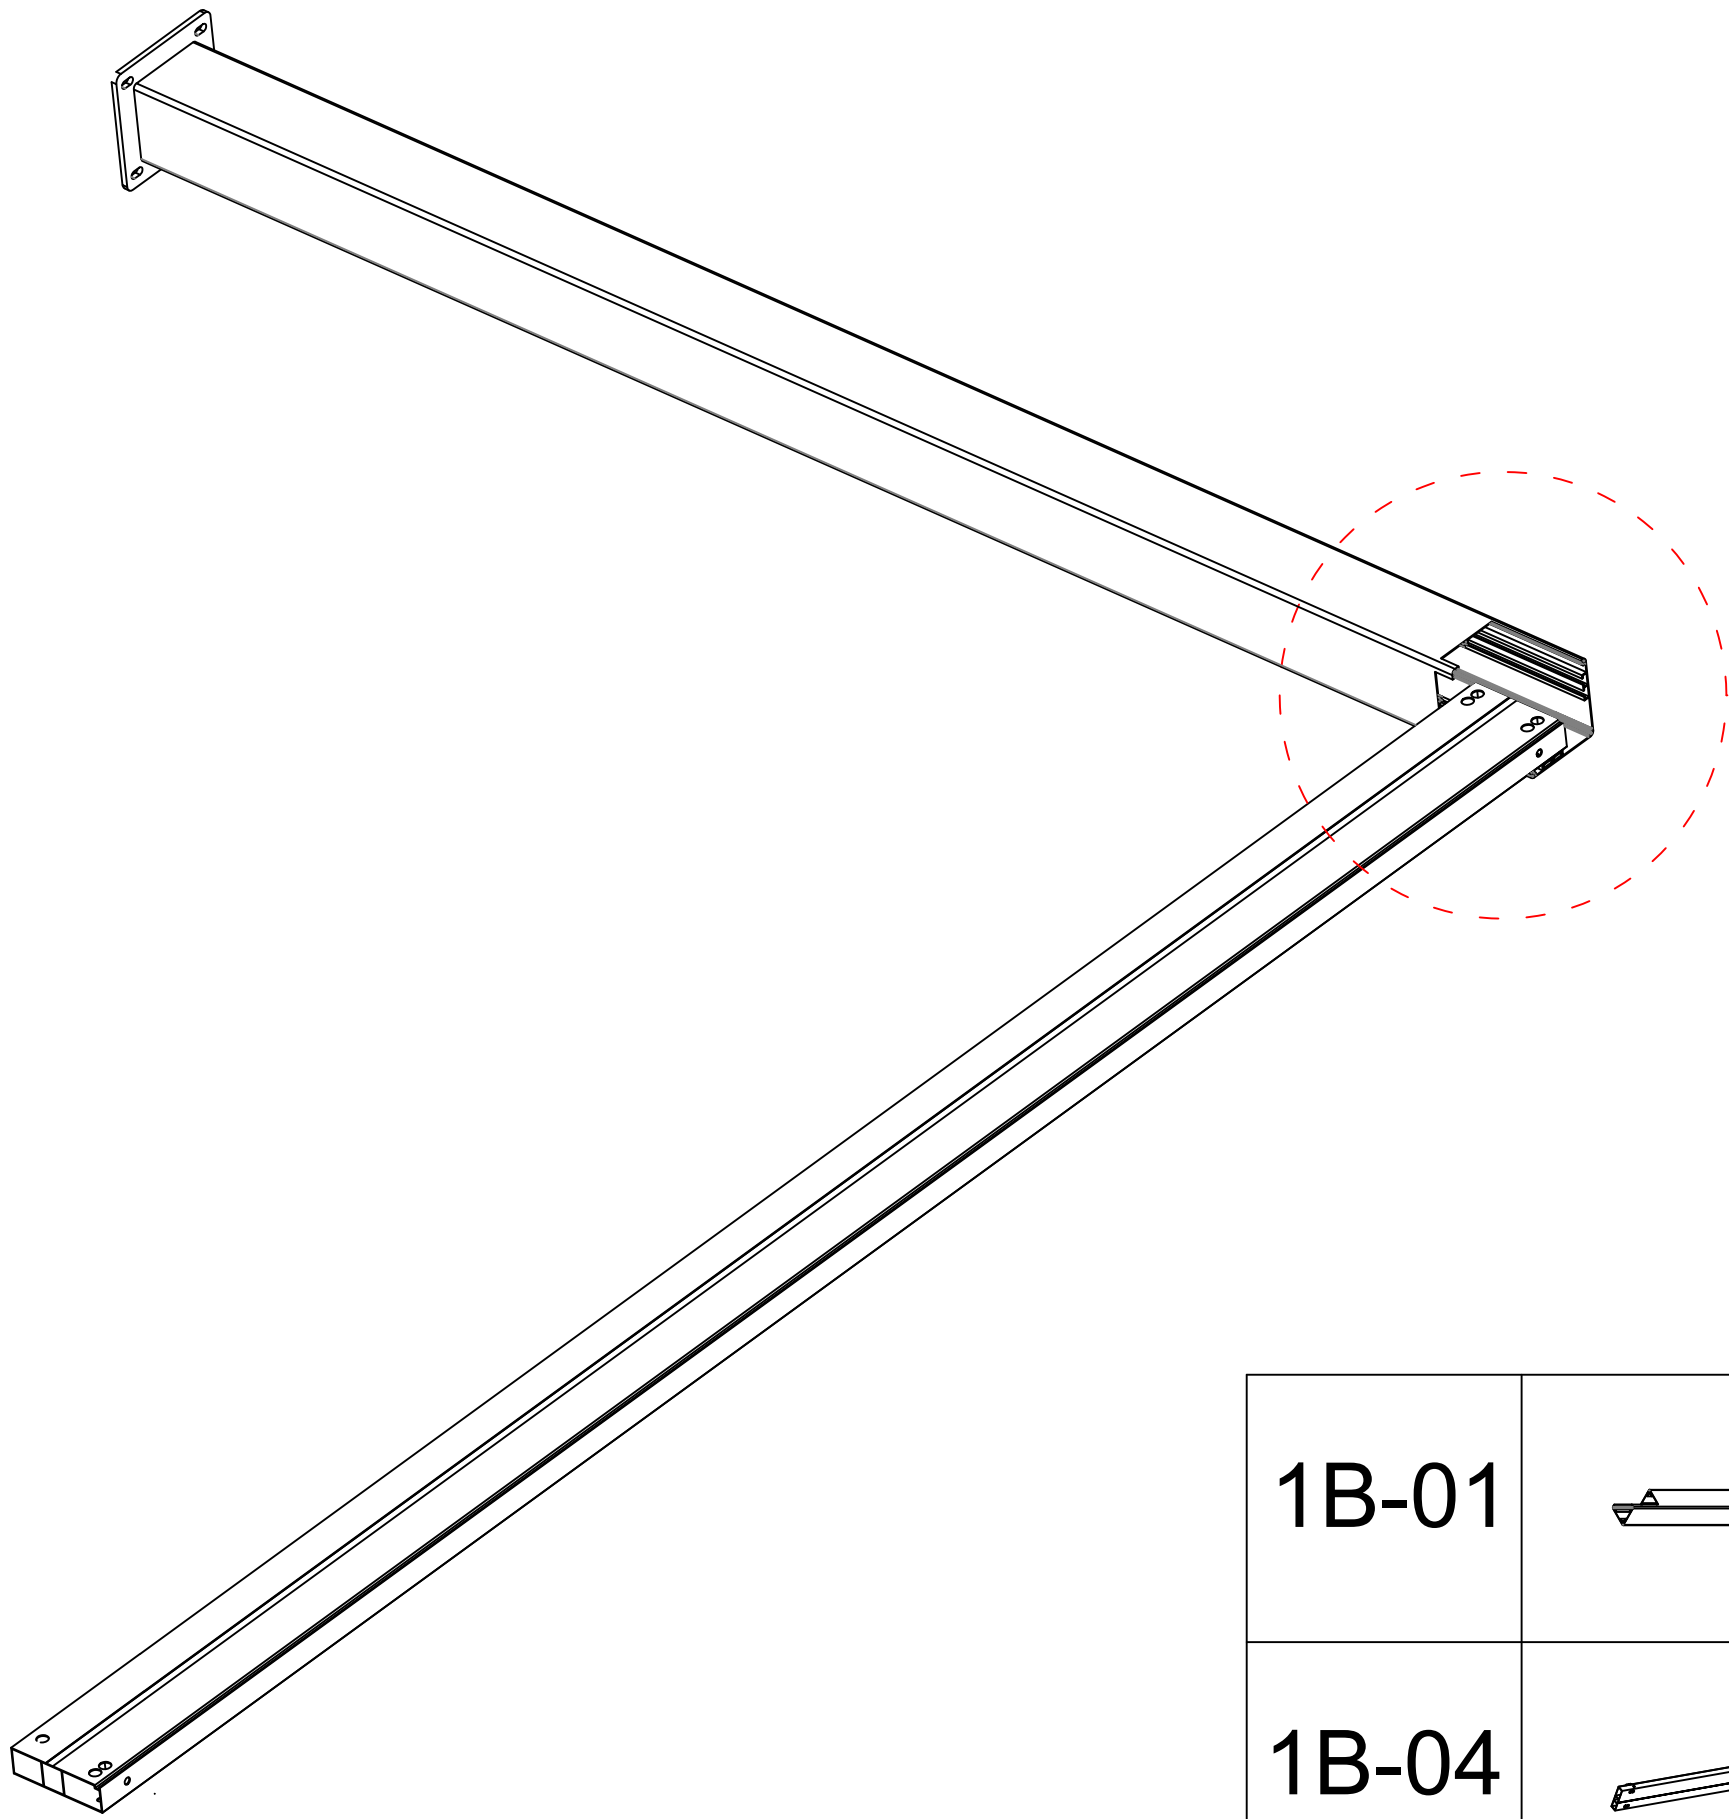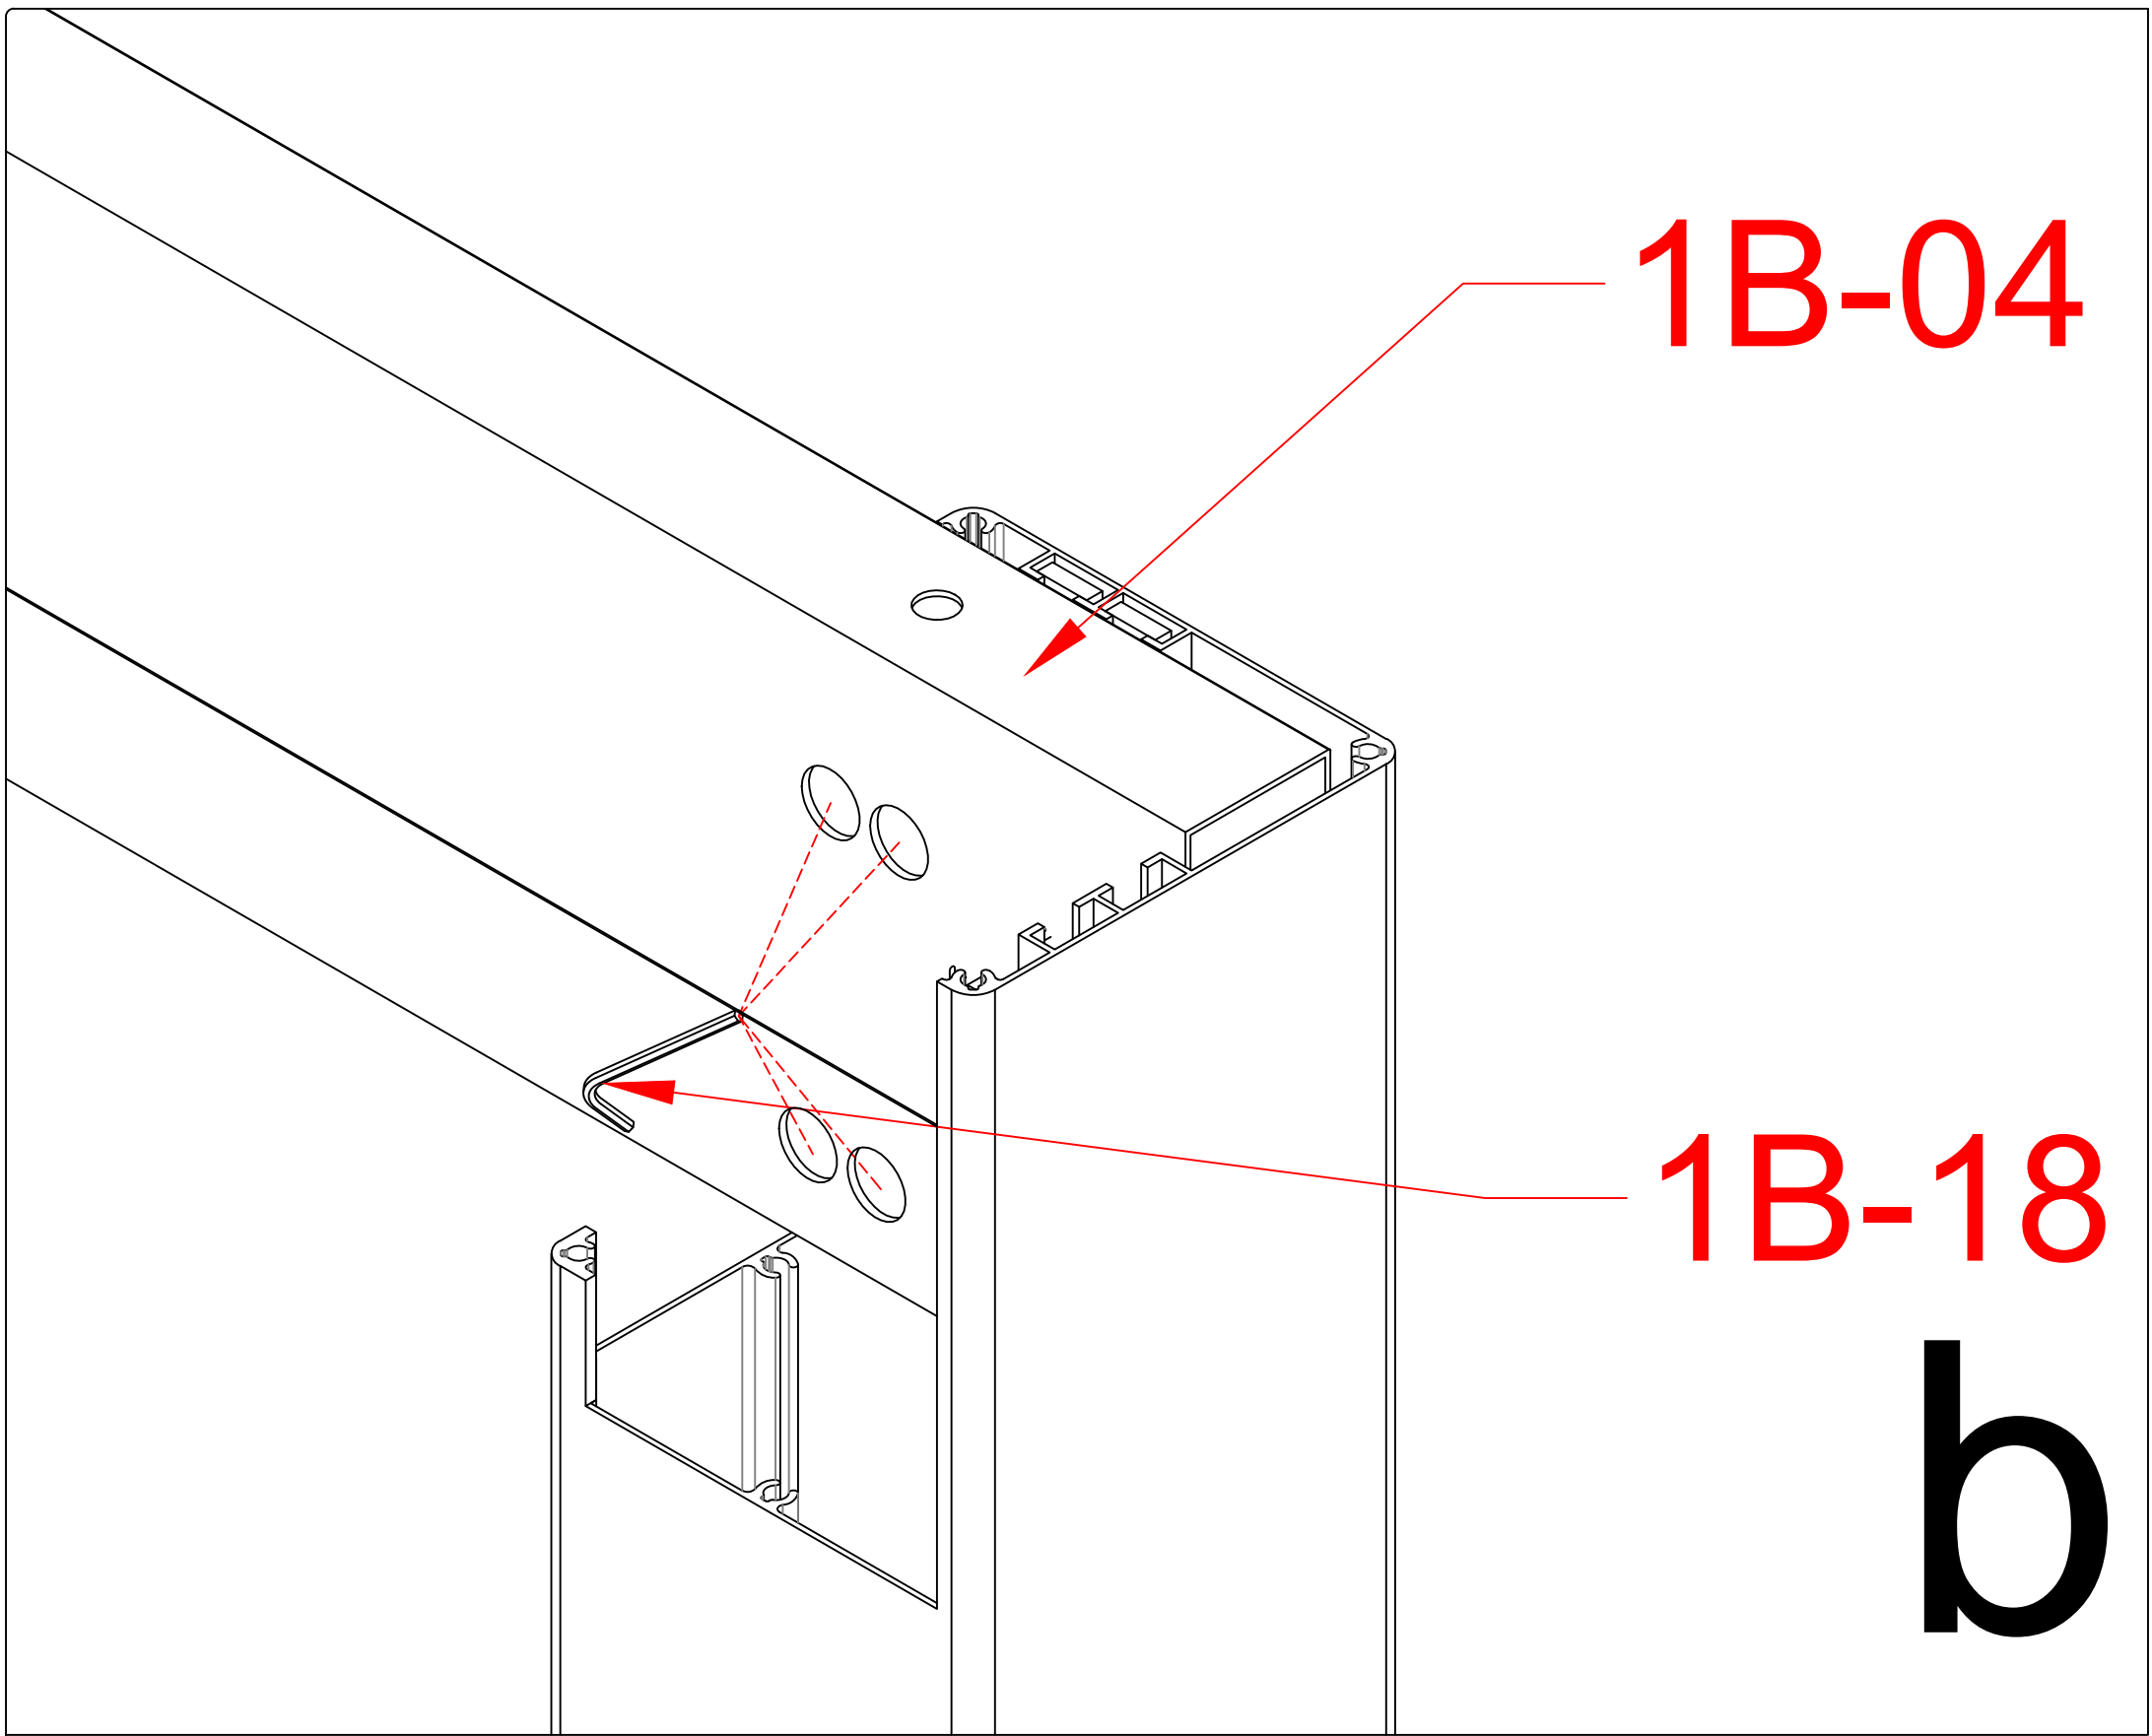









1B-01		2
1B-04		2

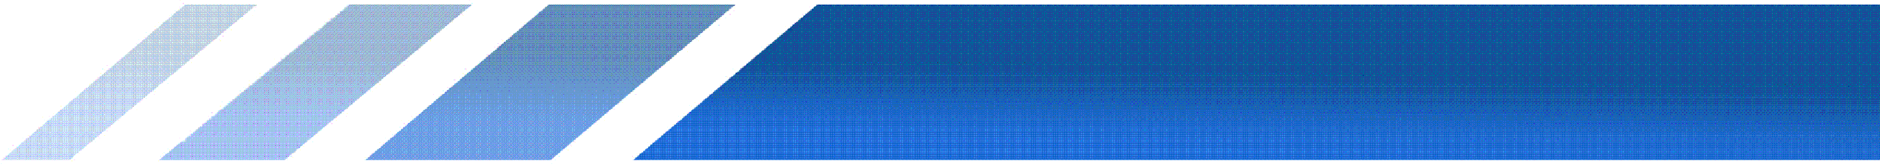

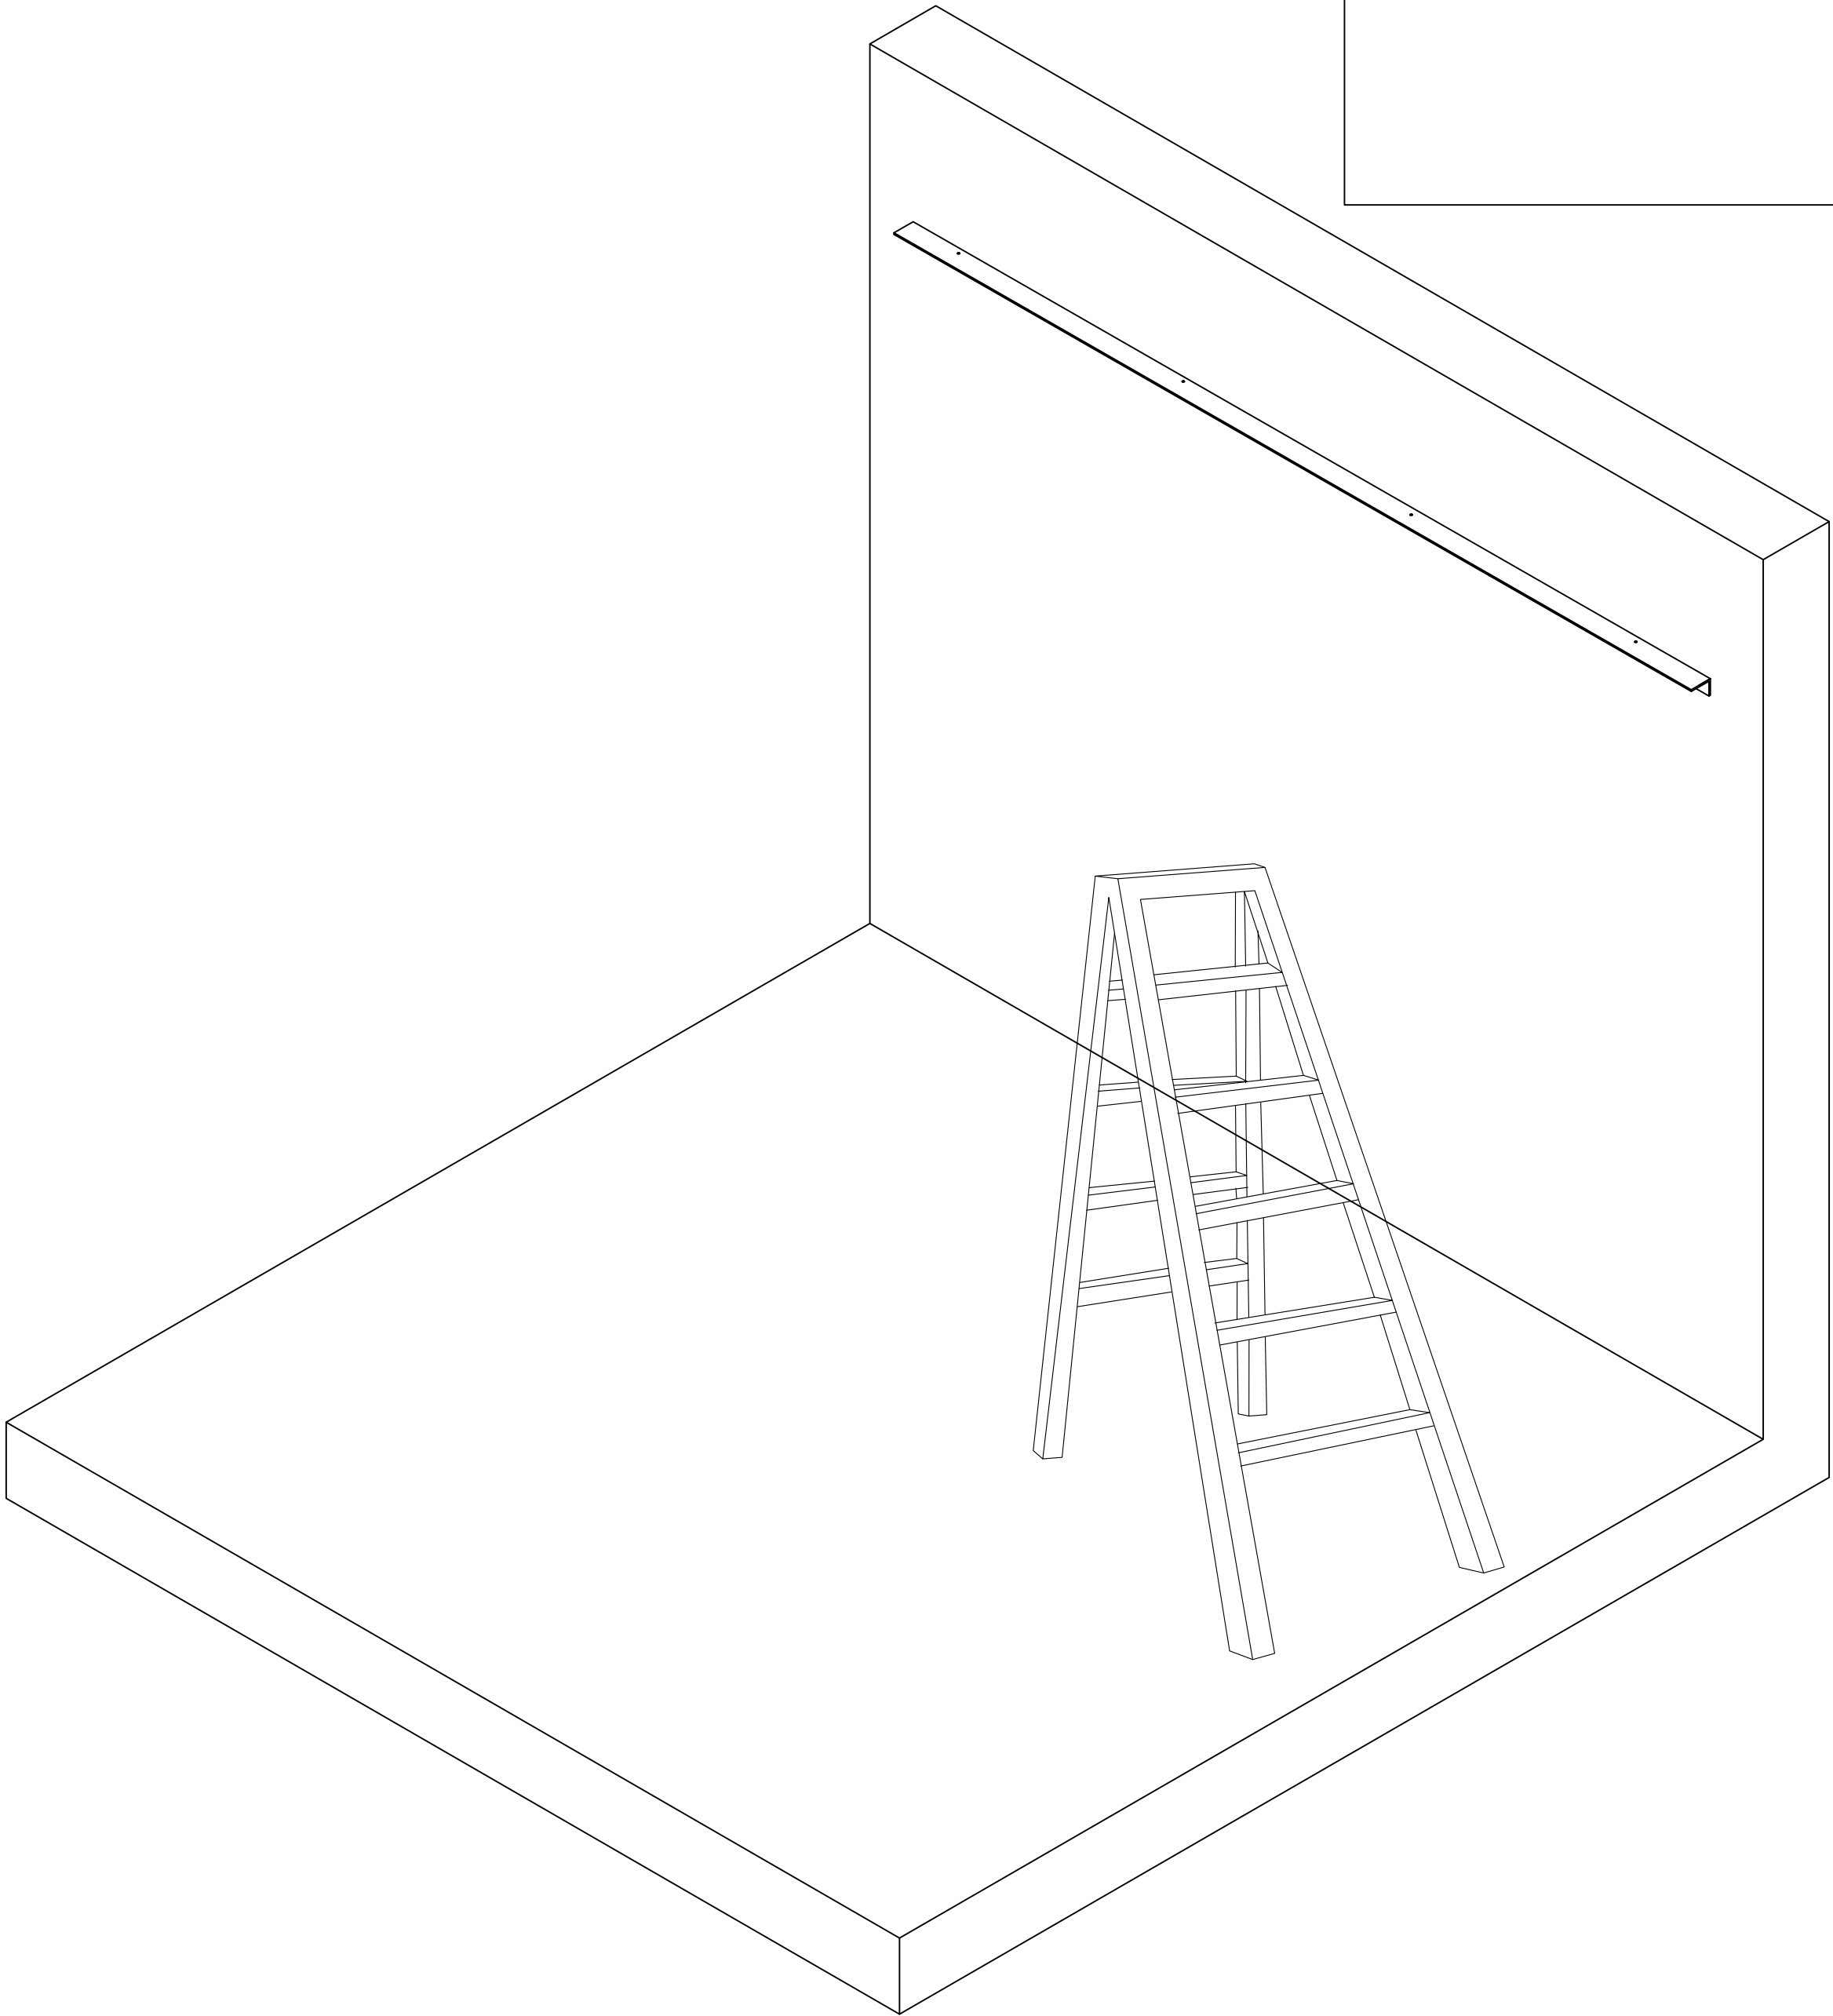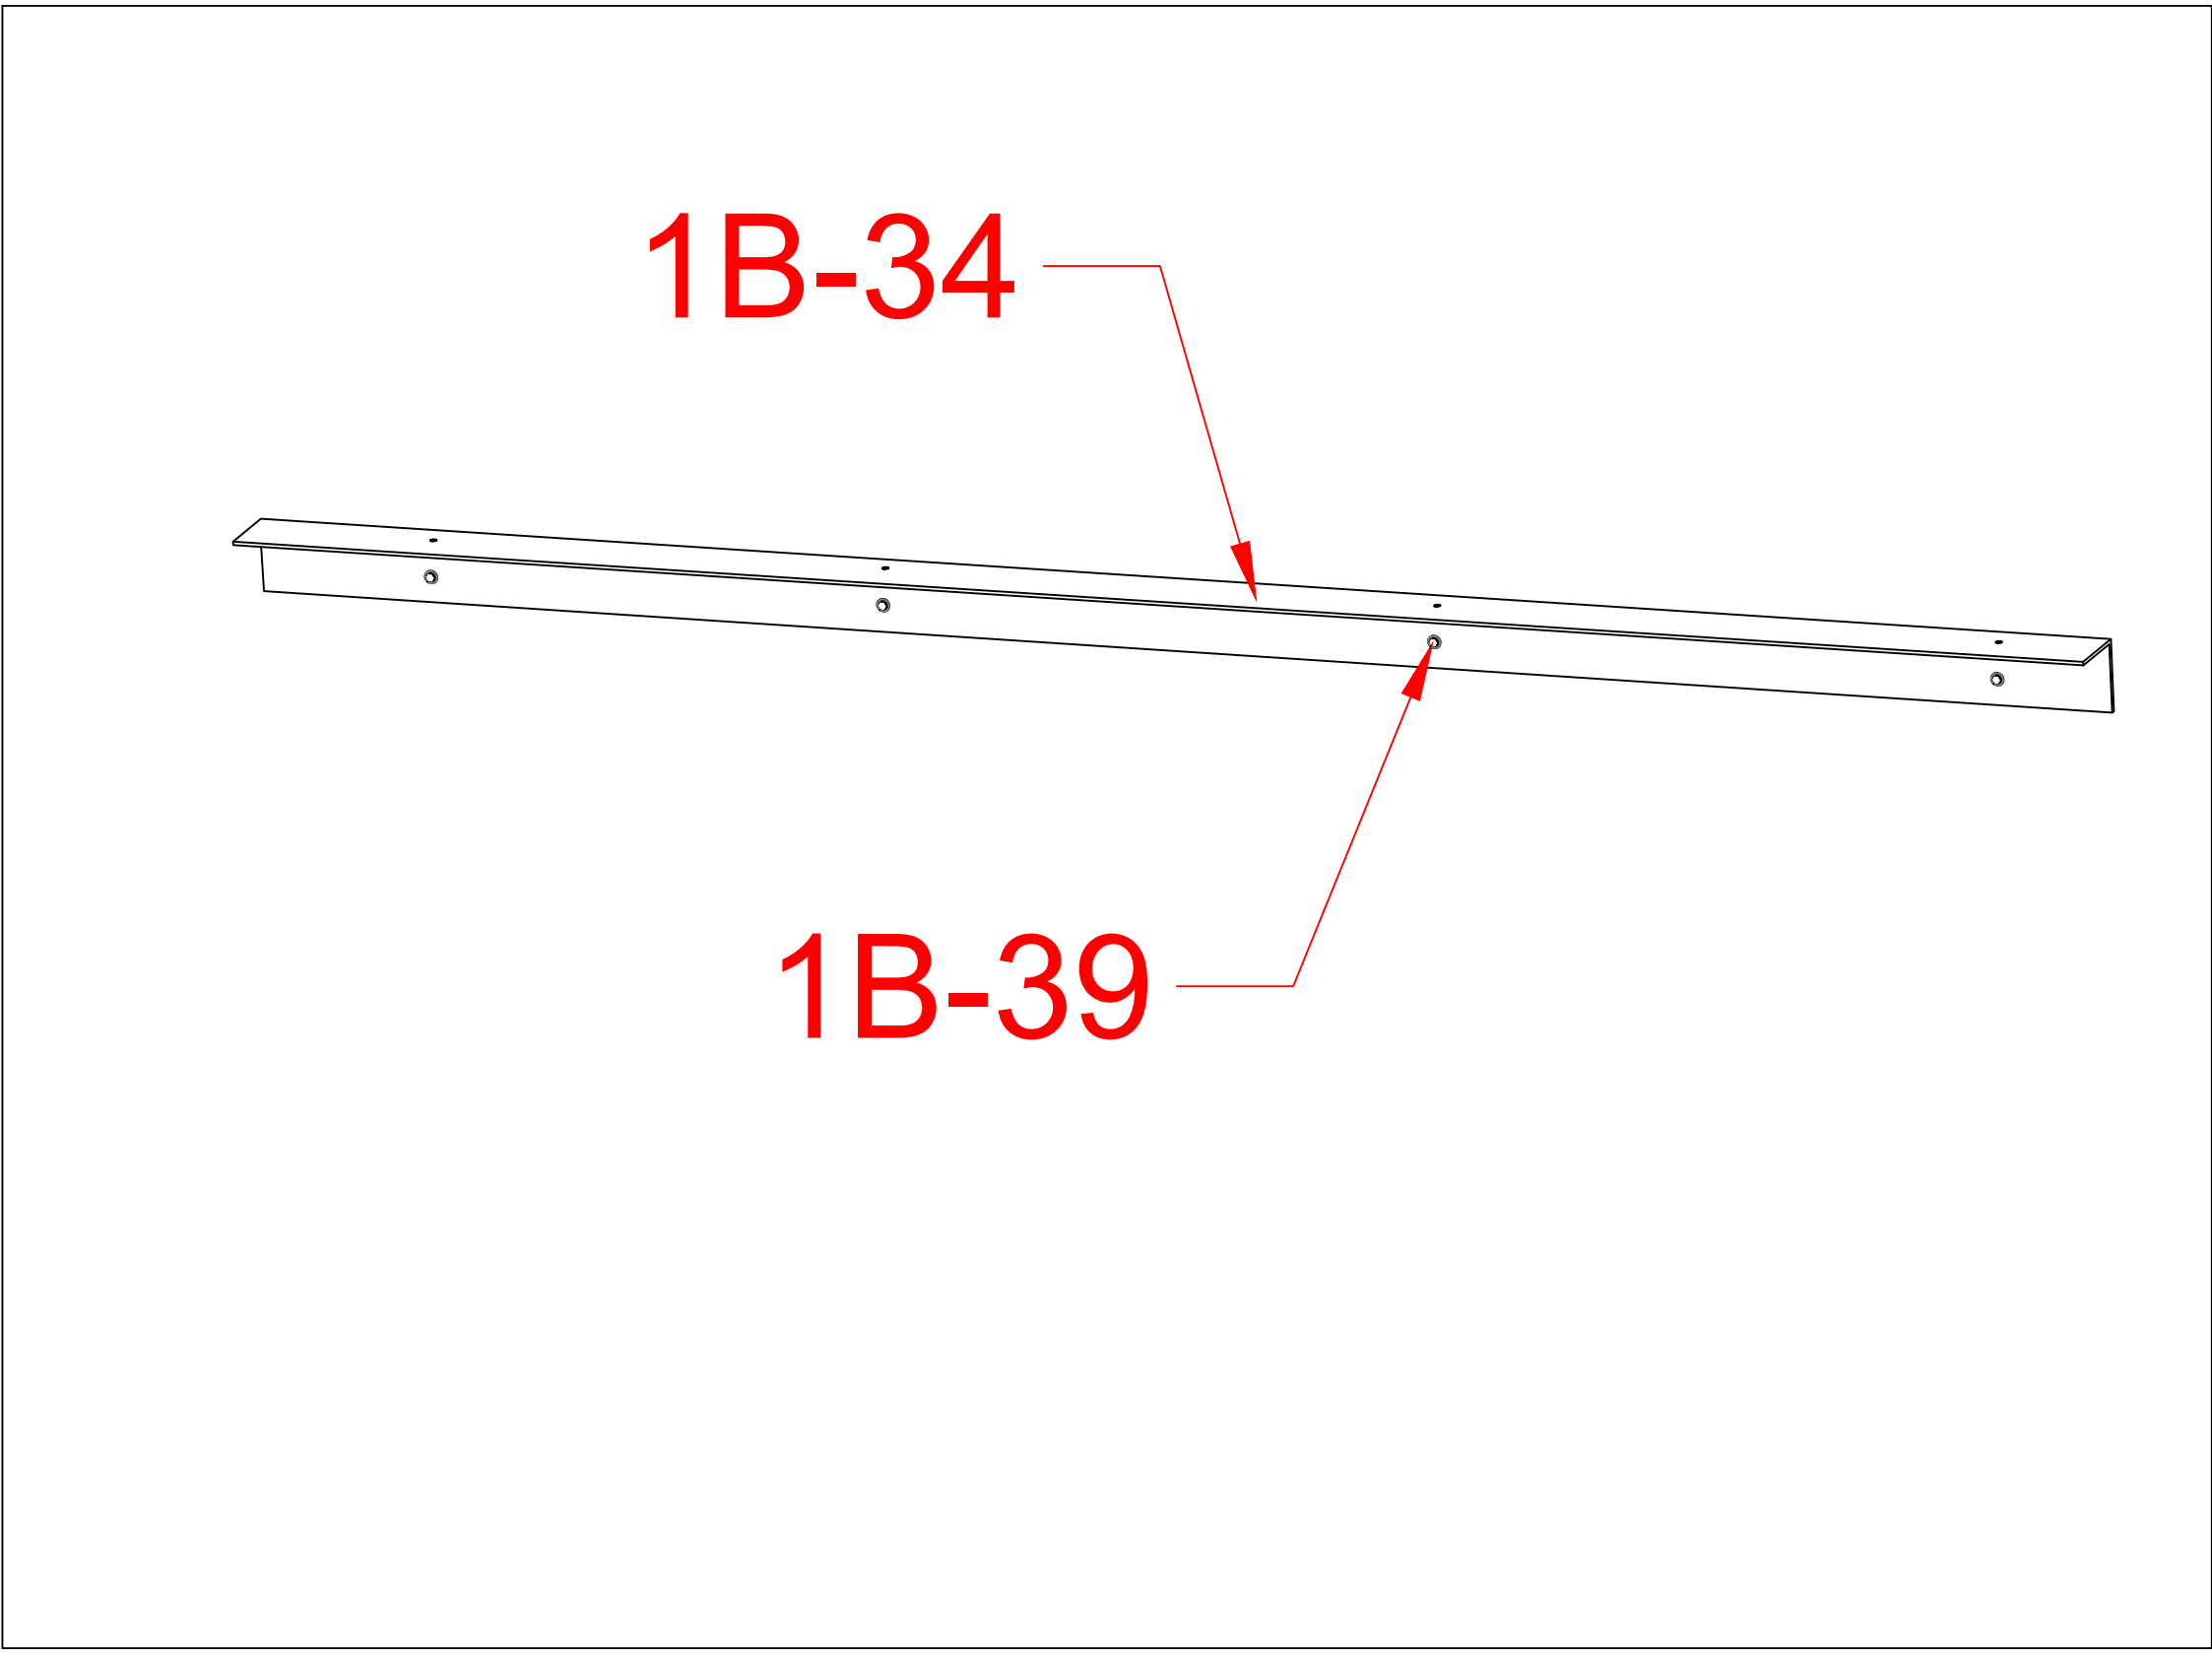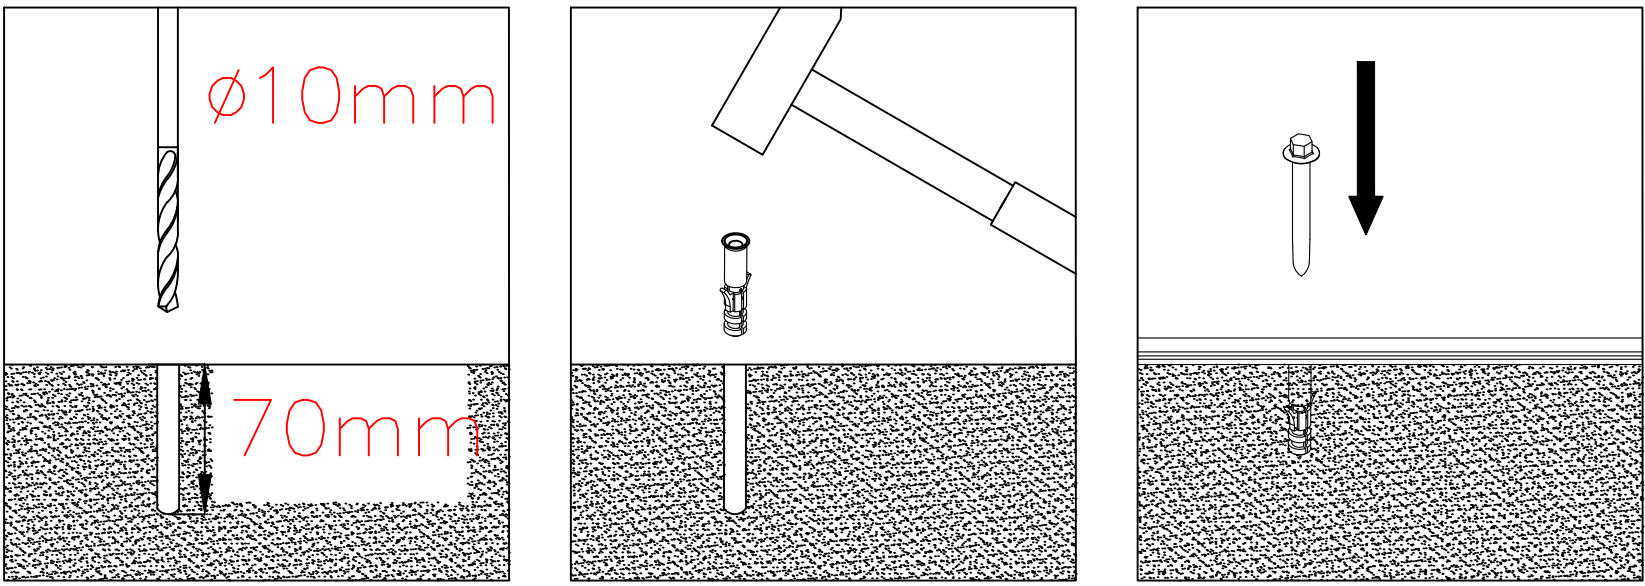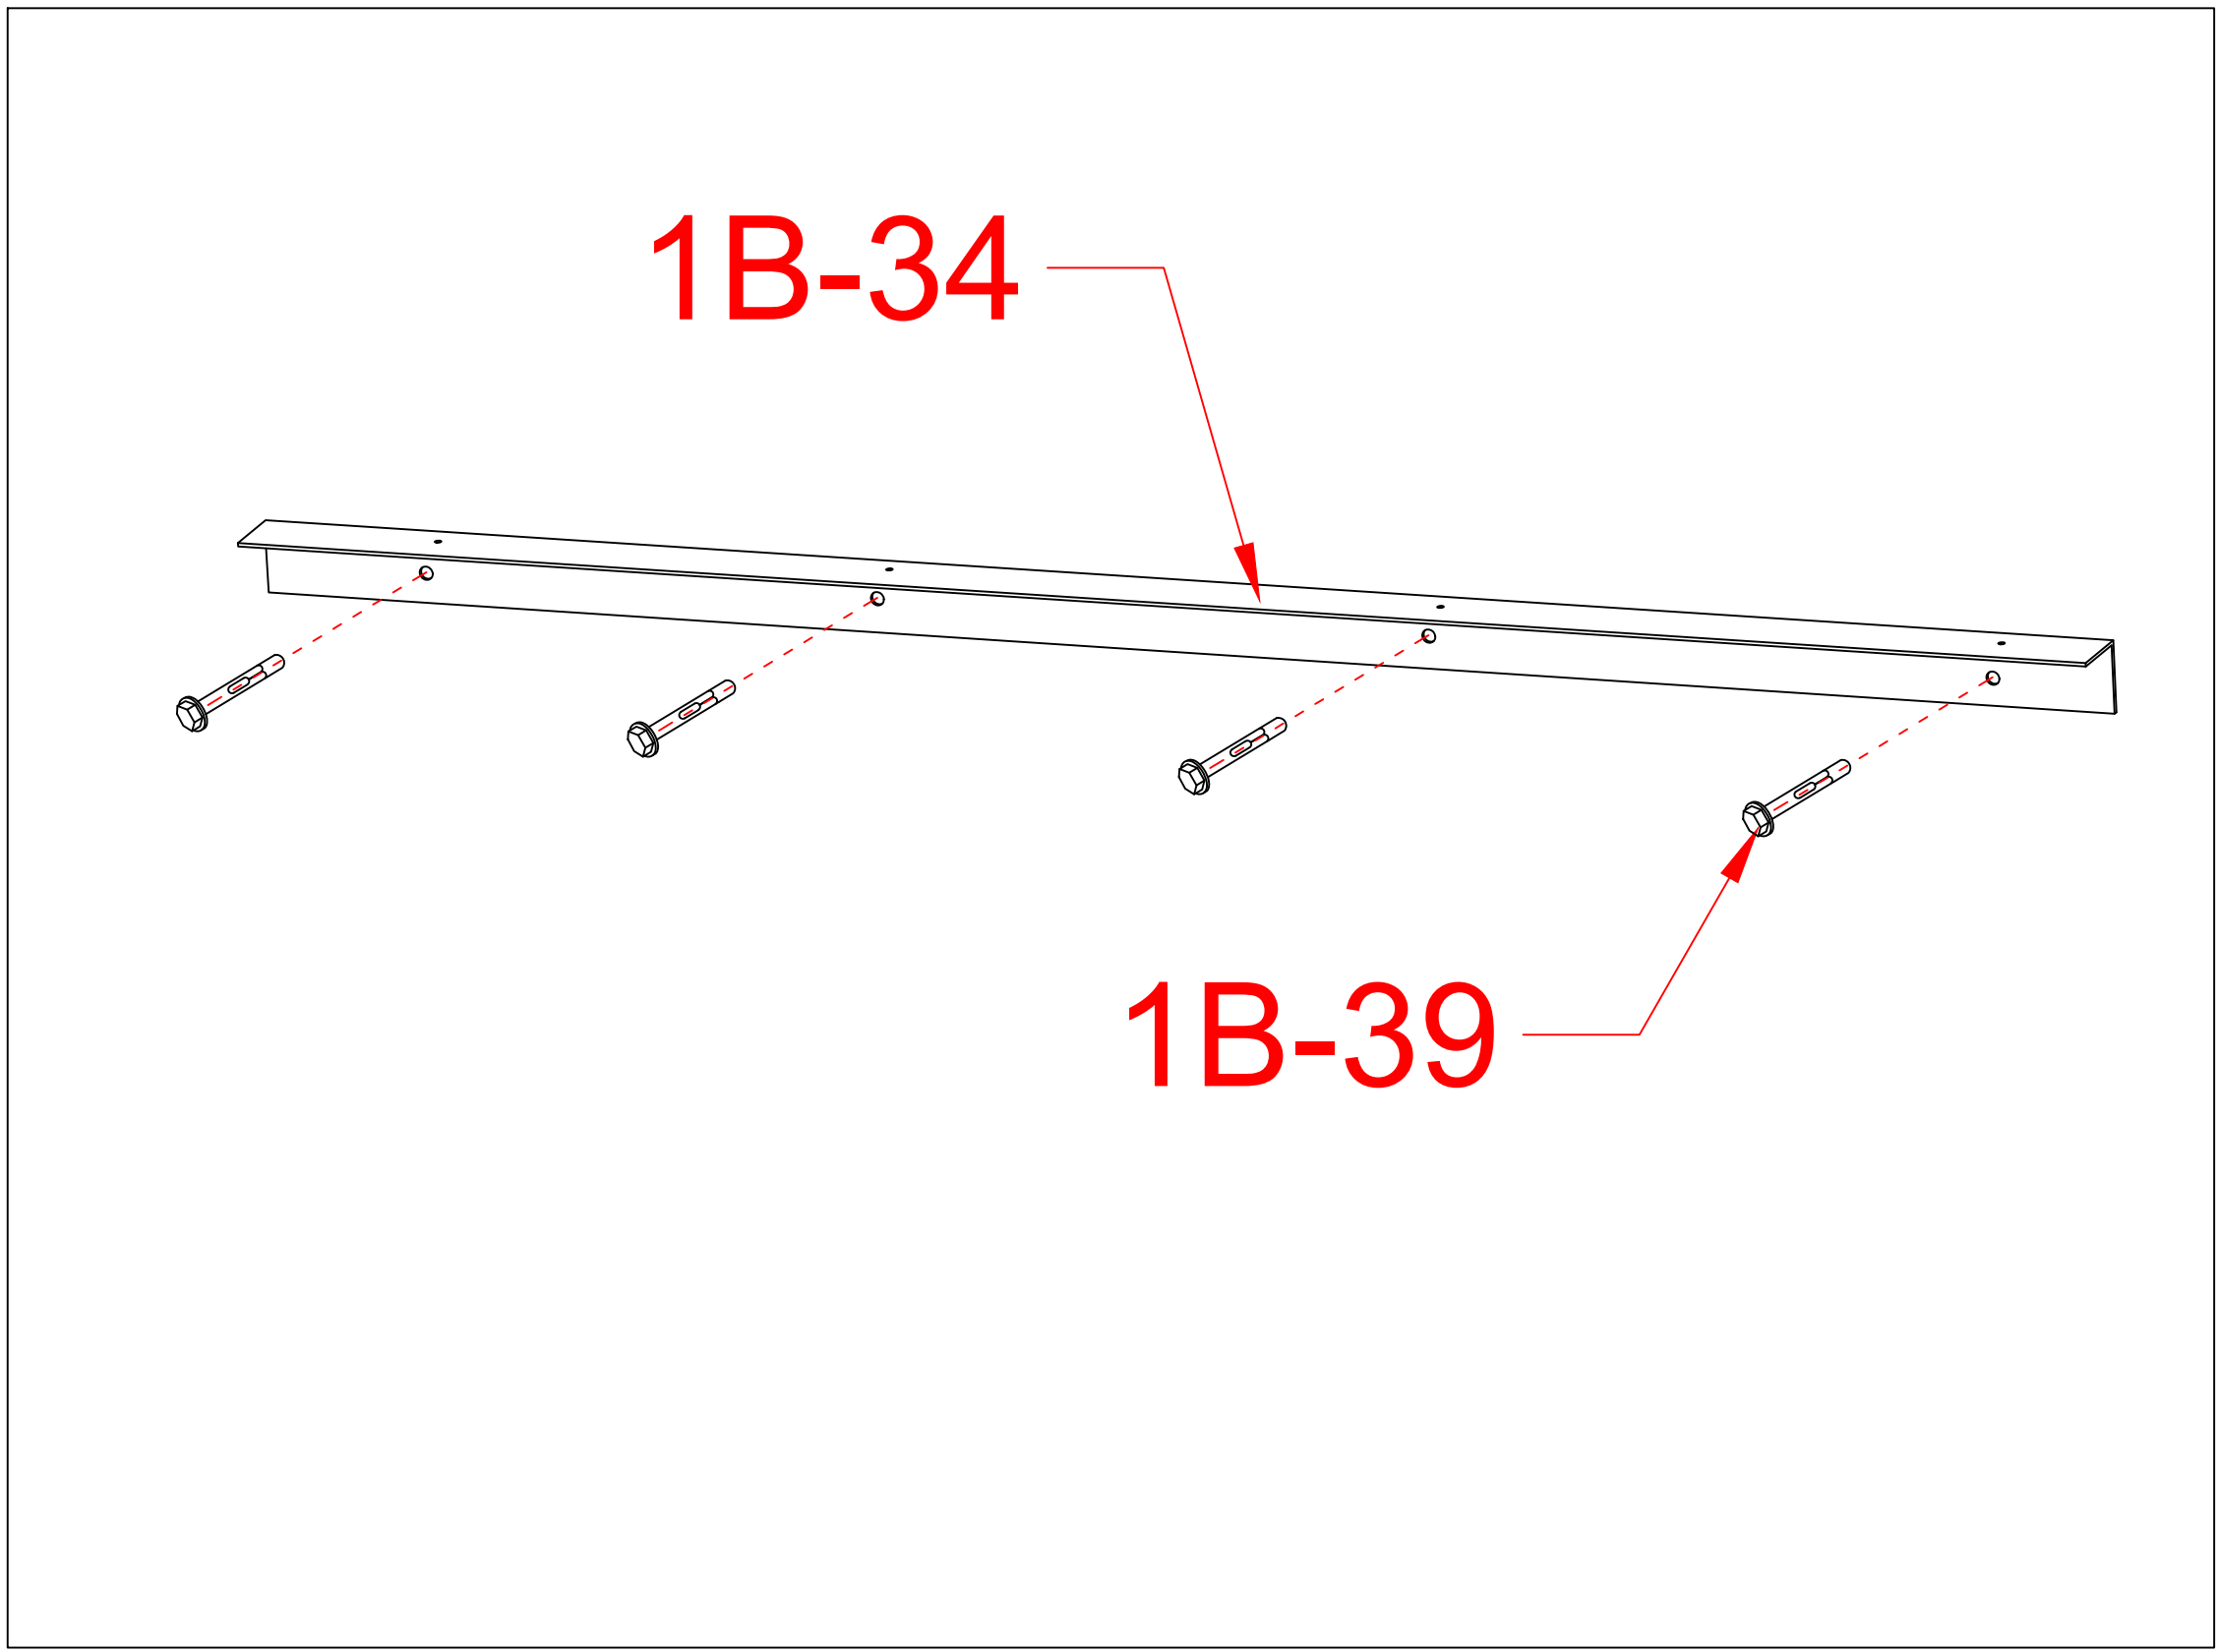





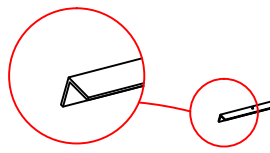

1B-34		1
1B-39		4




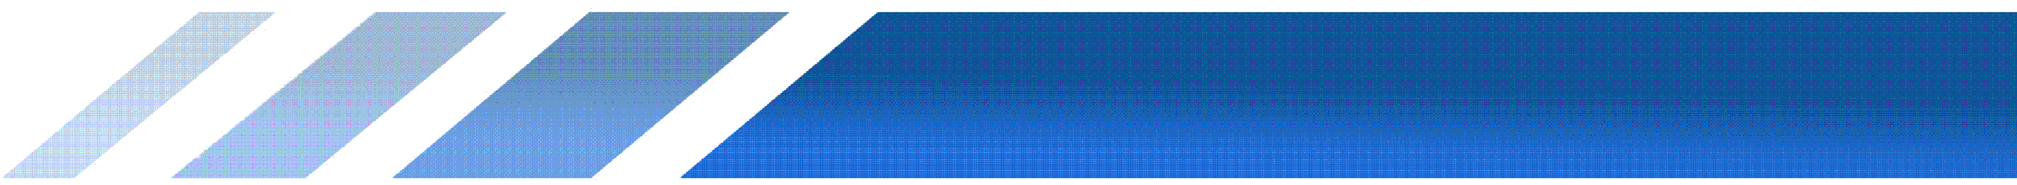


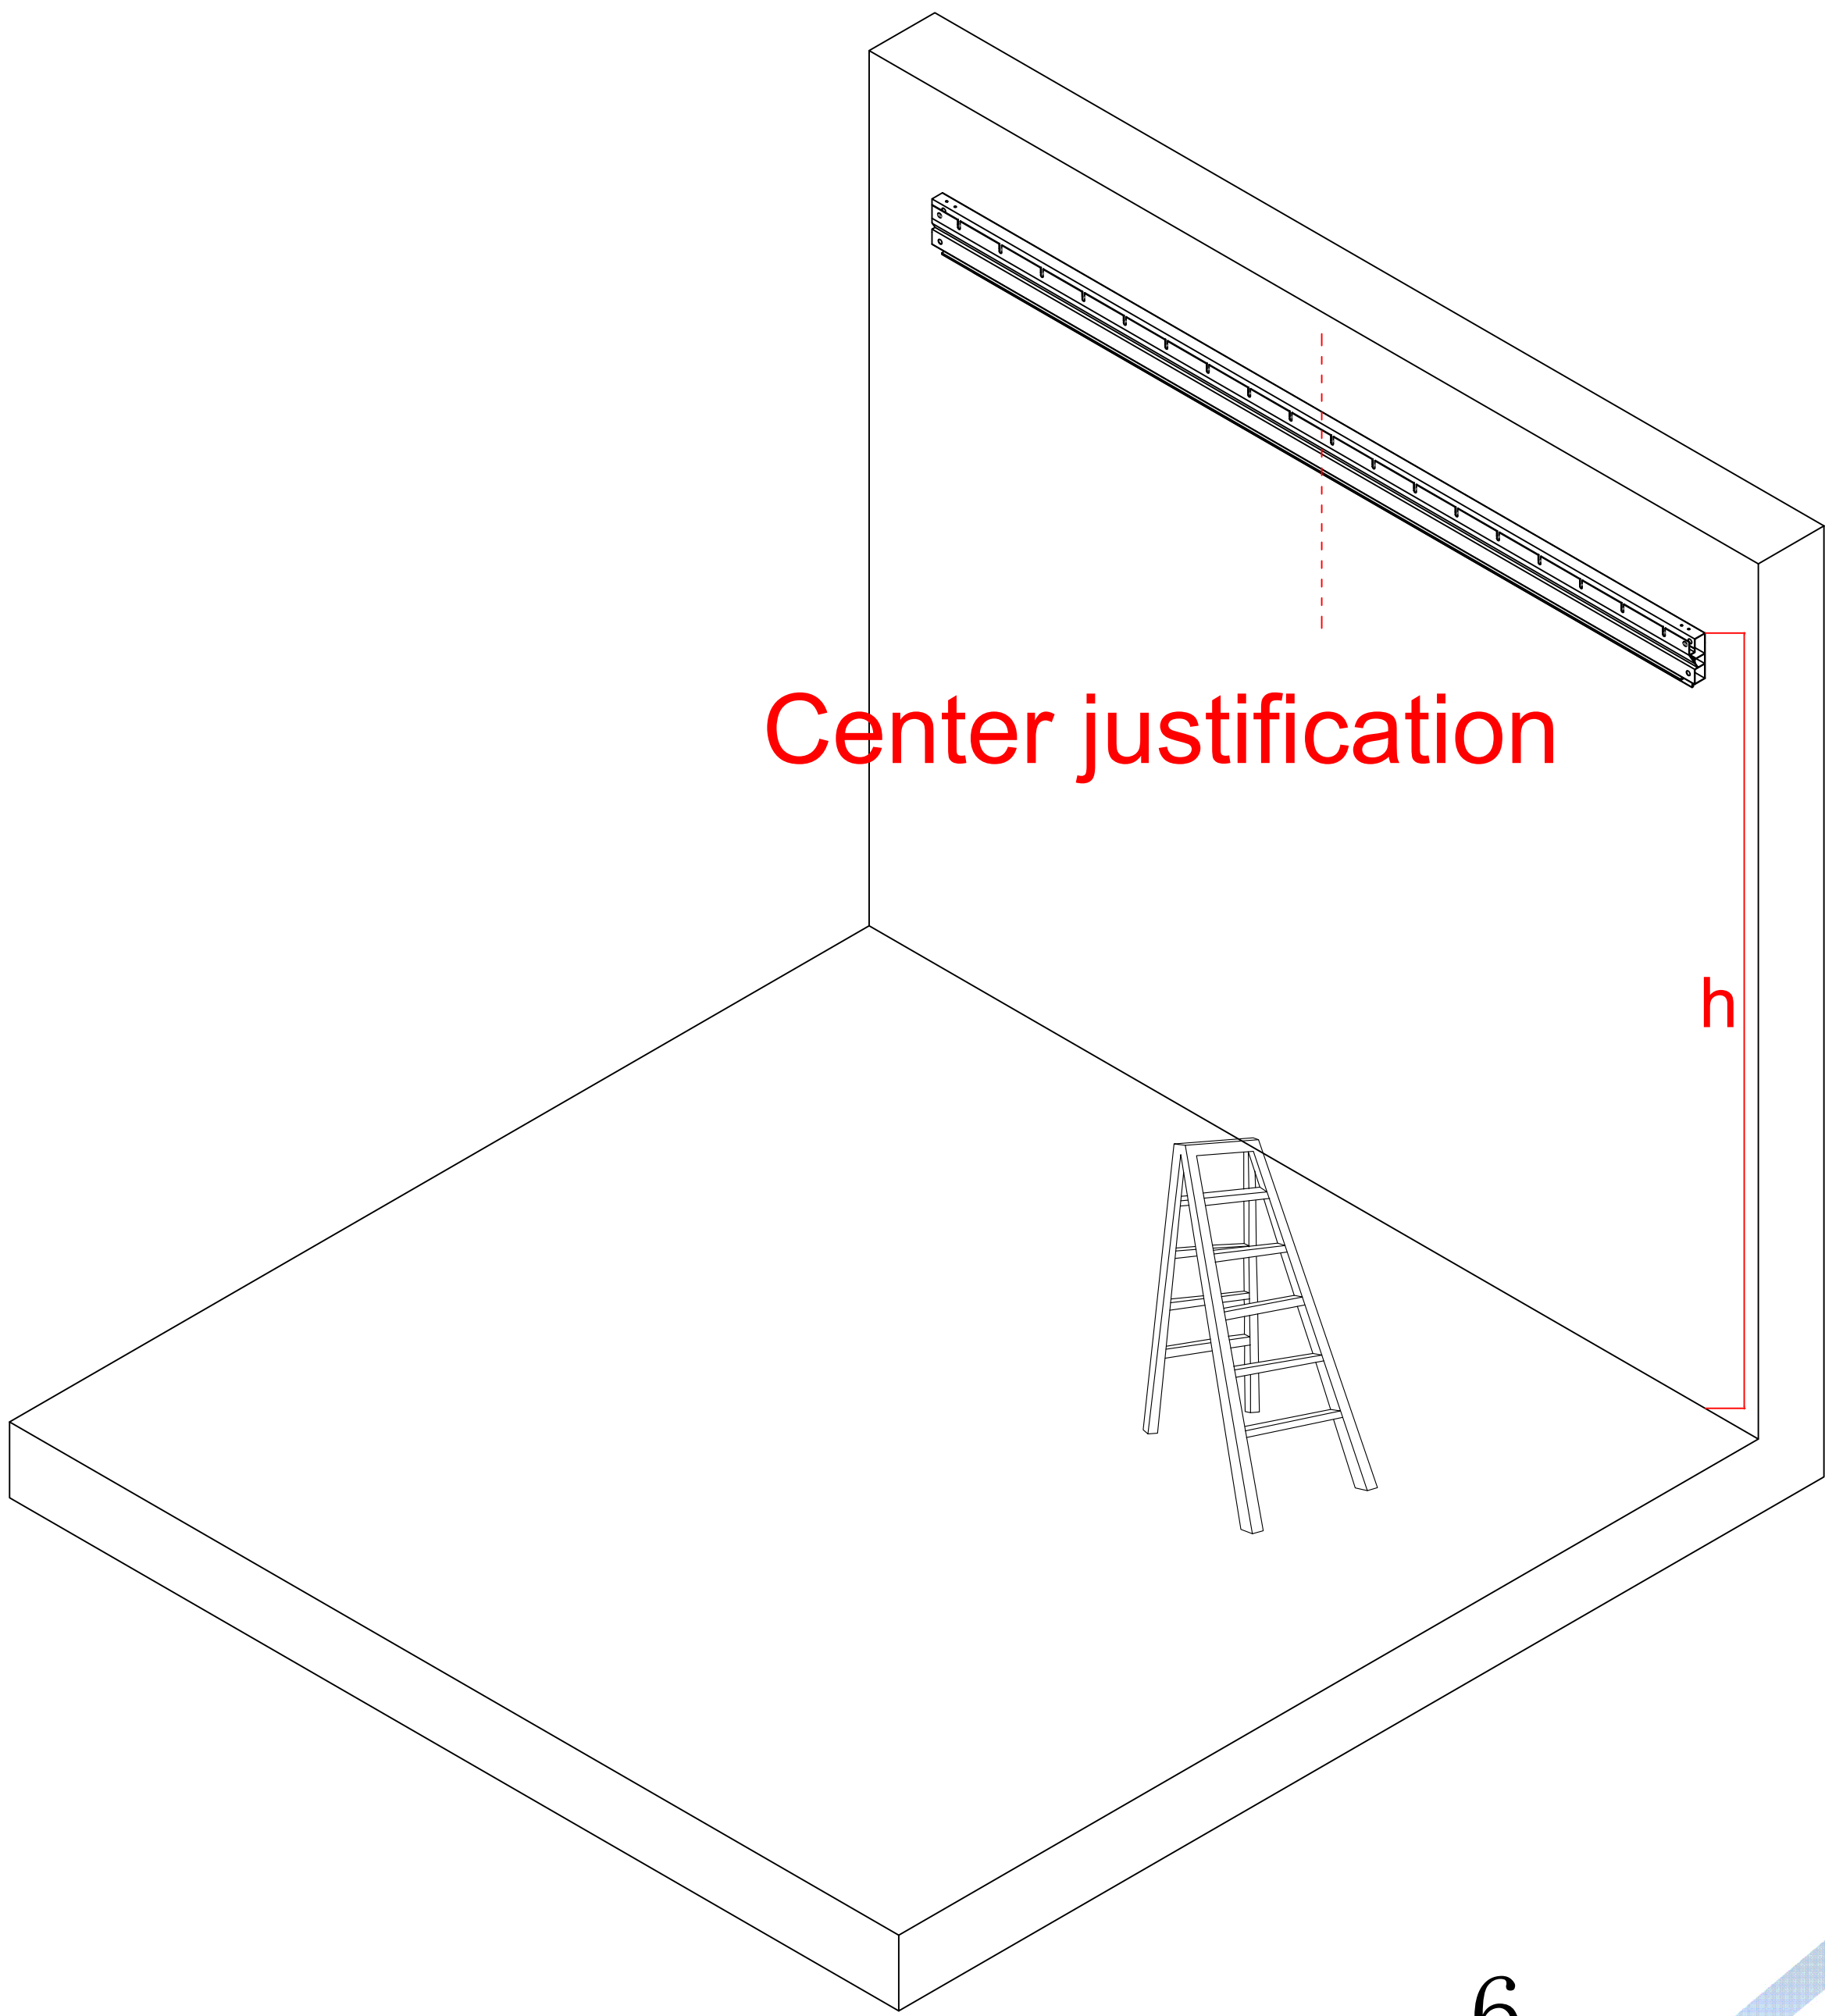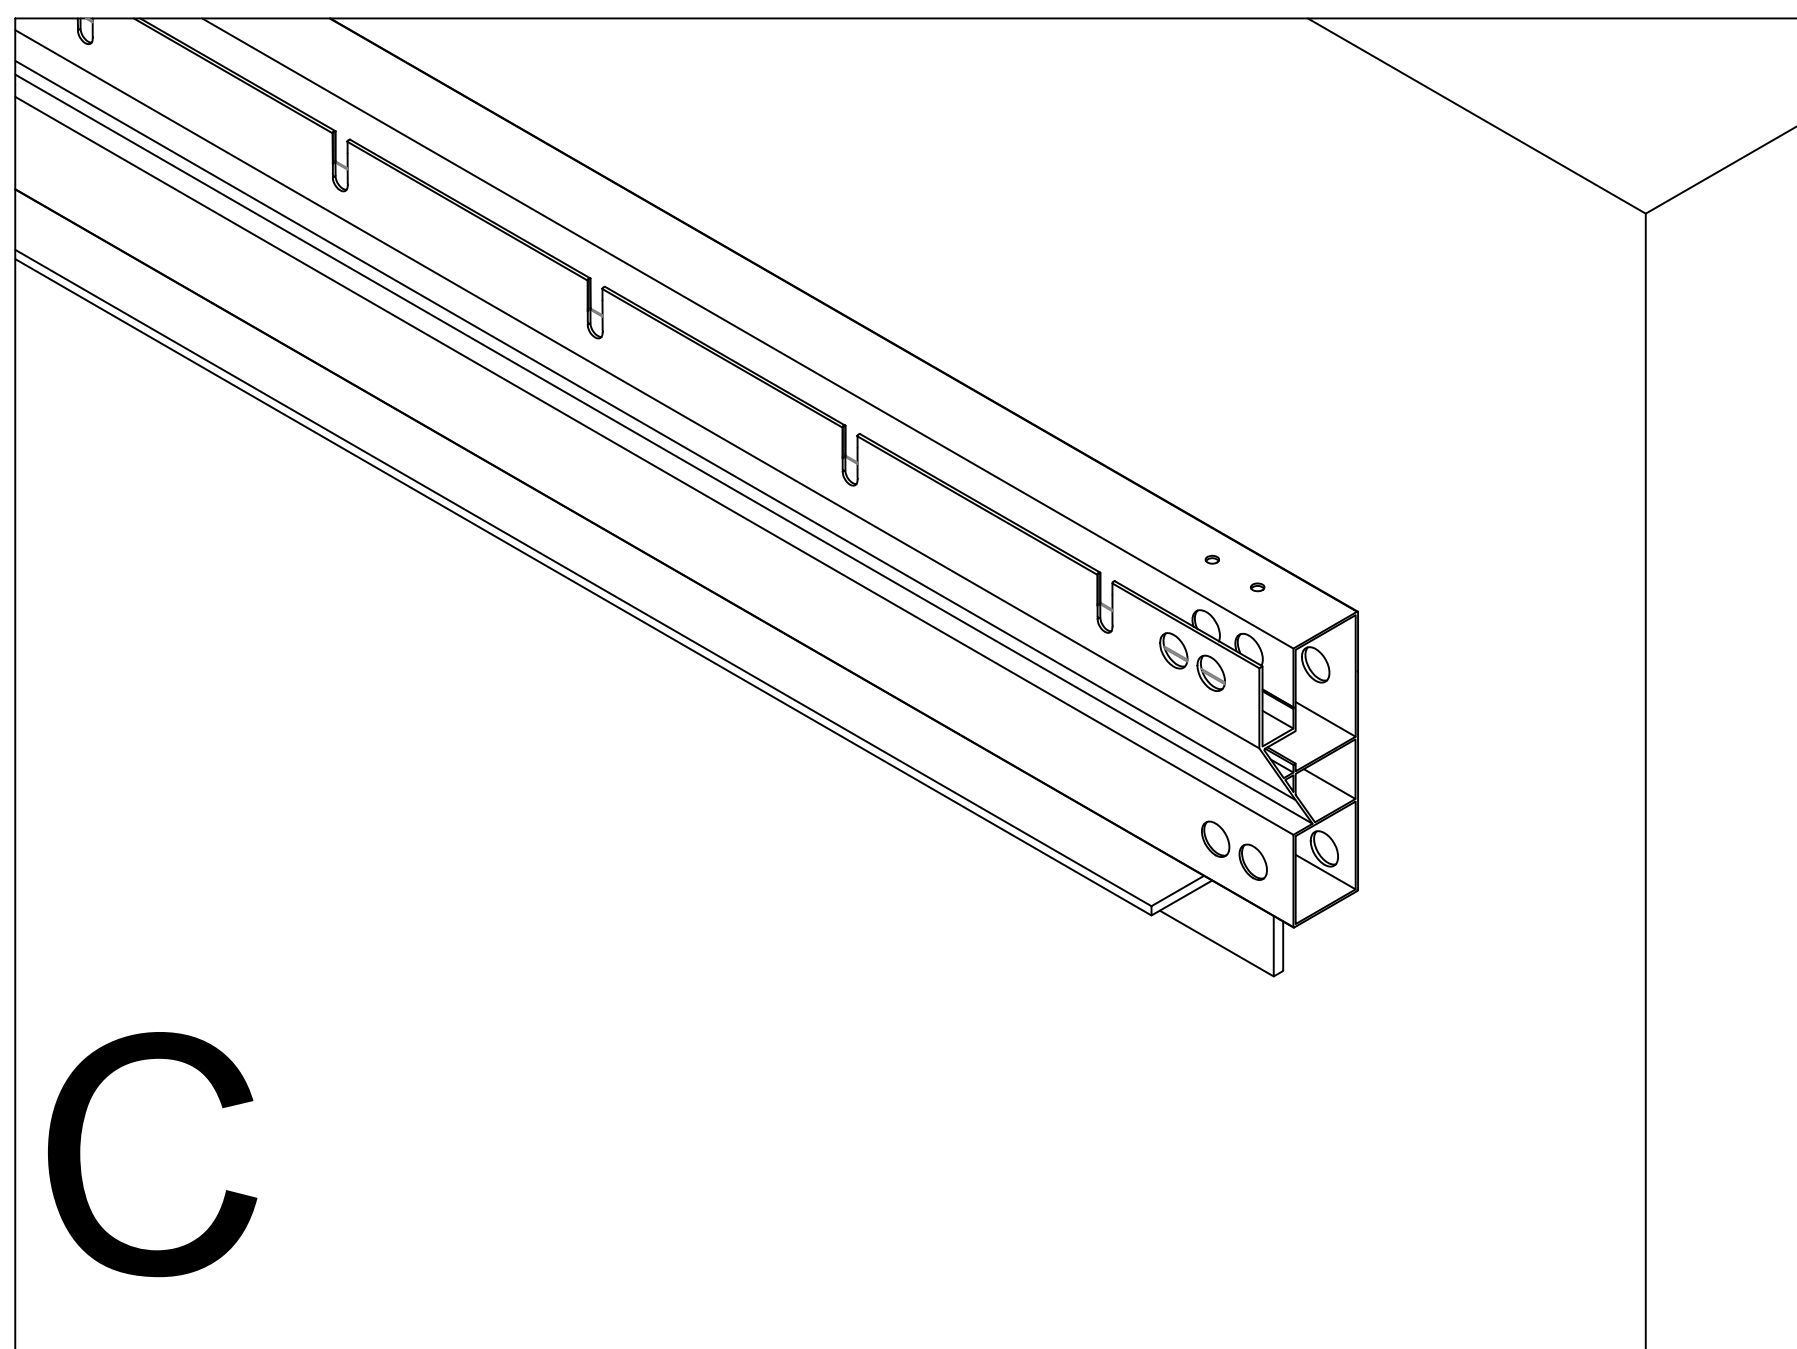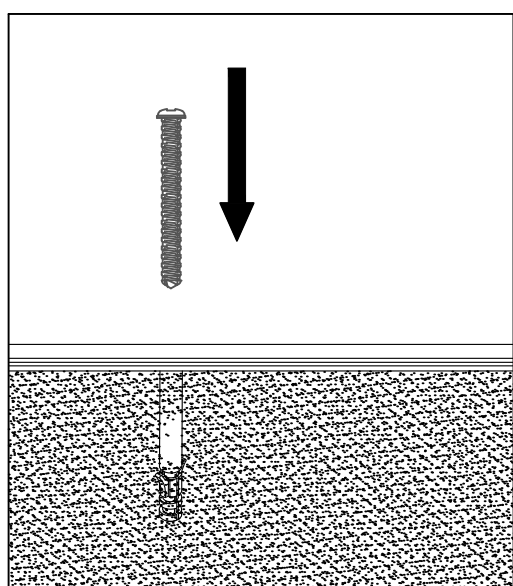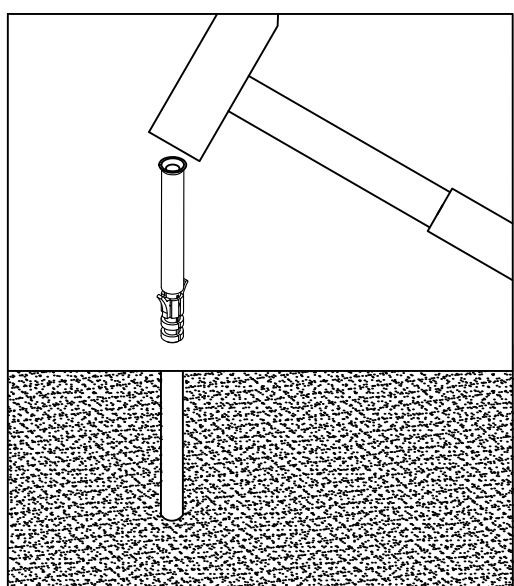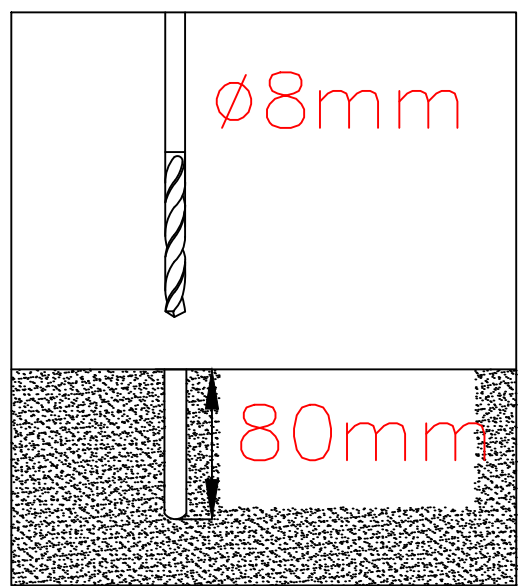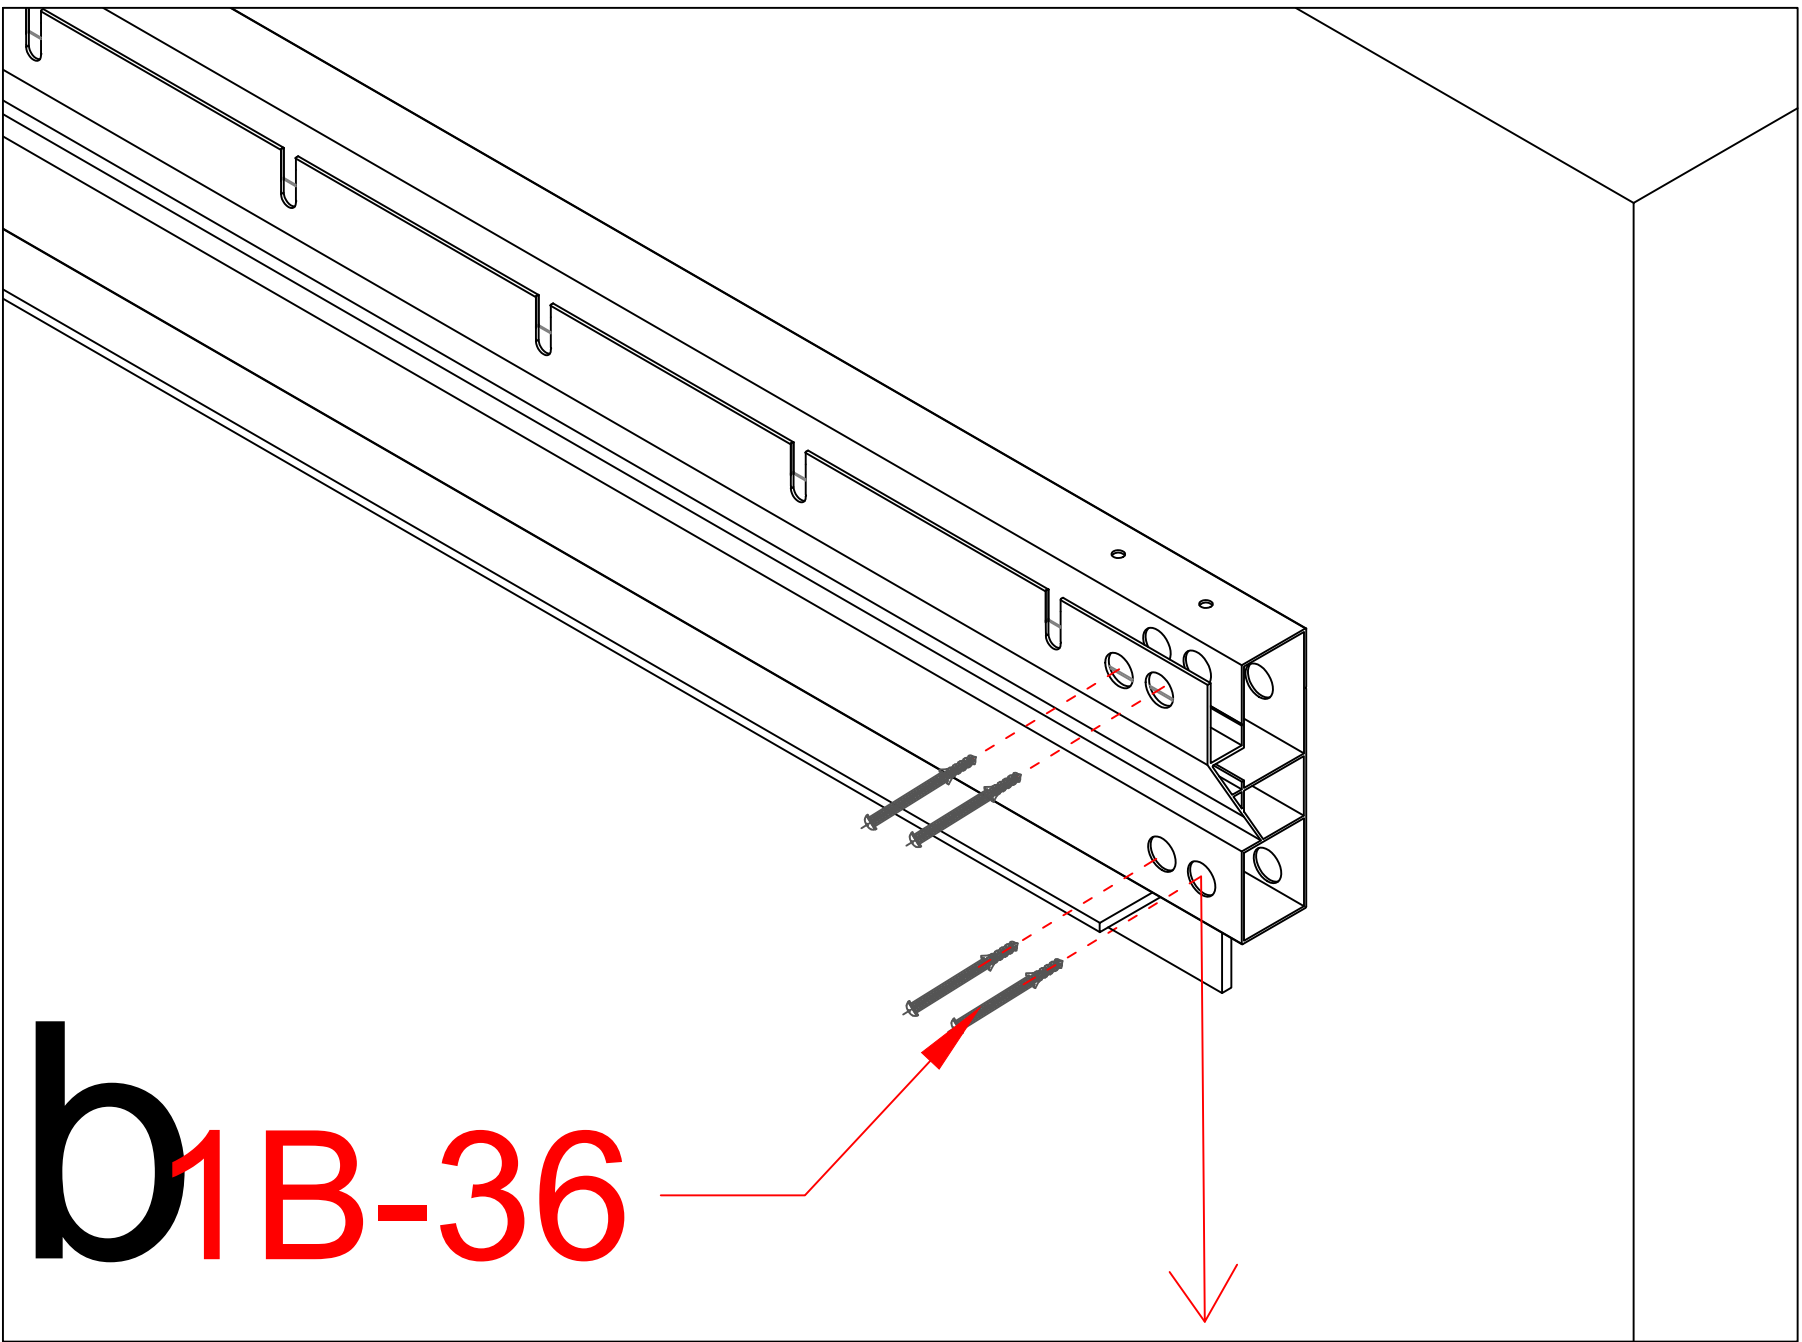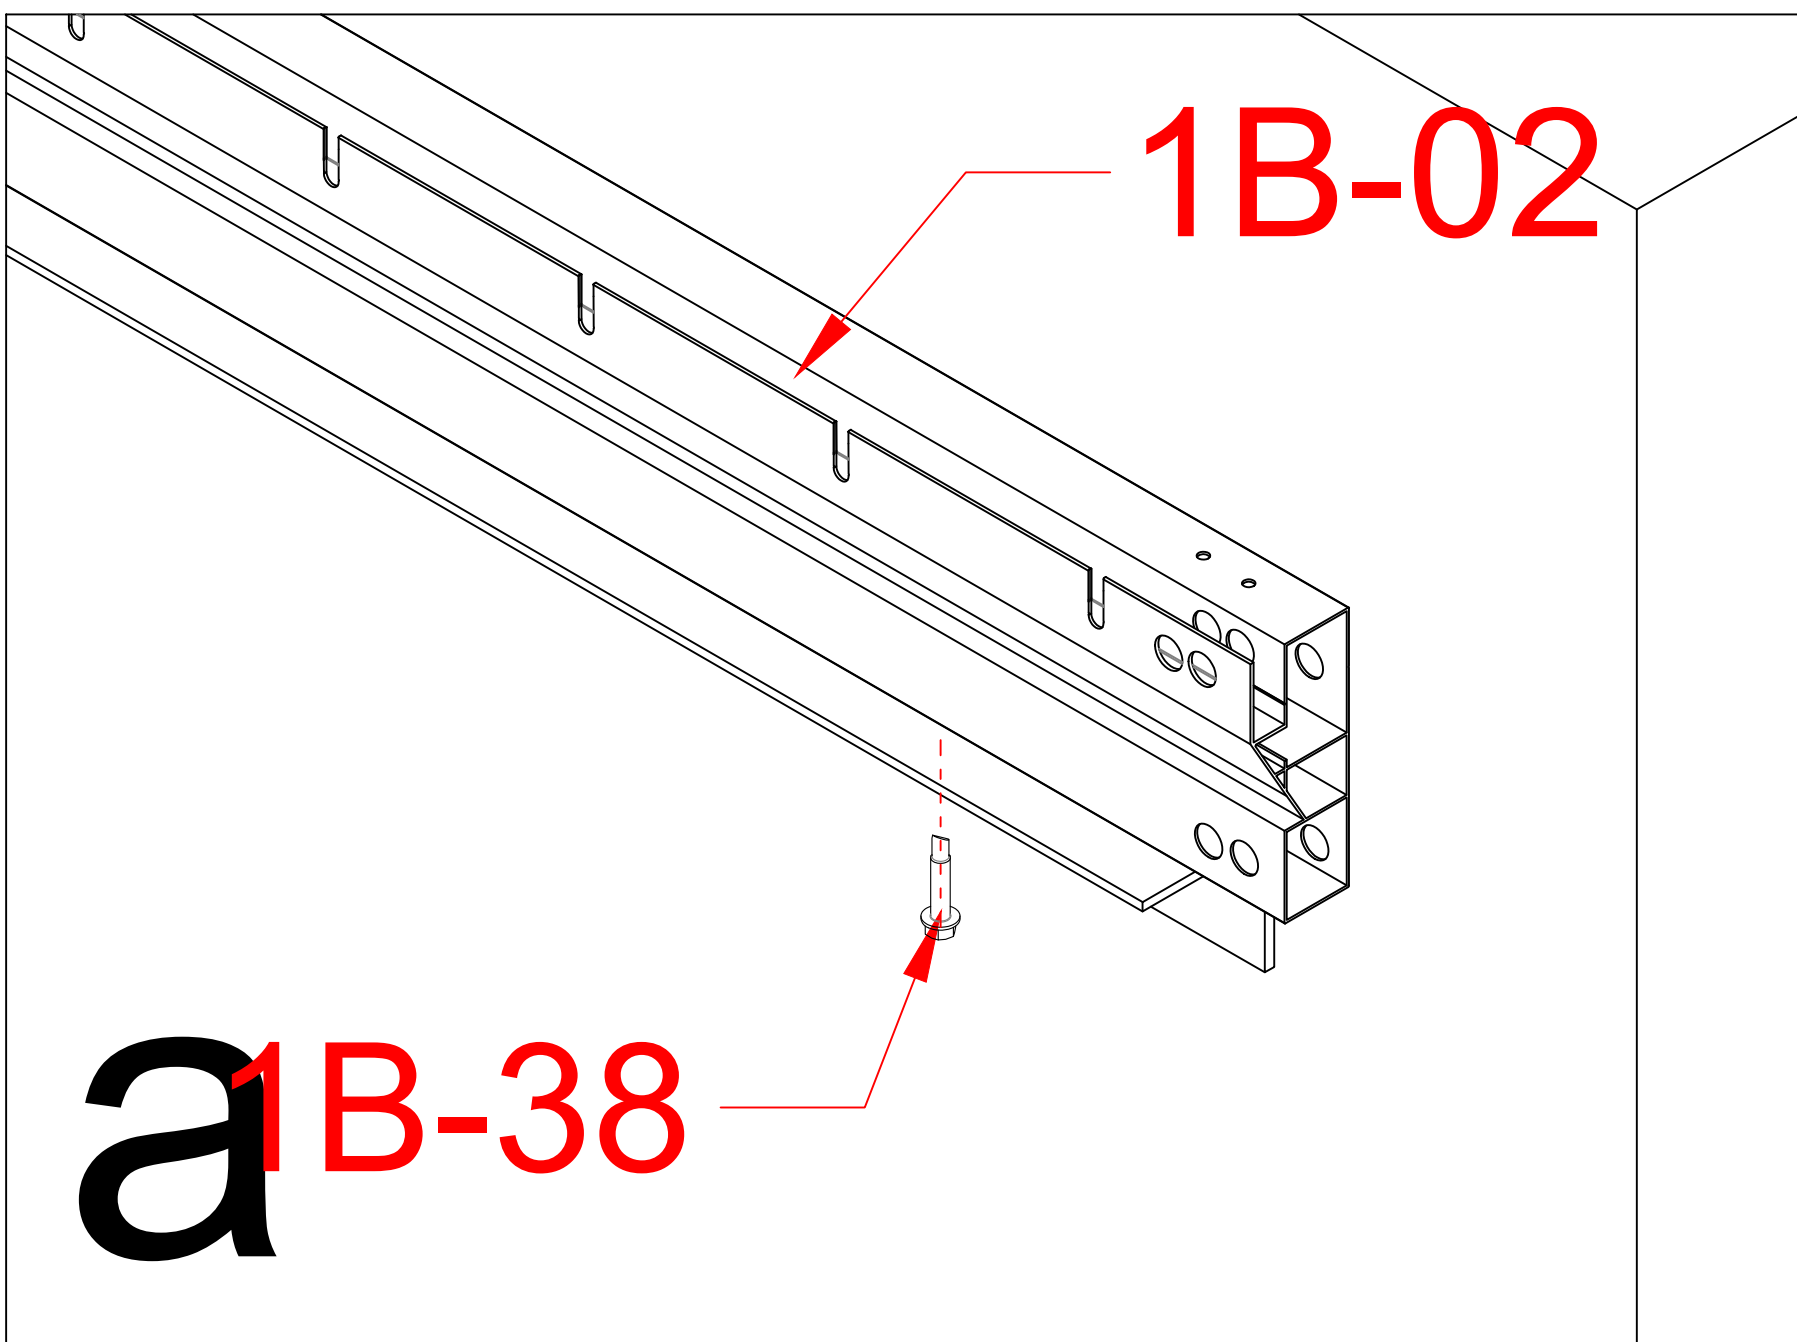





1B-02			1
1B-38			4
1B-36			8

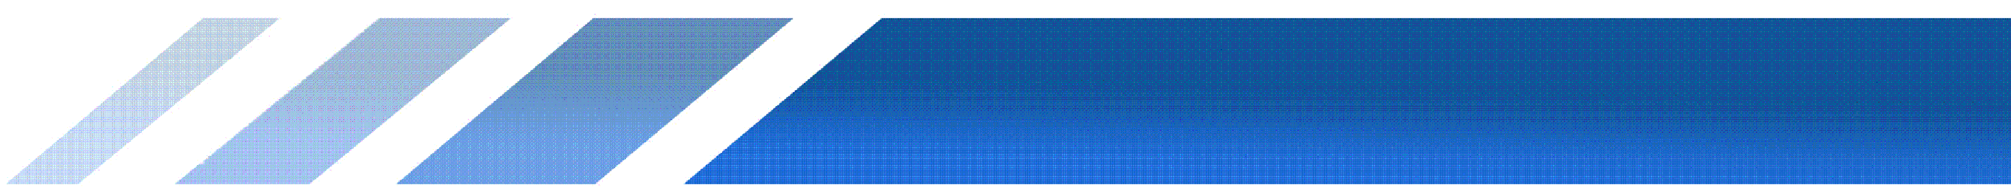

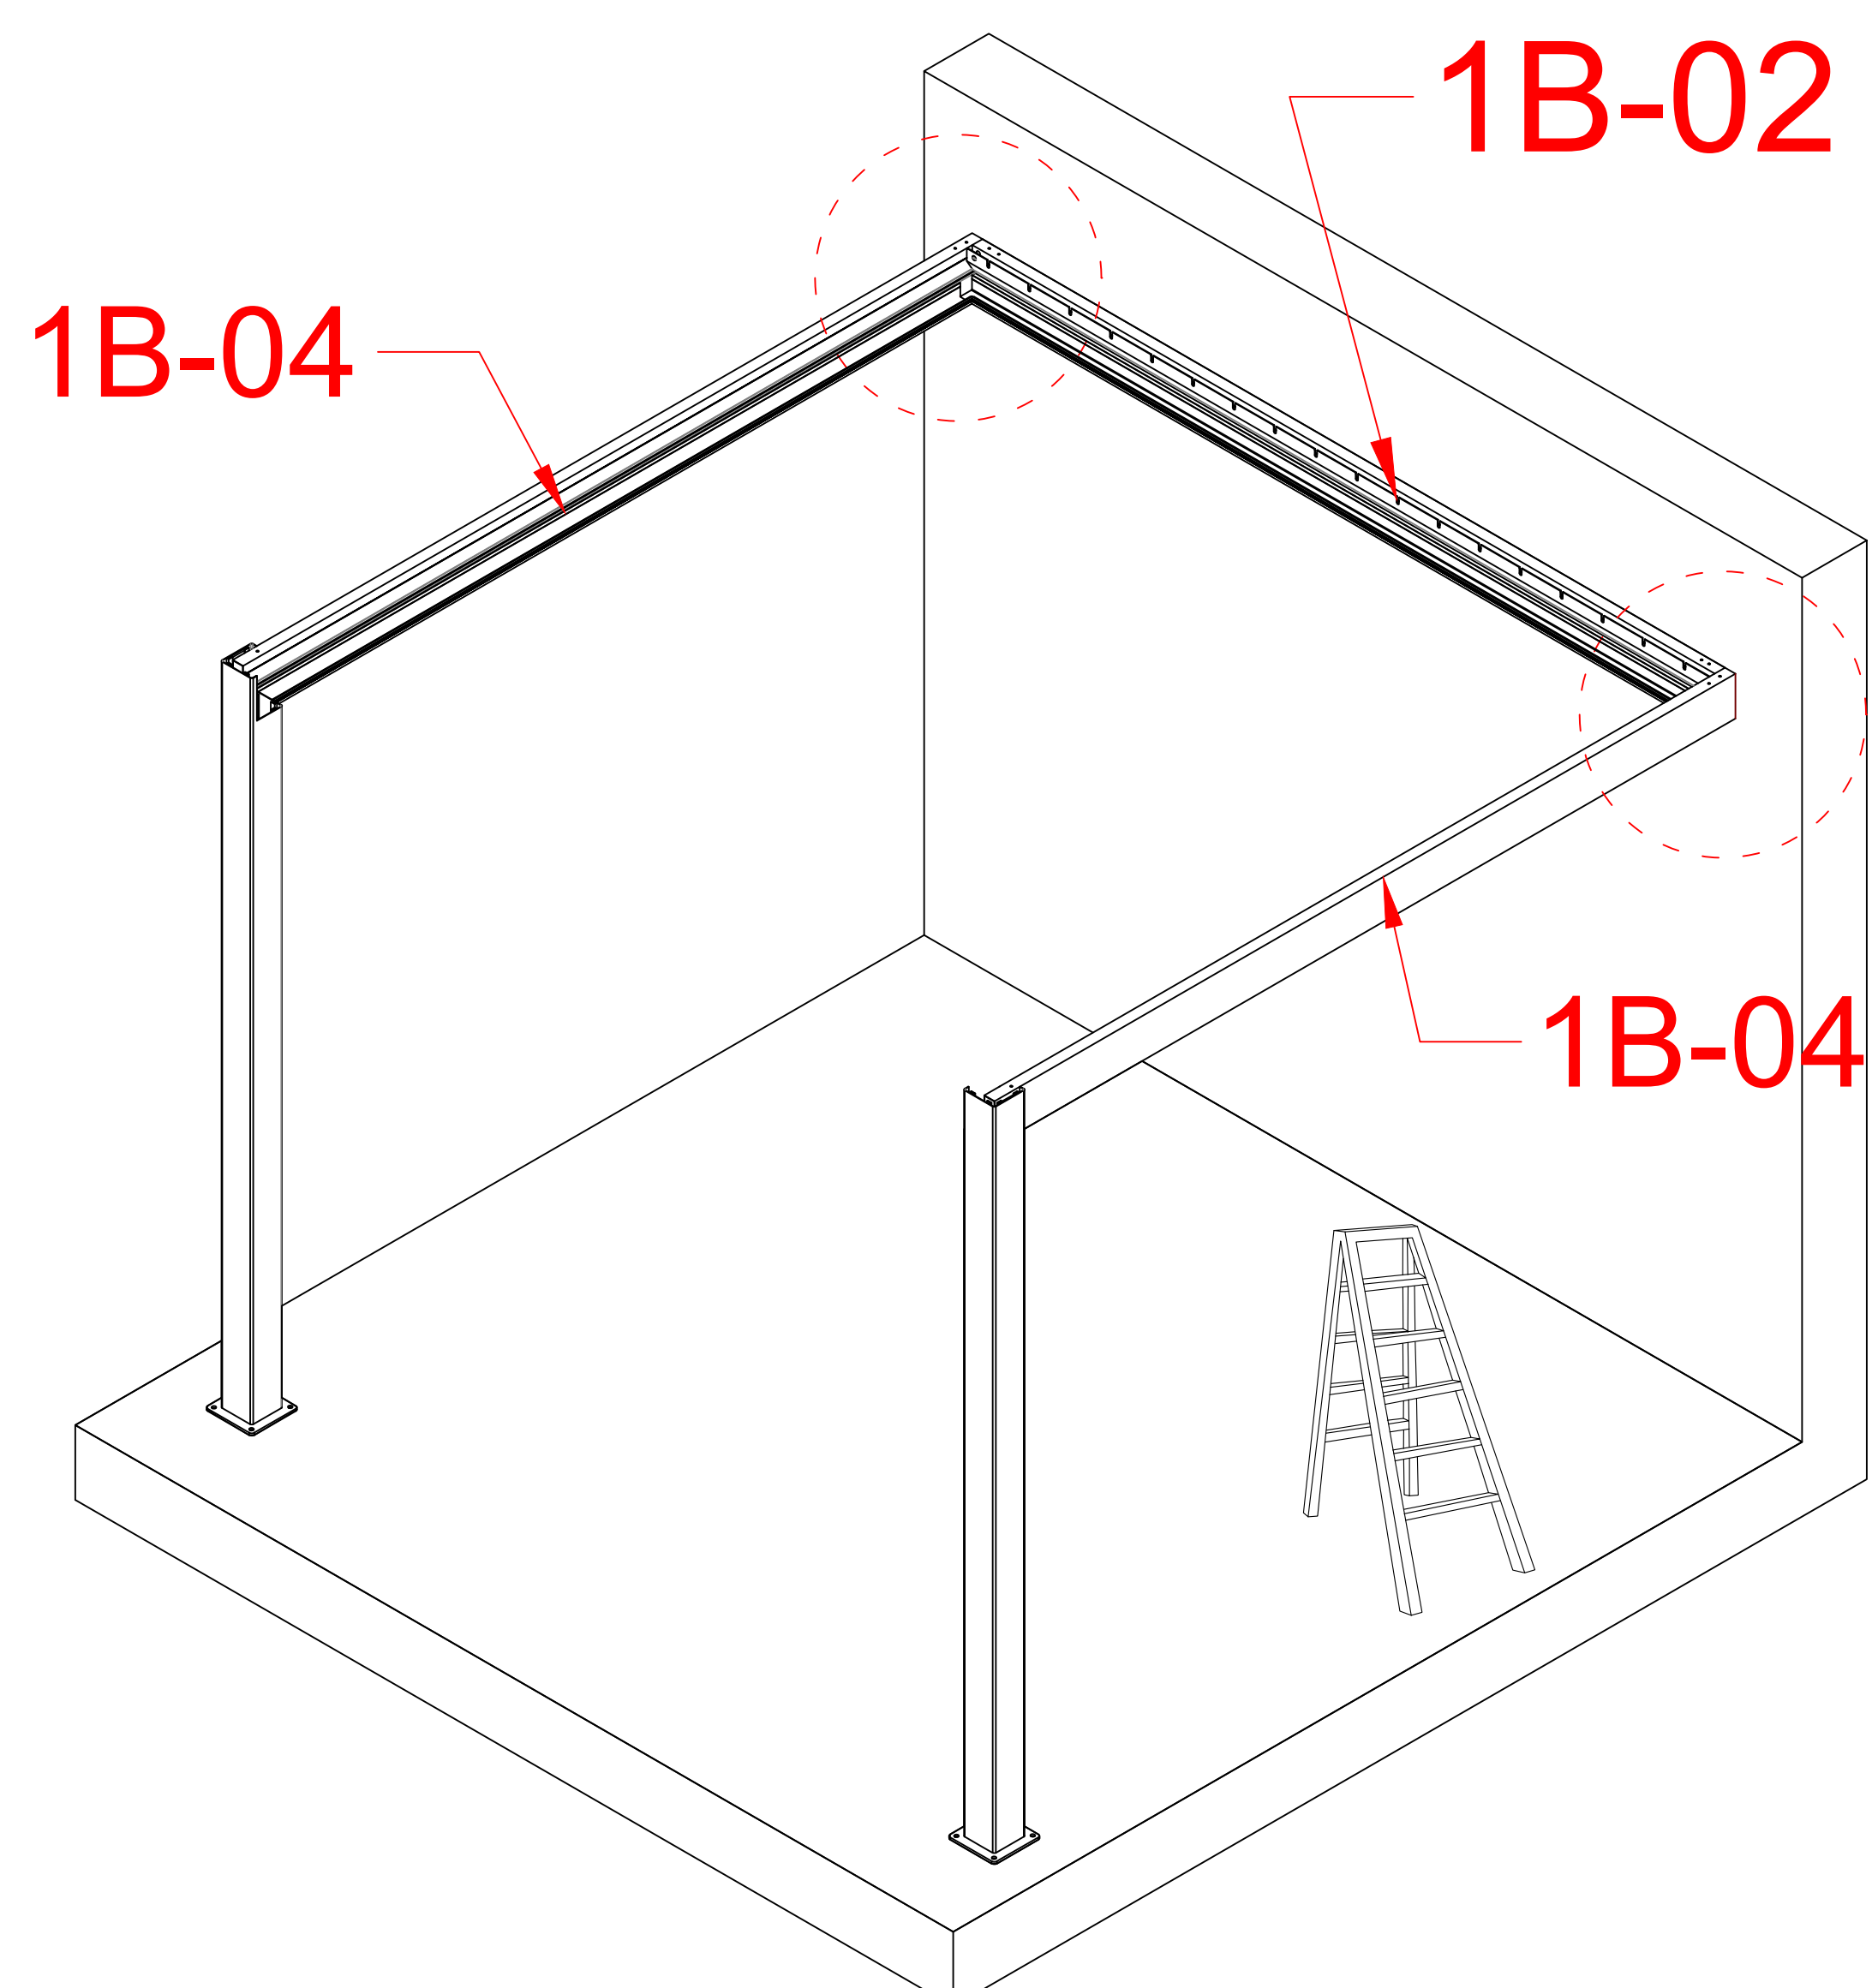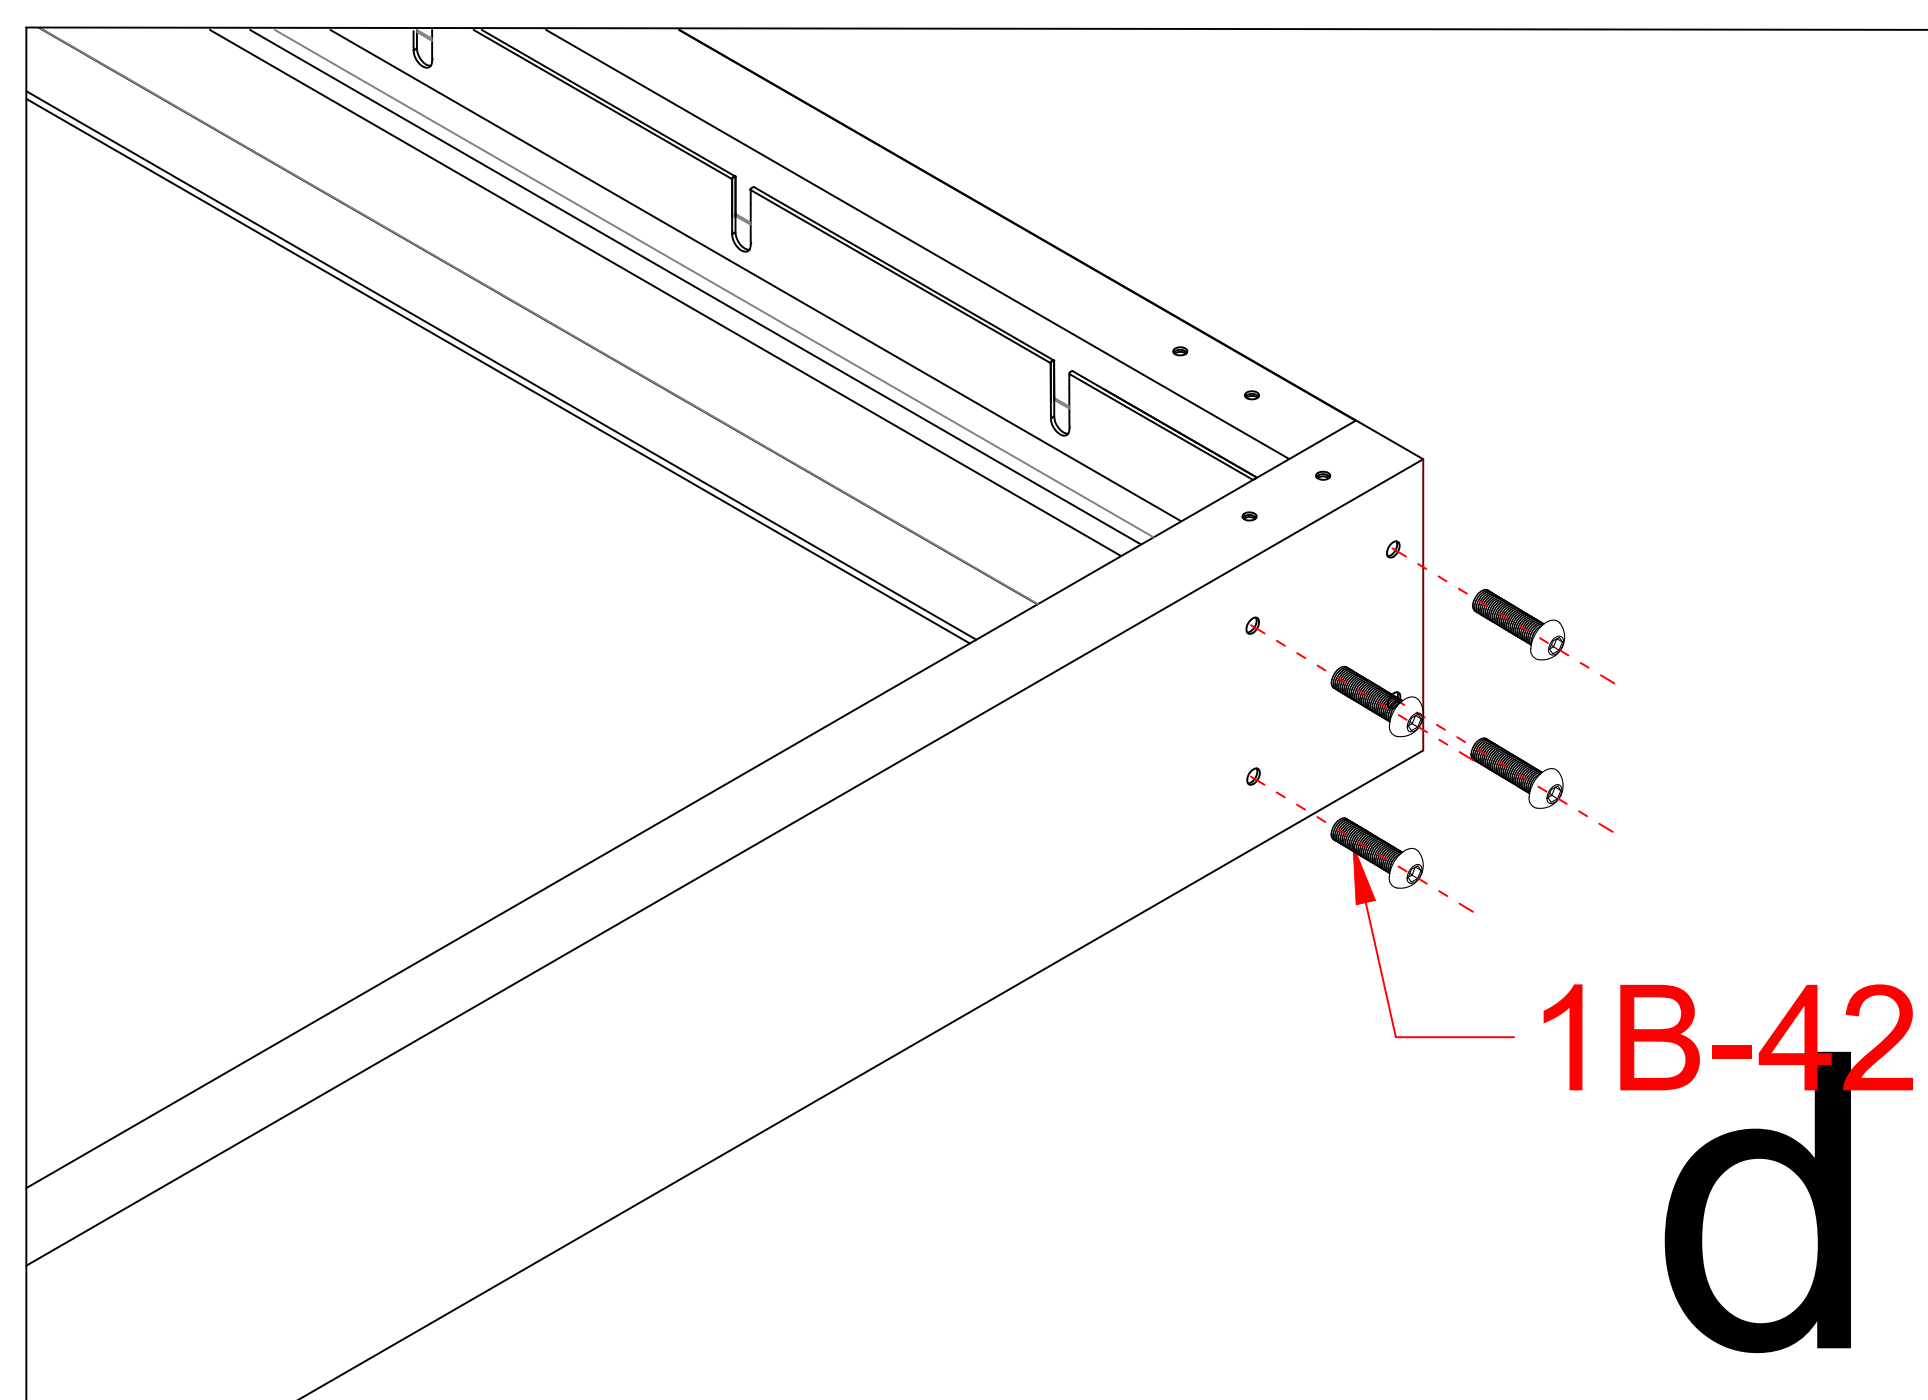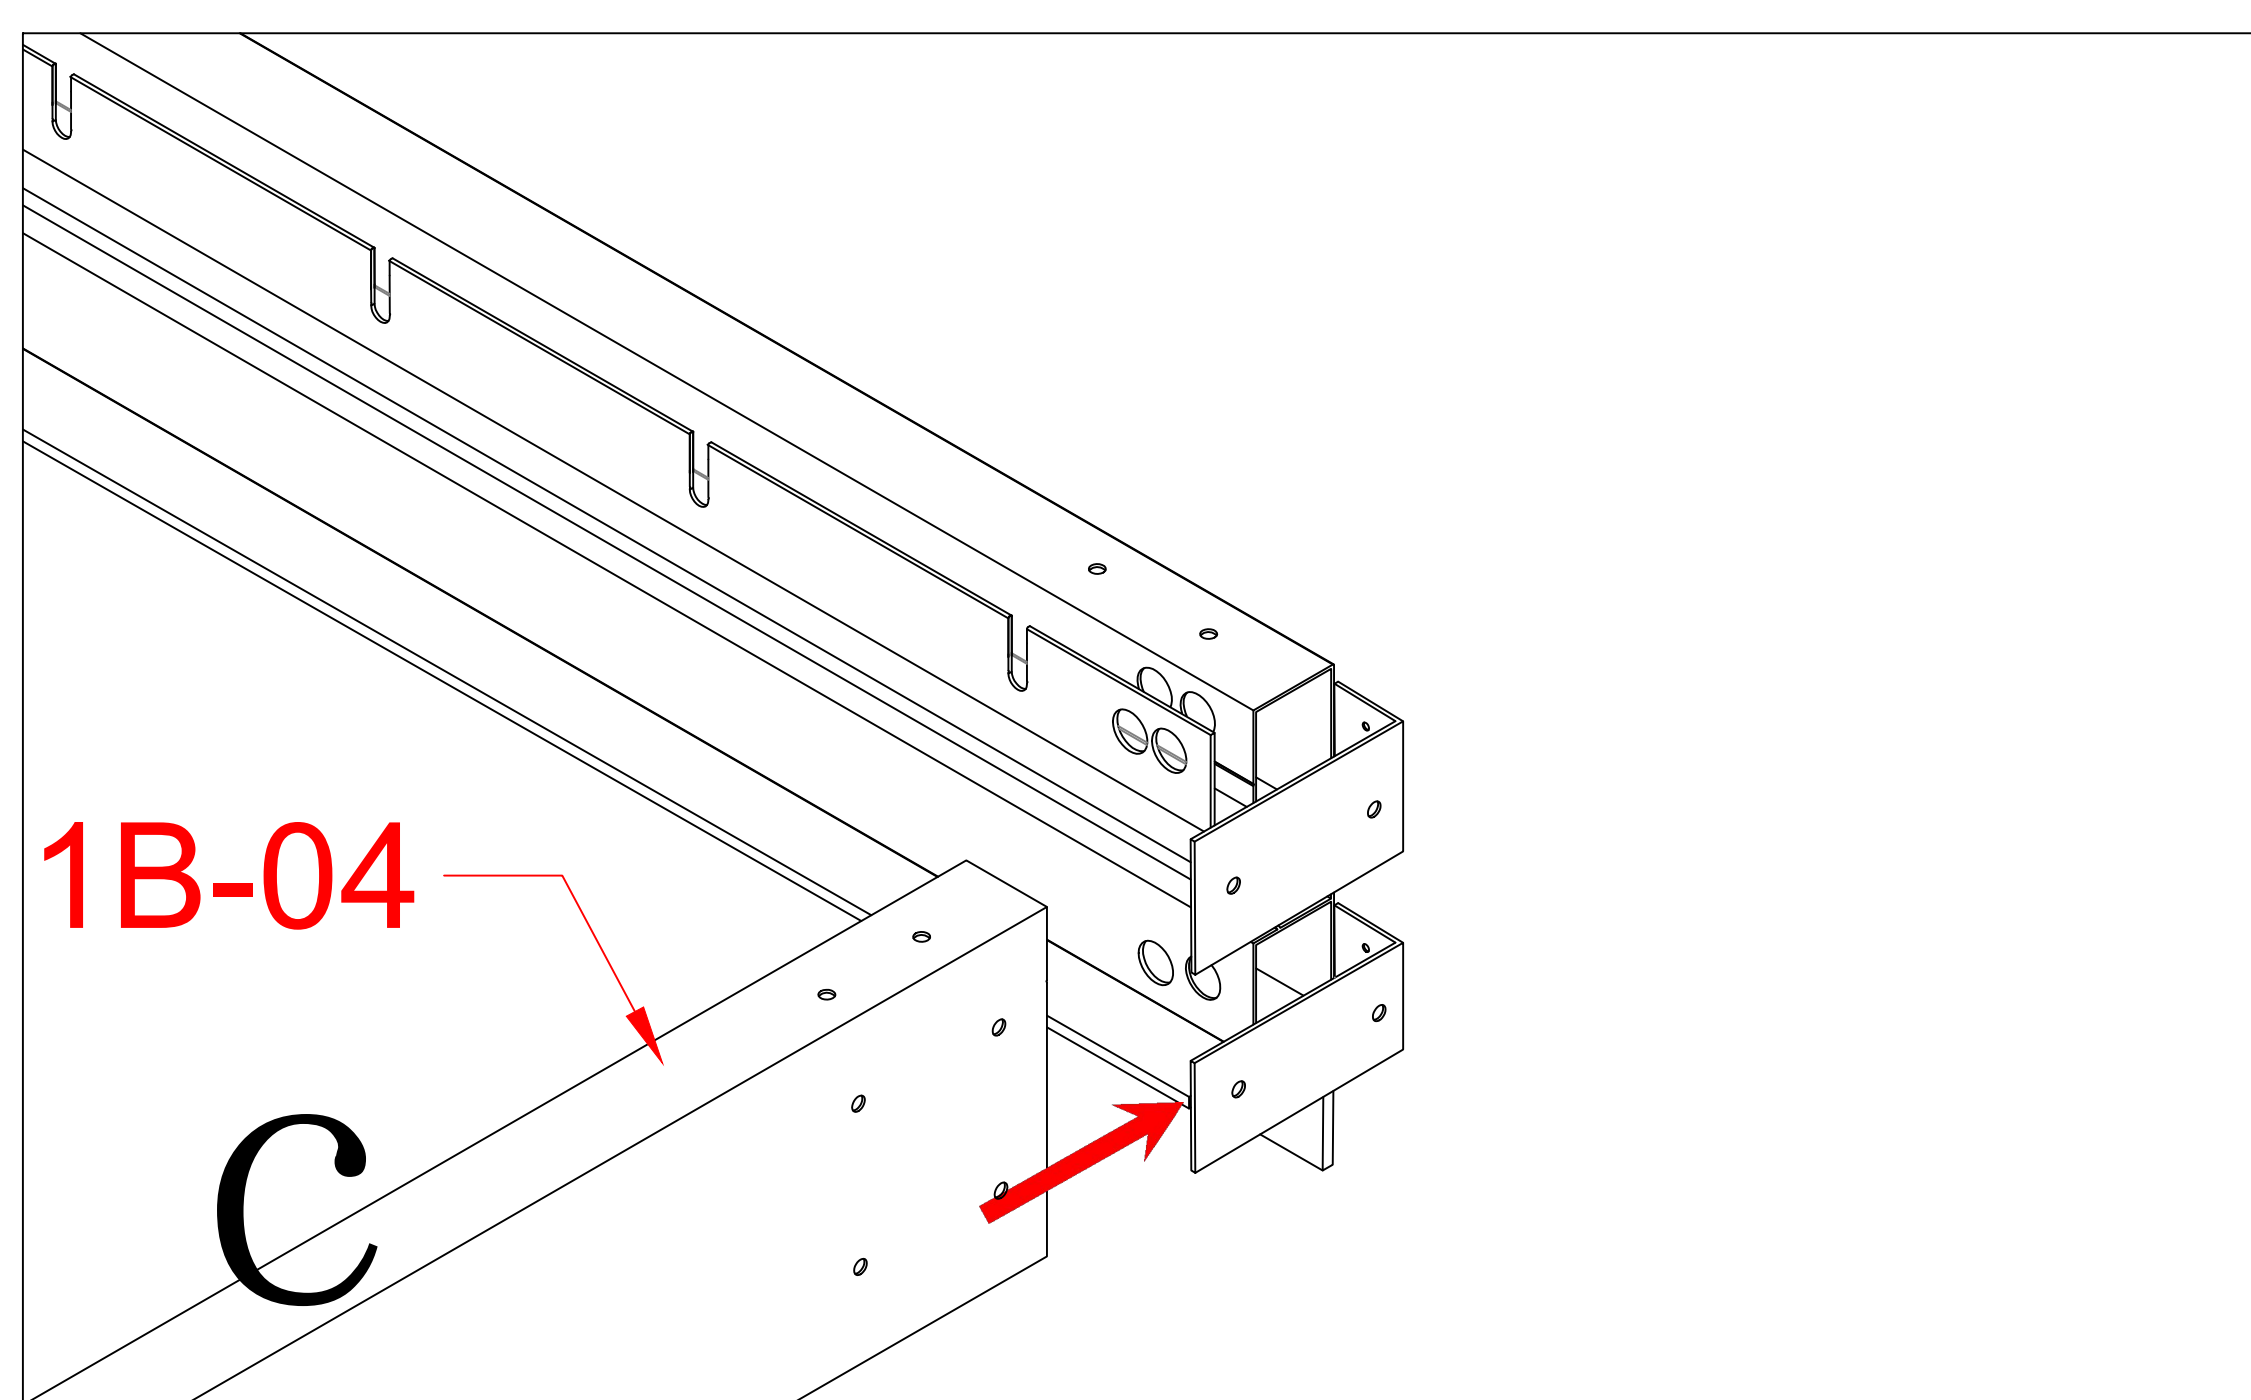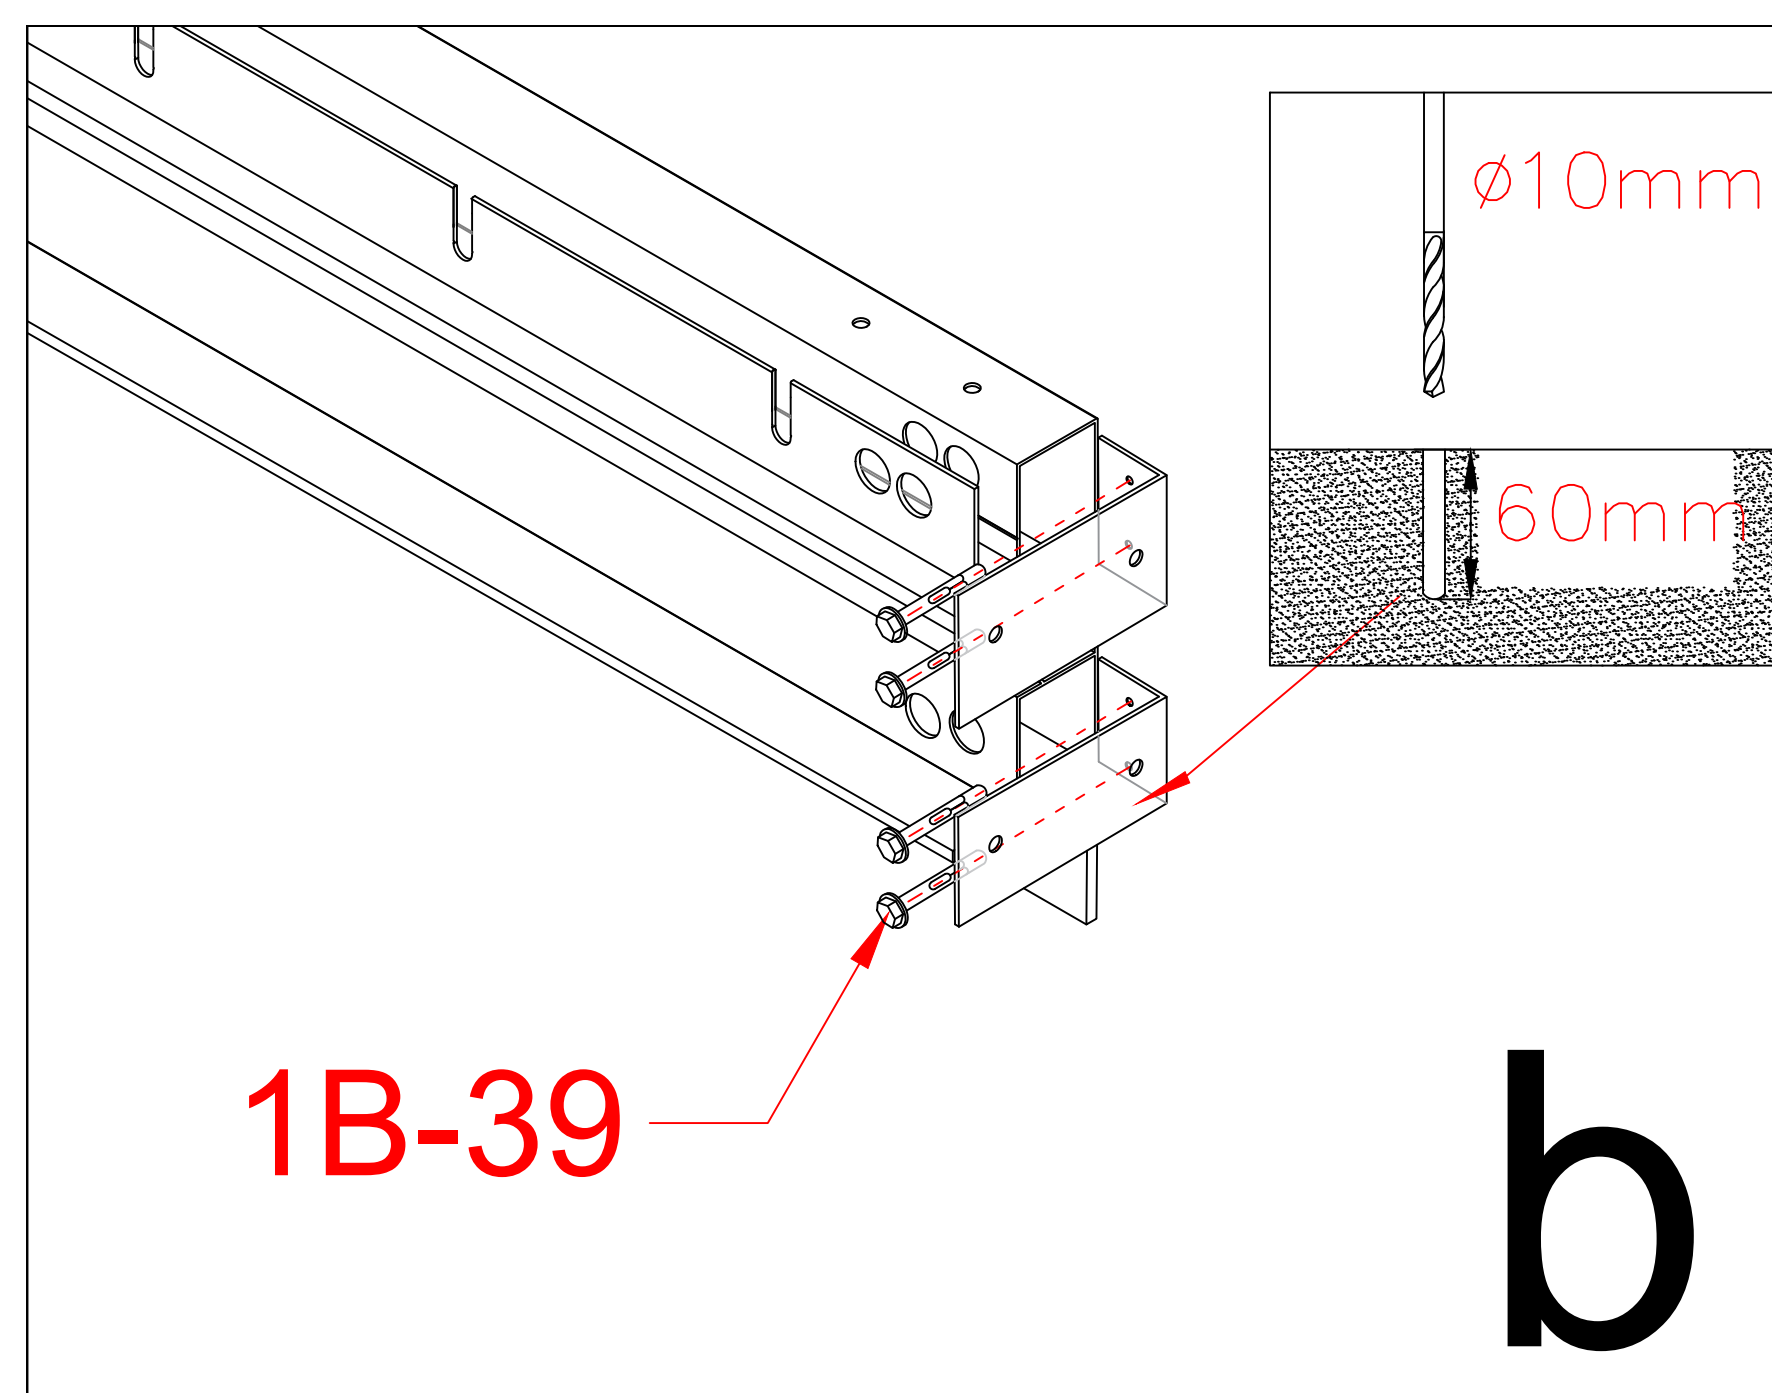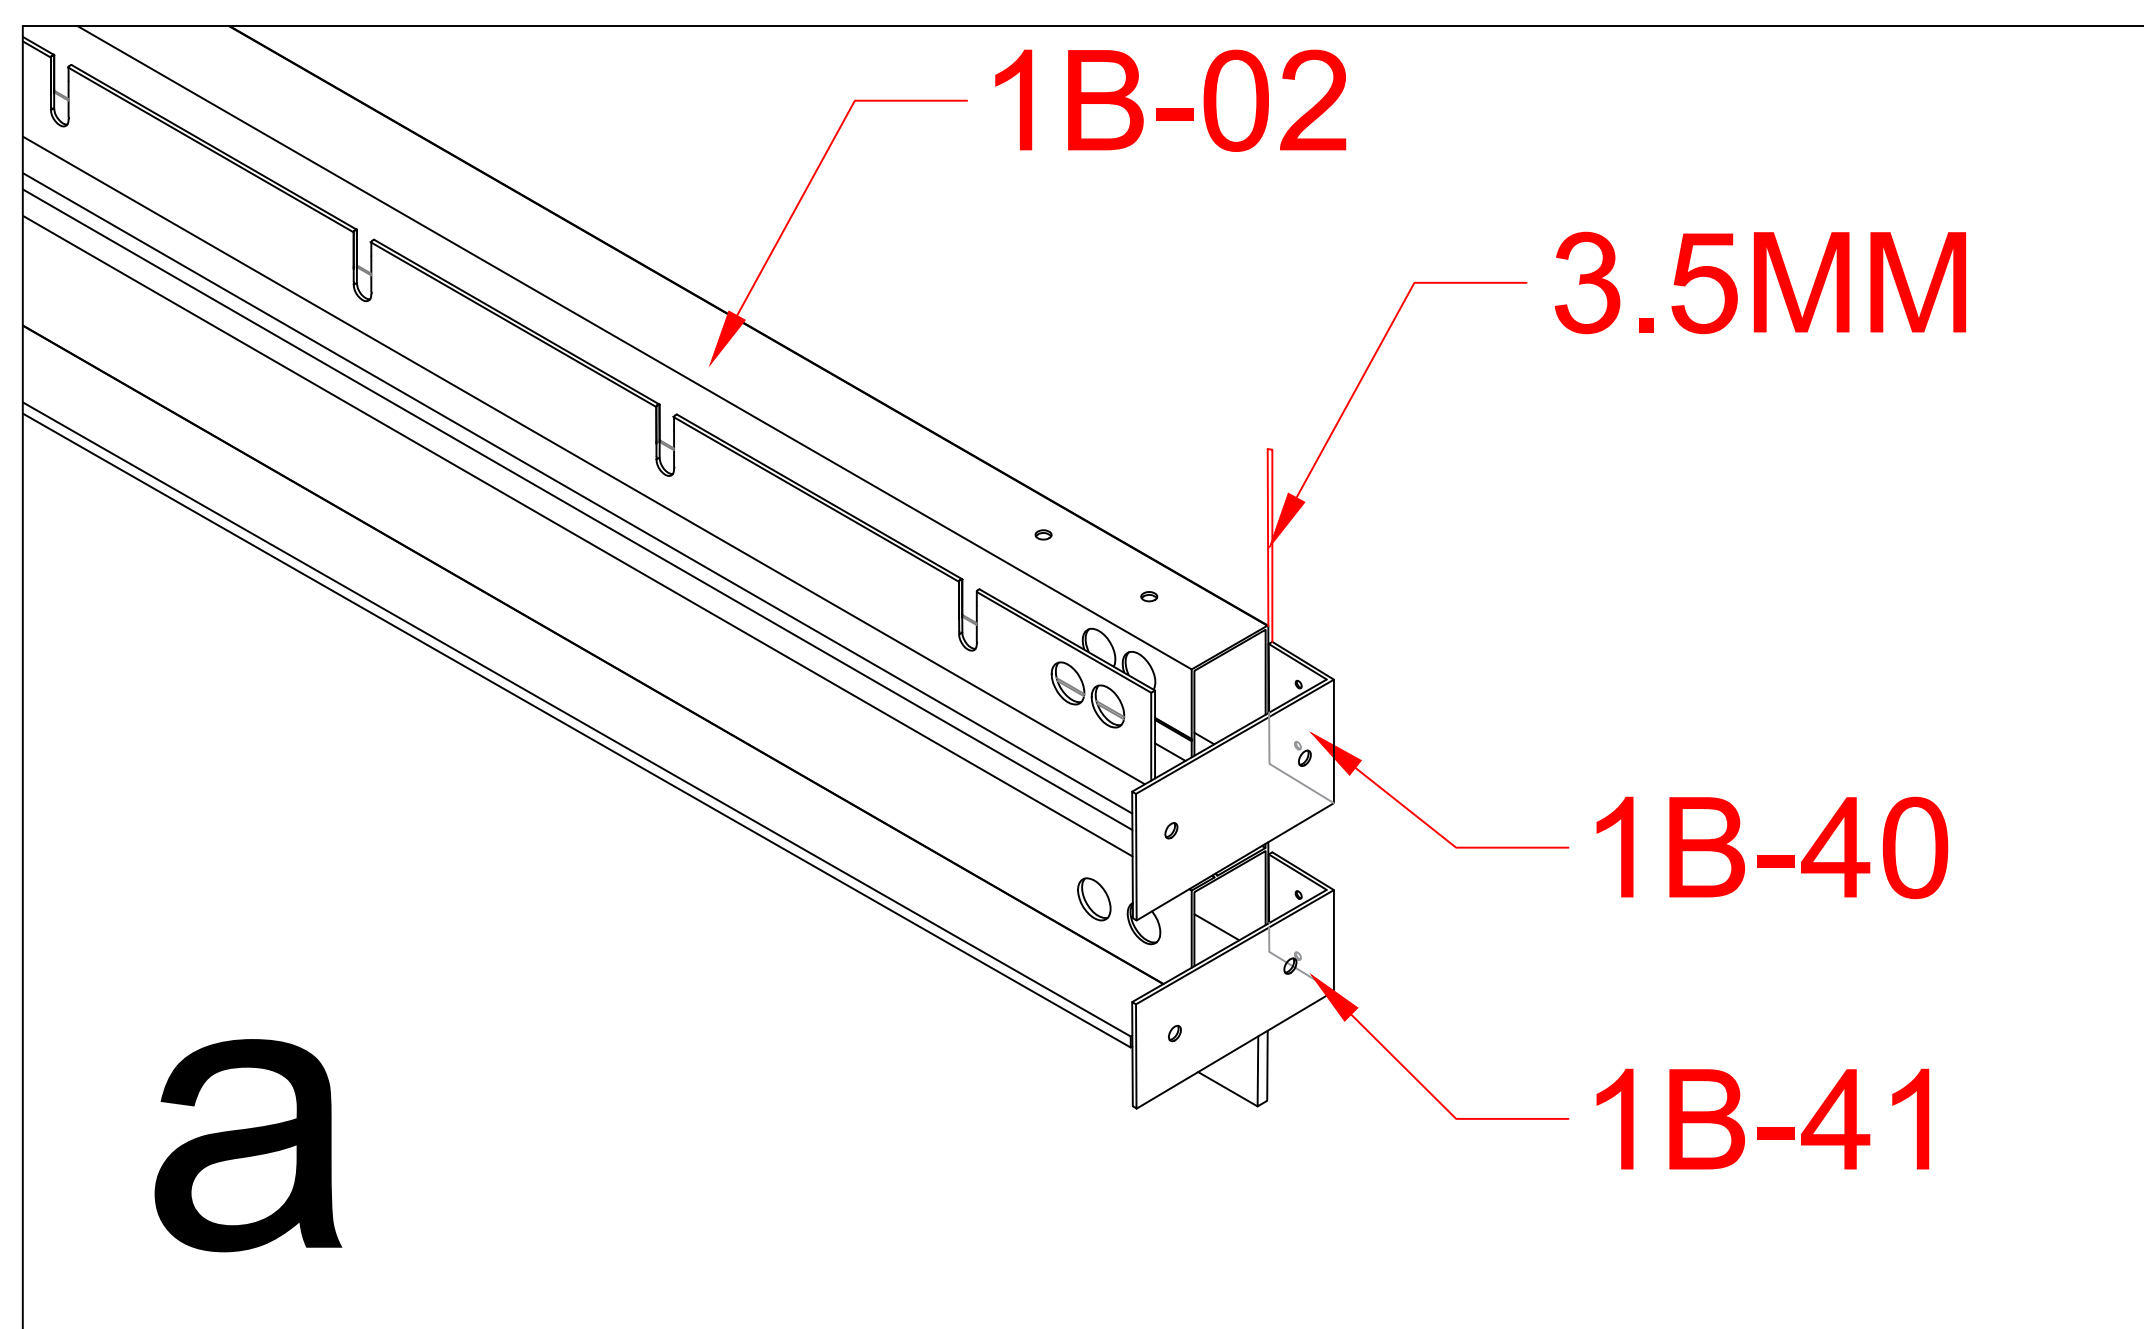


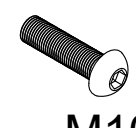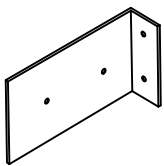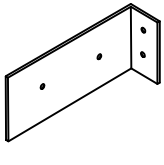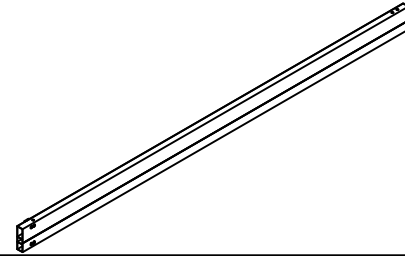1B-42	 M10*20	8
1B-40		2
1B-41		2
1B-04		2
1B-39		8

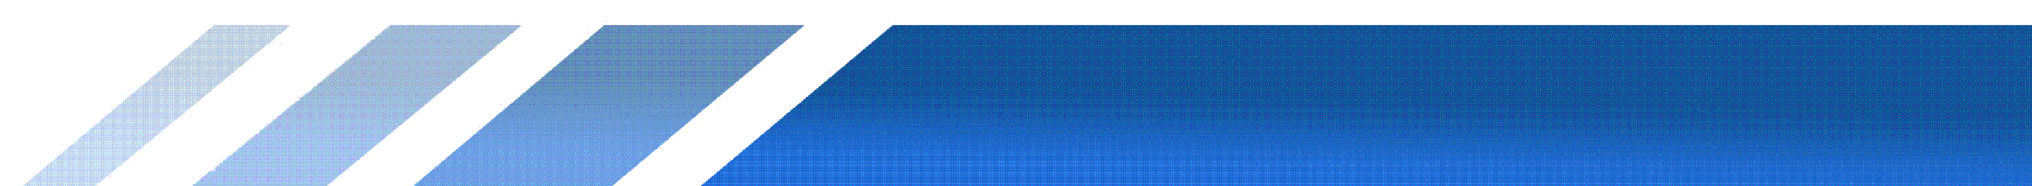

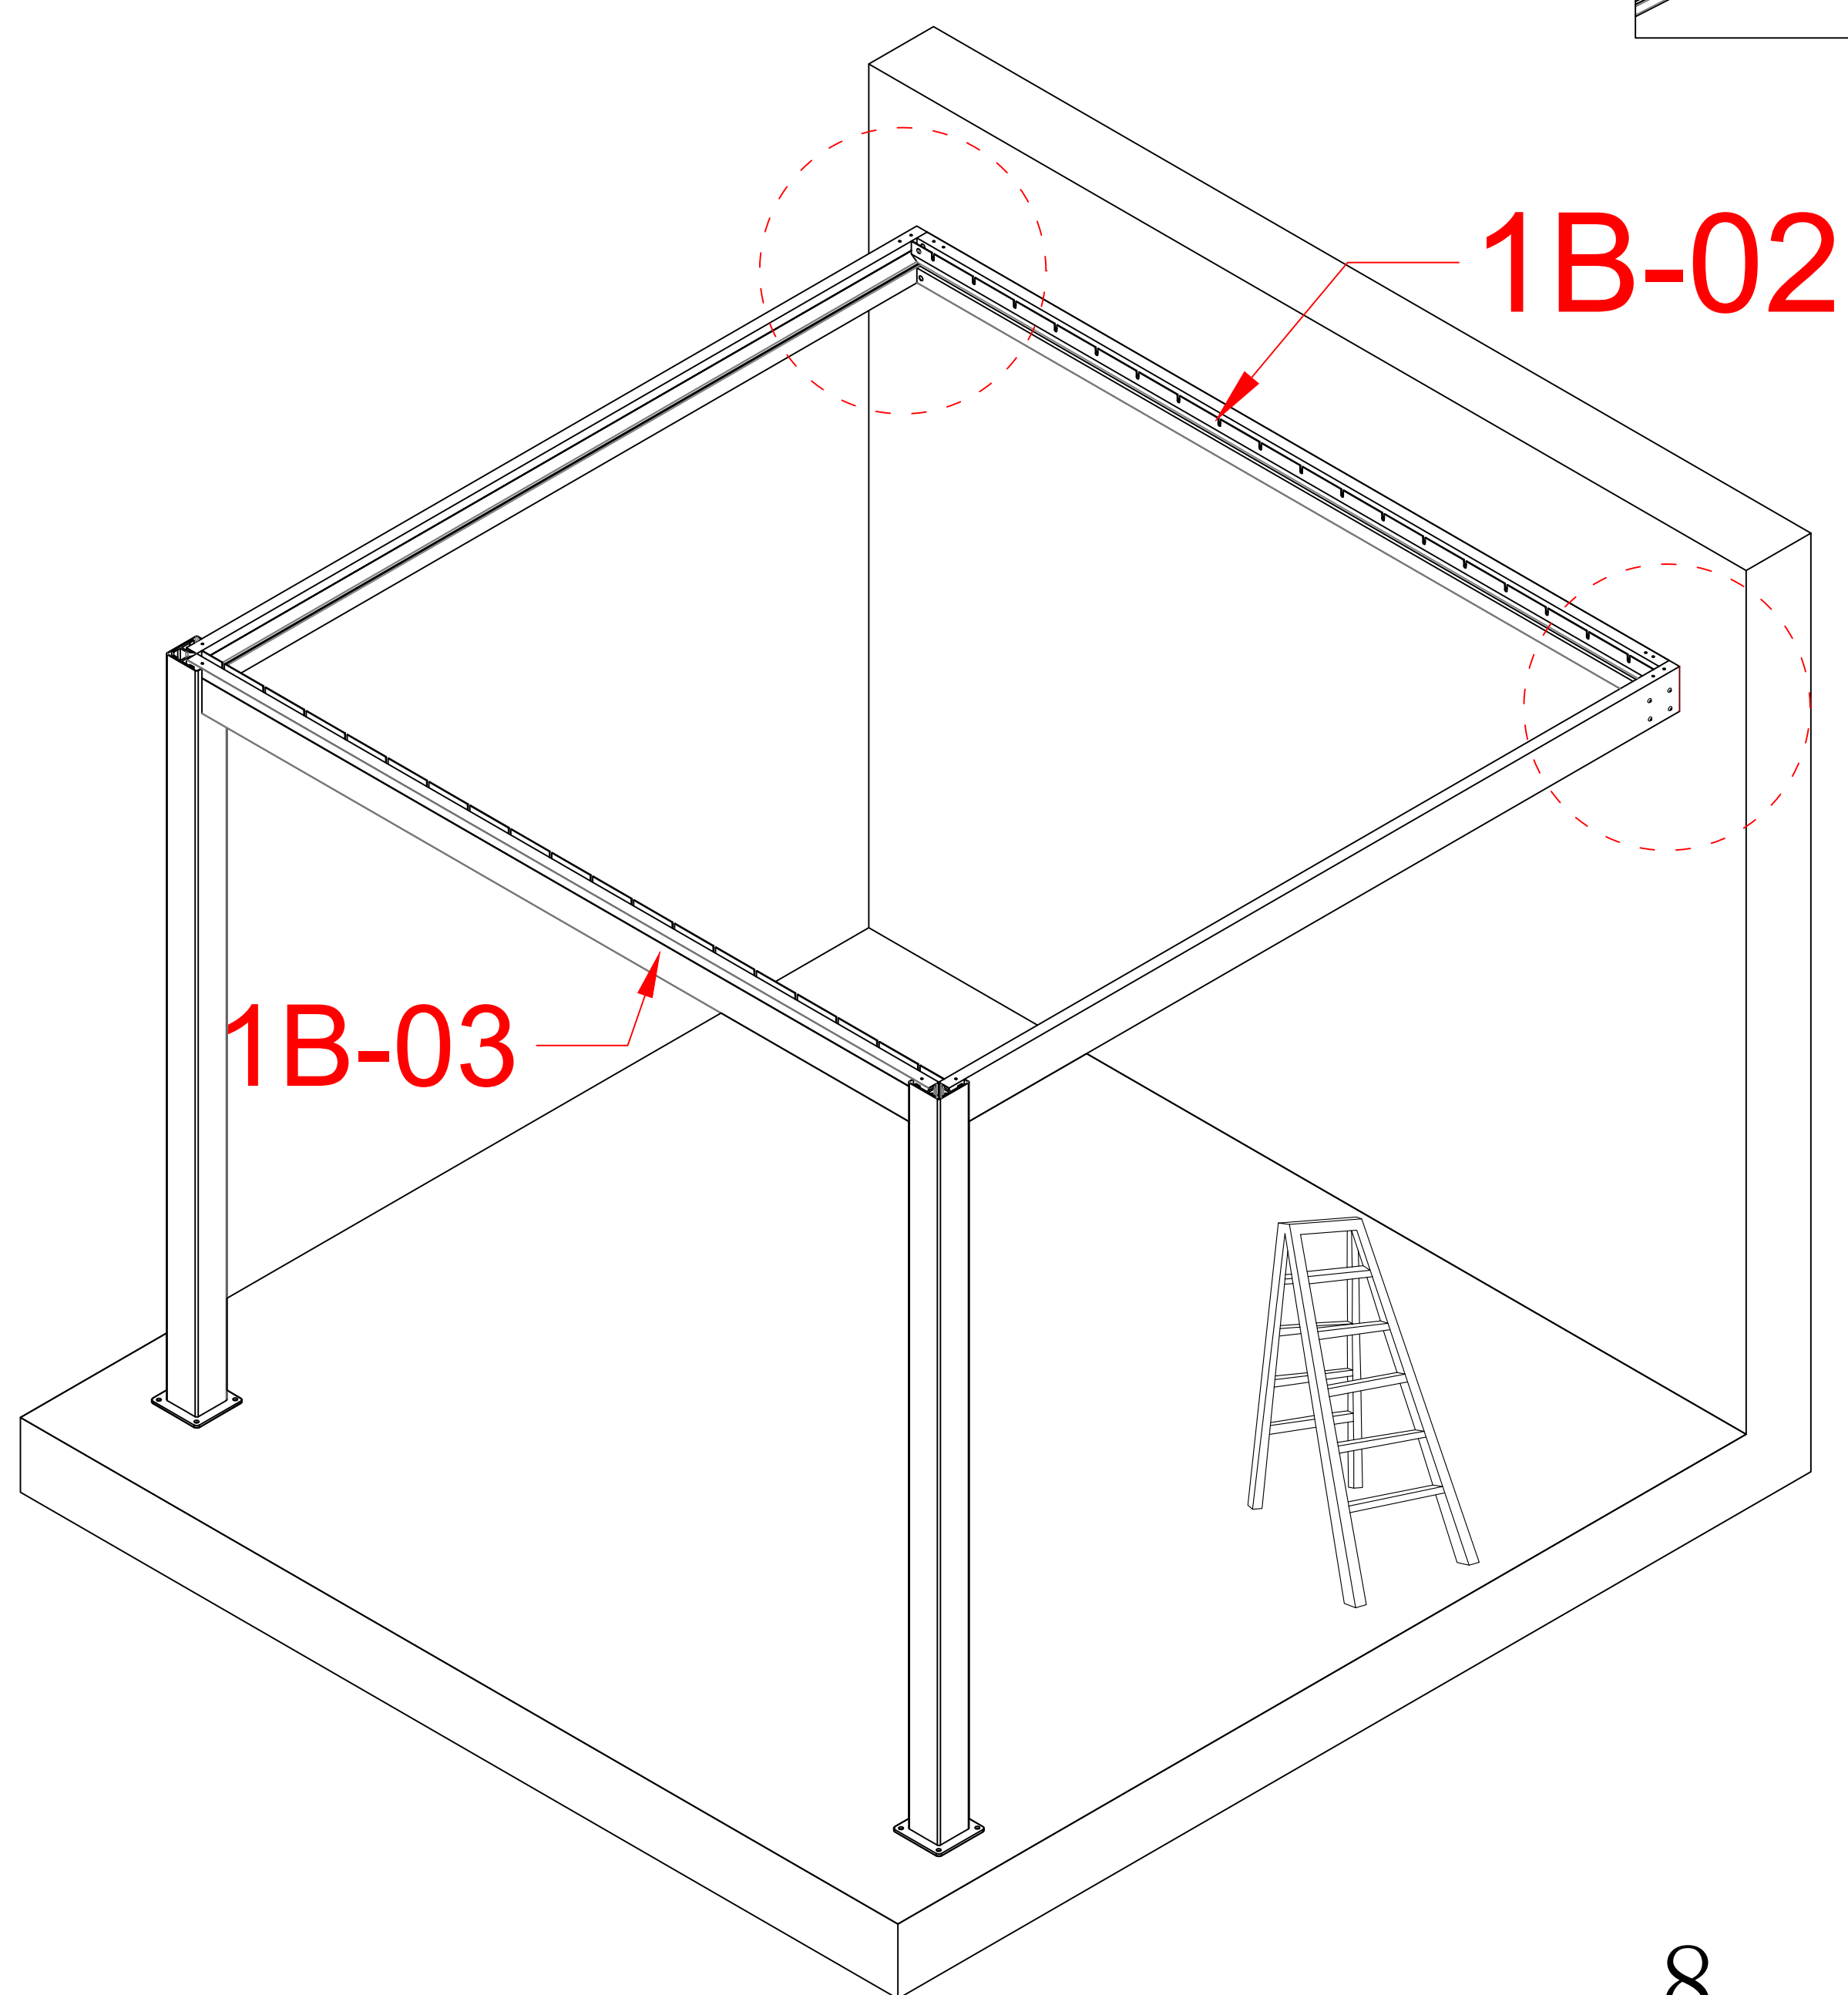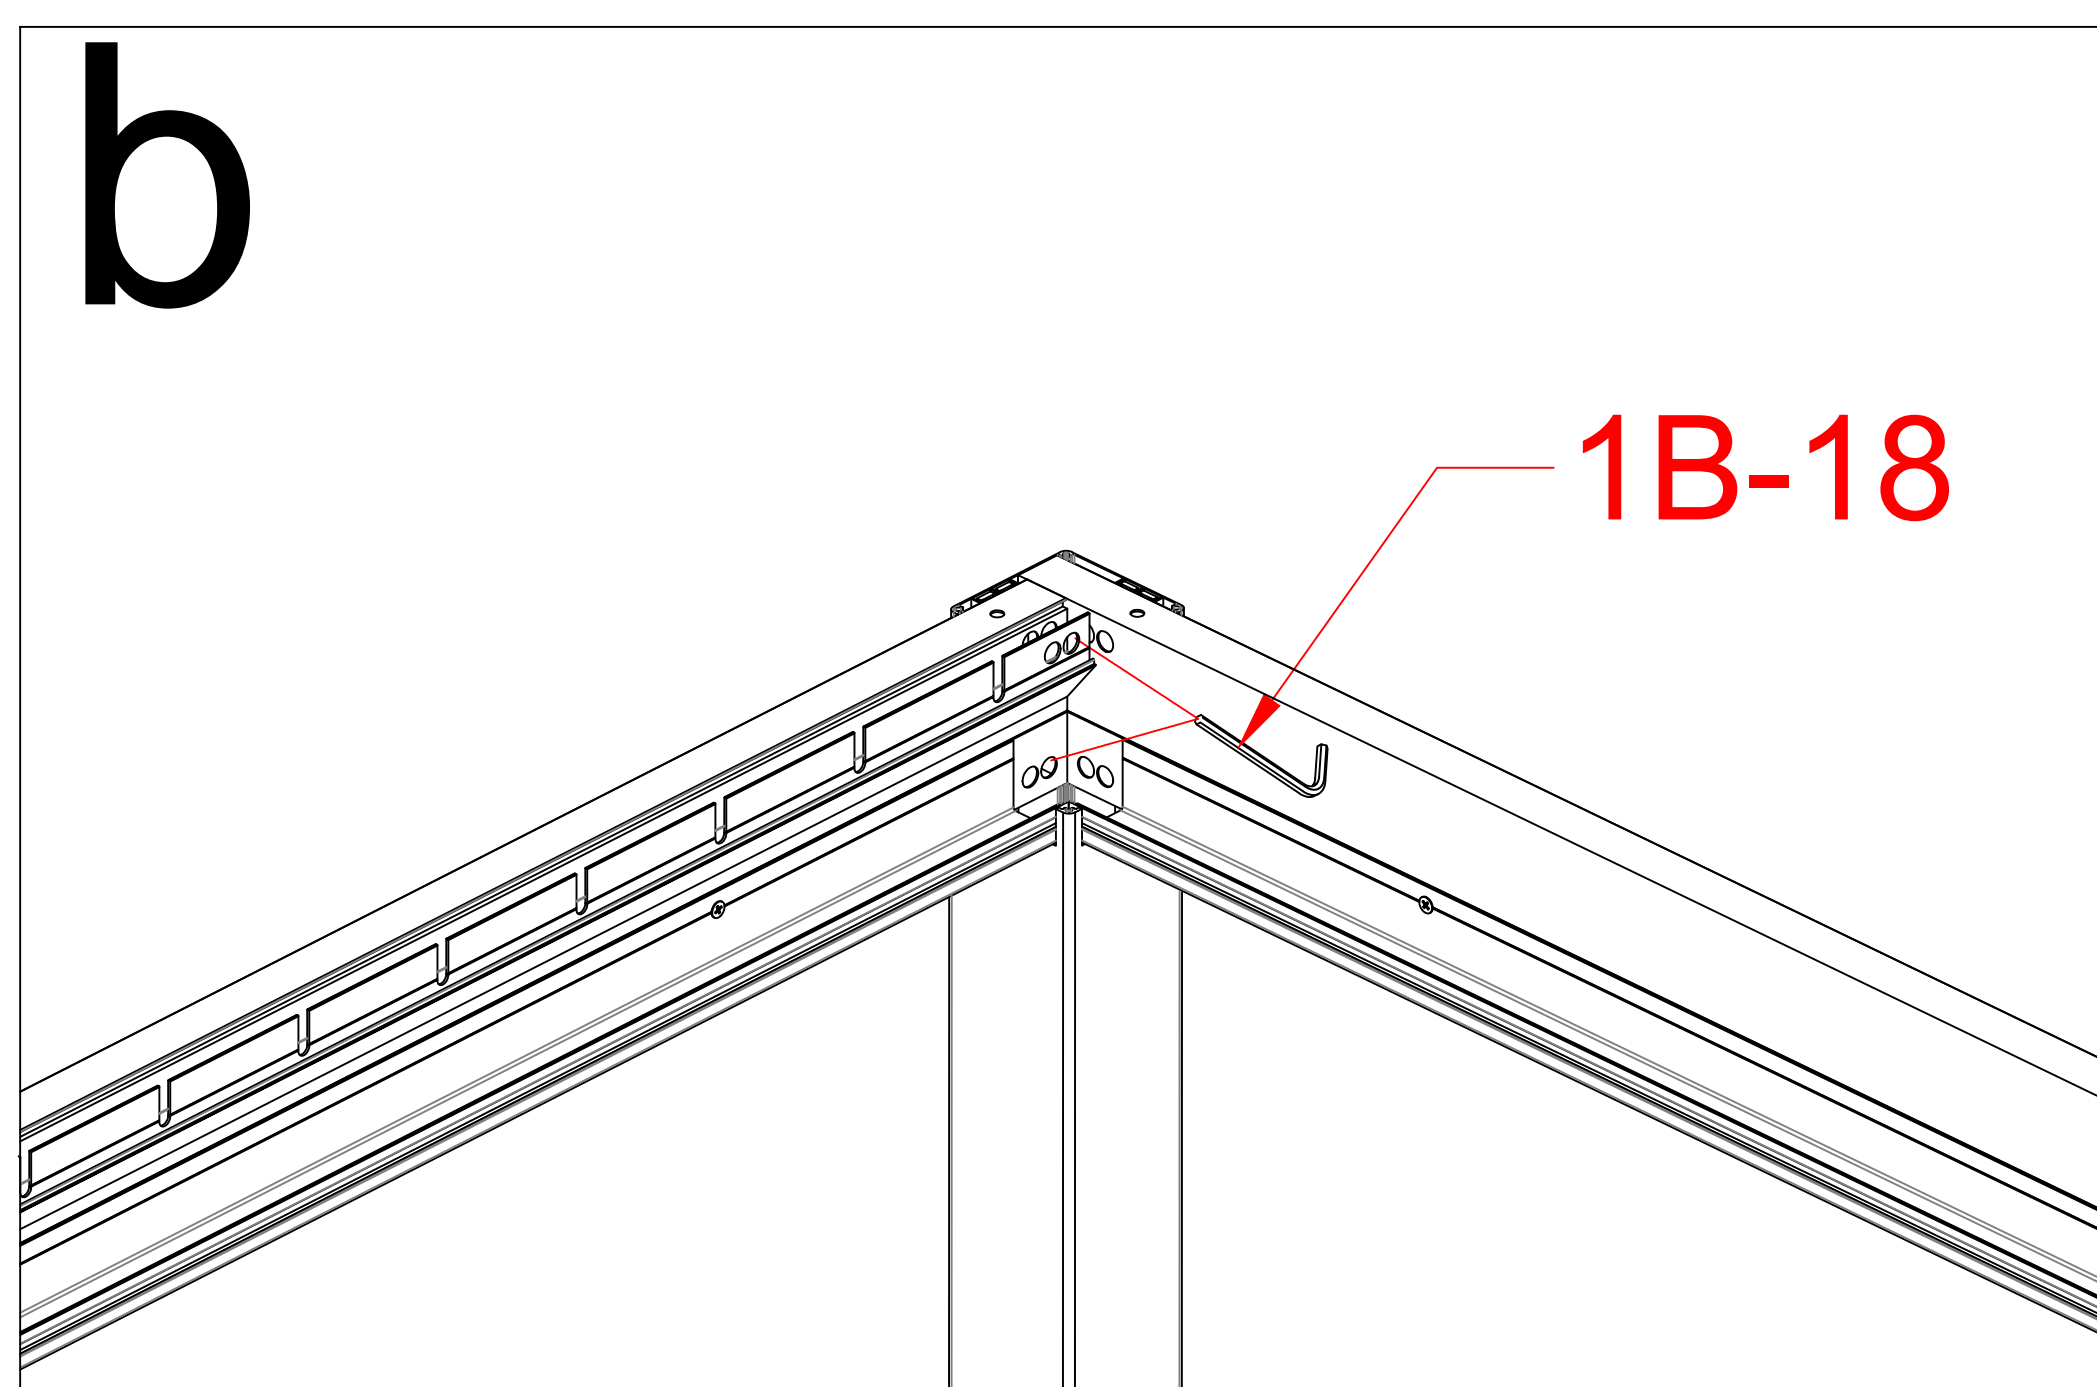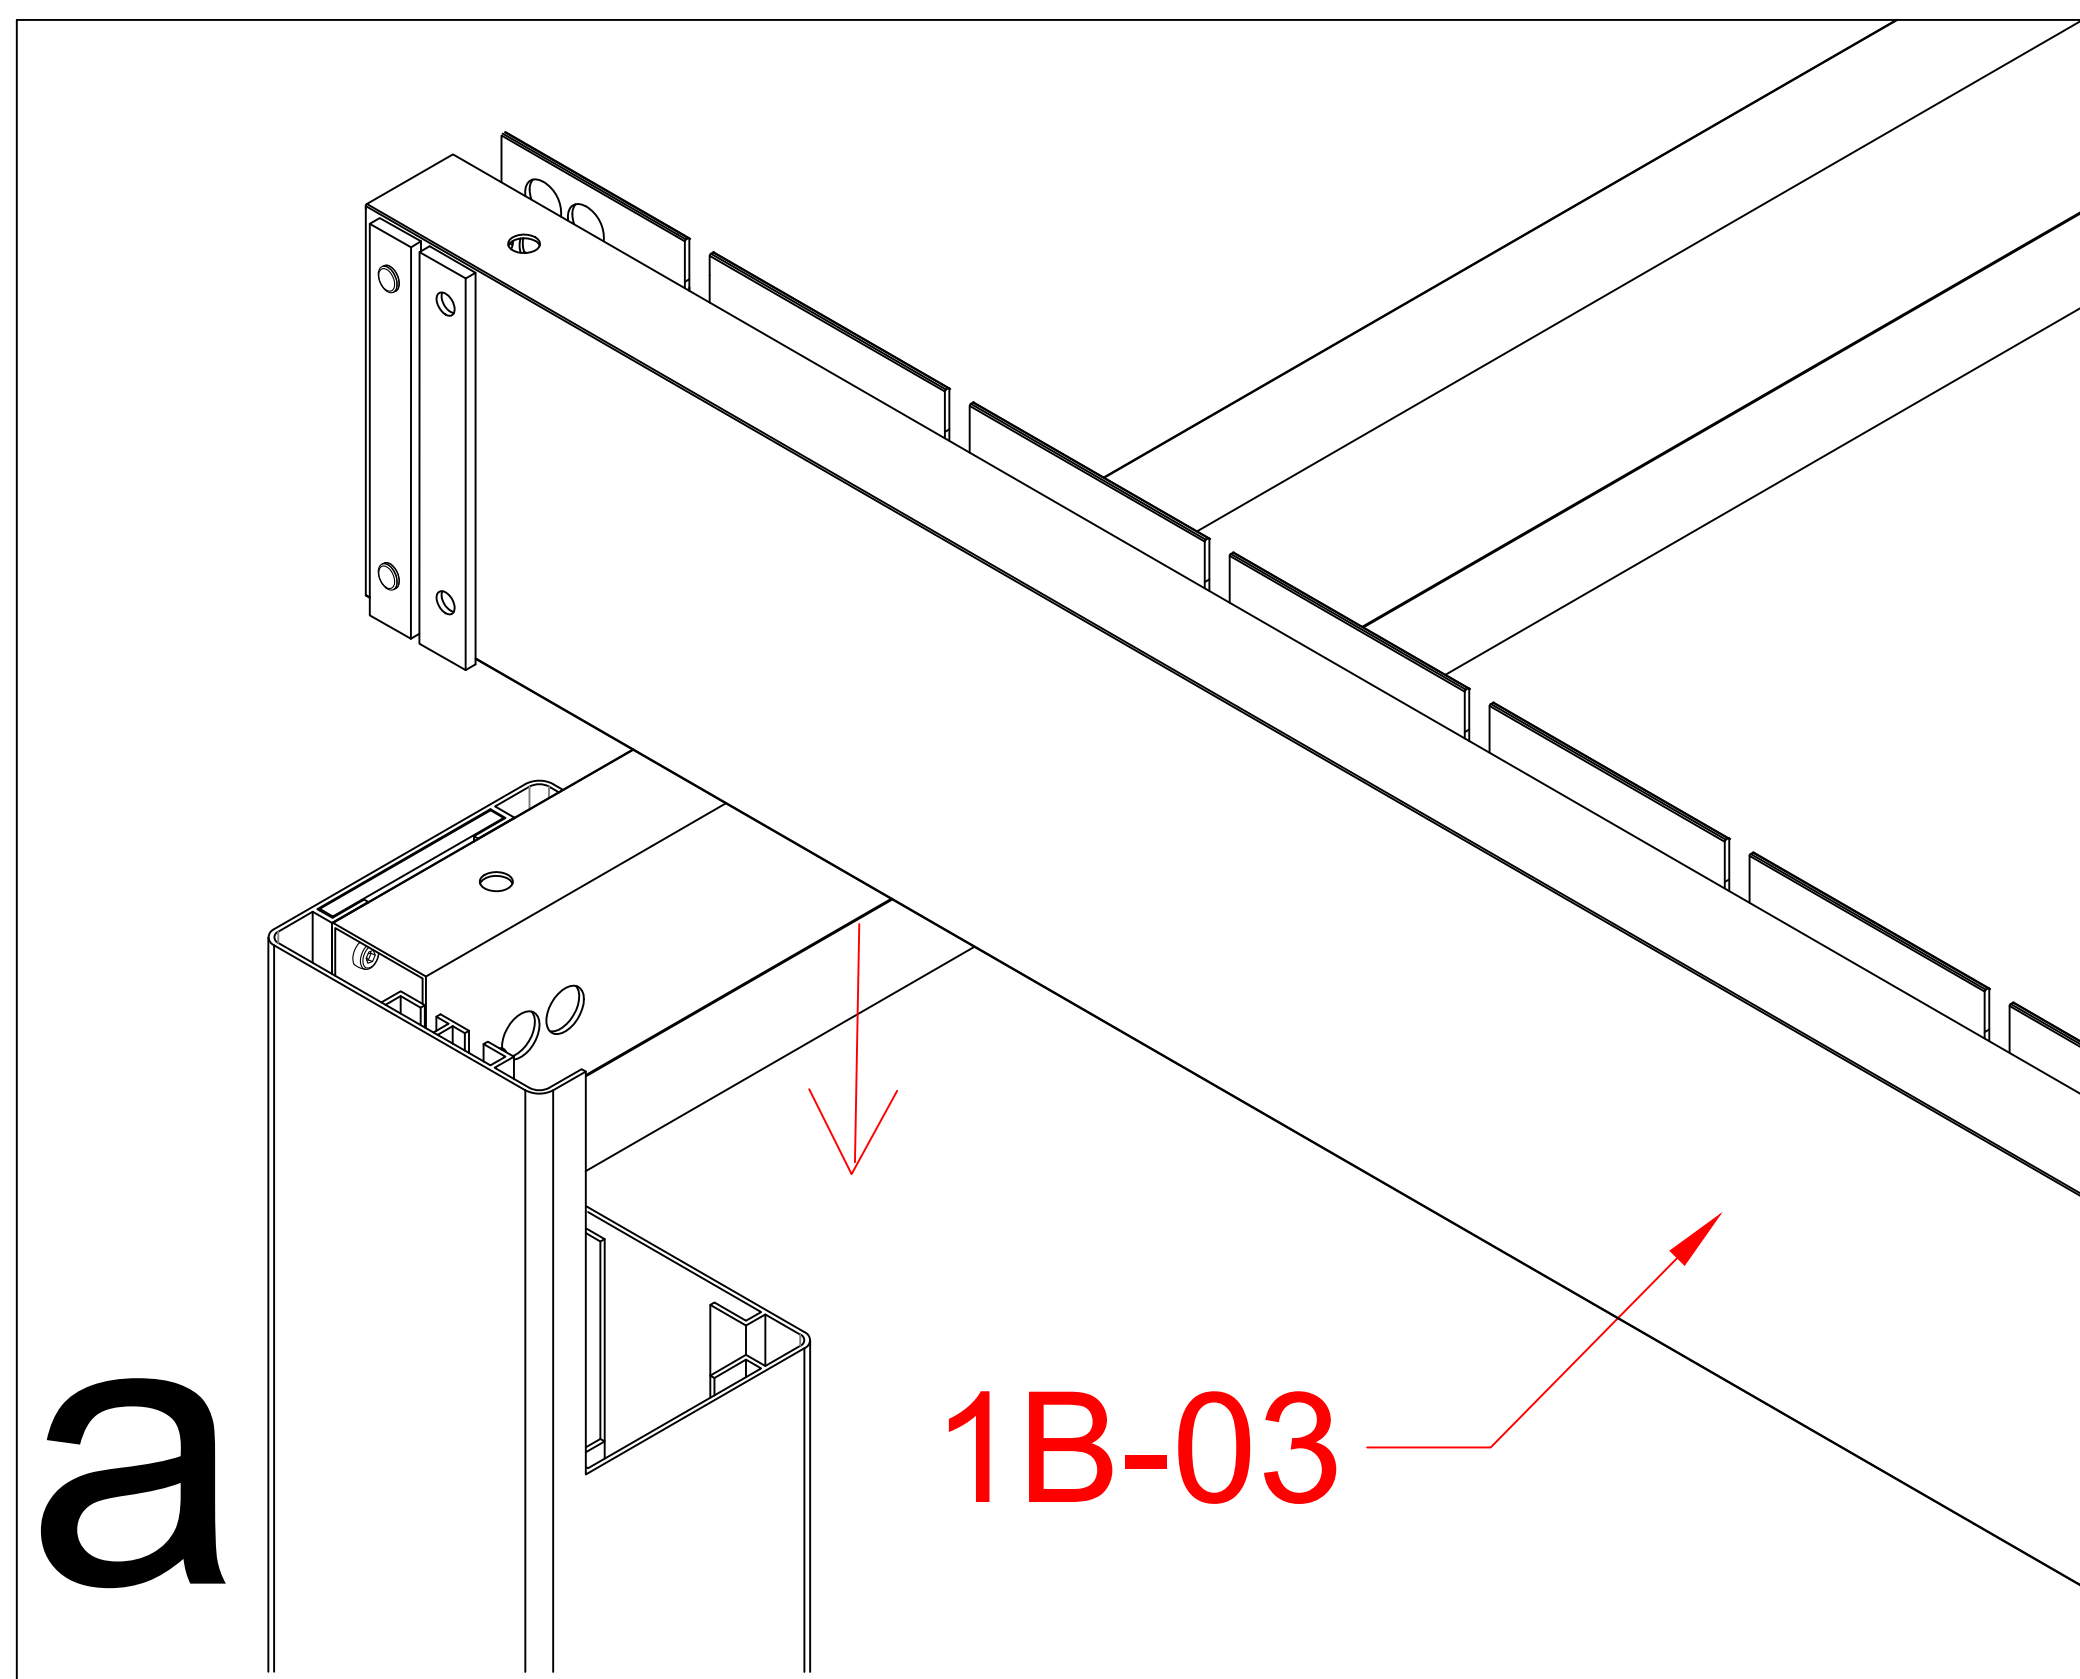




1B-03			1
-------	--	--	---

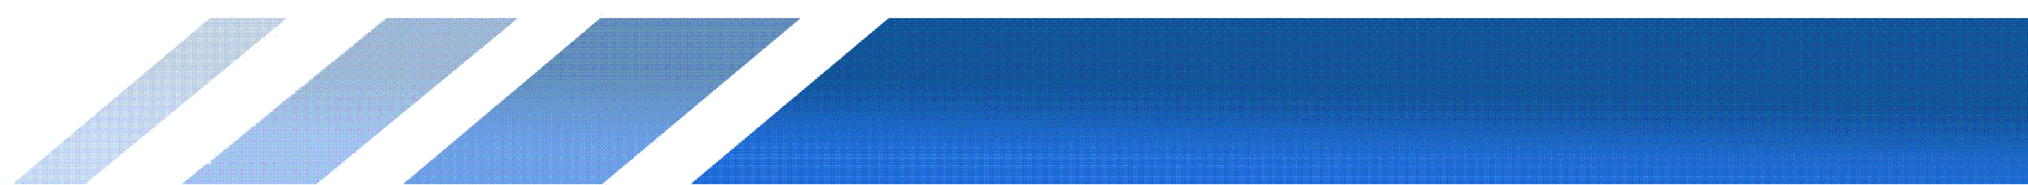



a



1B-21

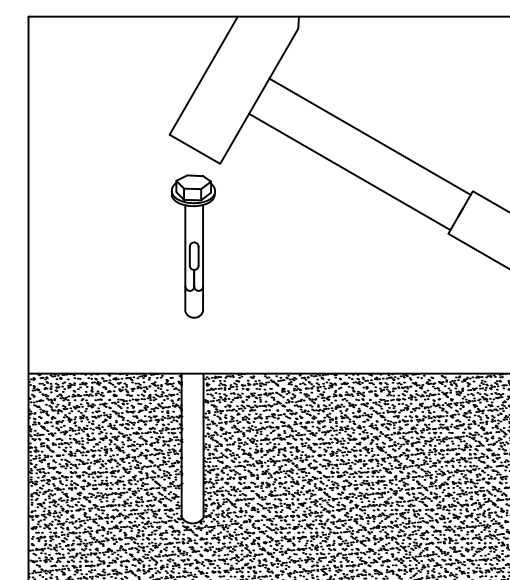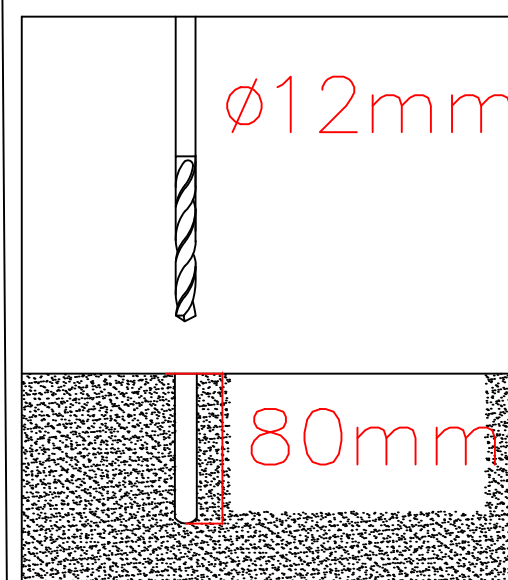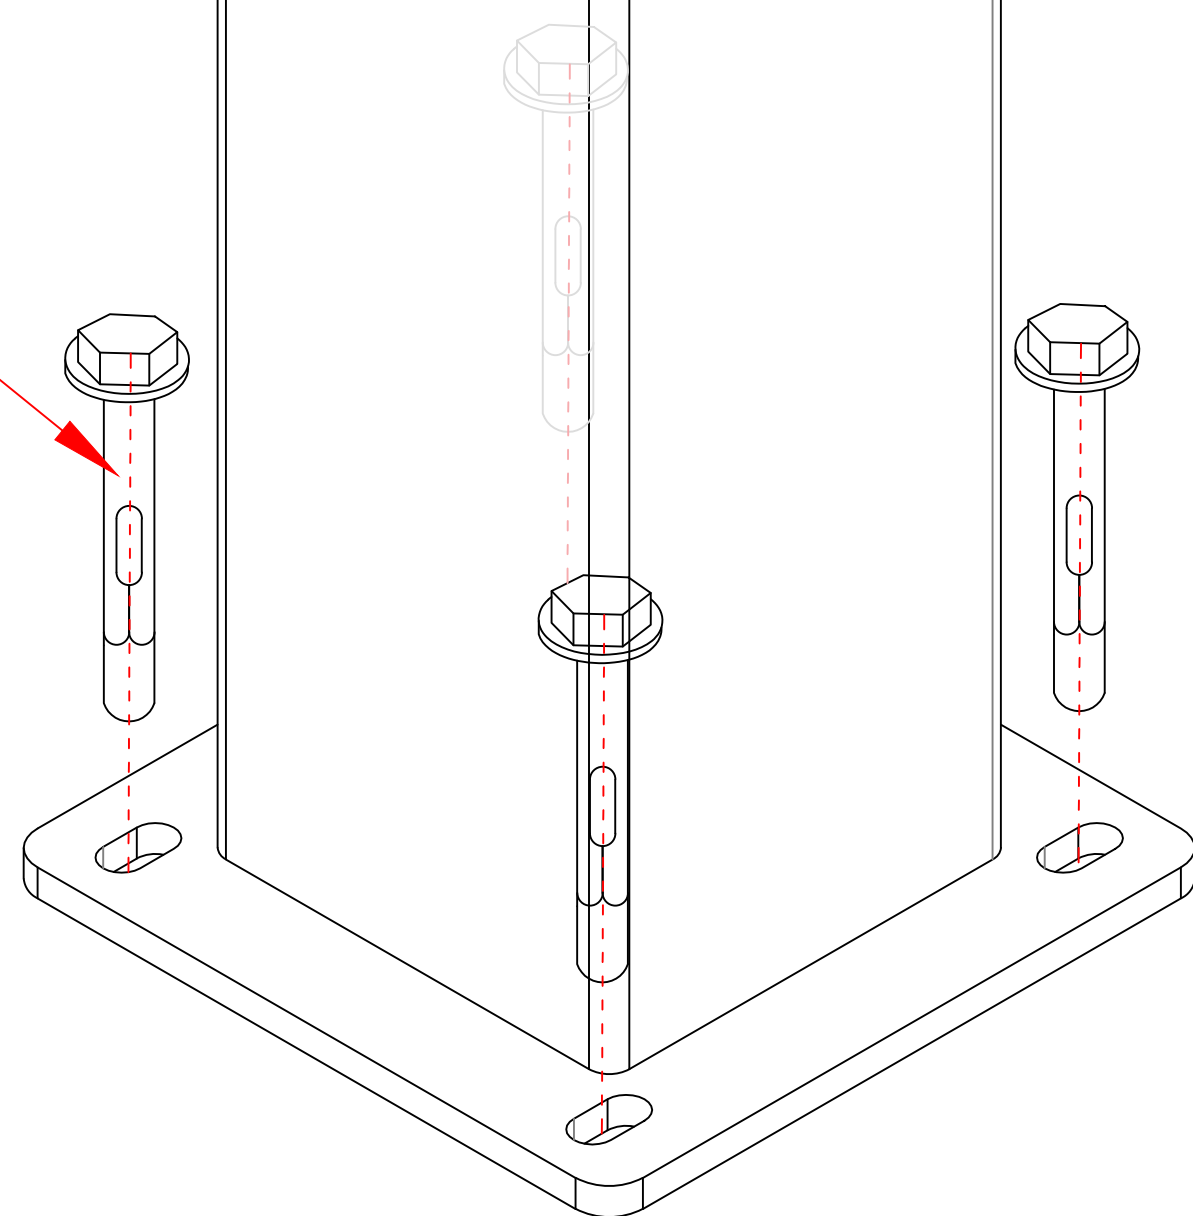


Pls measure the diagonal size and make sure the diagonal size keeps same before screw 1B-21 mounted. If not, pls adjust it to same size.

b


1B-21


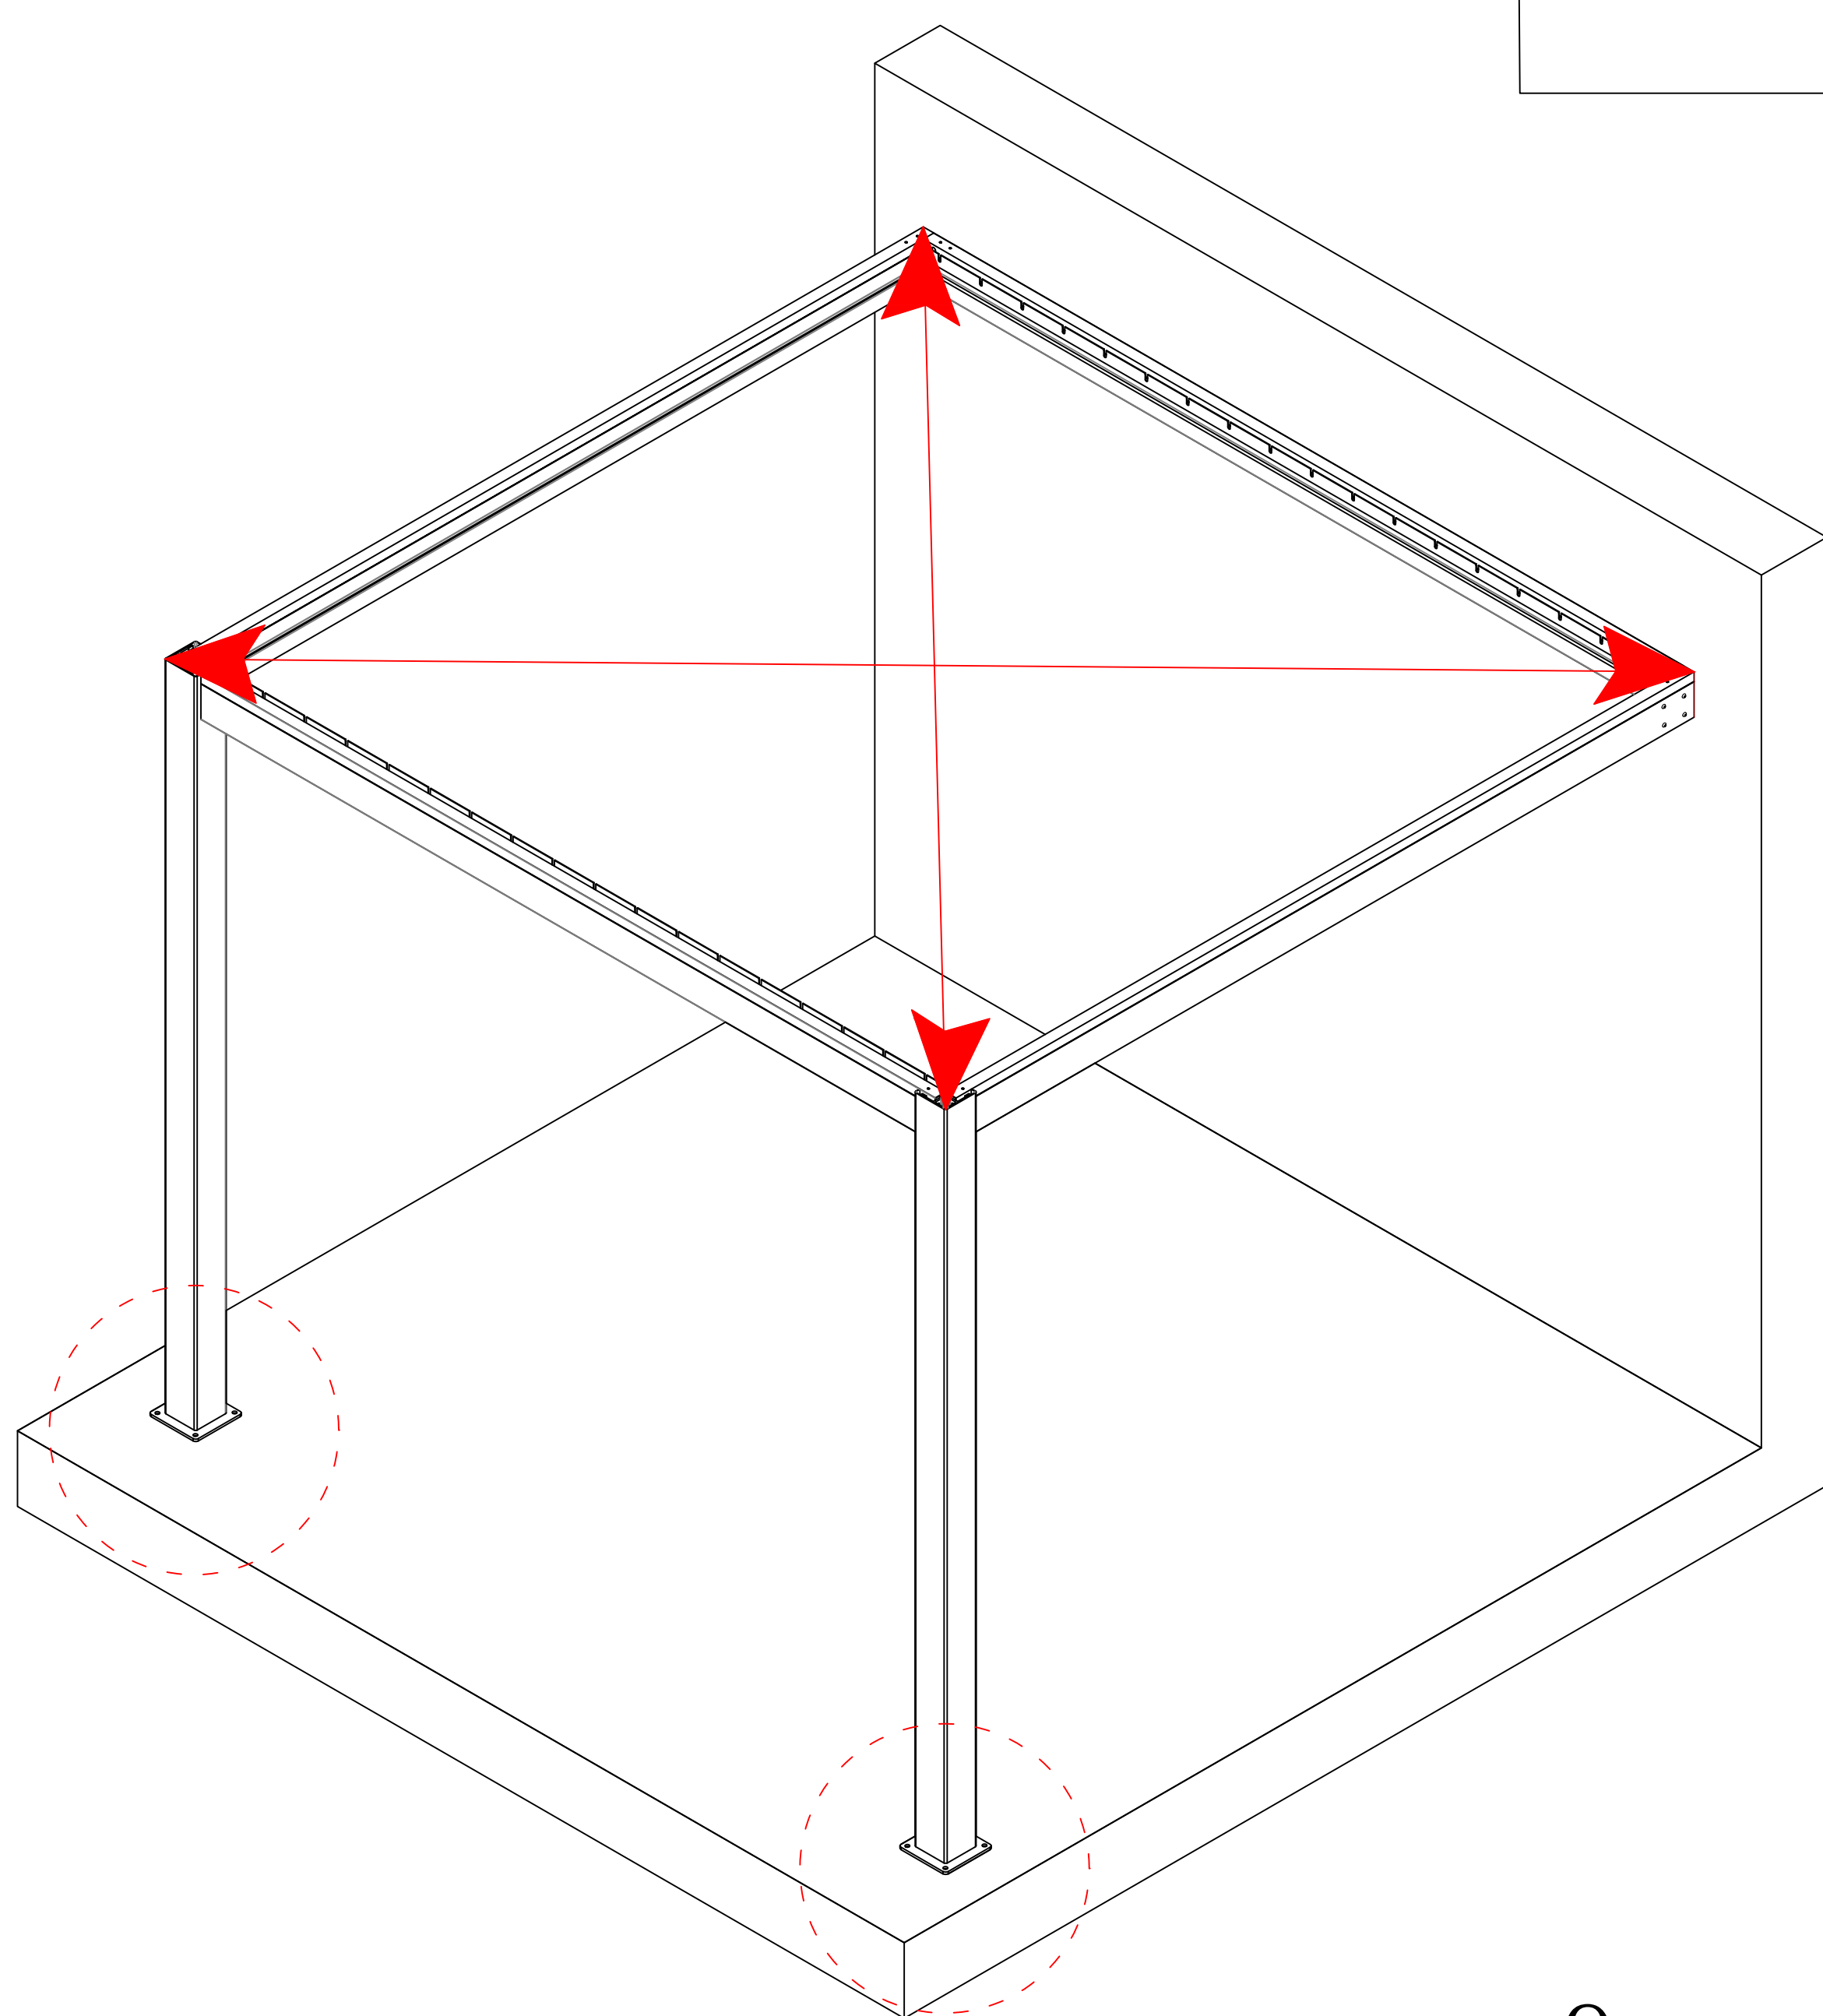
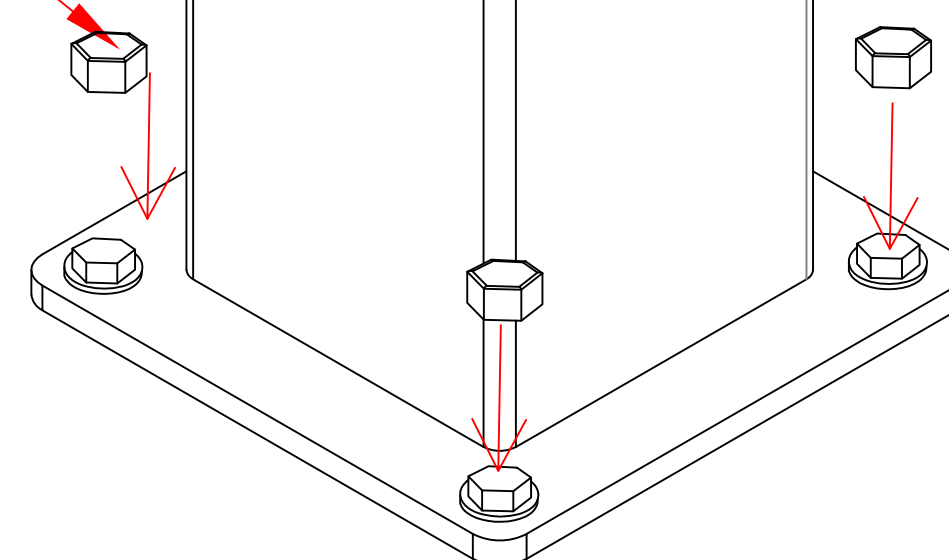





1B-21

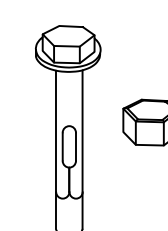





8

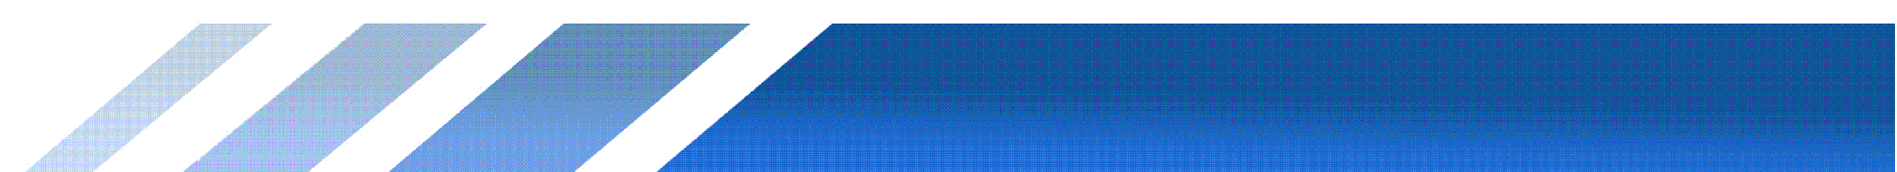

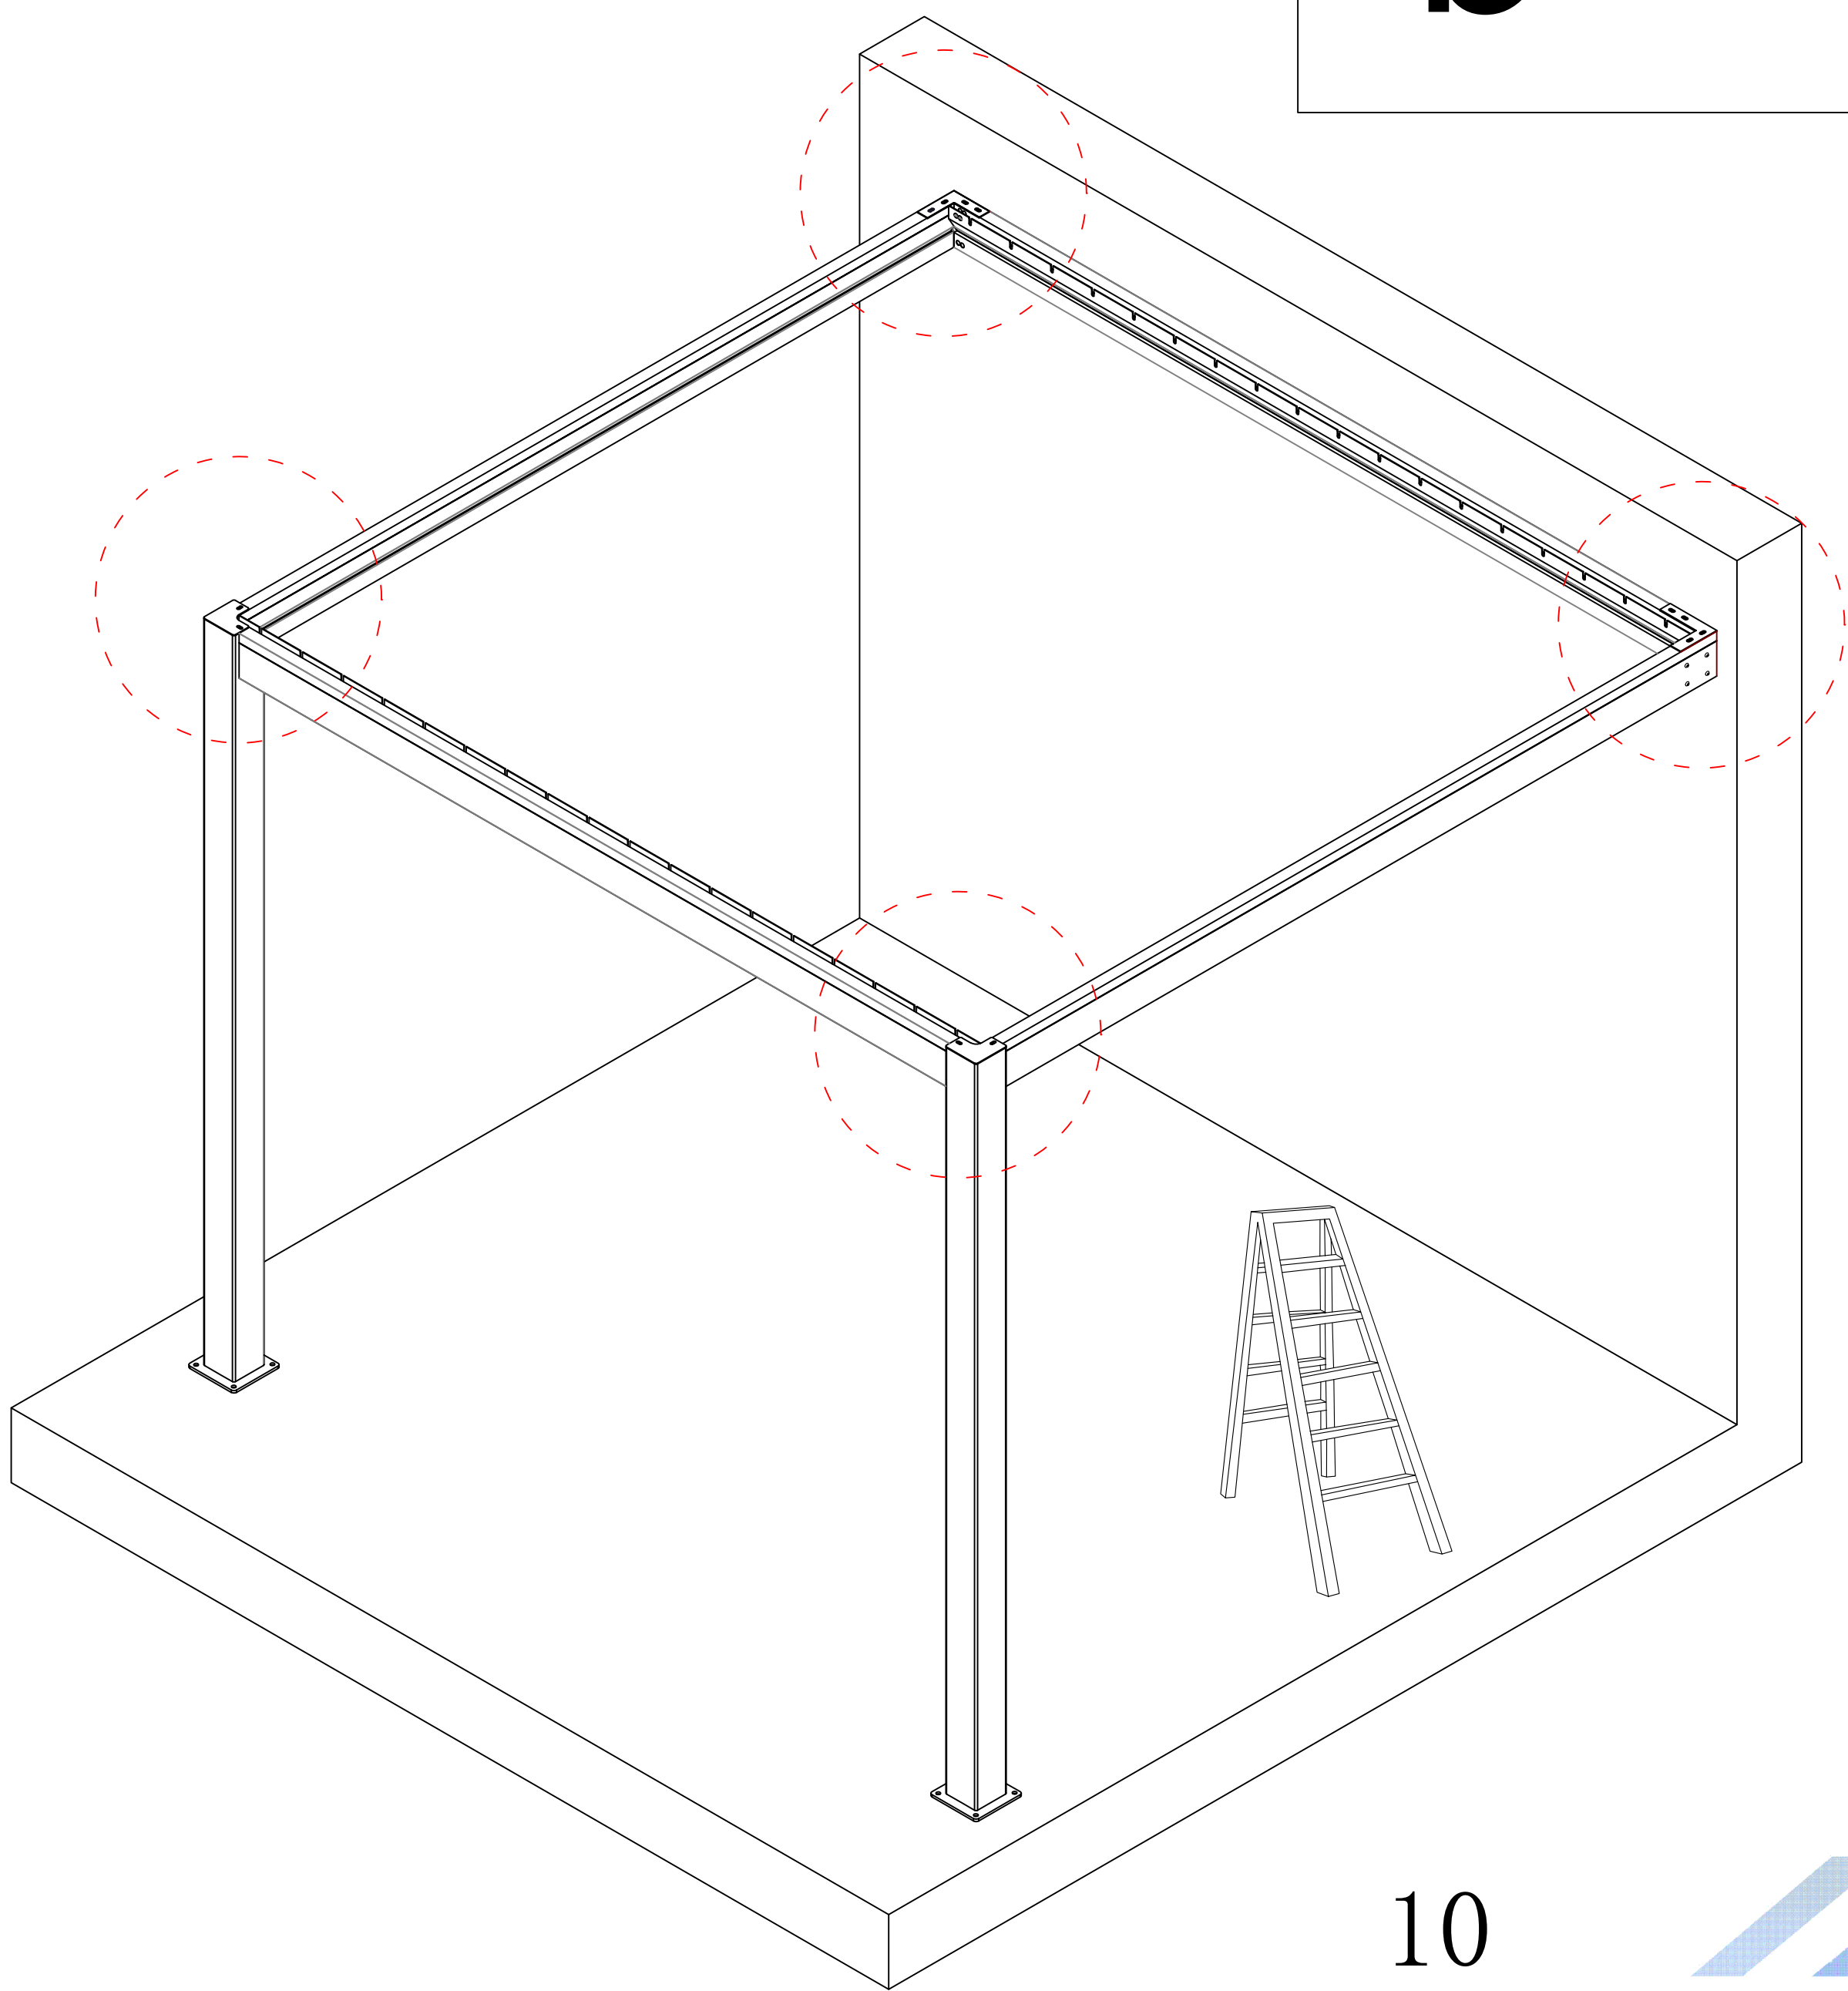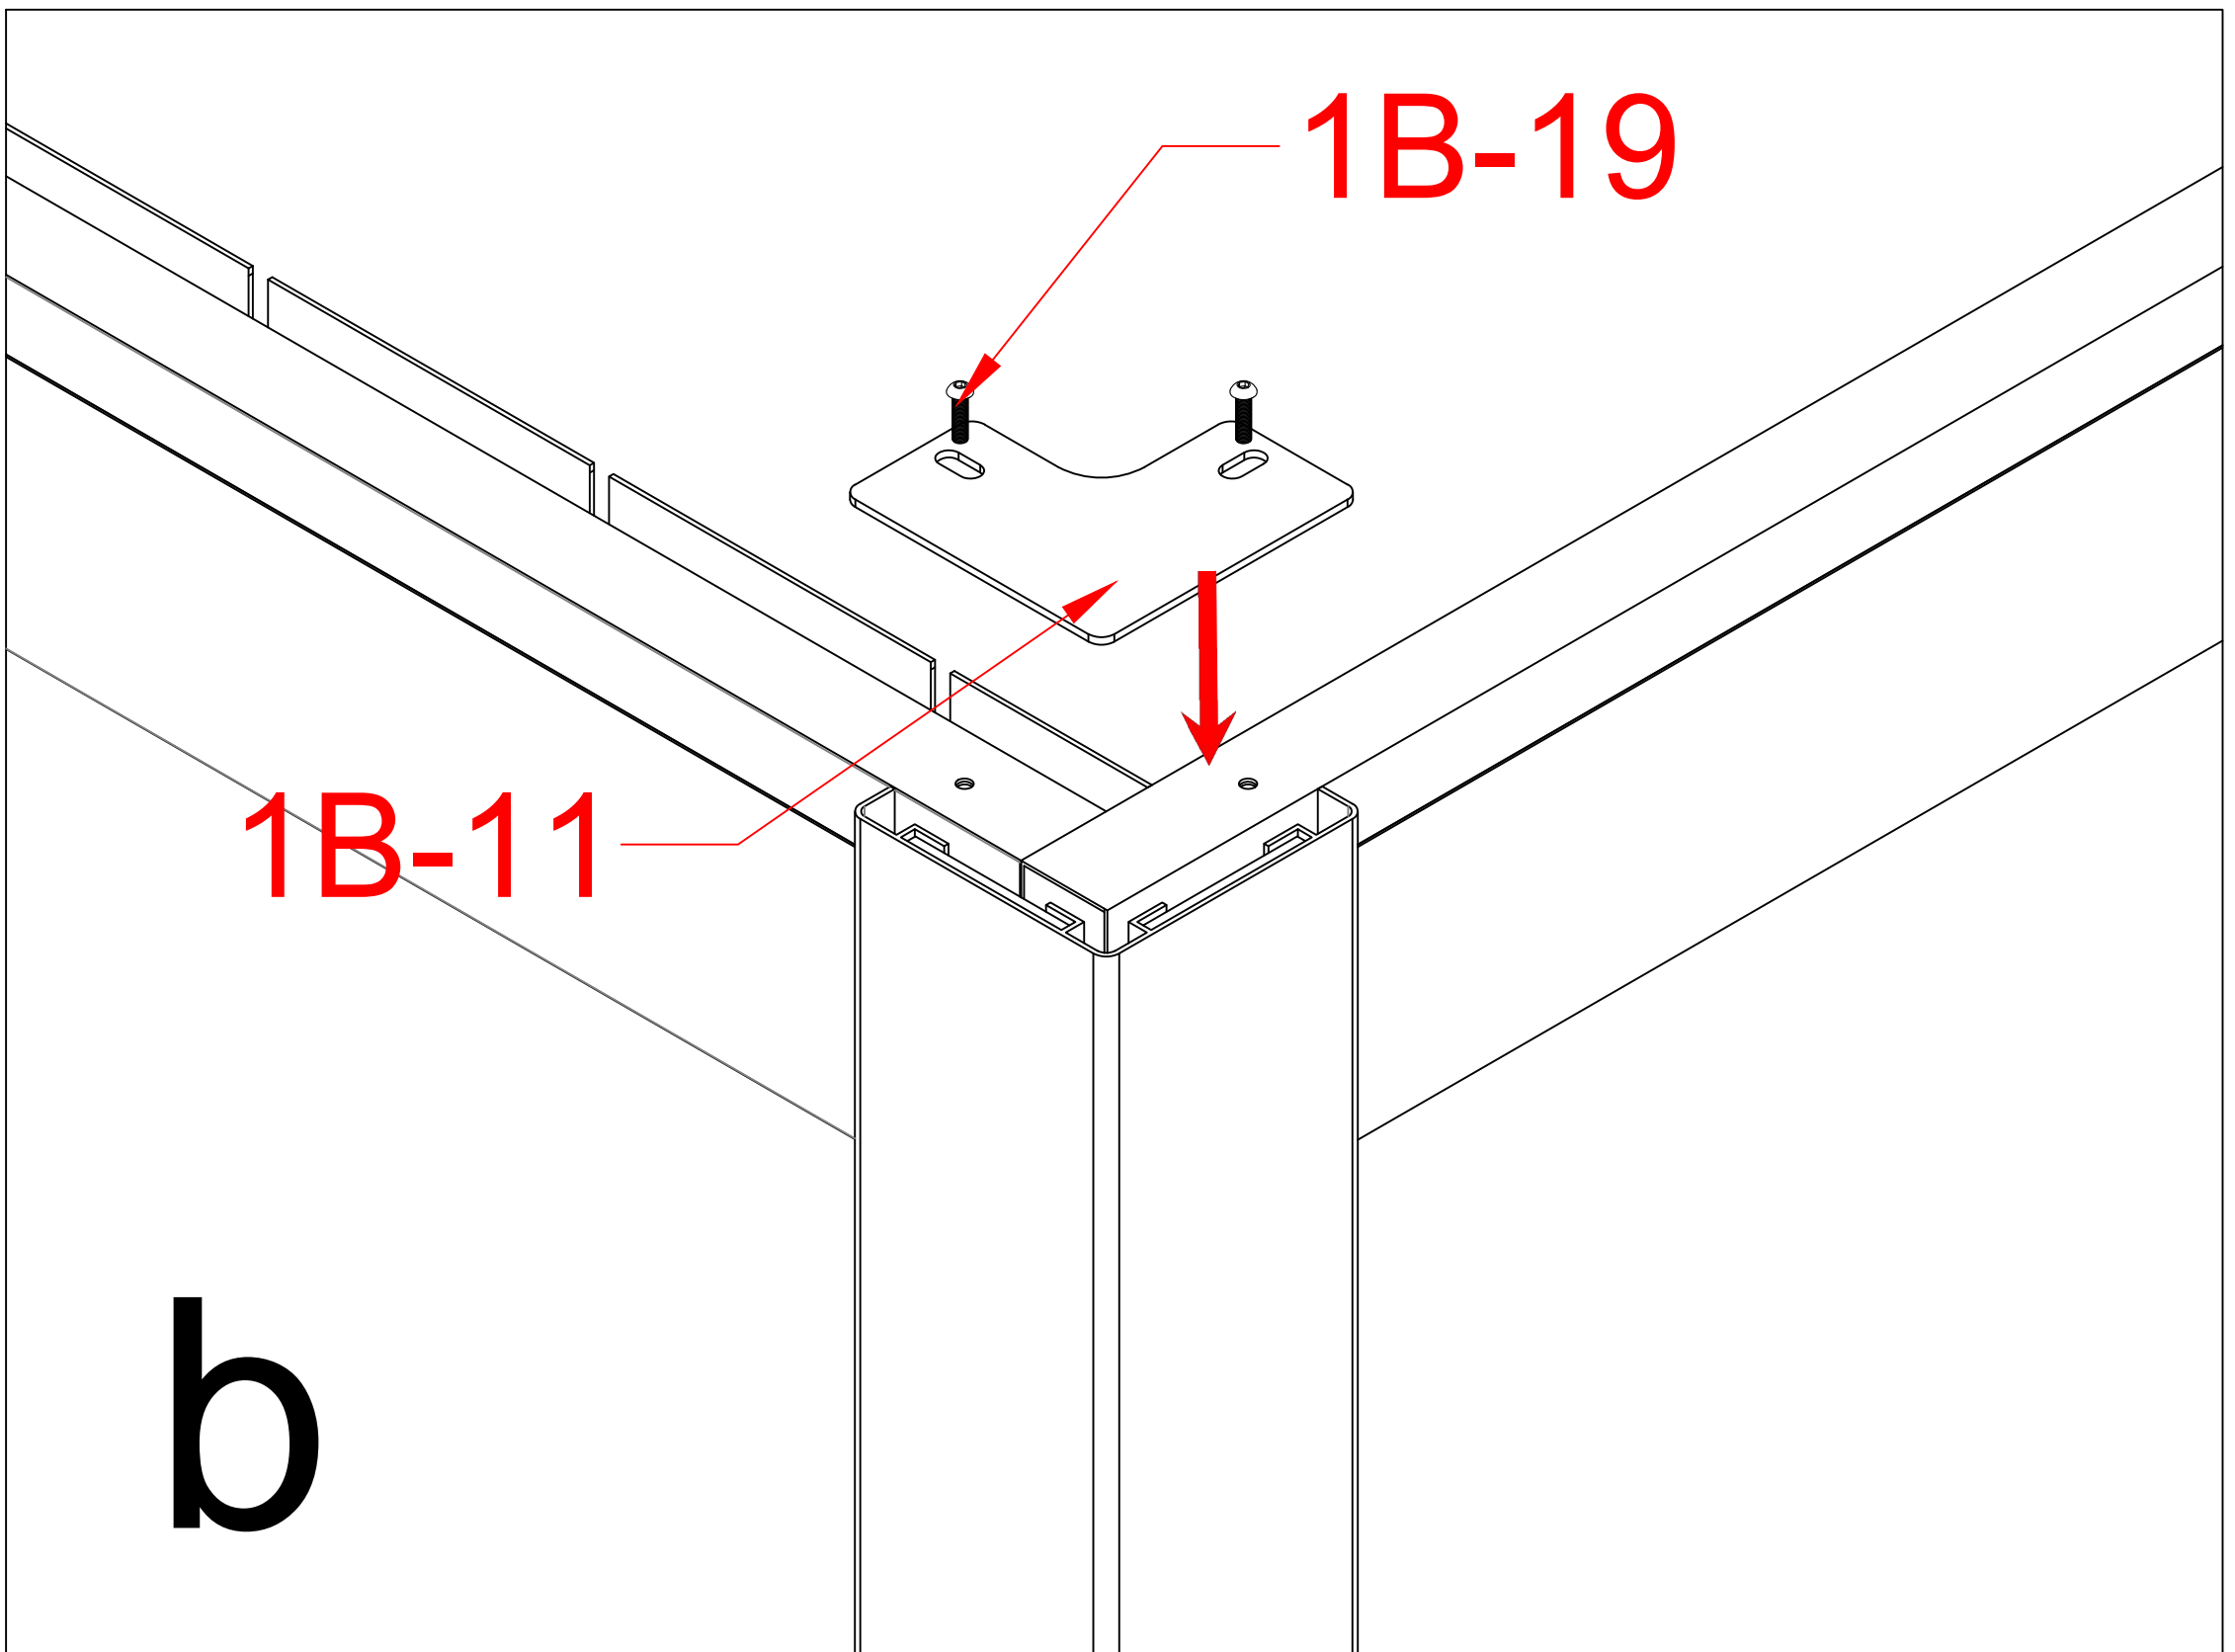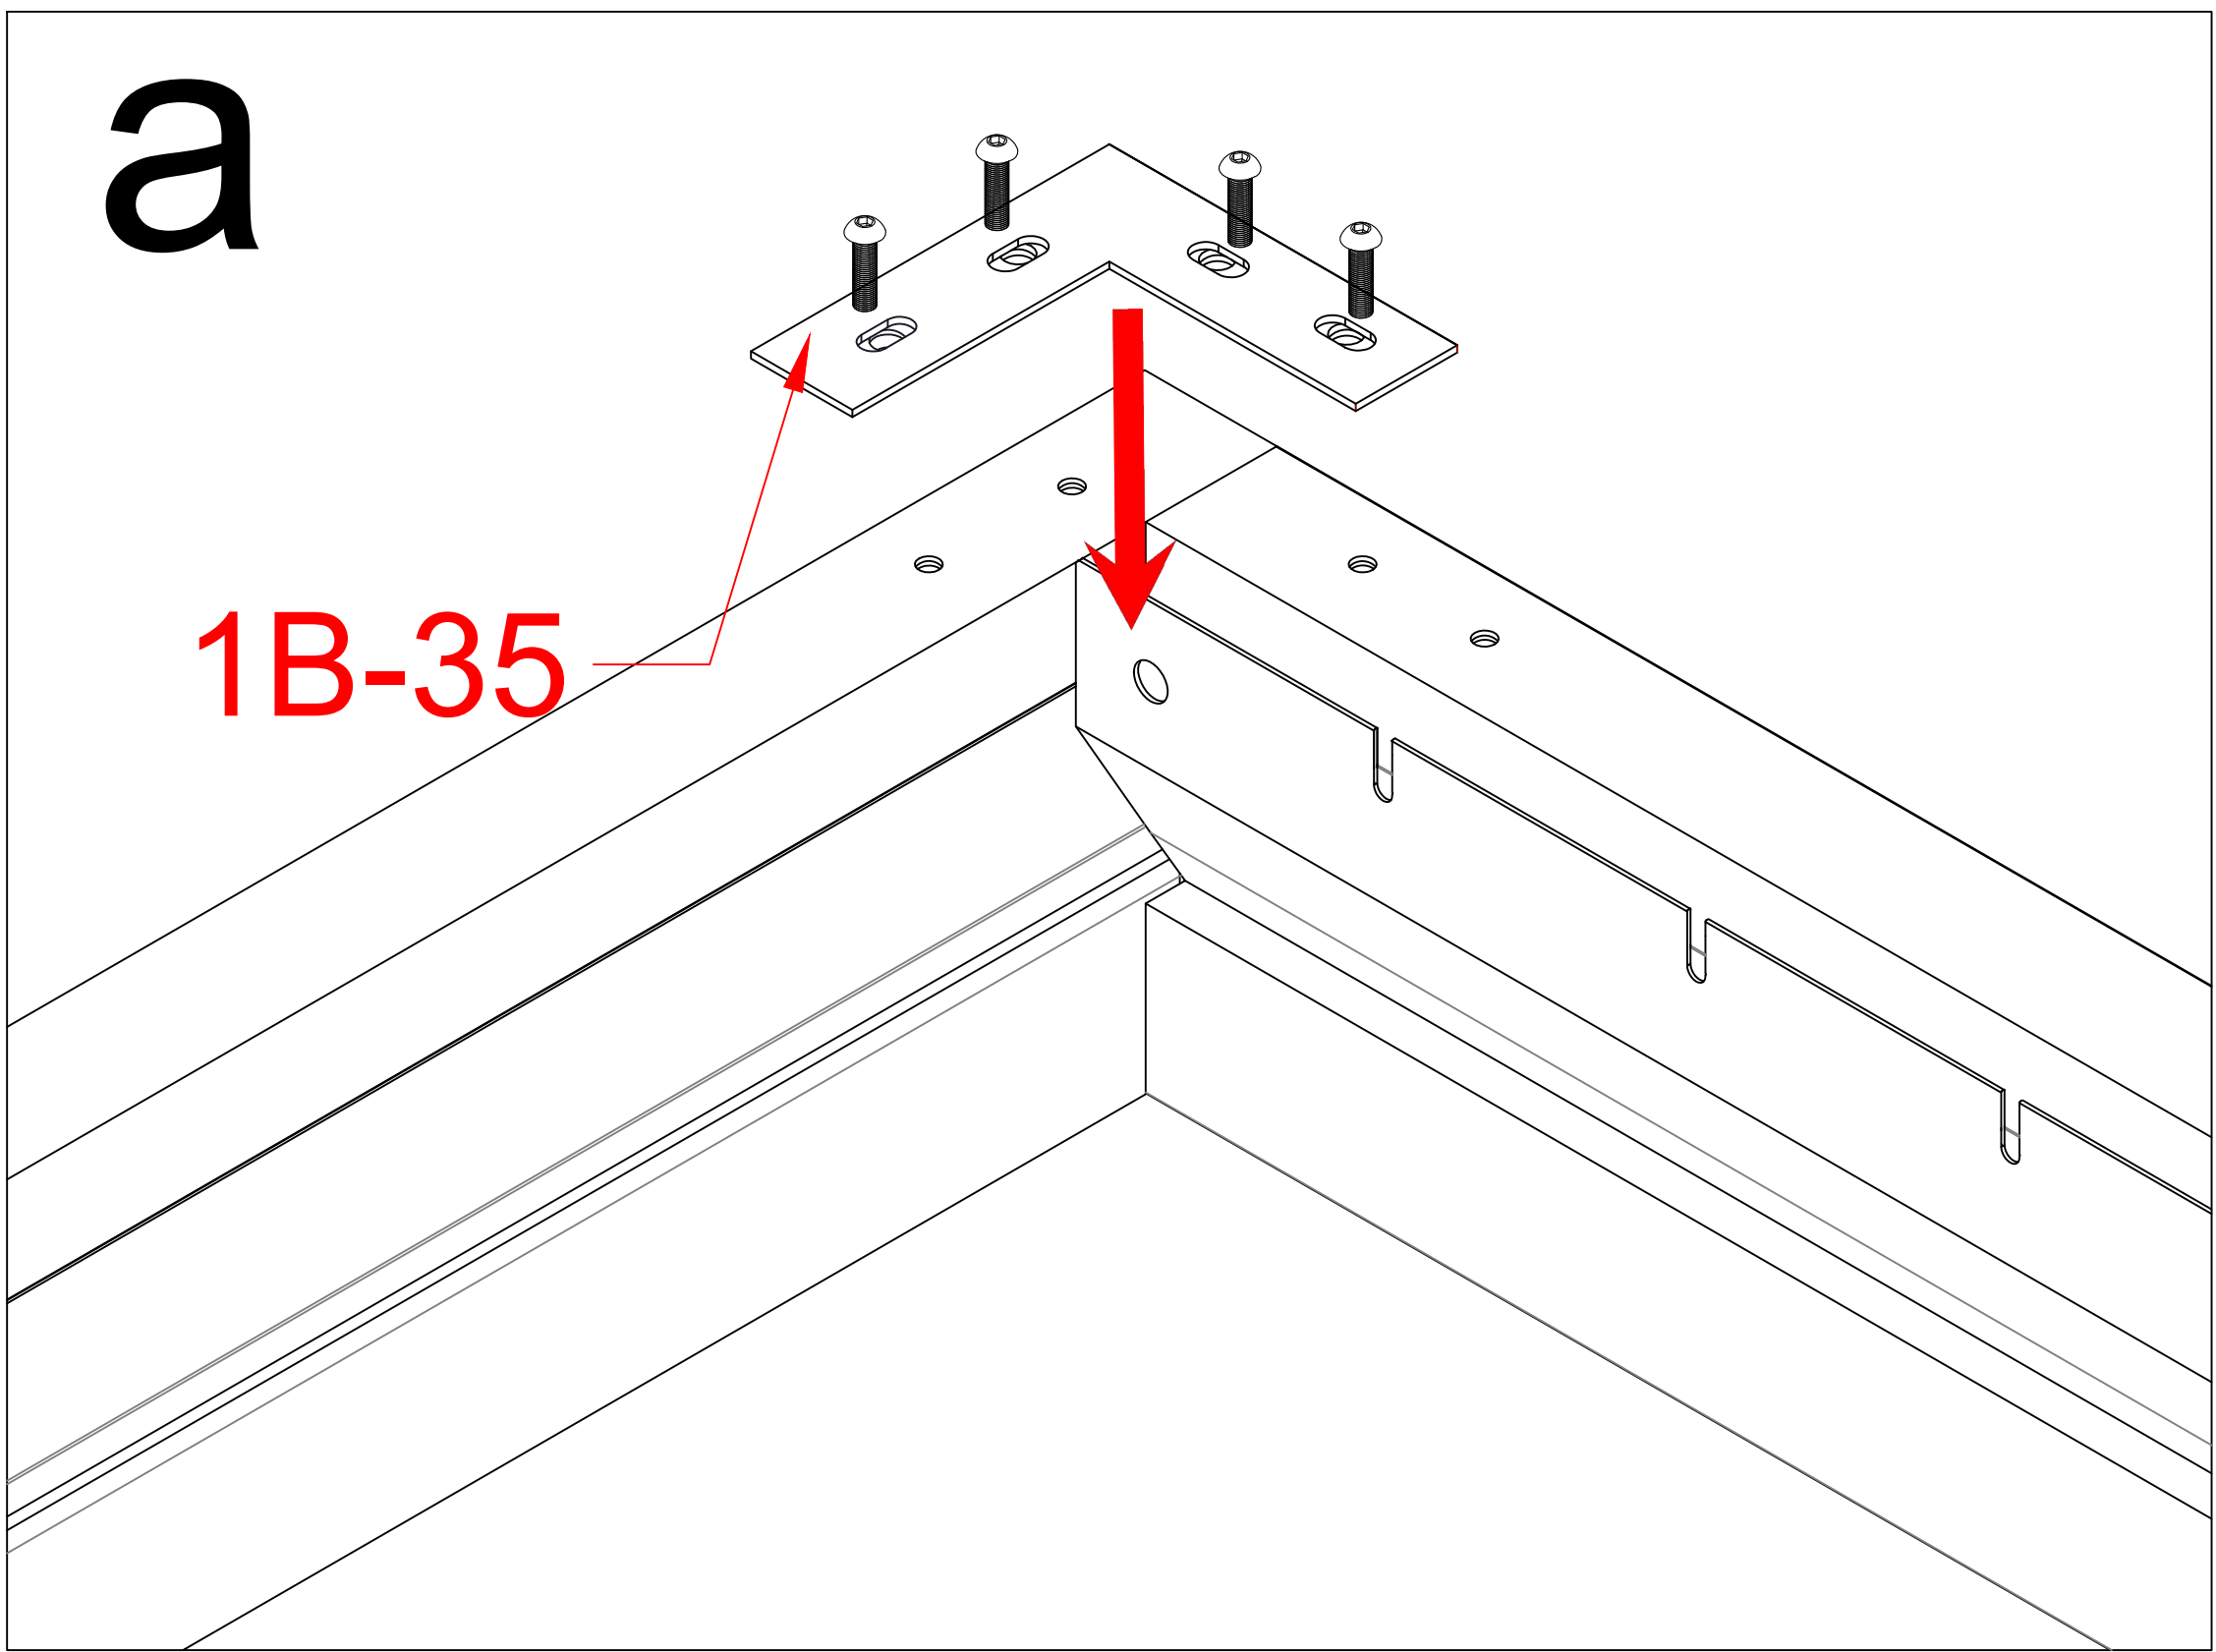


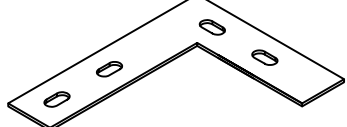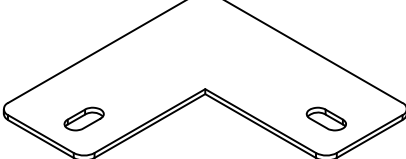
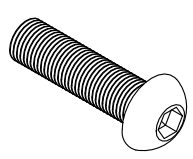
1B-35		2
1B-11		2
1B-19		12

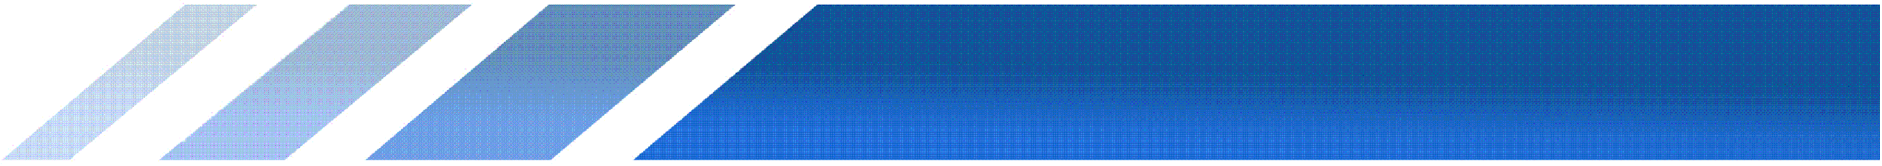

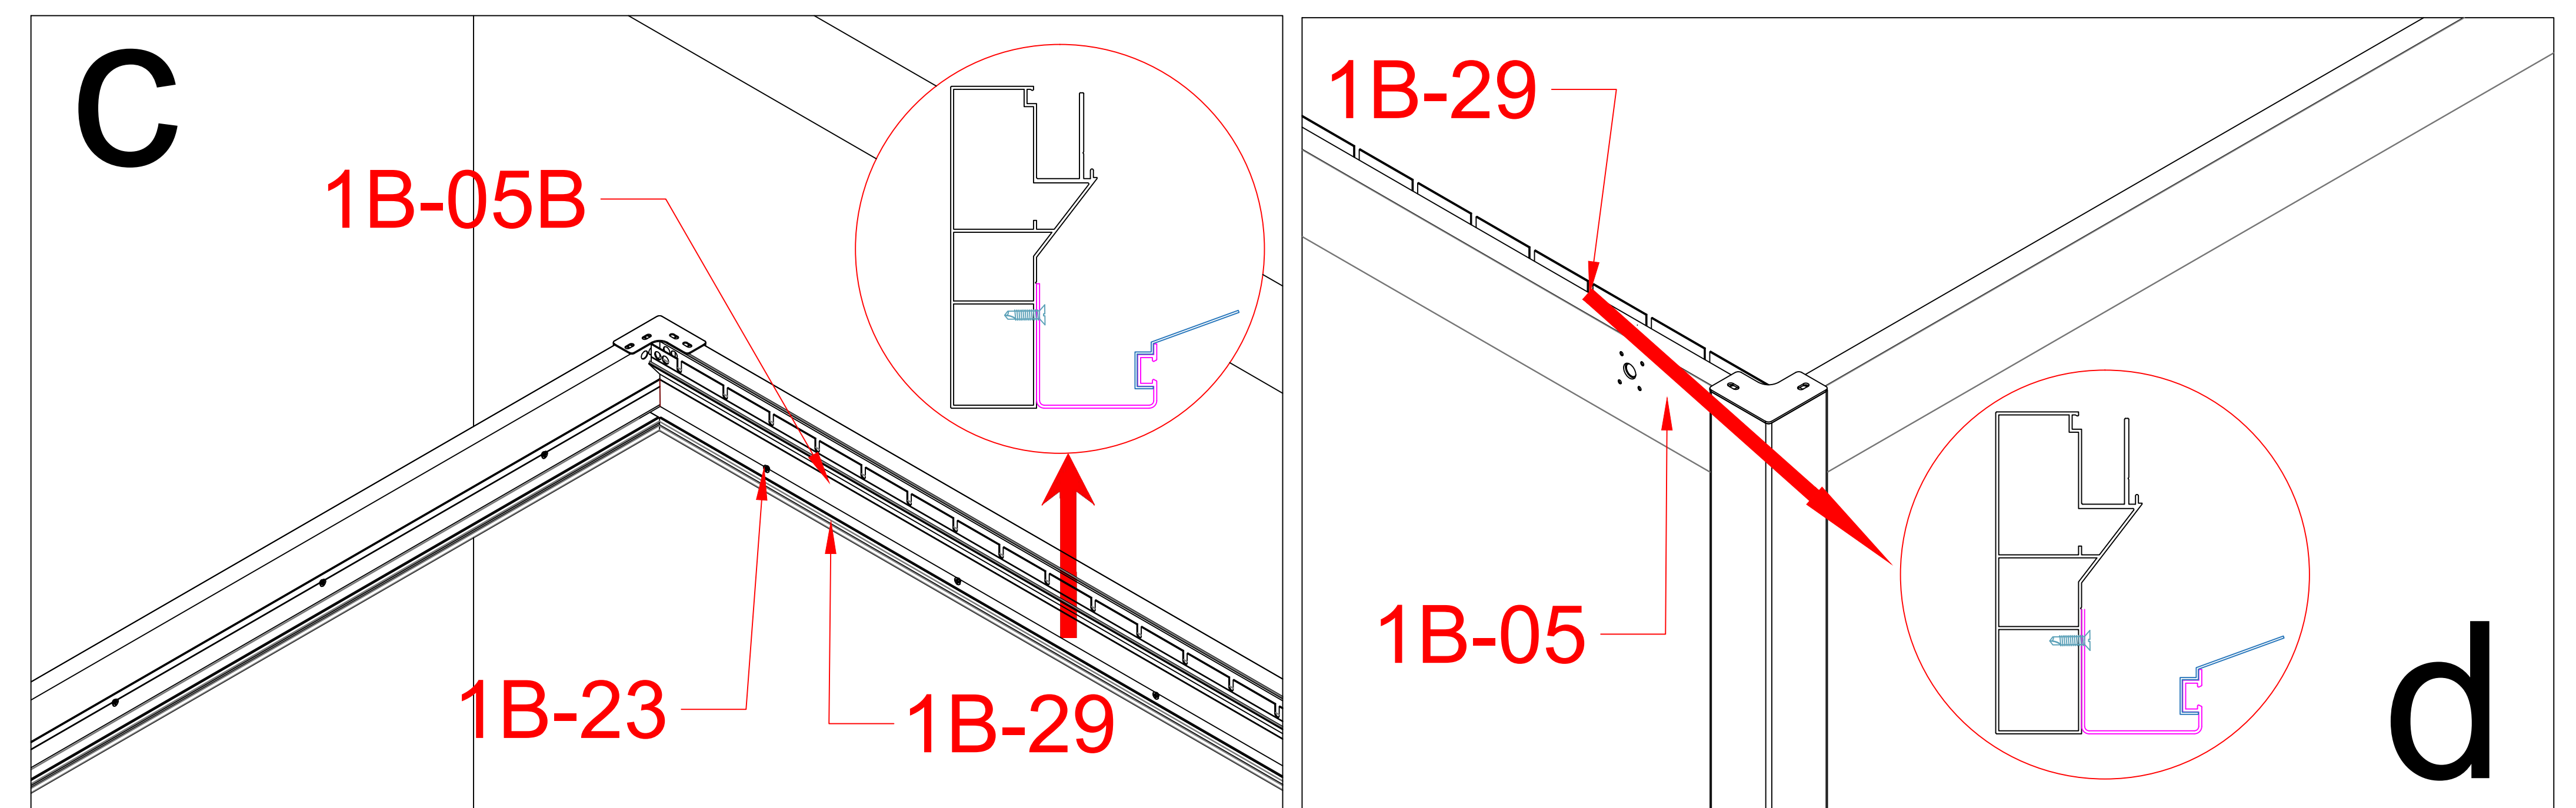
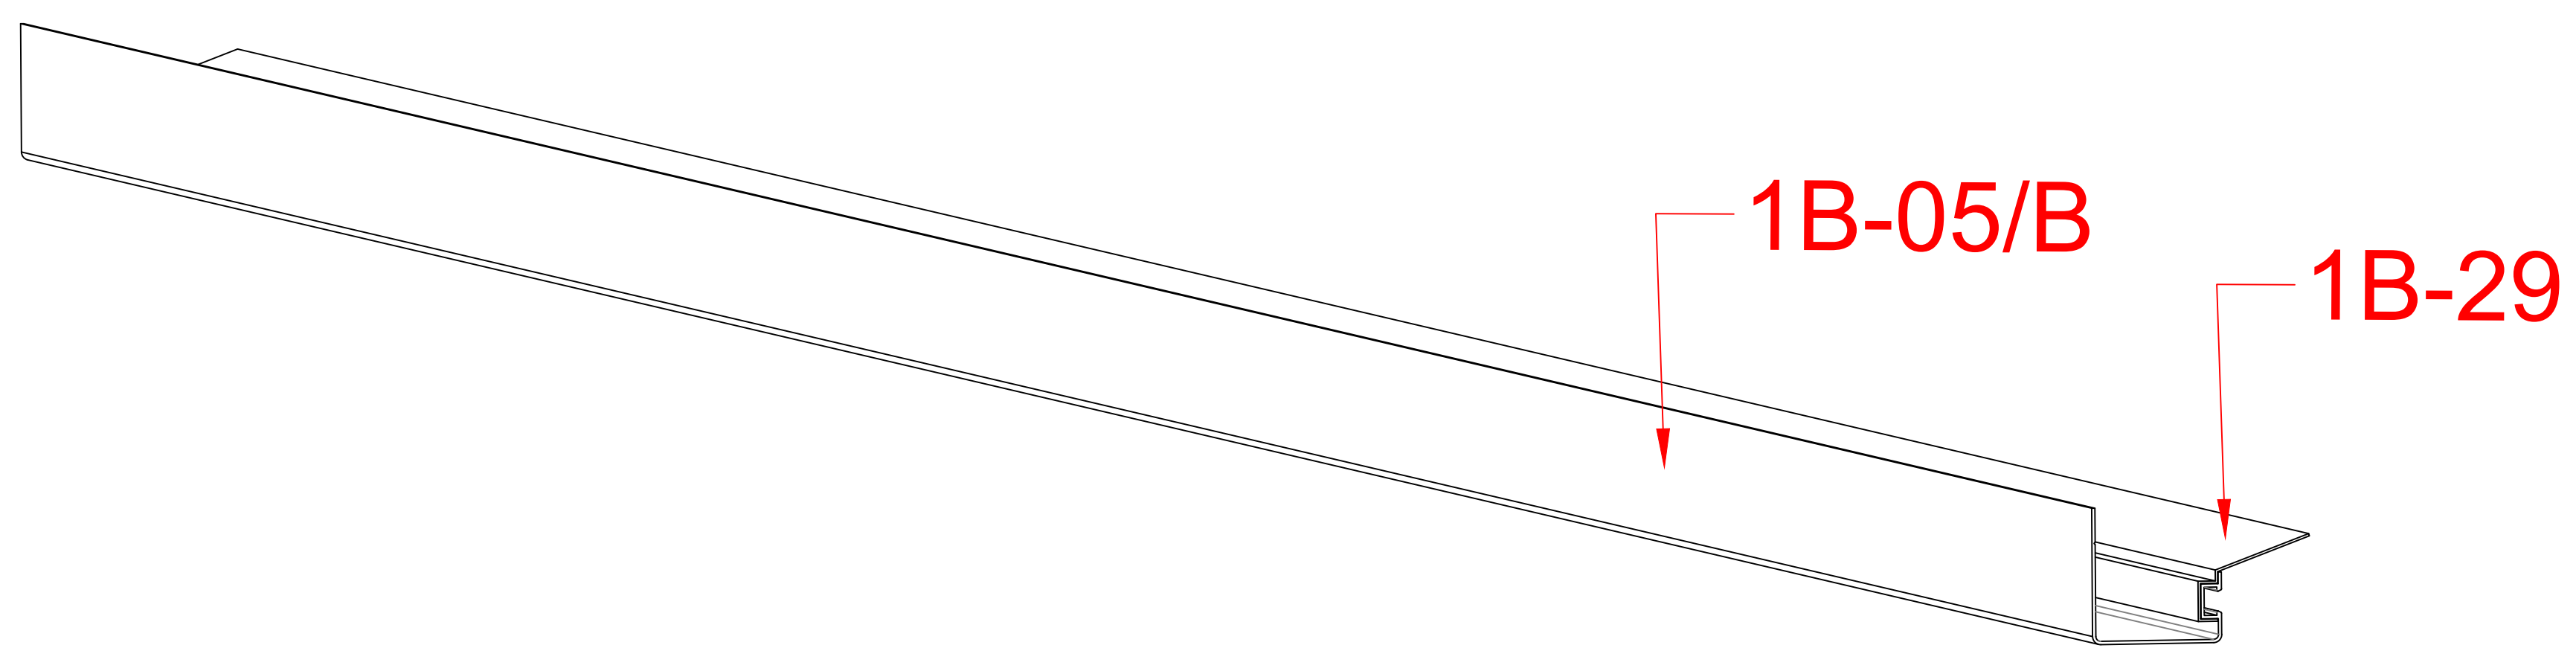
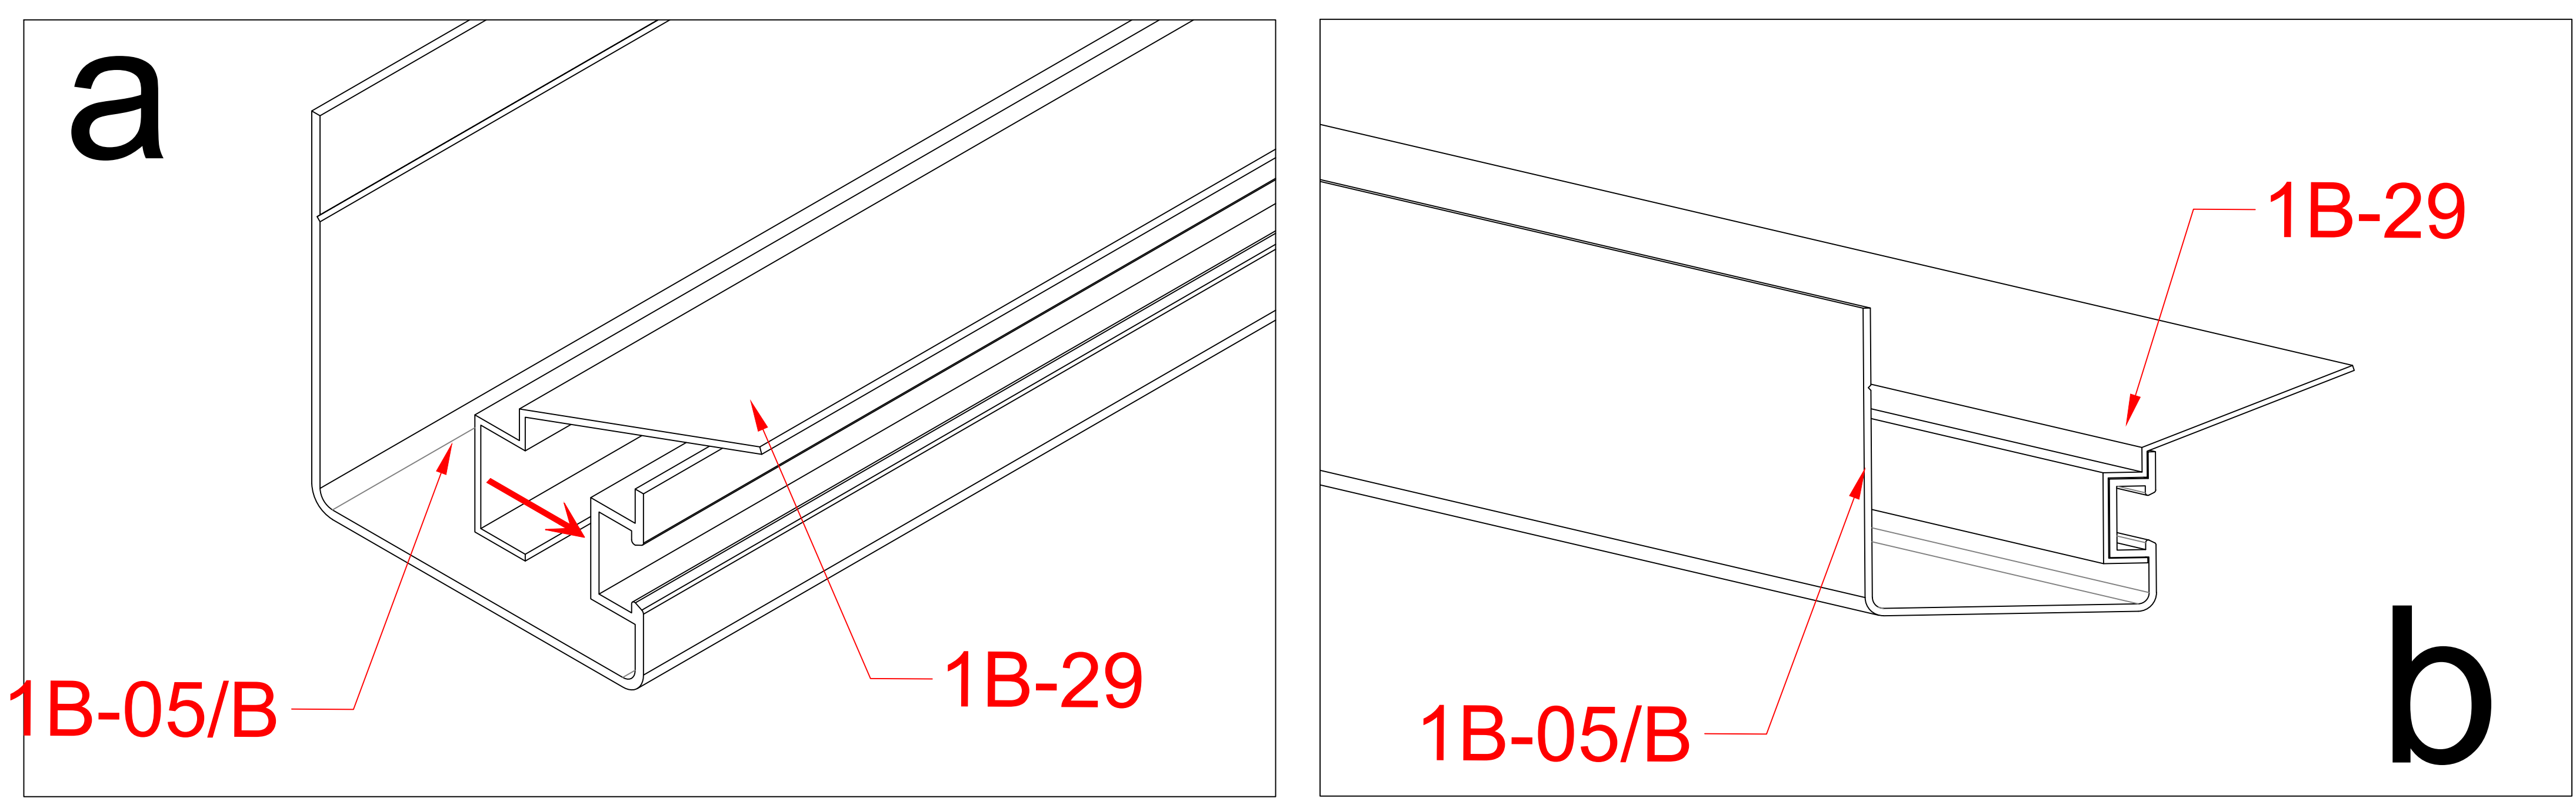


1B-23		10
1B-05B		1
1B-05		1
1B-29		2


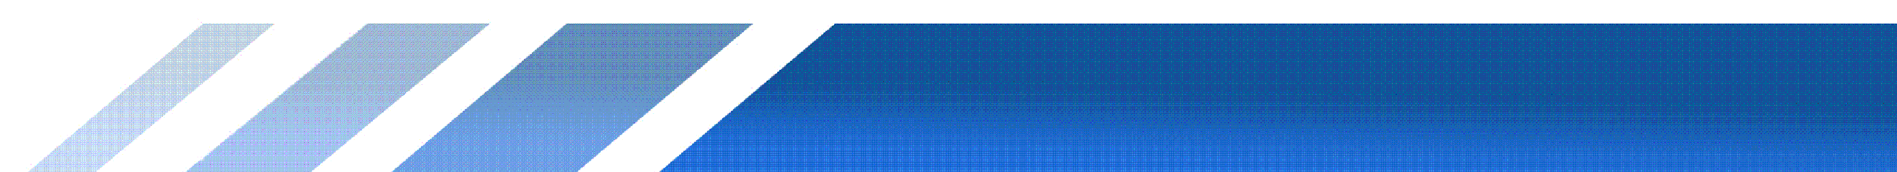


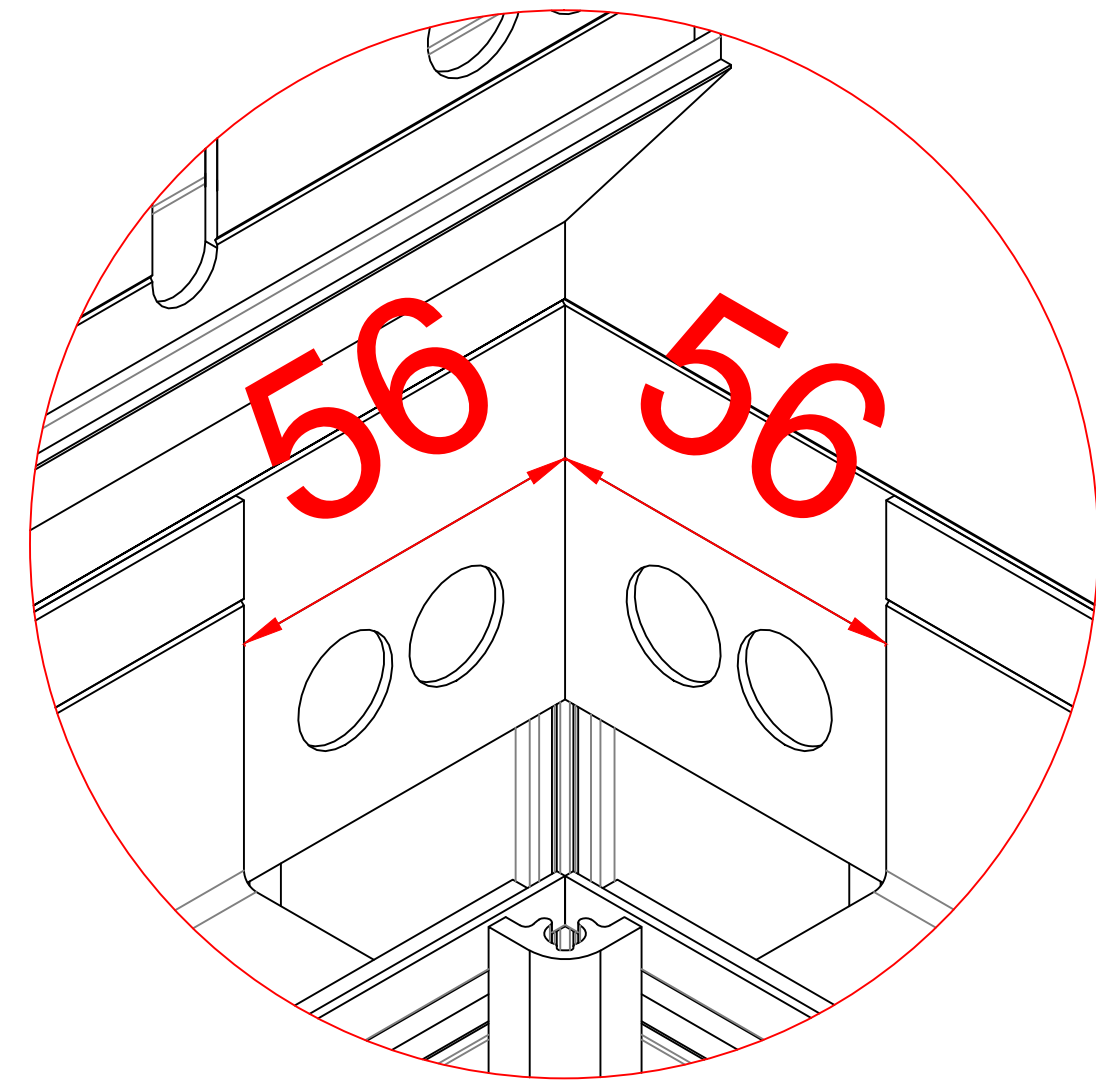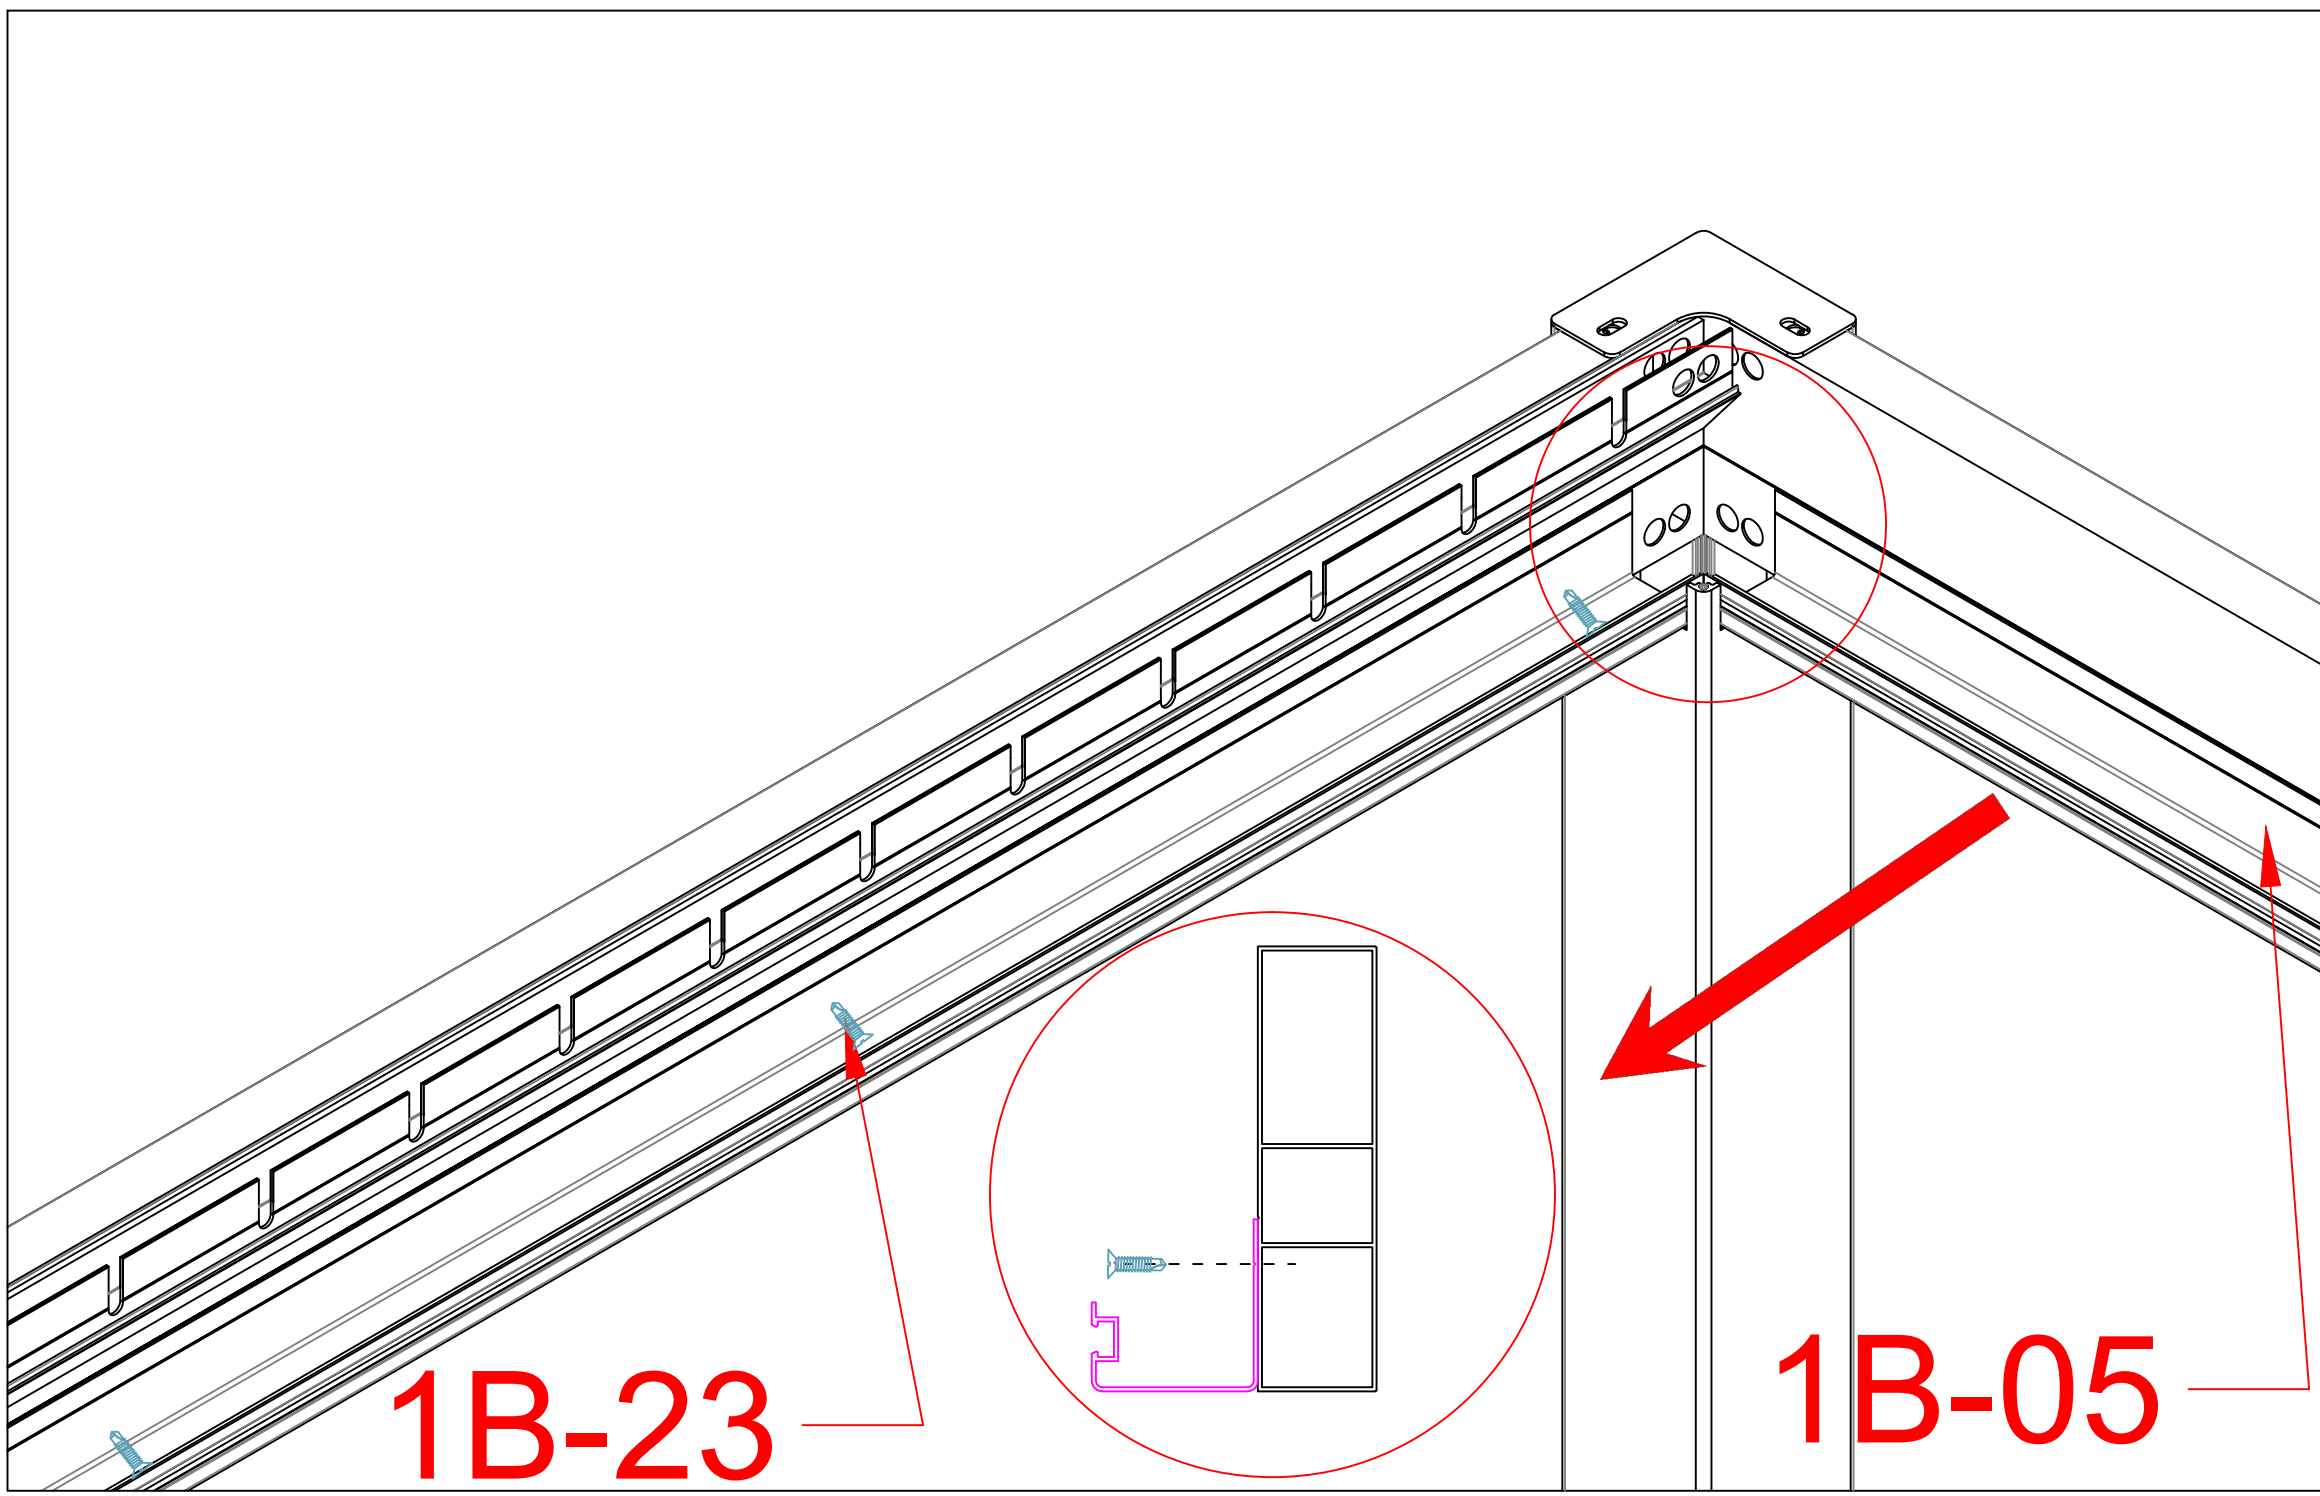





Warning:
Before installation, tear off the protective film of the tape on the back side of Gutter.

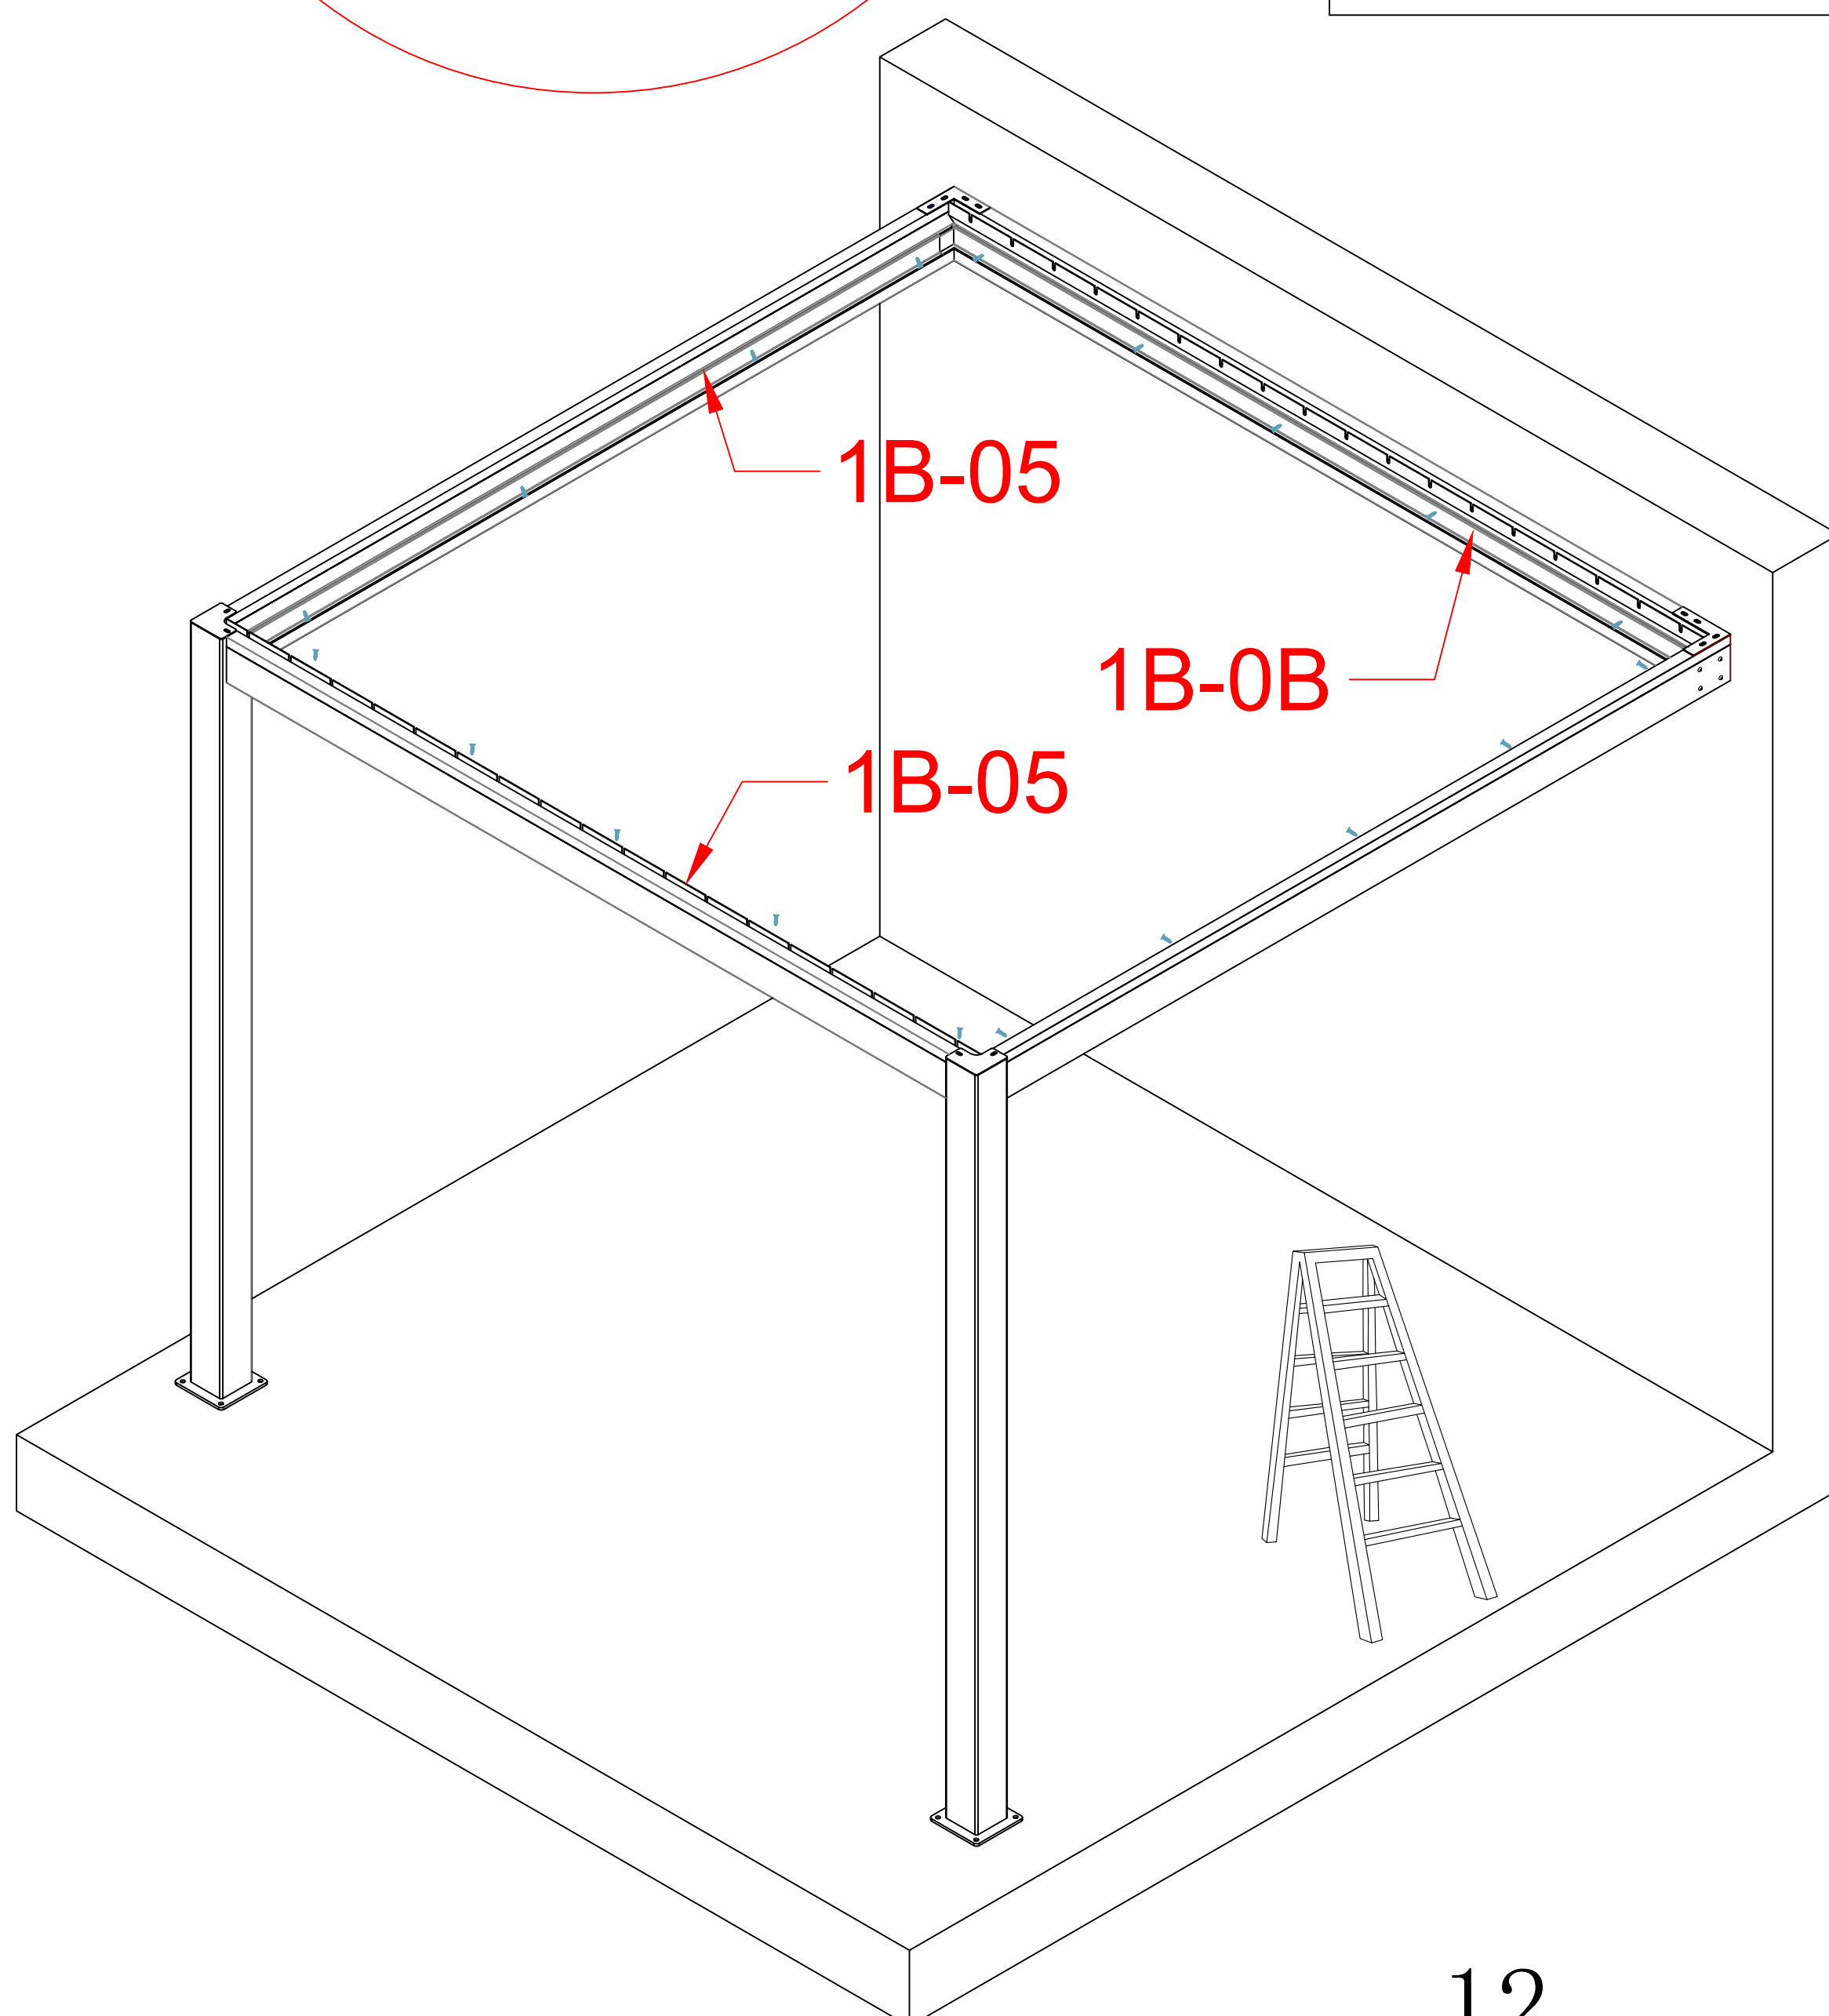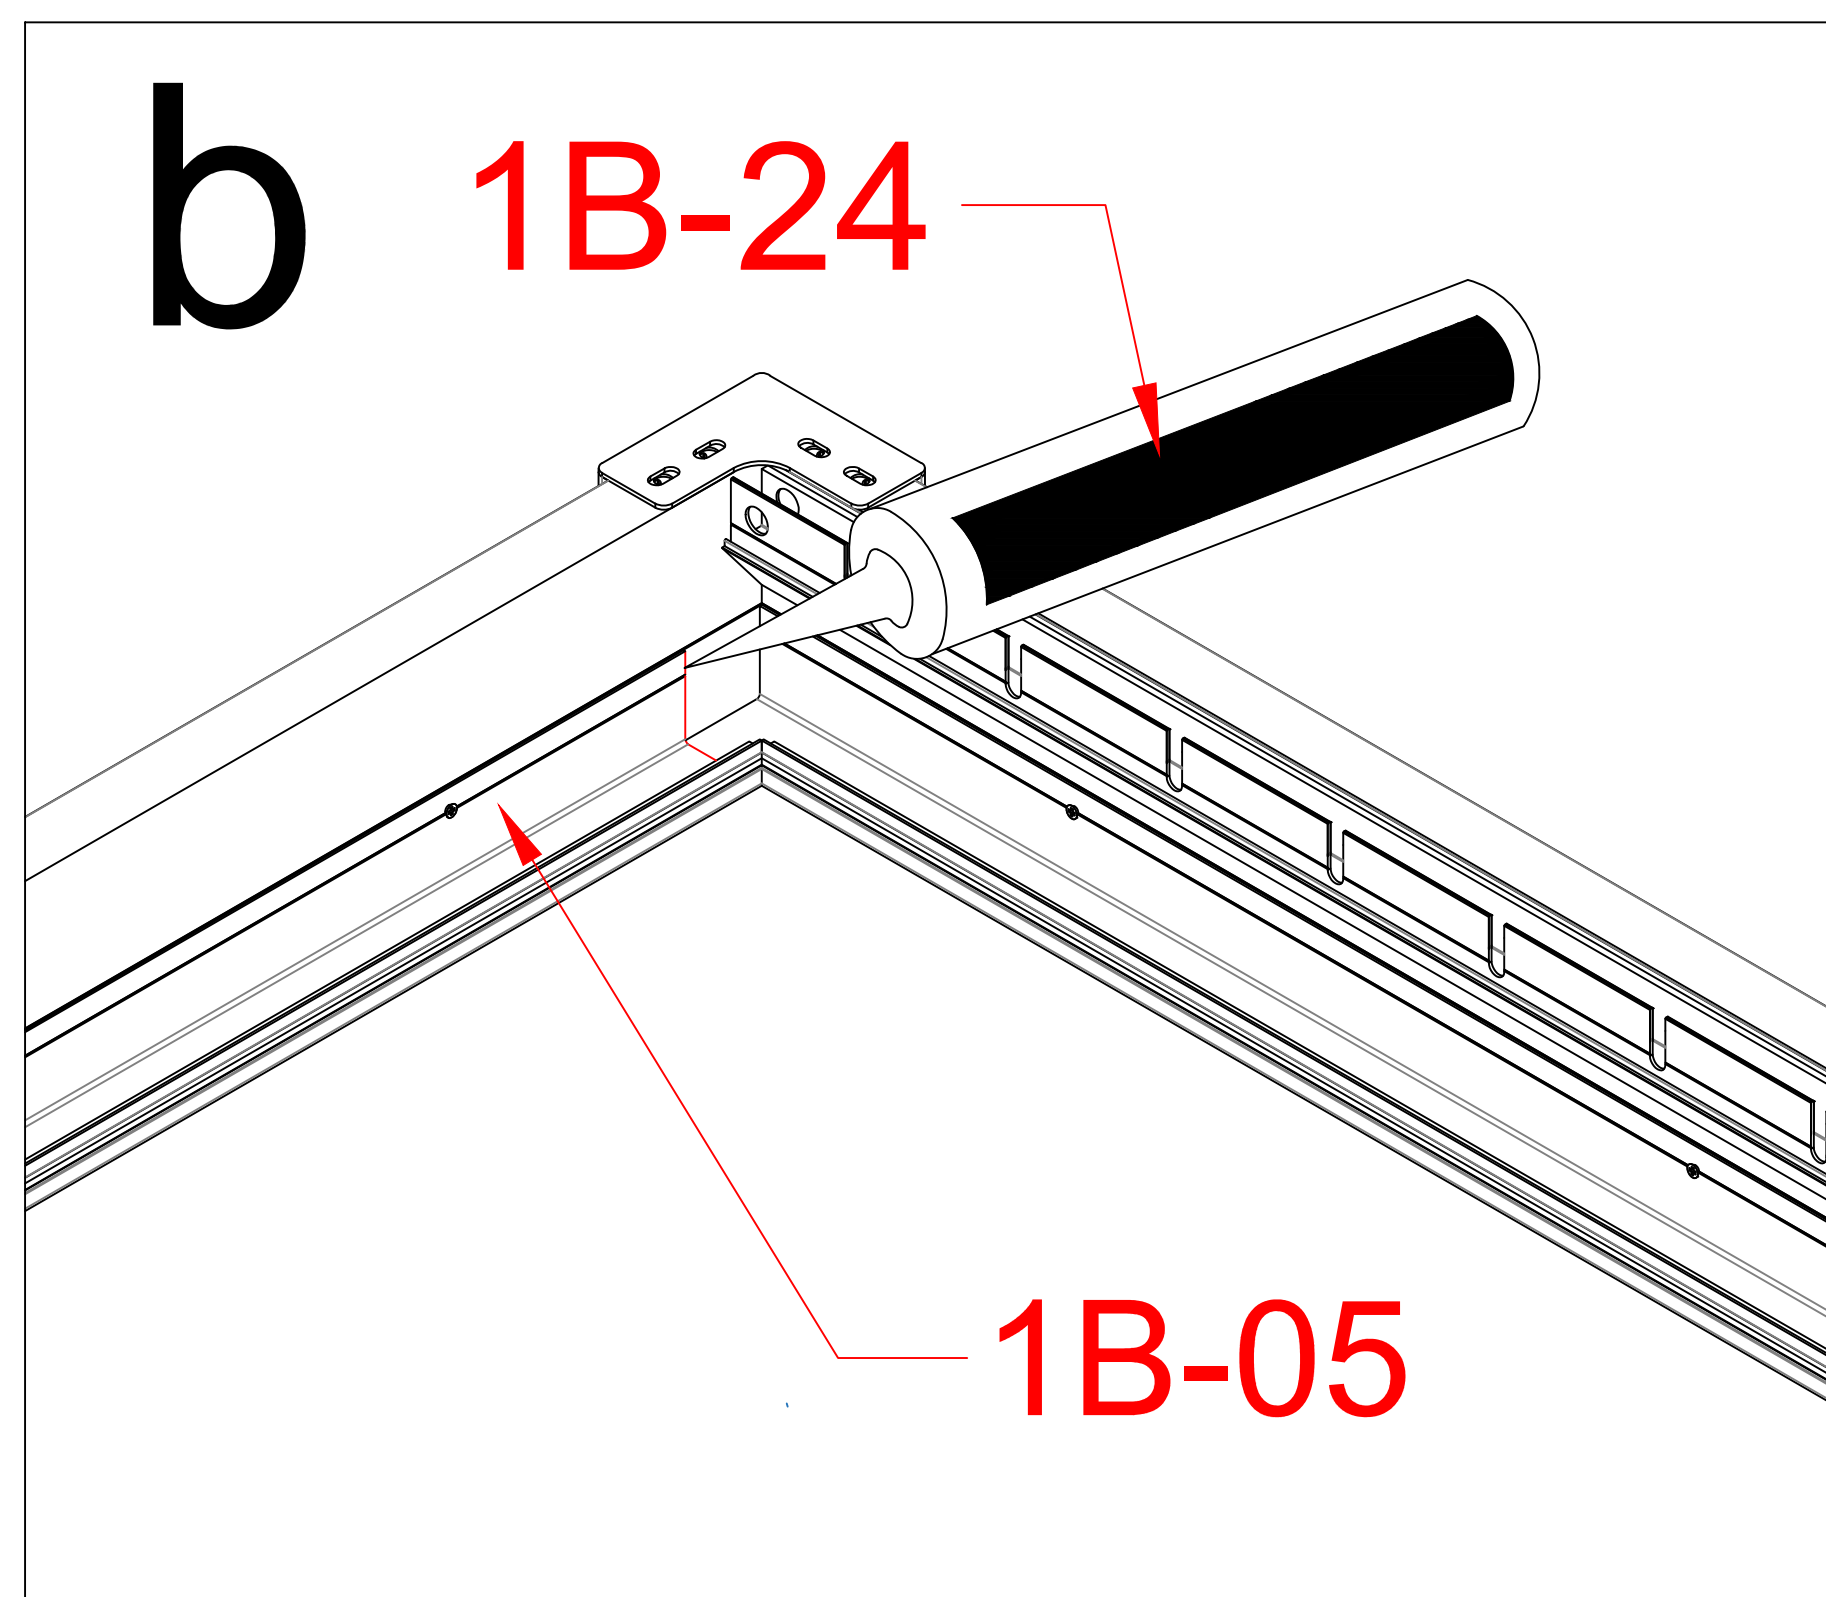
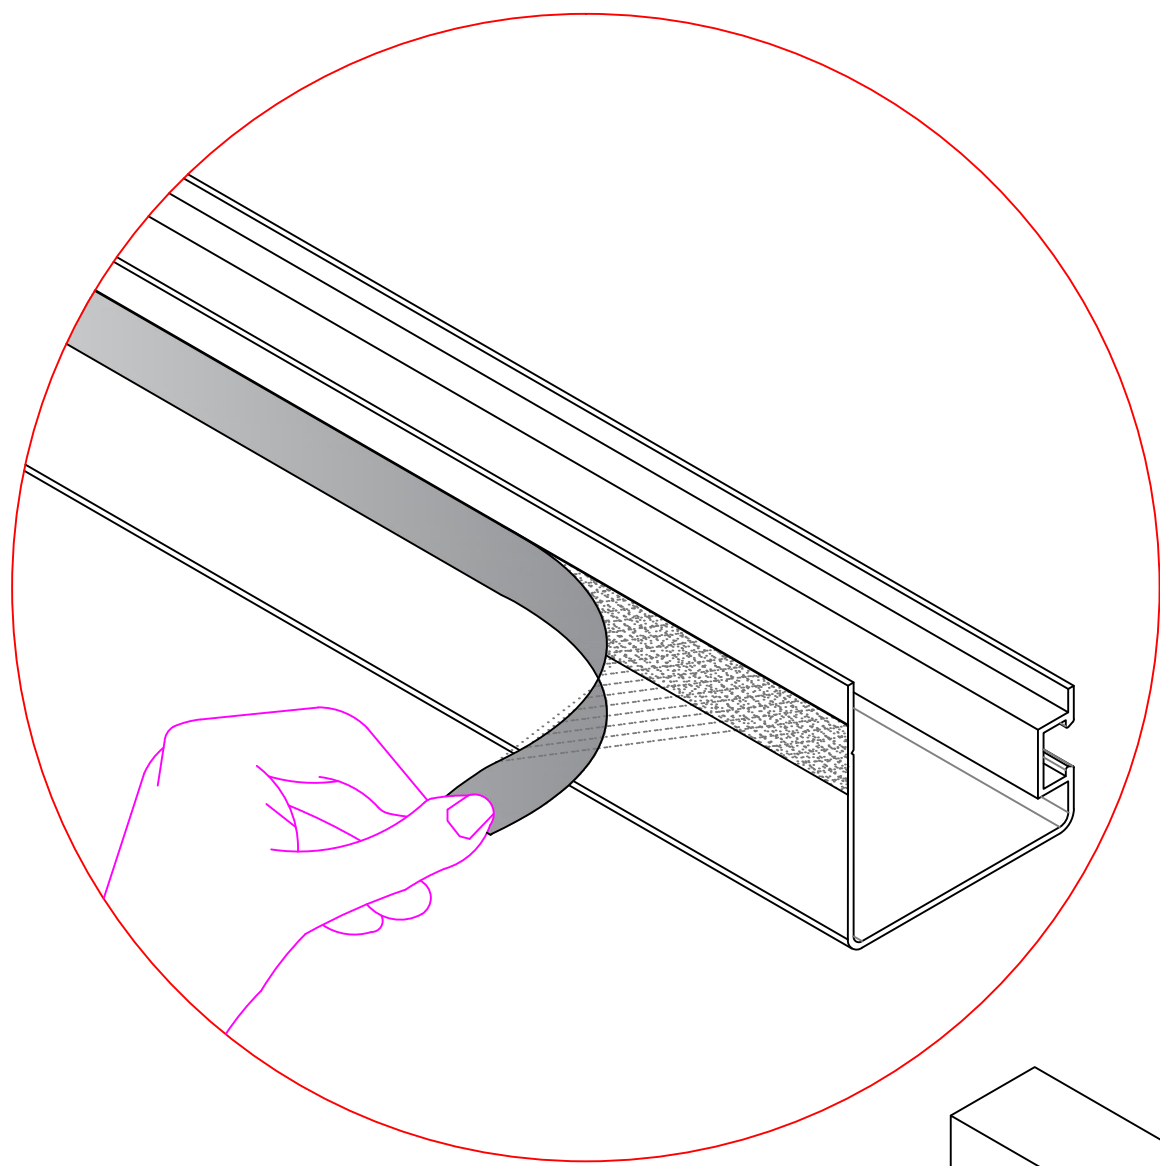



4screws/3m side
5screws/4m side


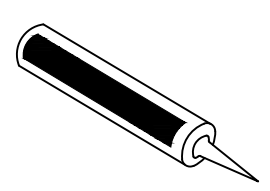
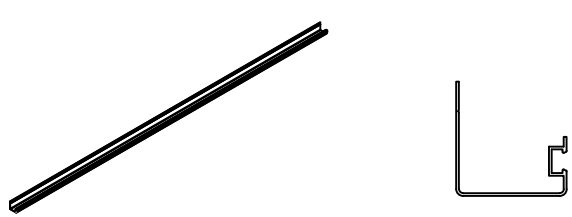
1B-24		1
1B-05		2
1B-23		8

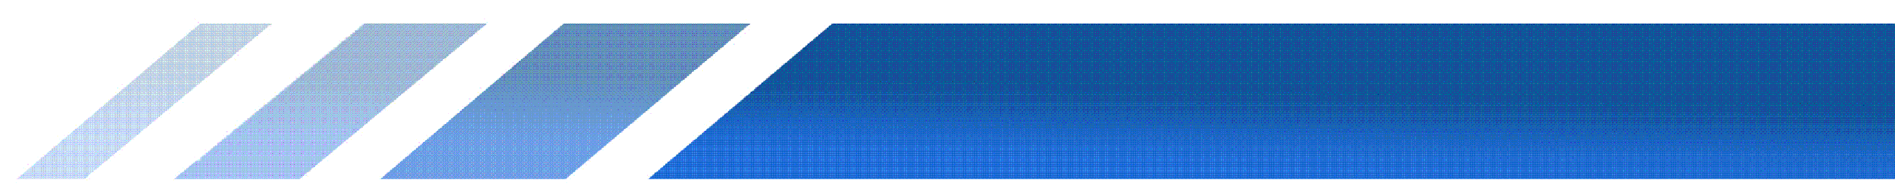

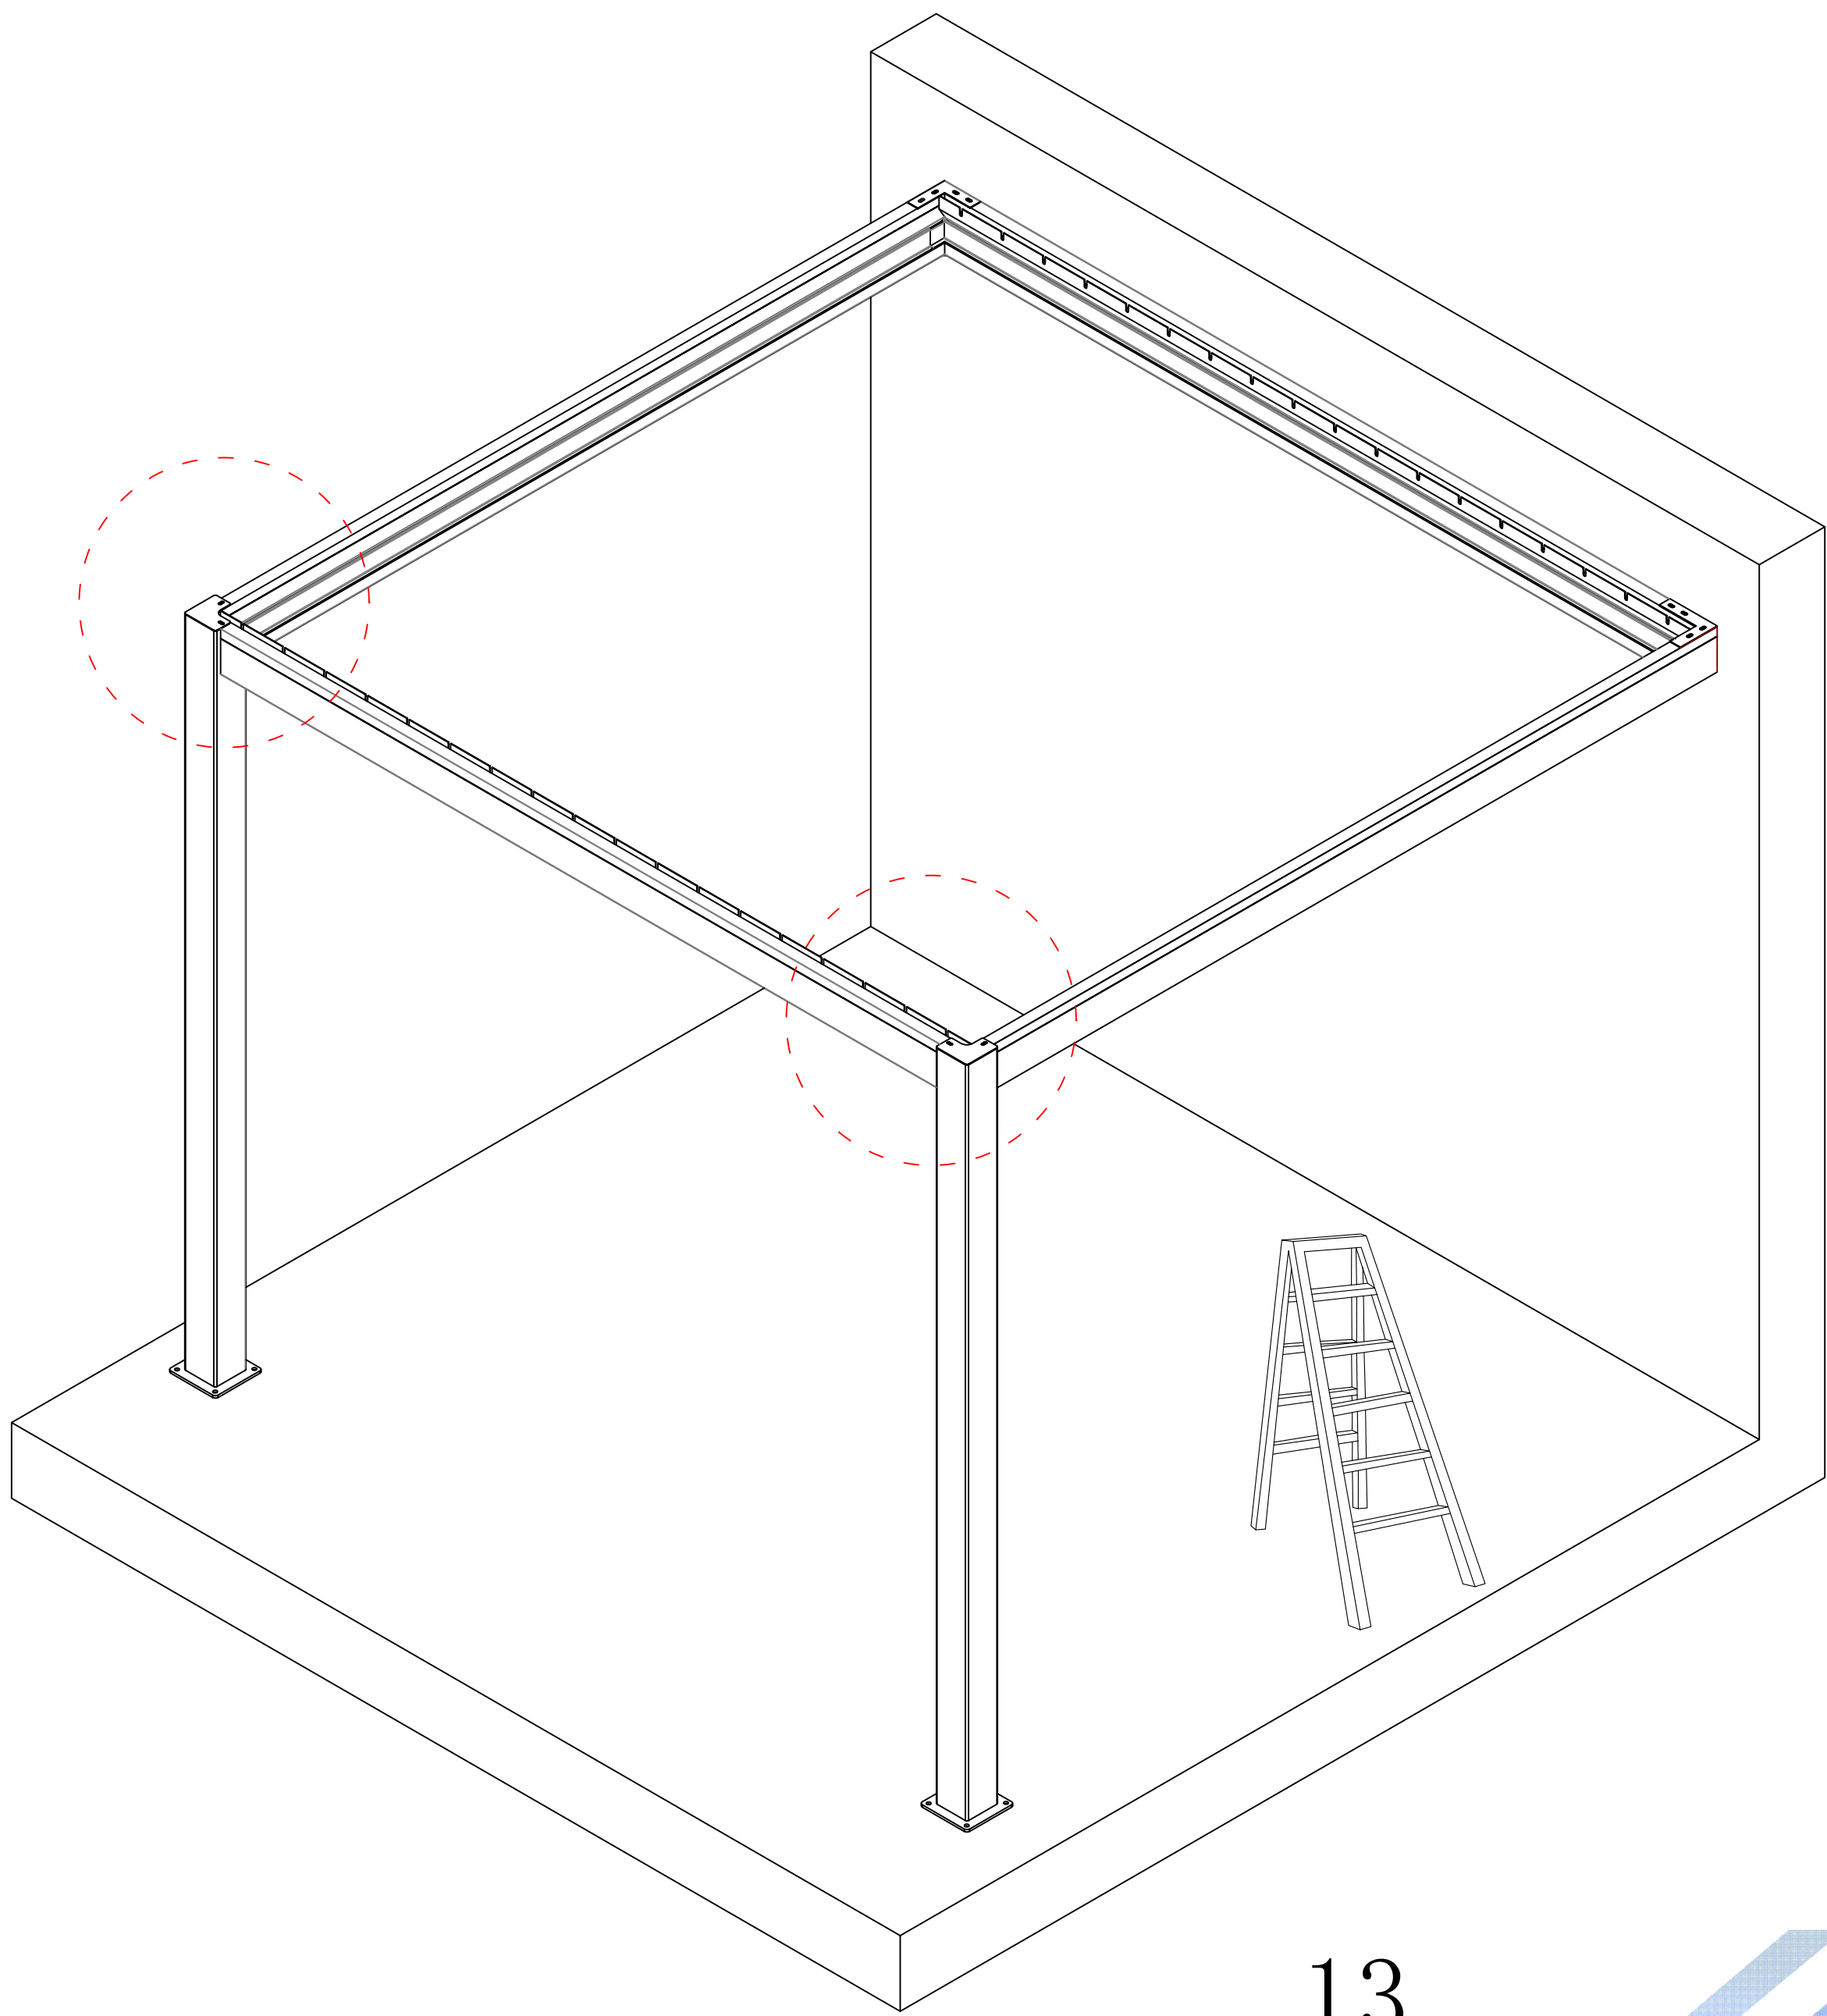
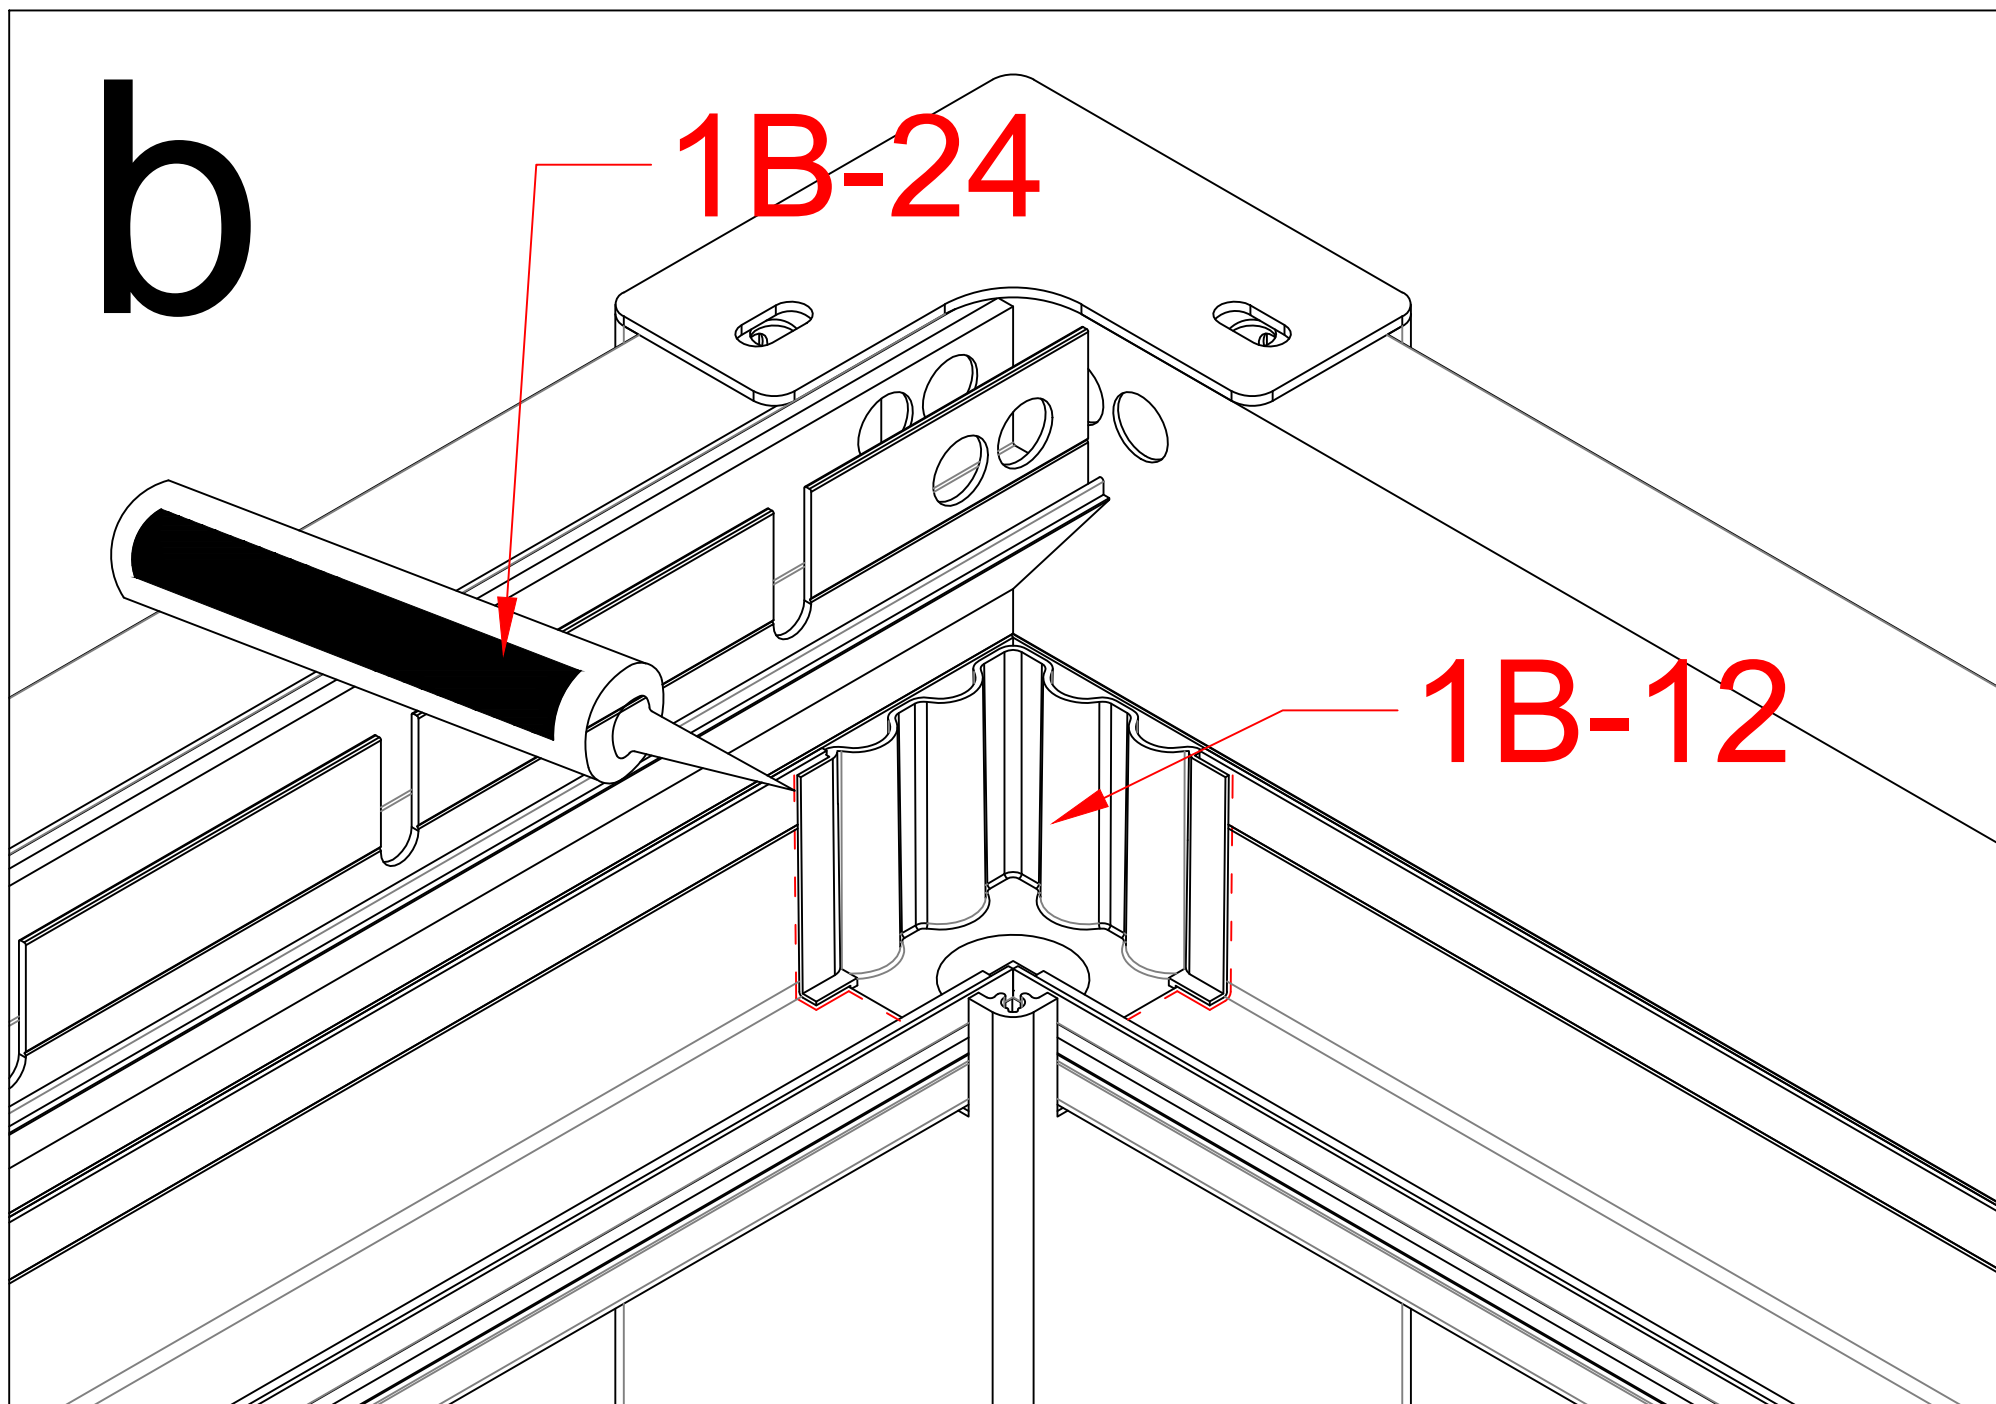
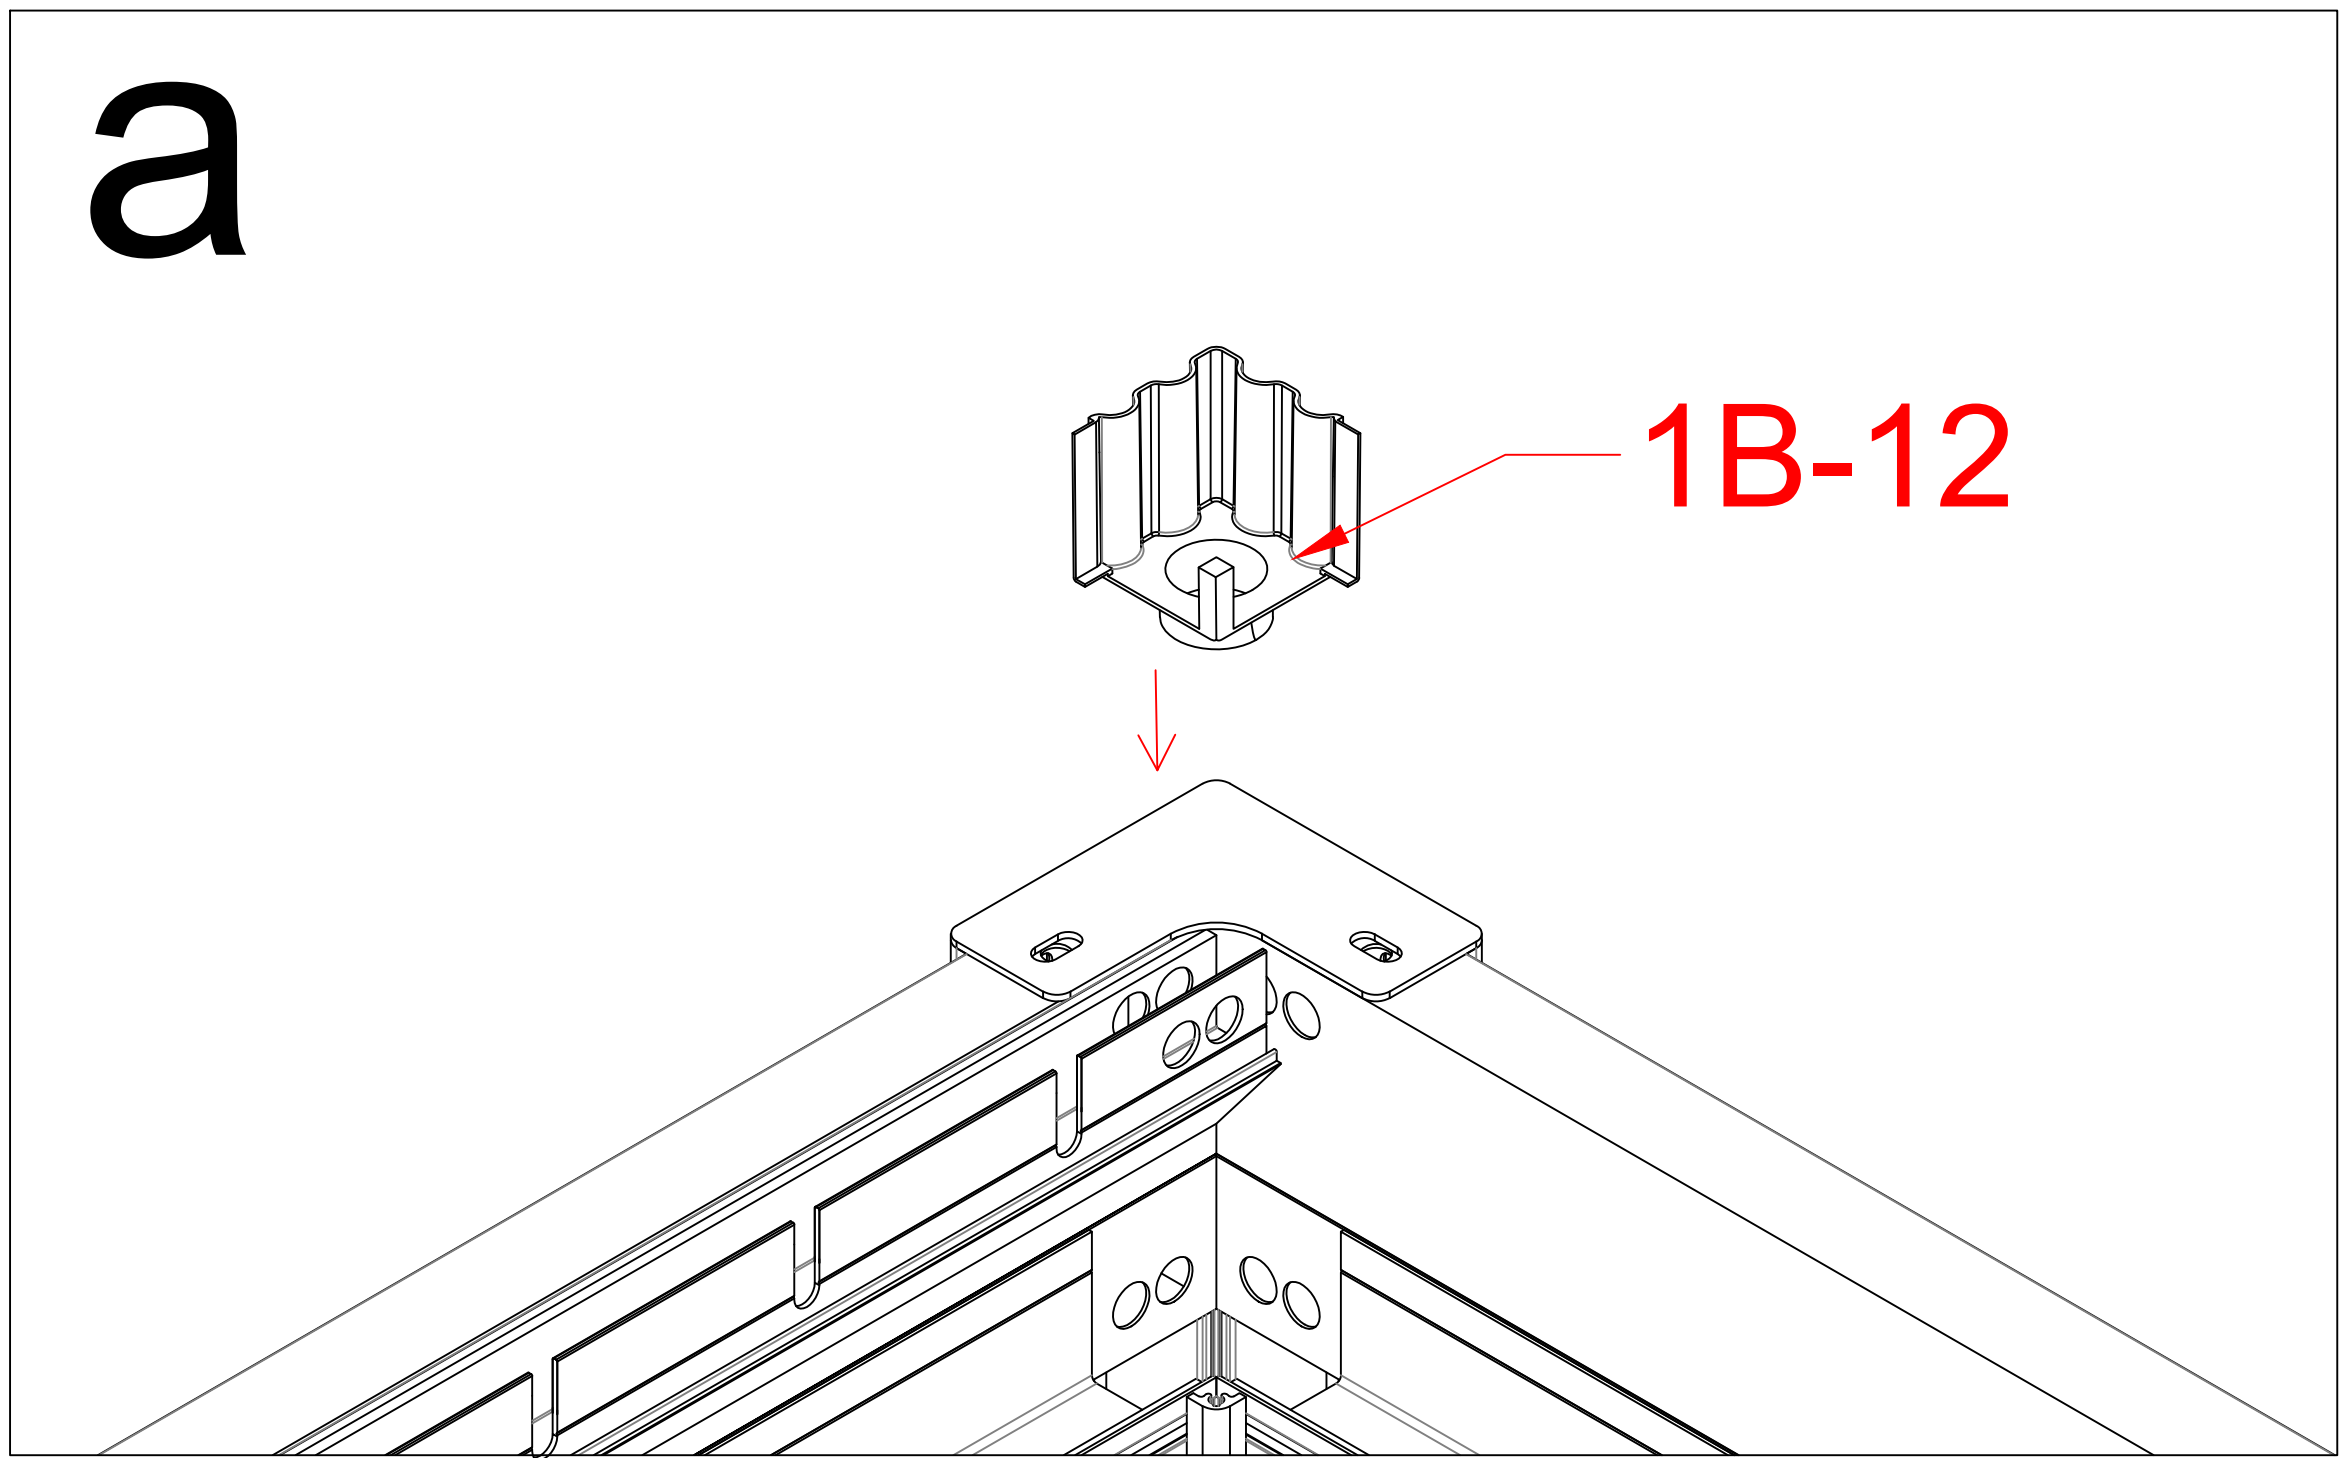


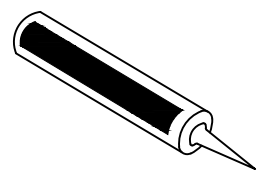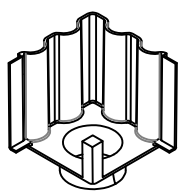
1B-24		1
1B-12		2





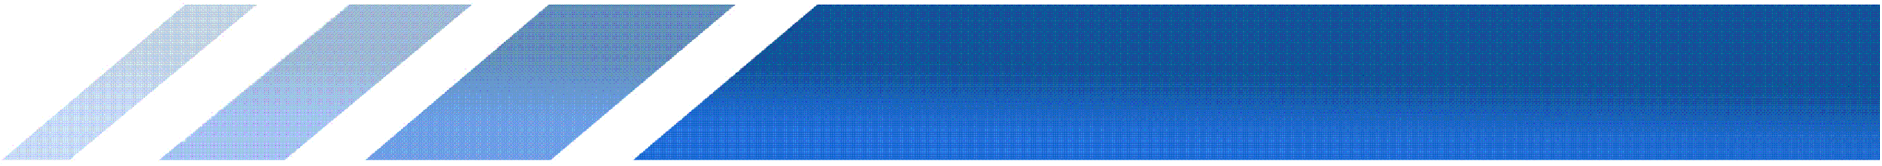


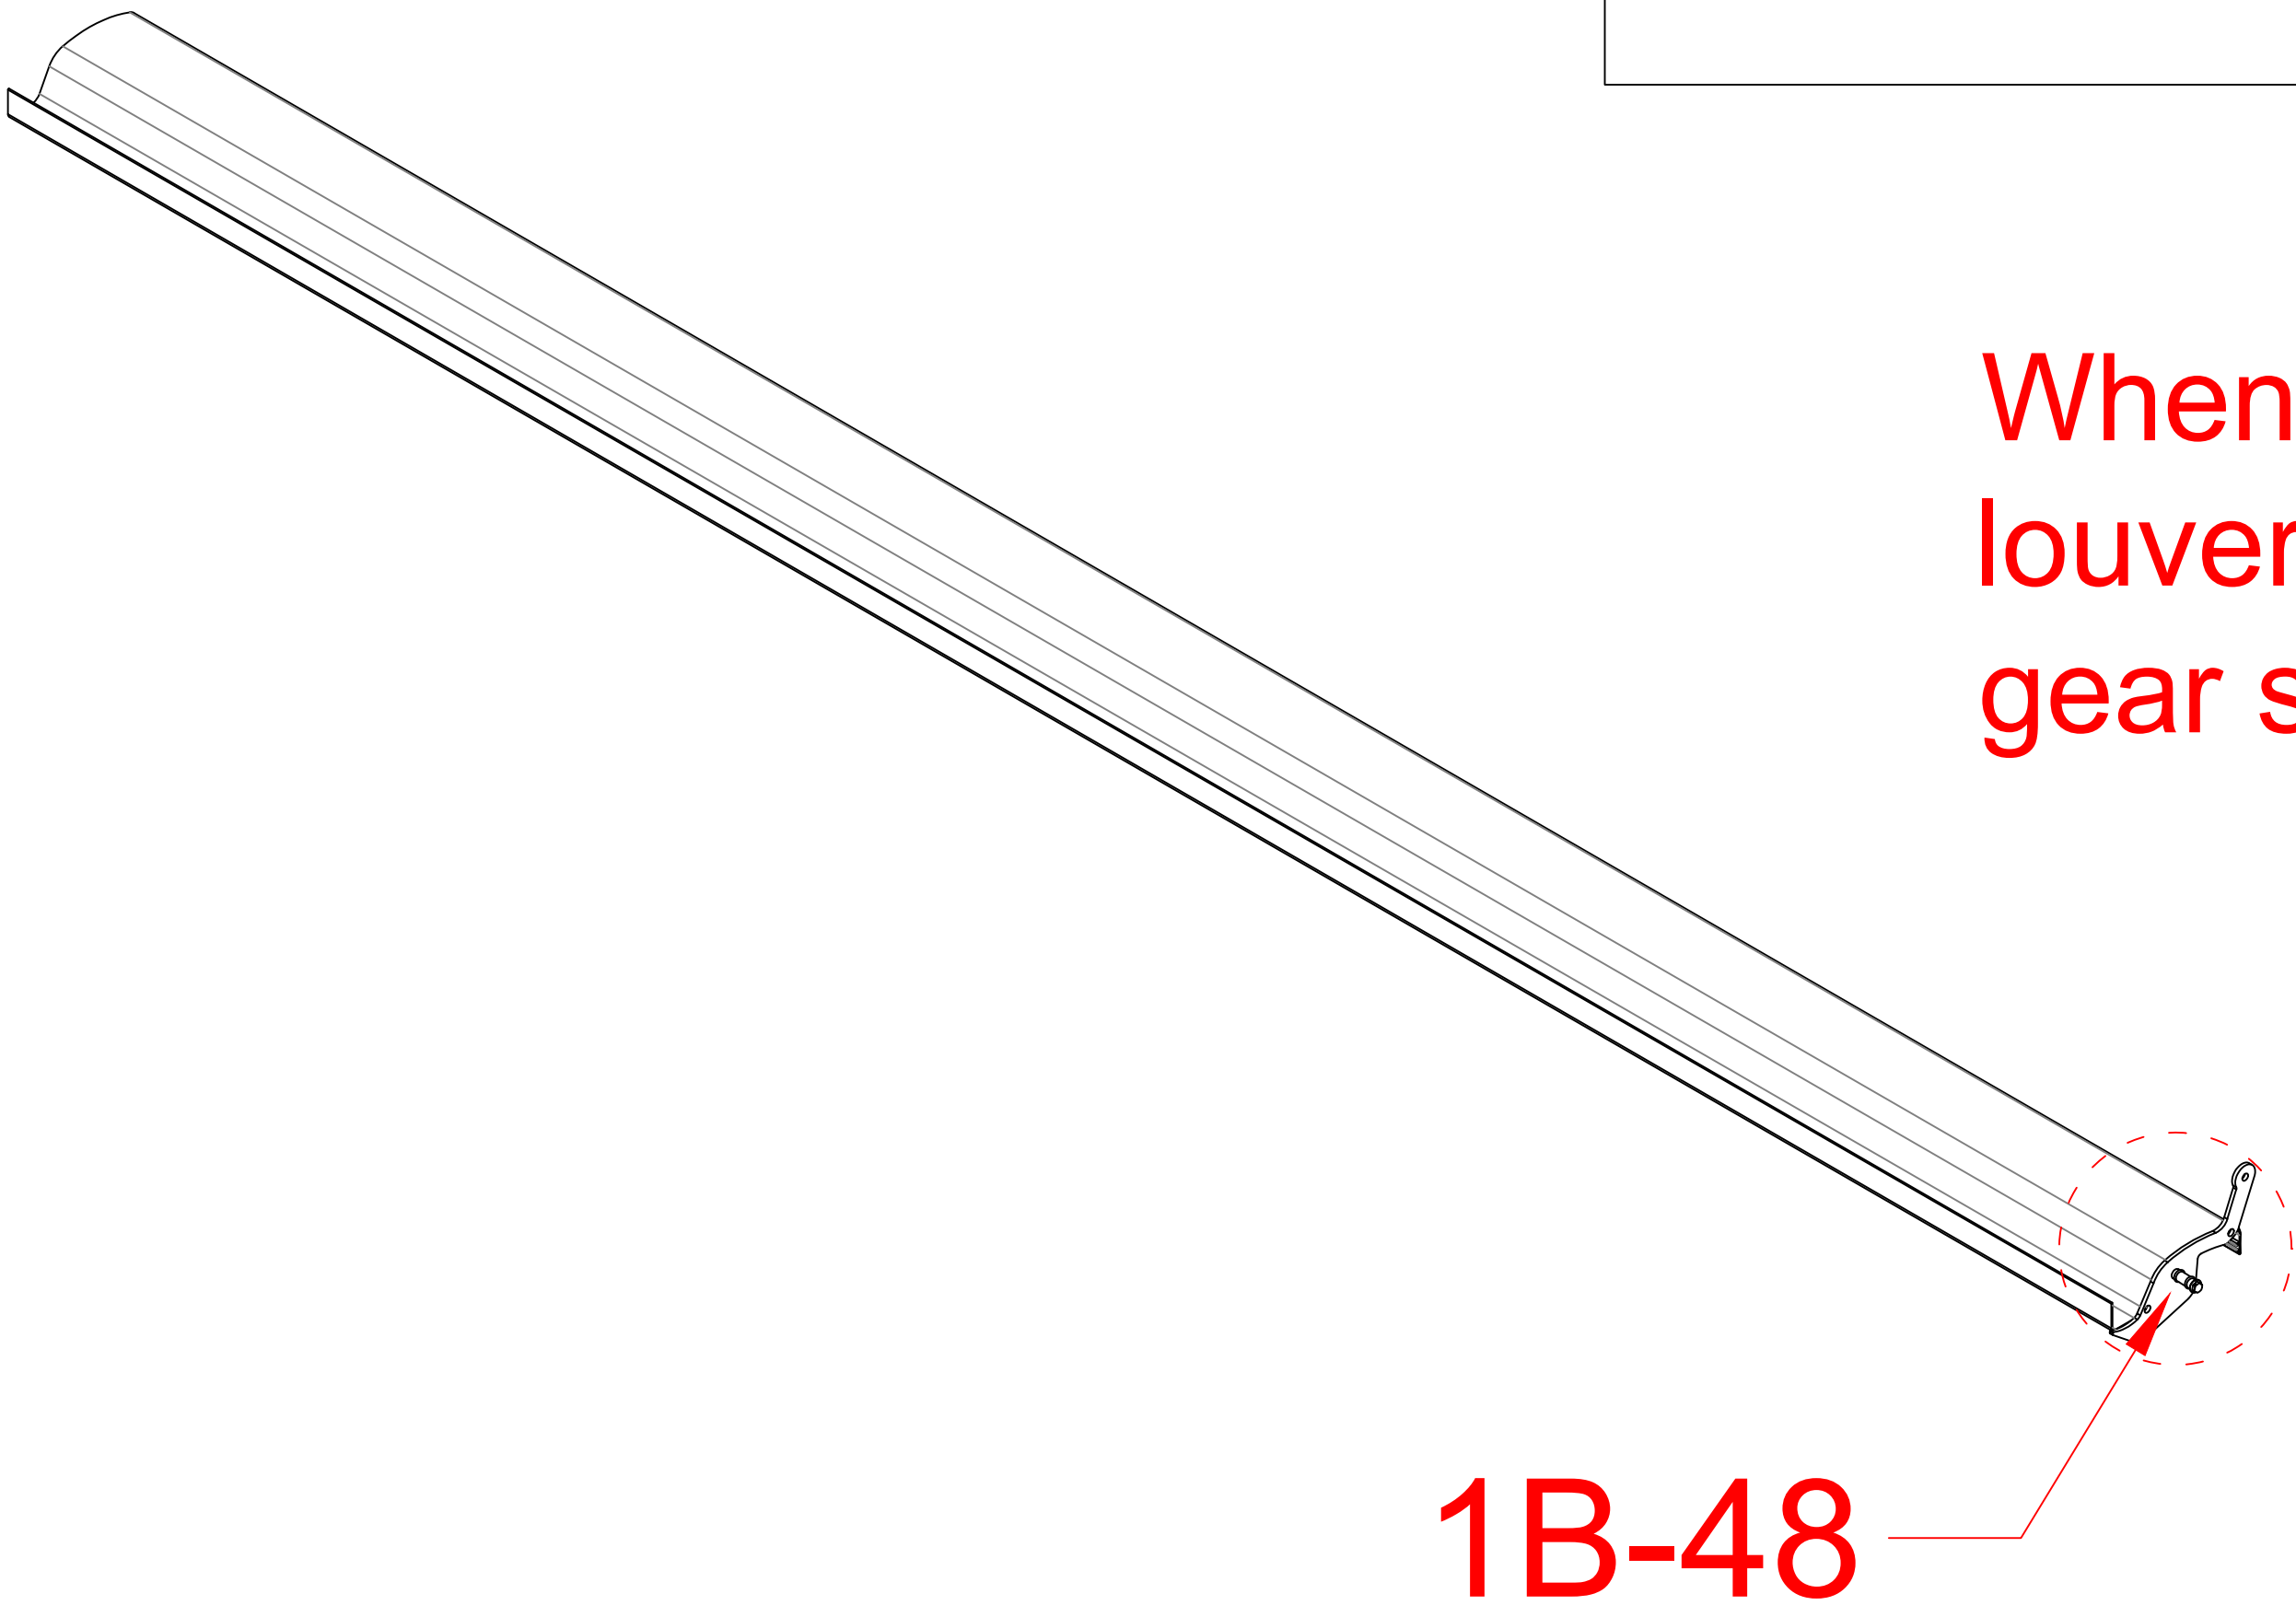
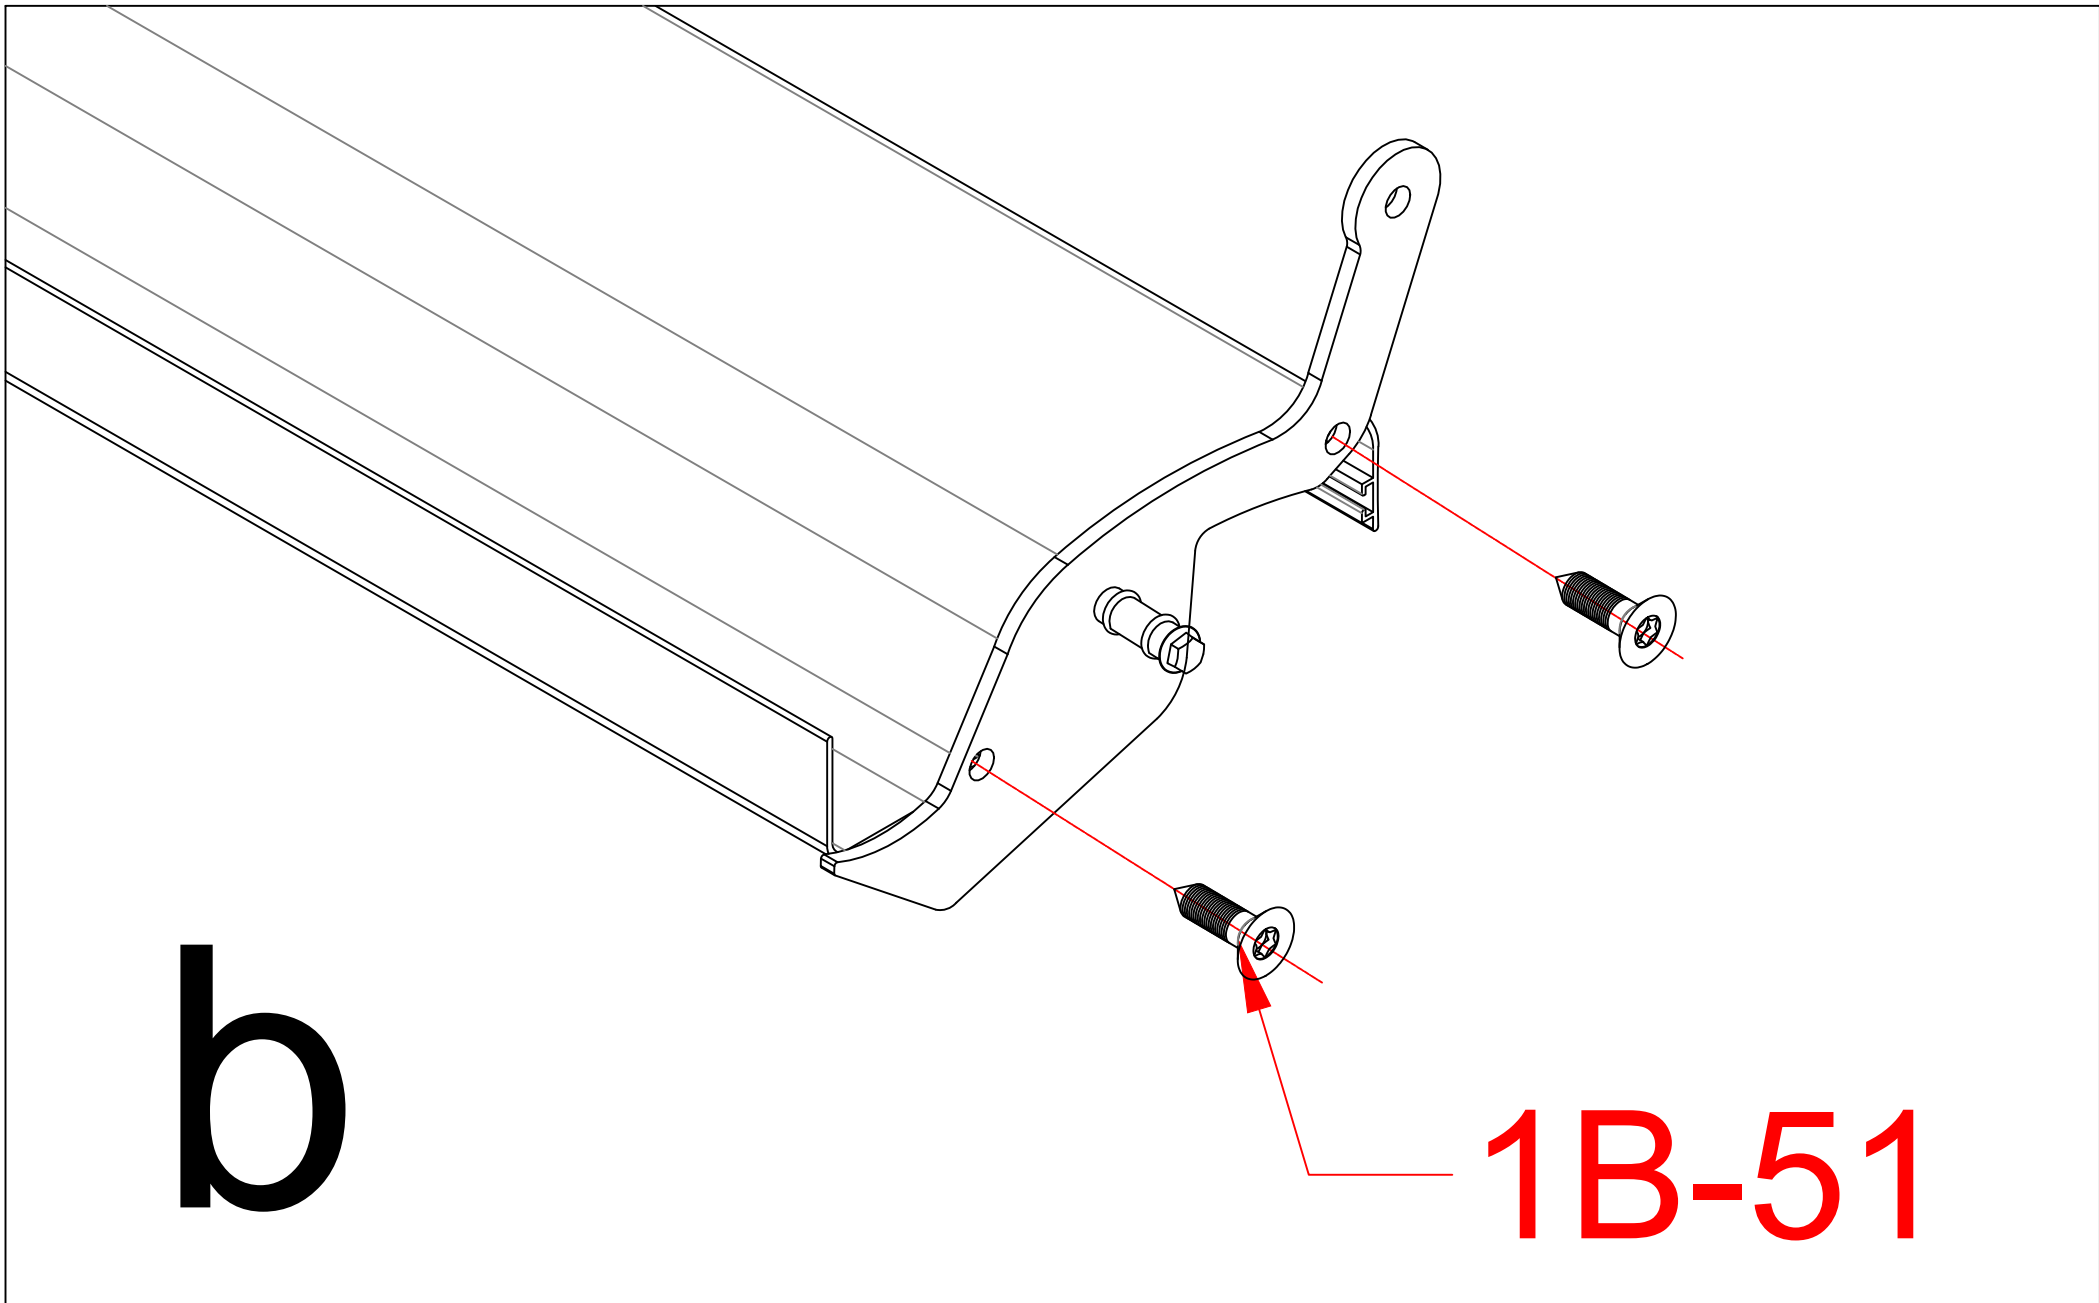
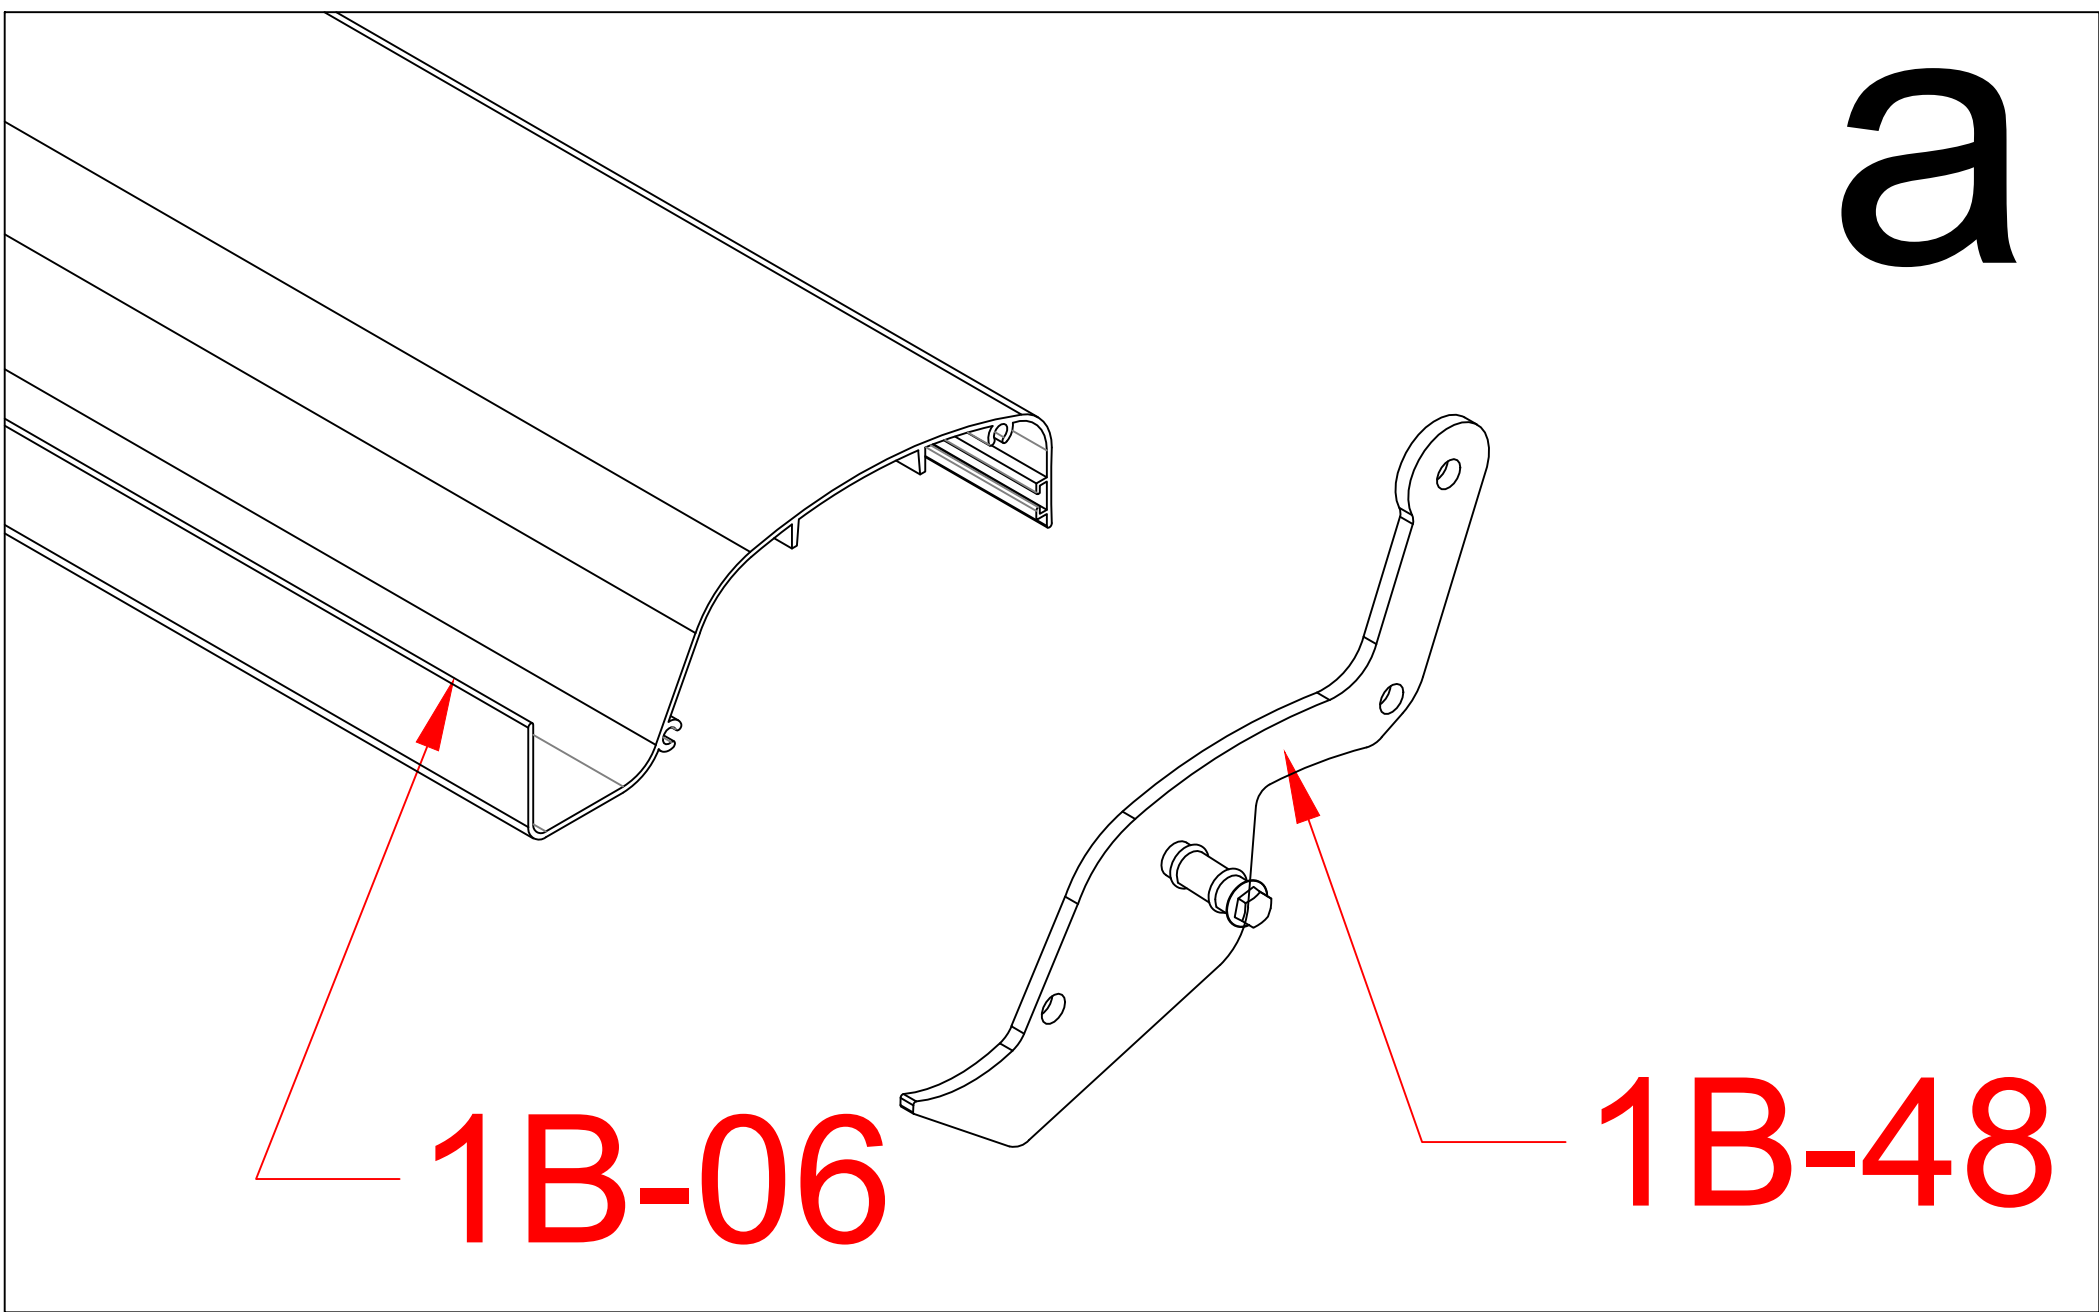



When installing the end cap for louvers, pls don't use the highest gear shift.

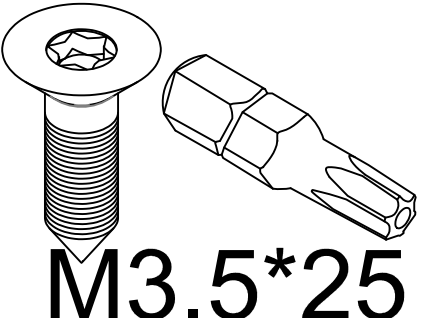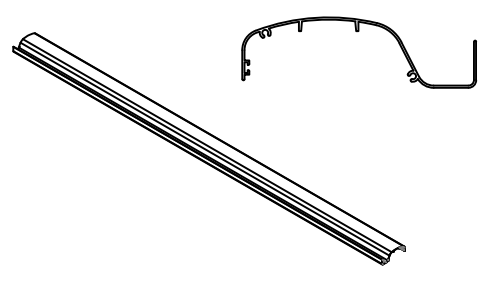
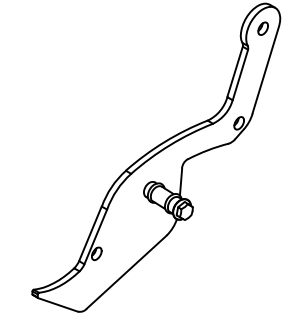
1B-51	 M3.5*25	64
1B-06		33
1B-48		32

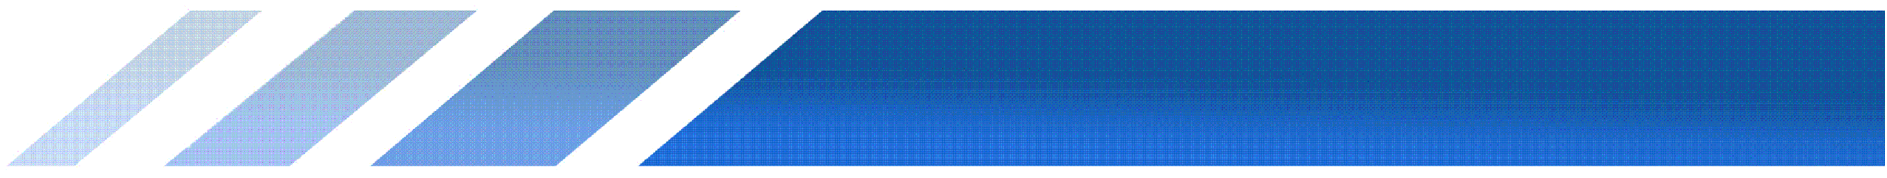

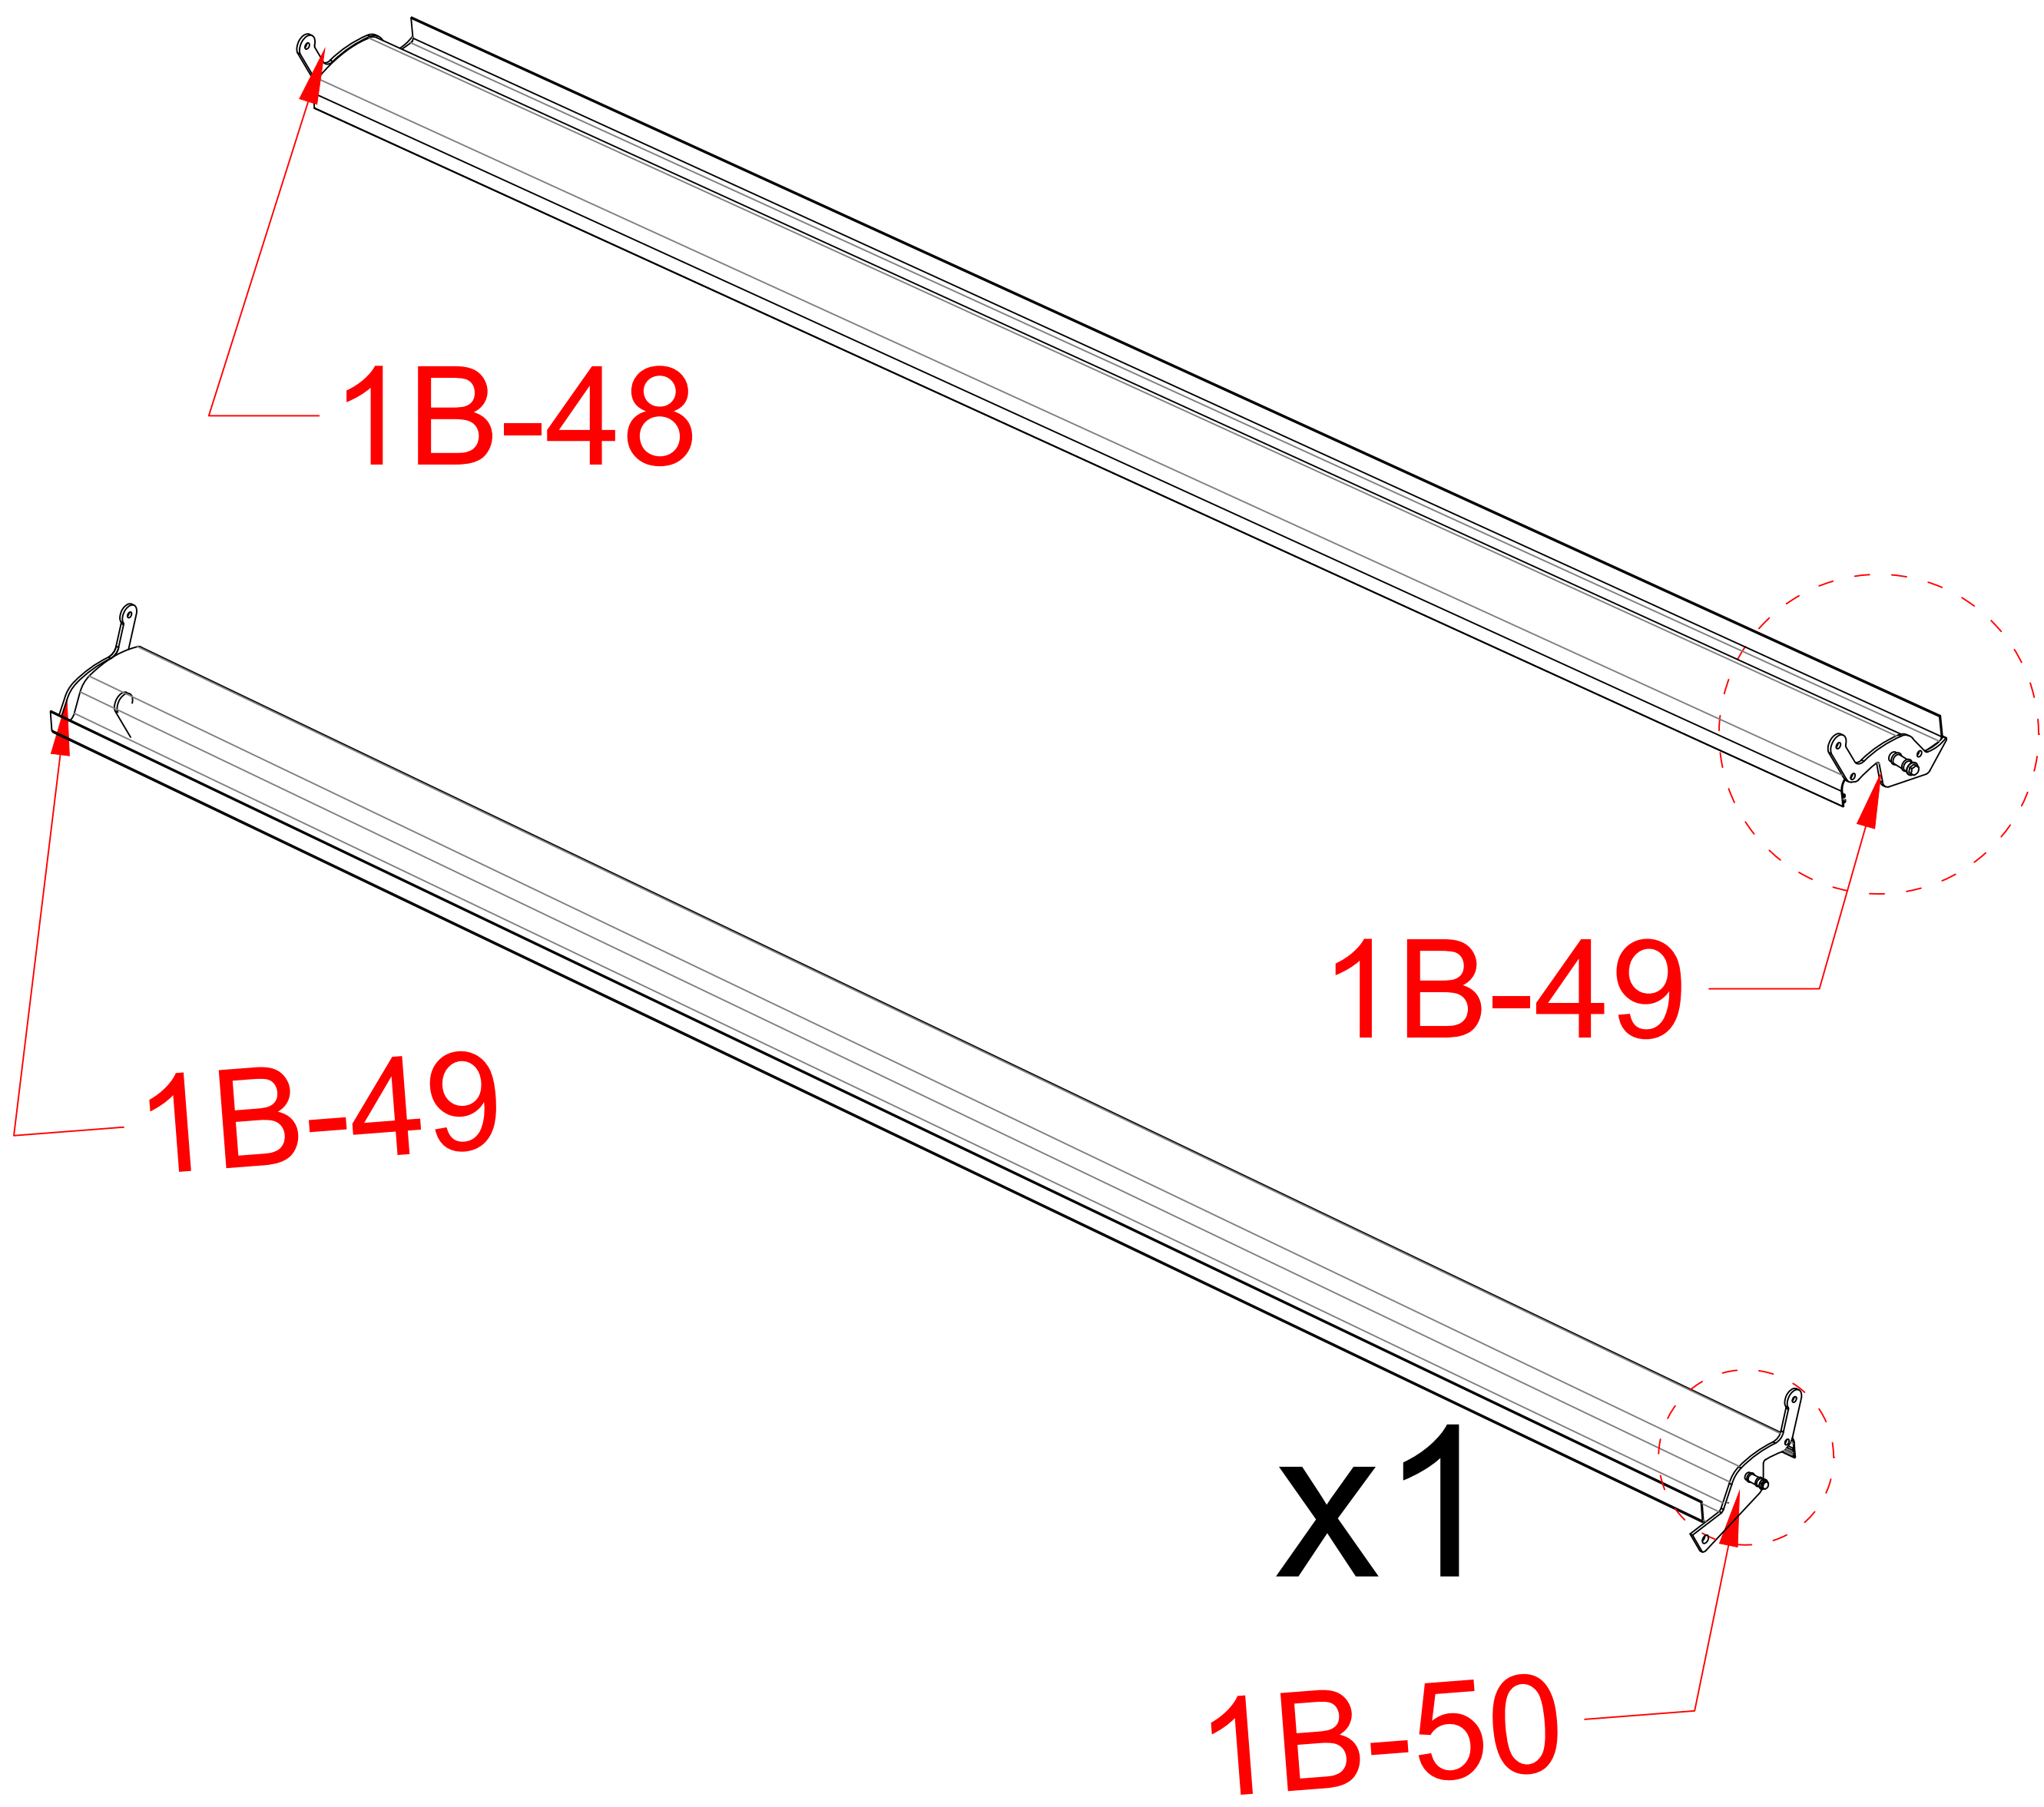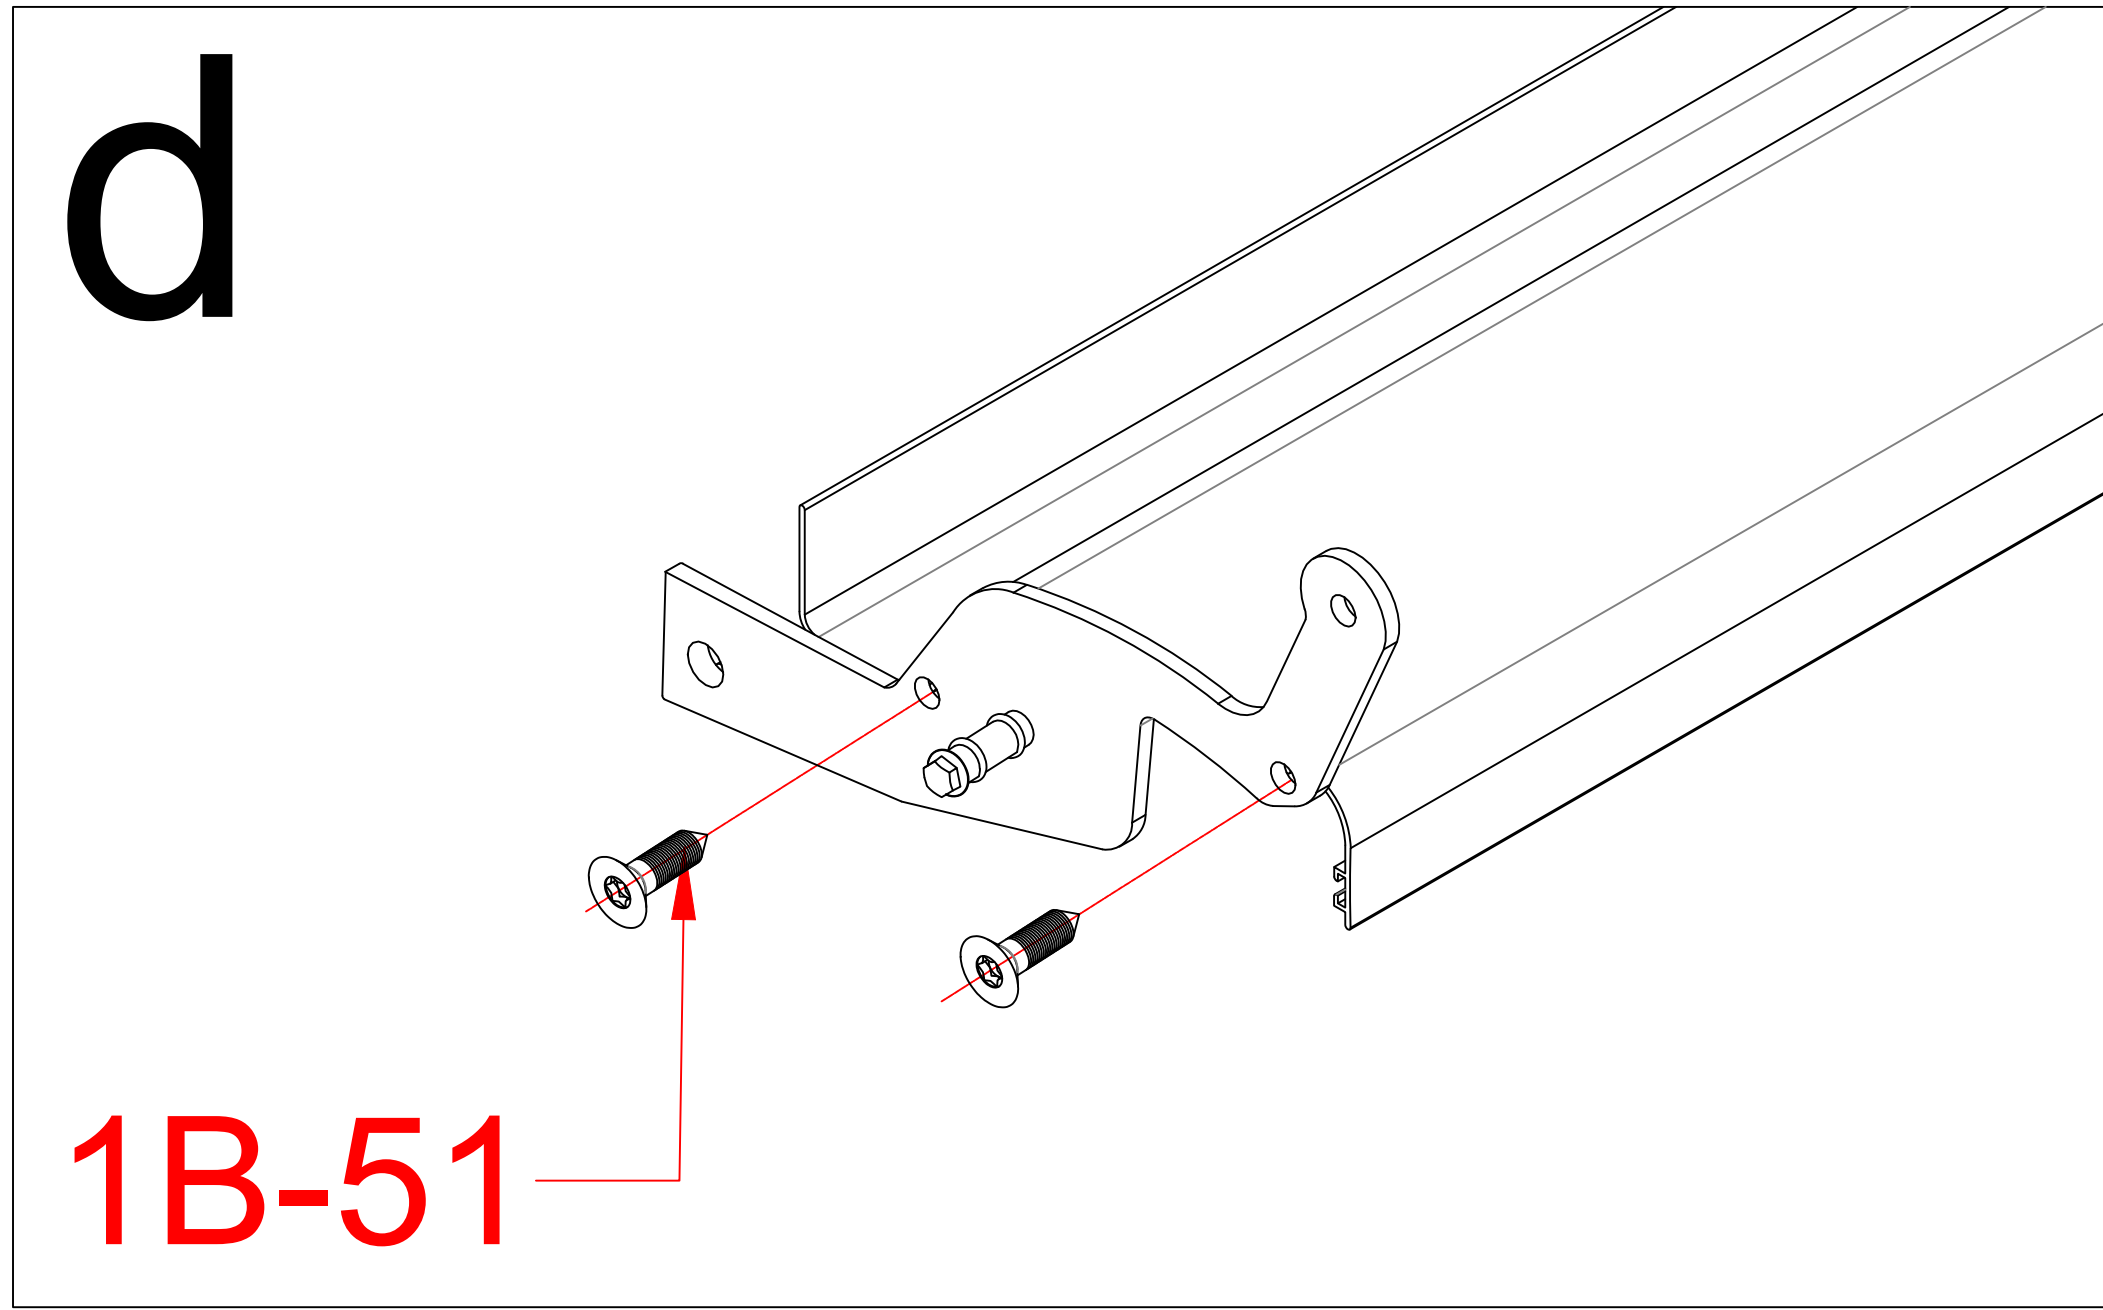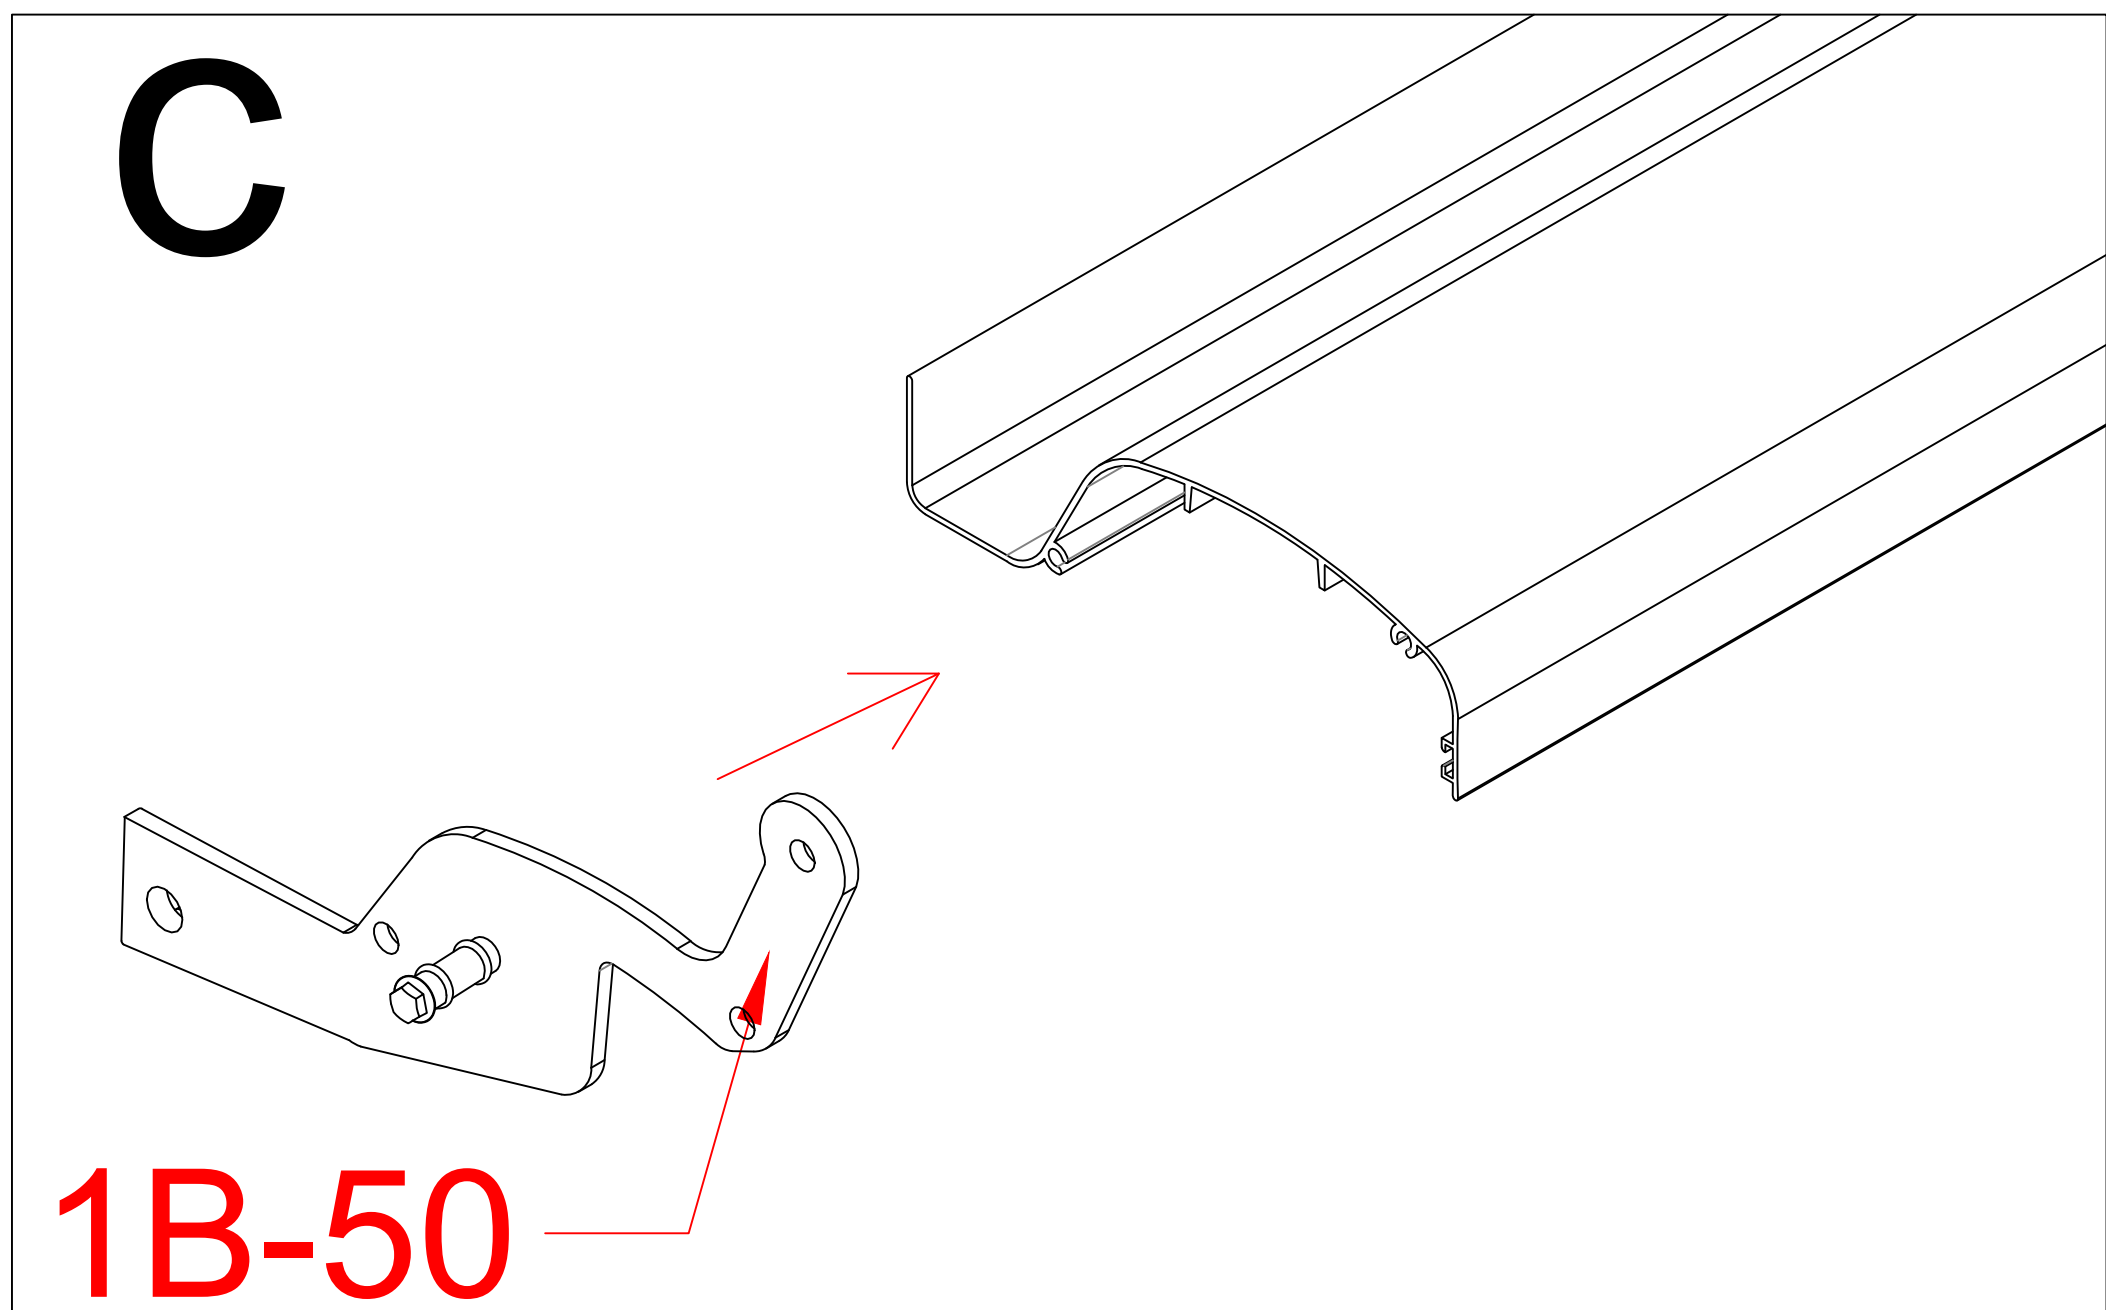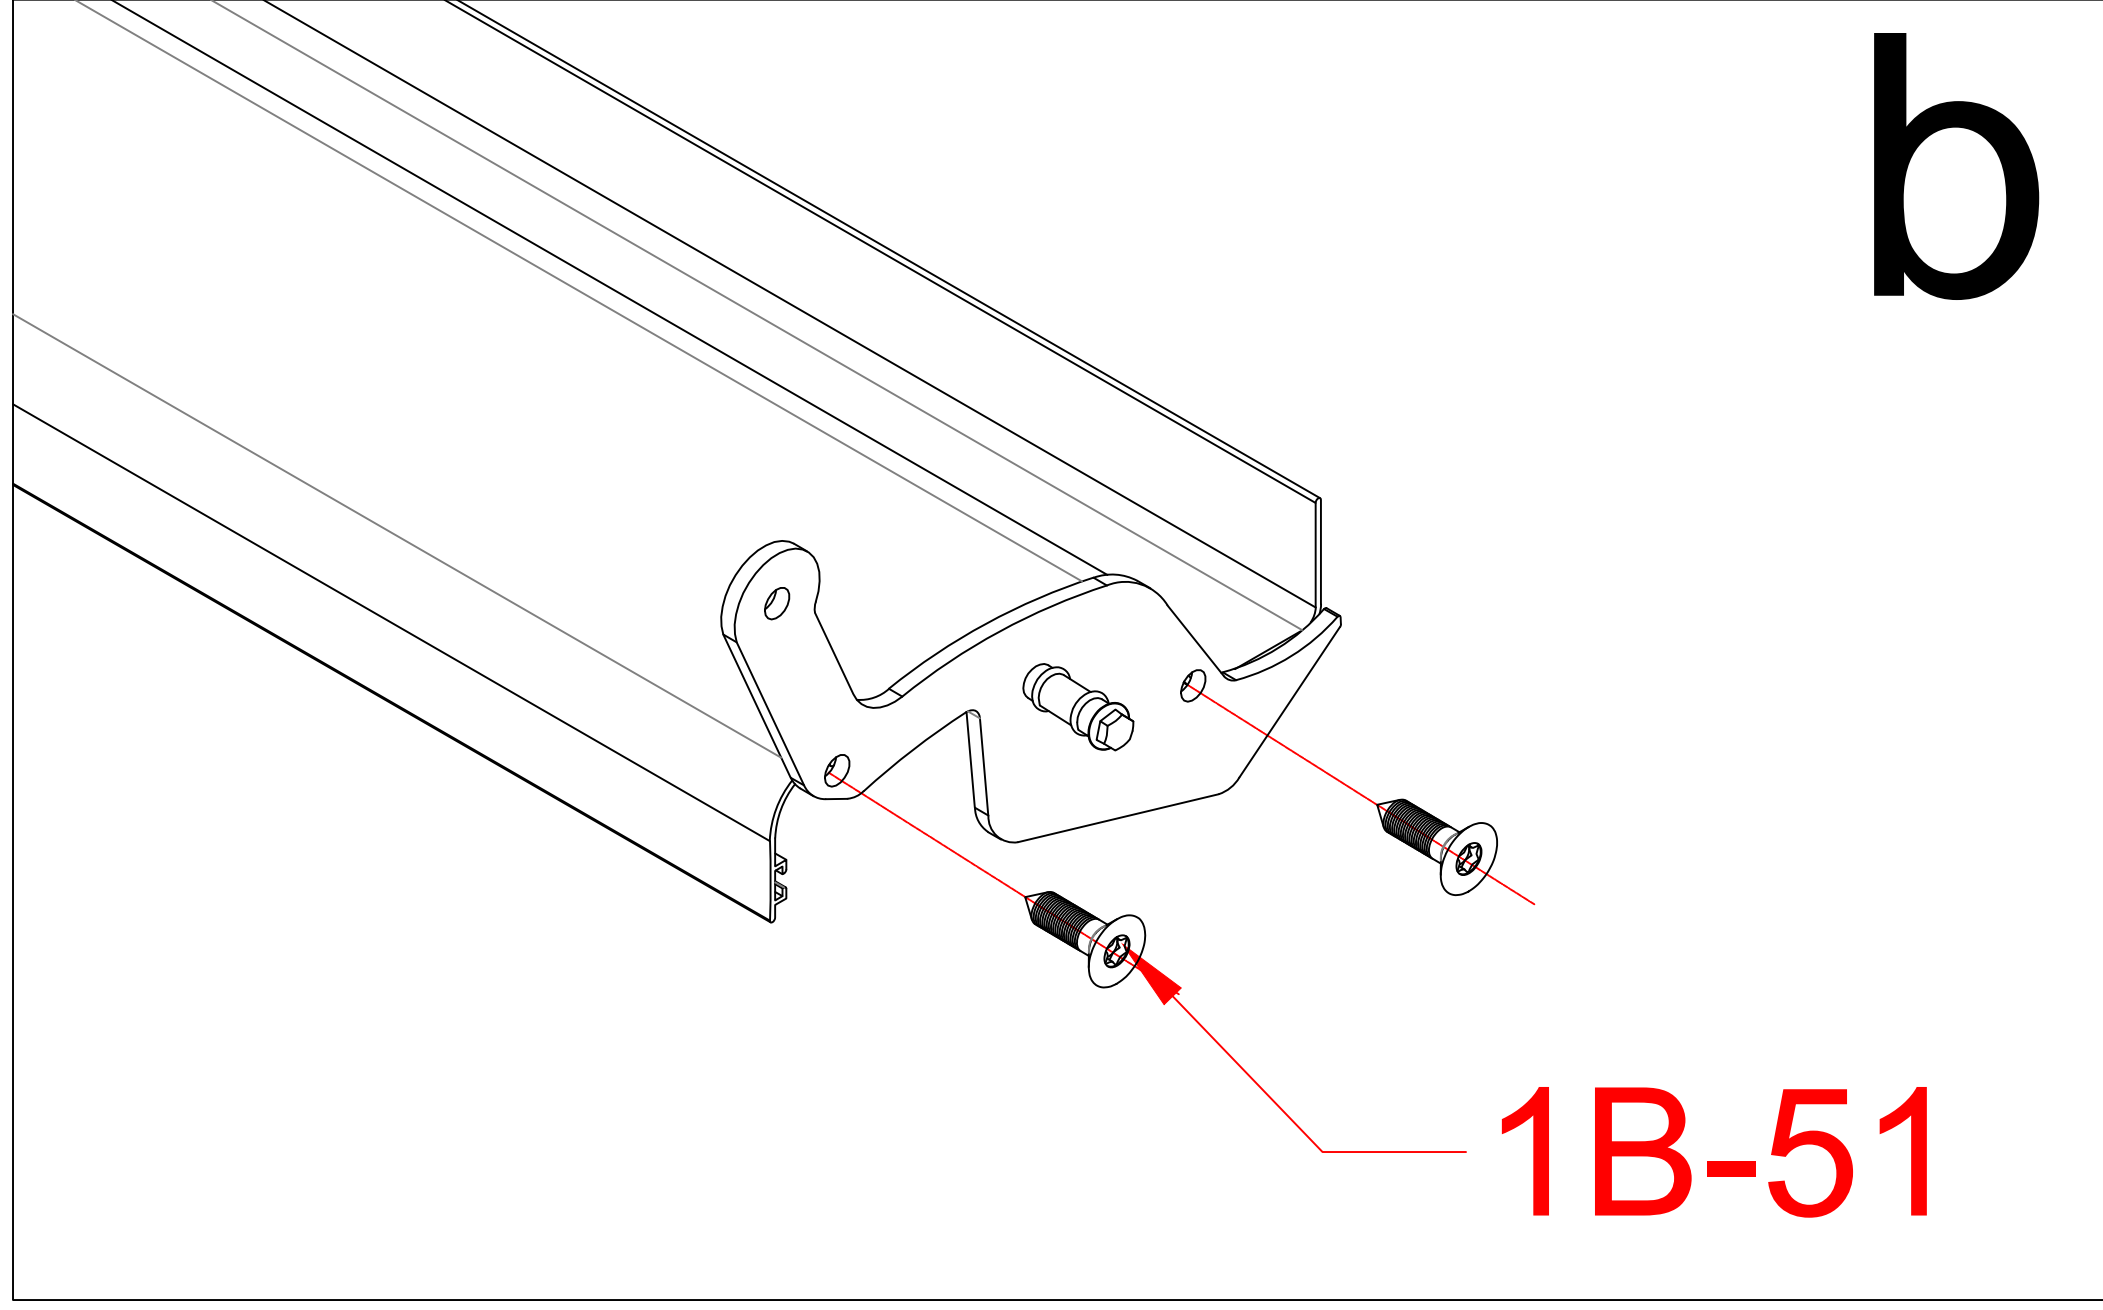
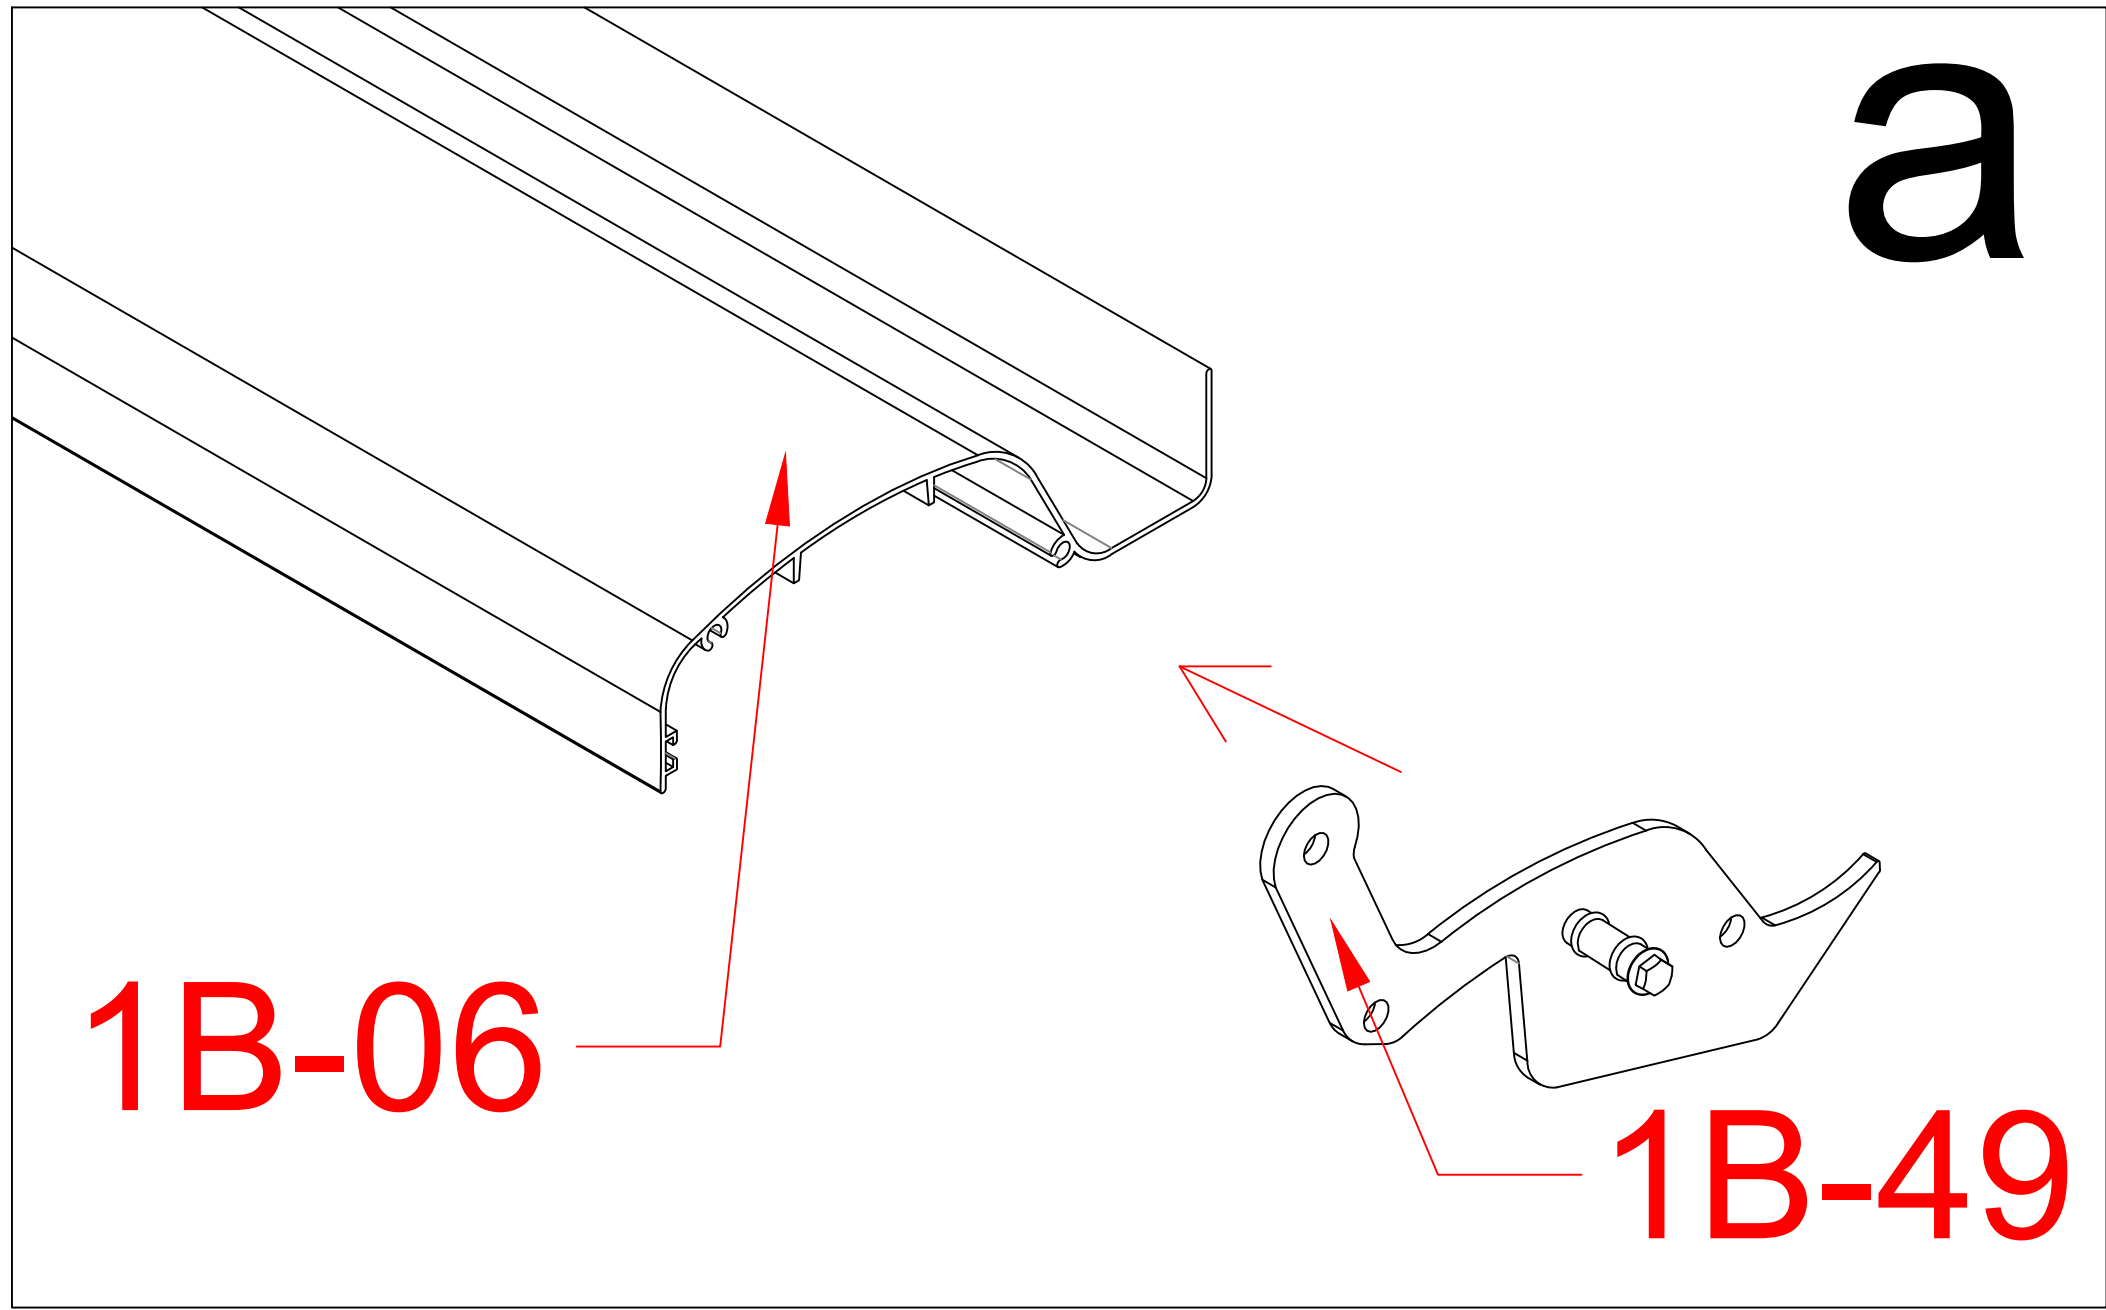


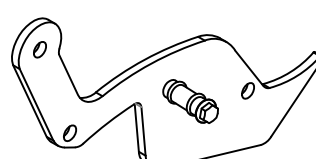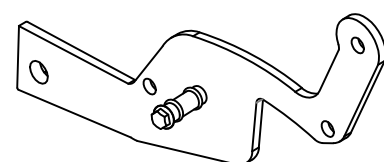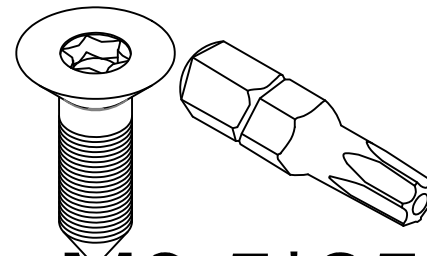1B-49		33
1B-50		1
1B-51	 M3.5*25	68

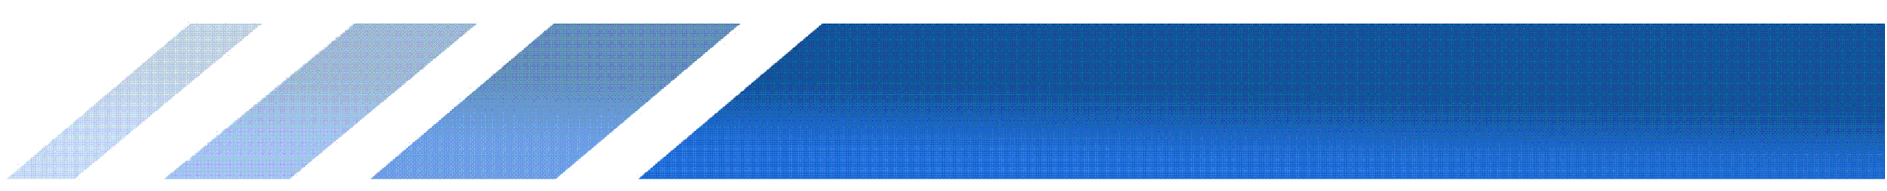


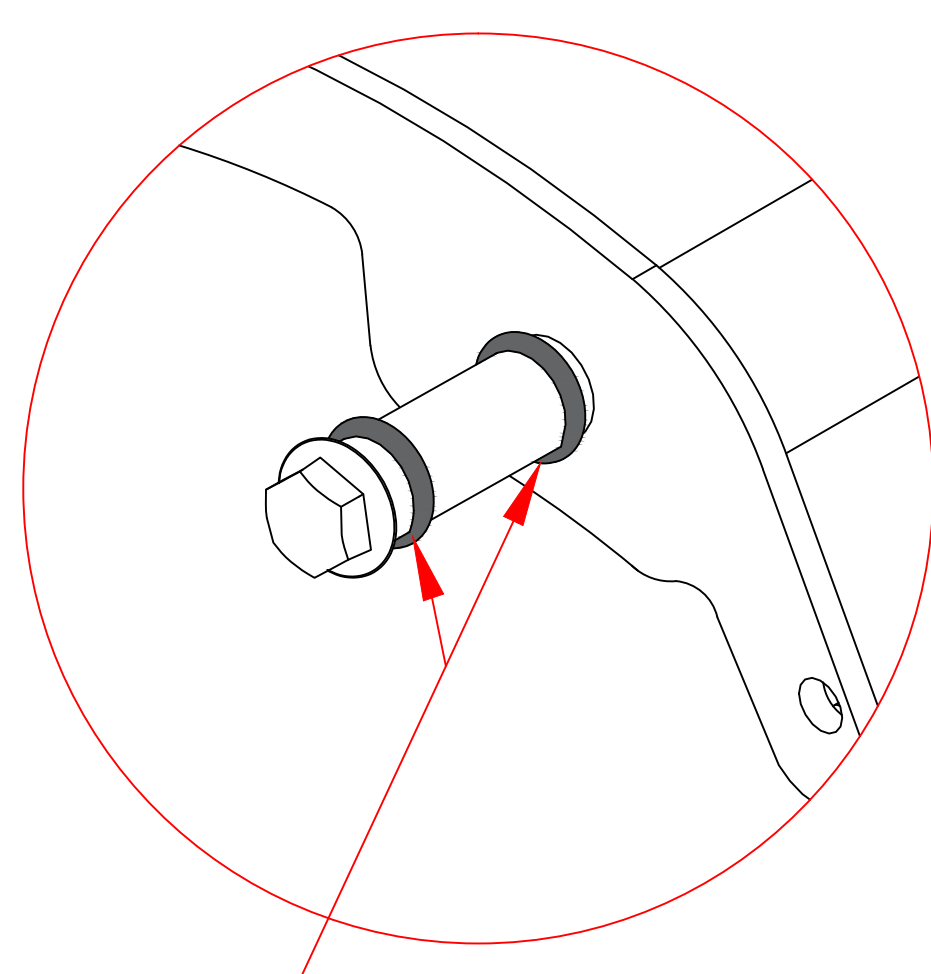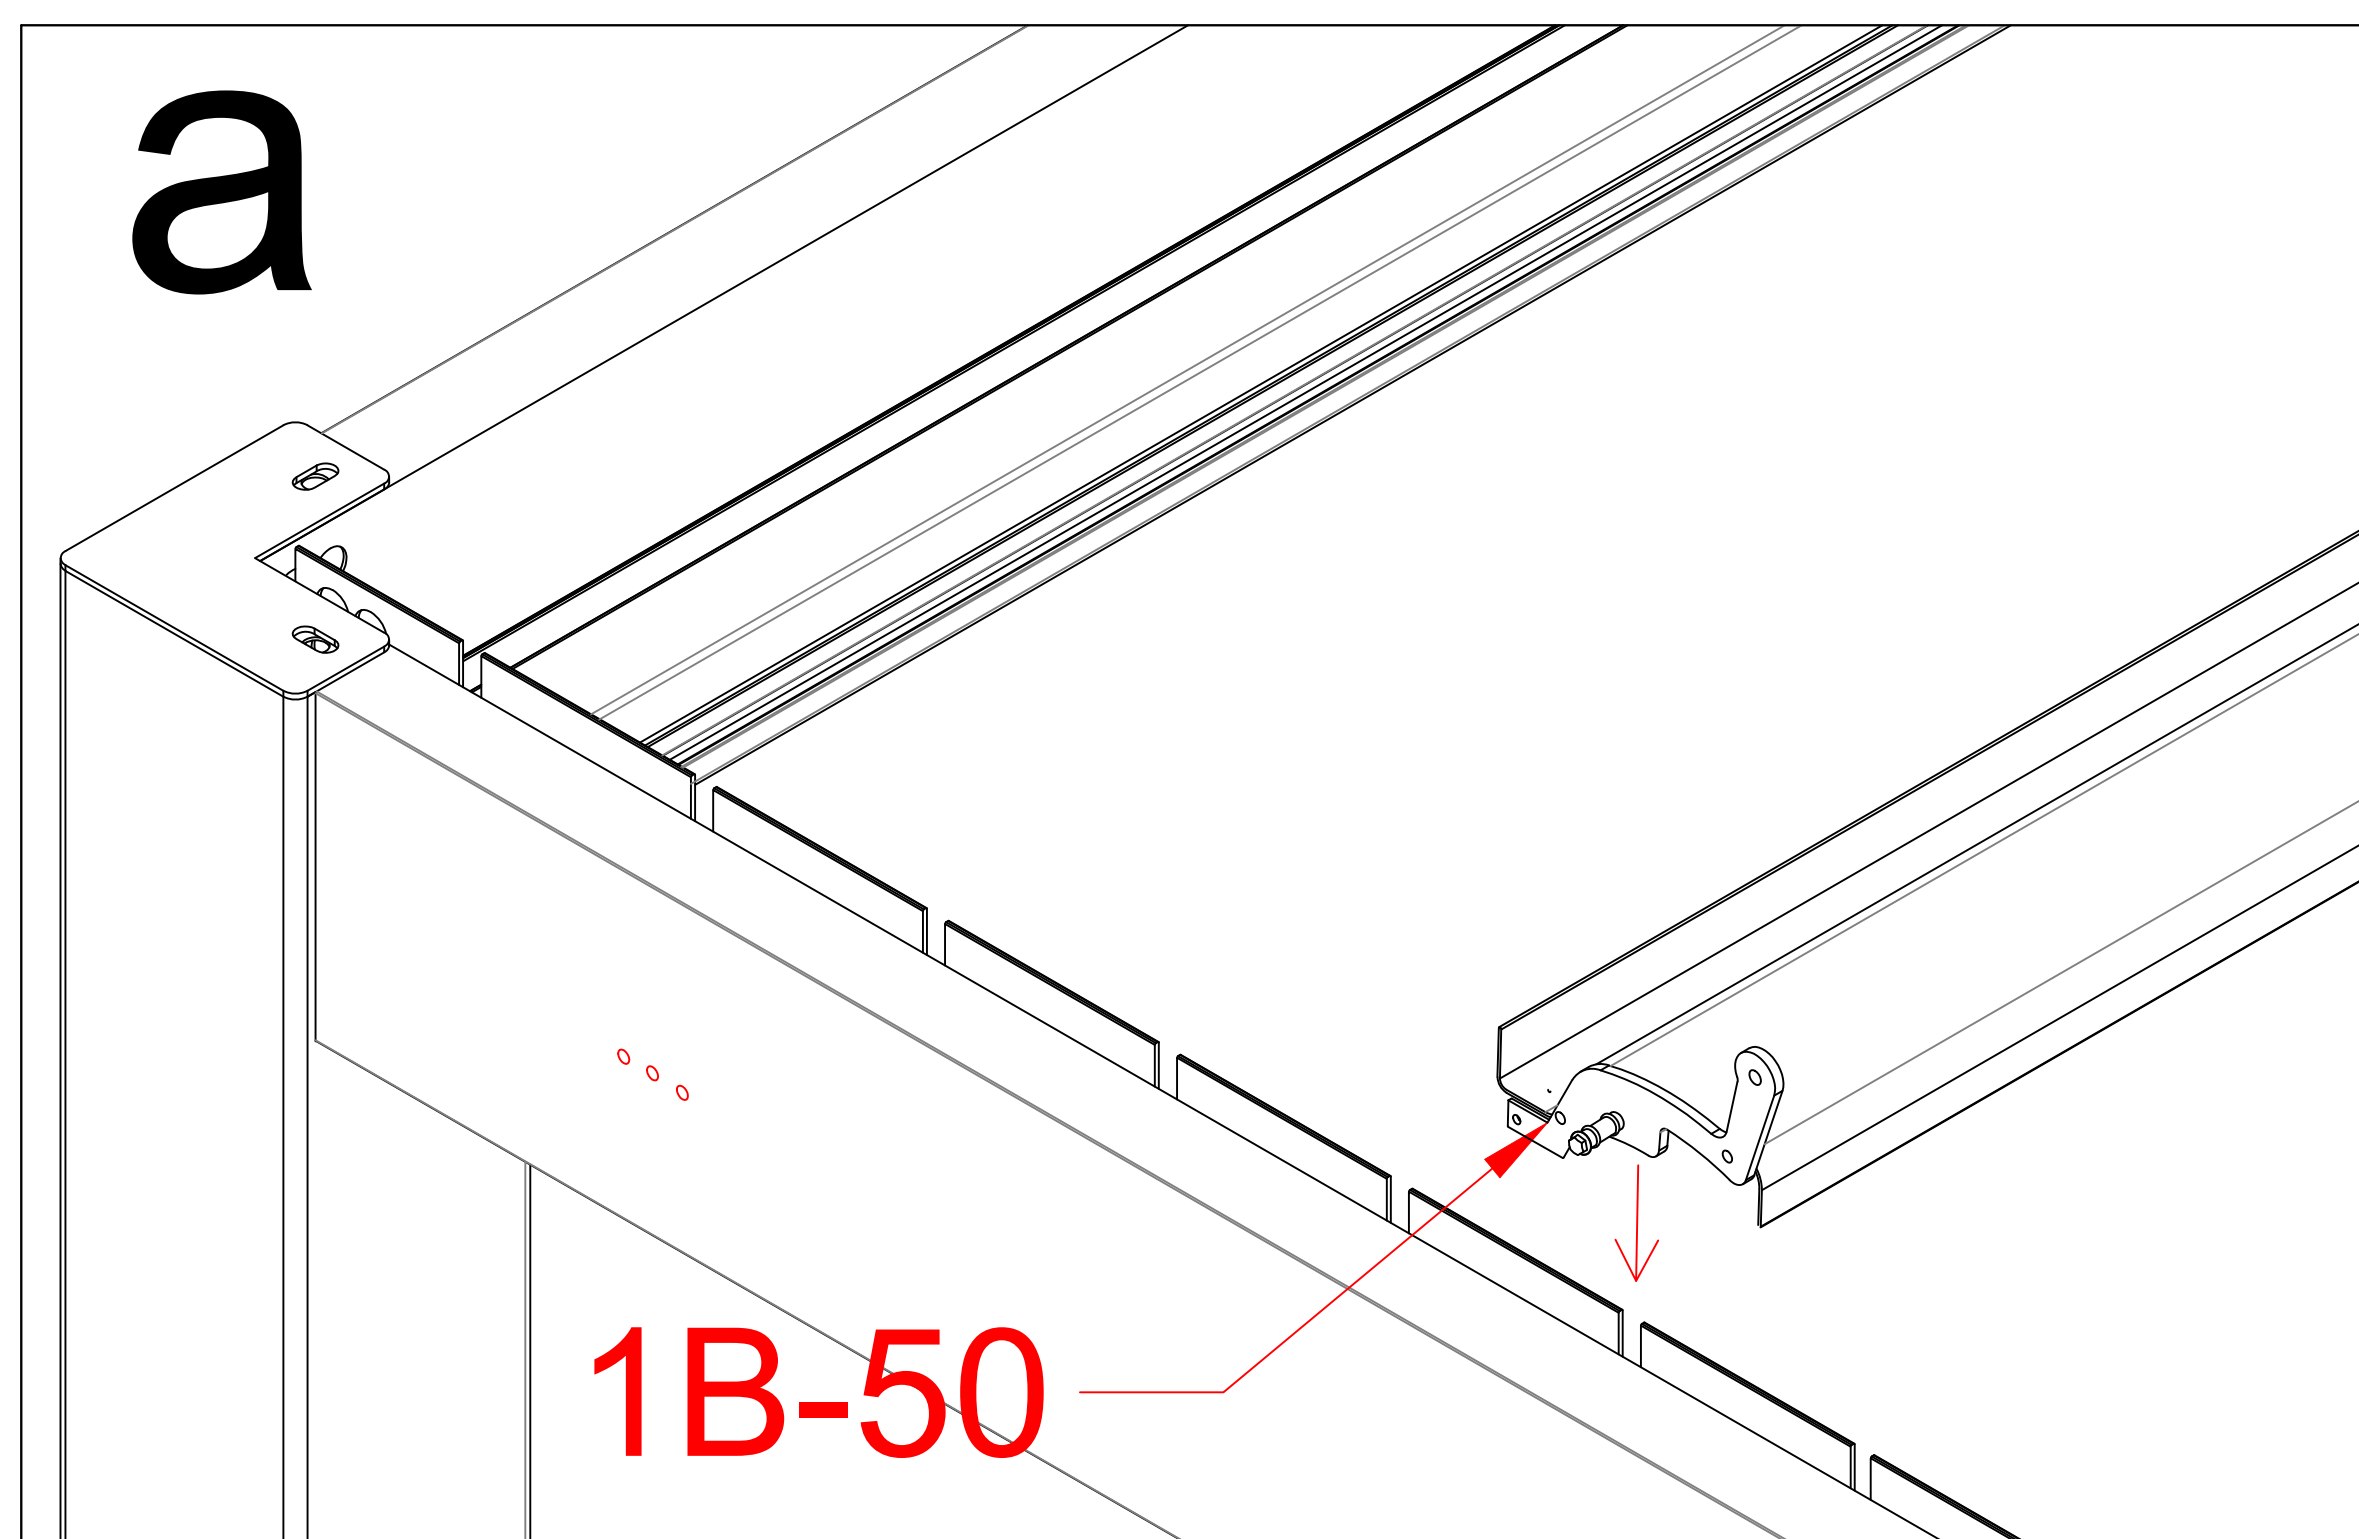


When installing louvers, first separate the two rubber gaskets and slide them to both ends of the circular shaft. Then, please ensure they are closed tightly before proceeding with the next steps of the installation.

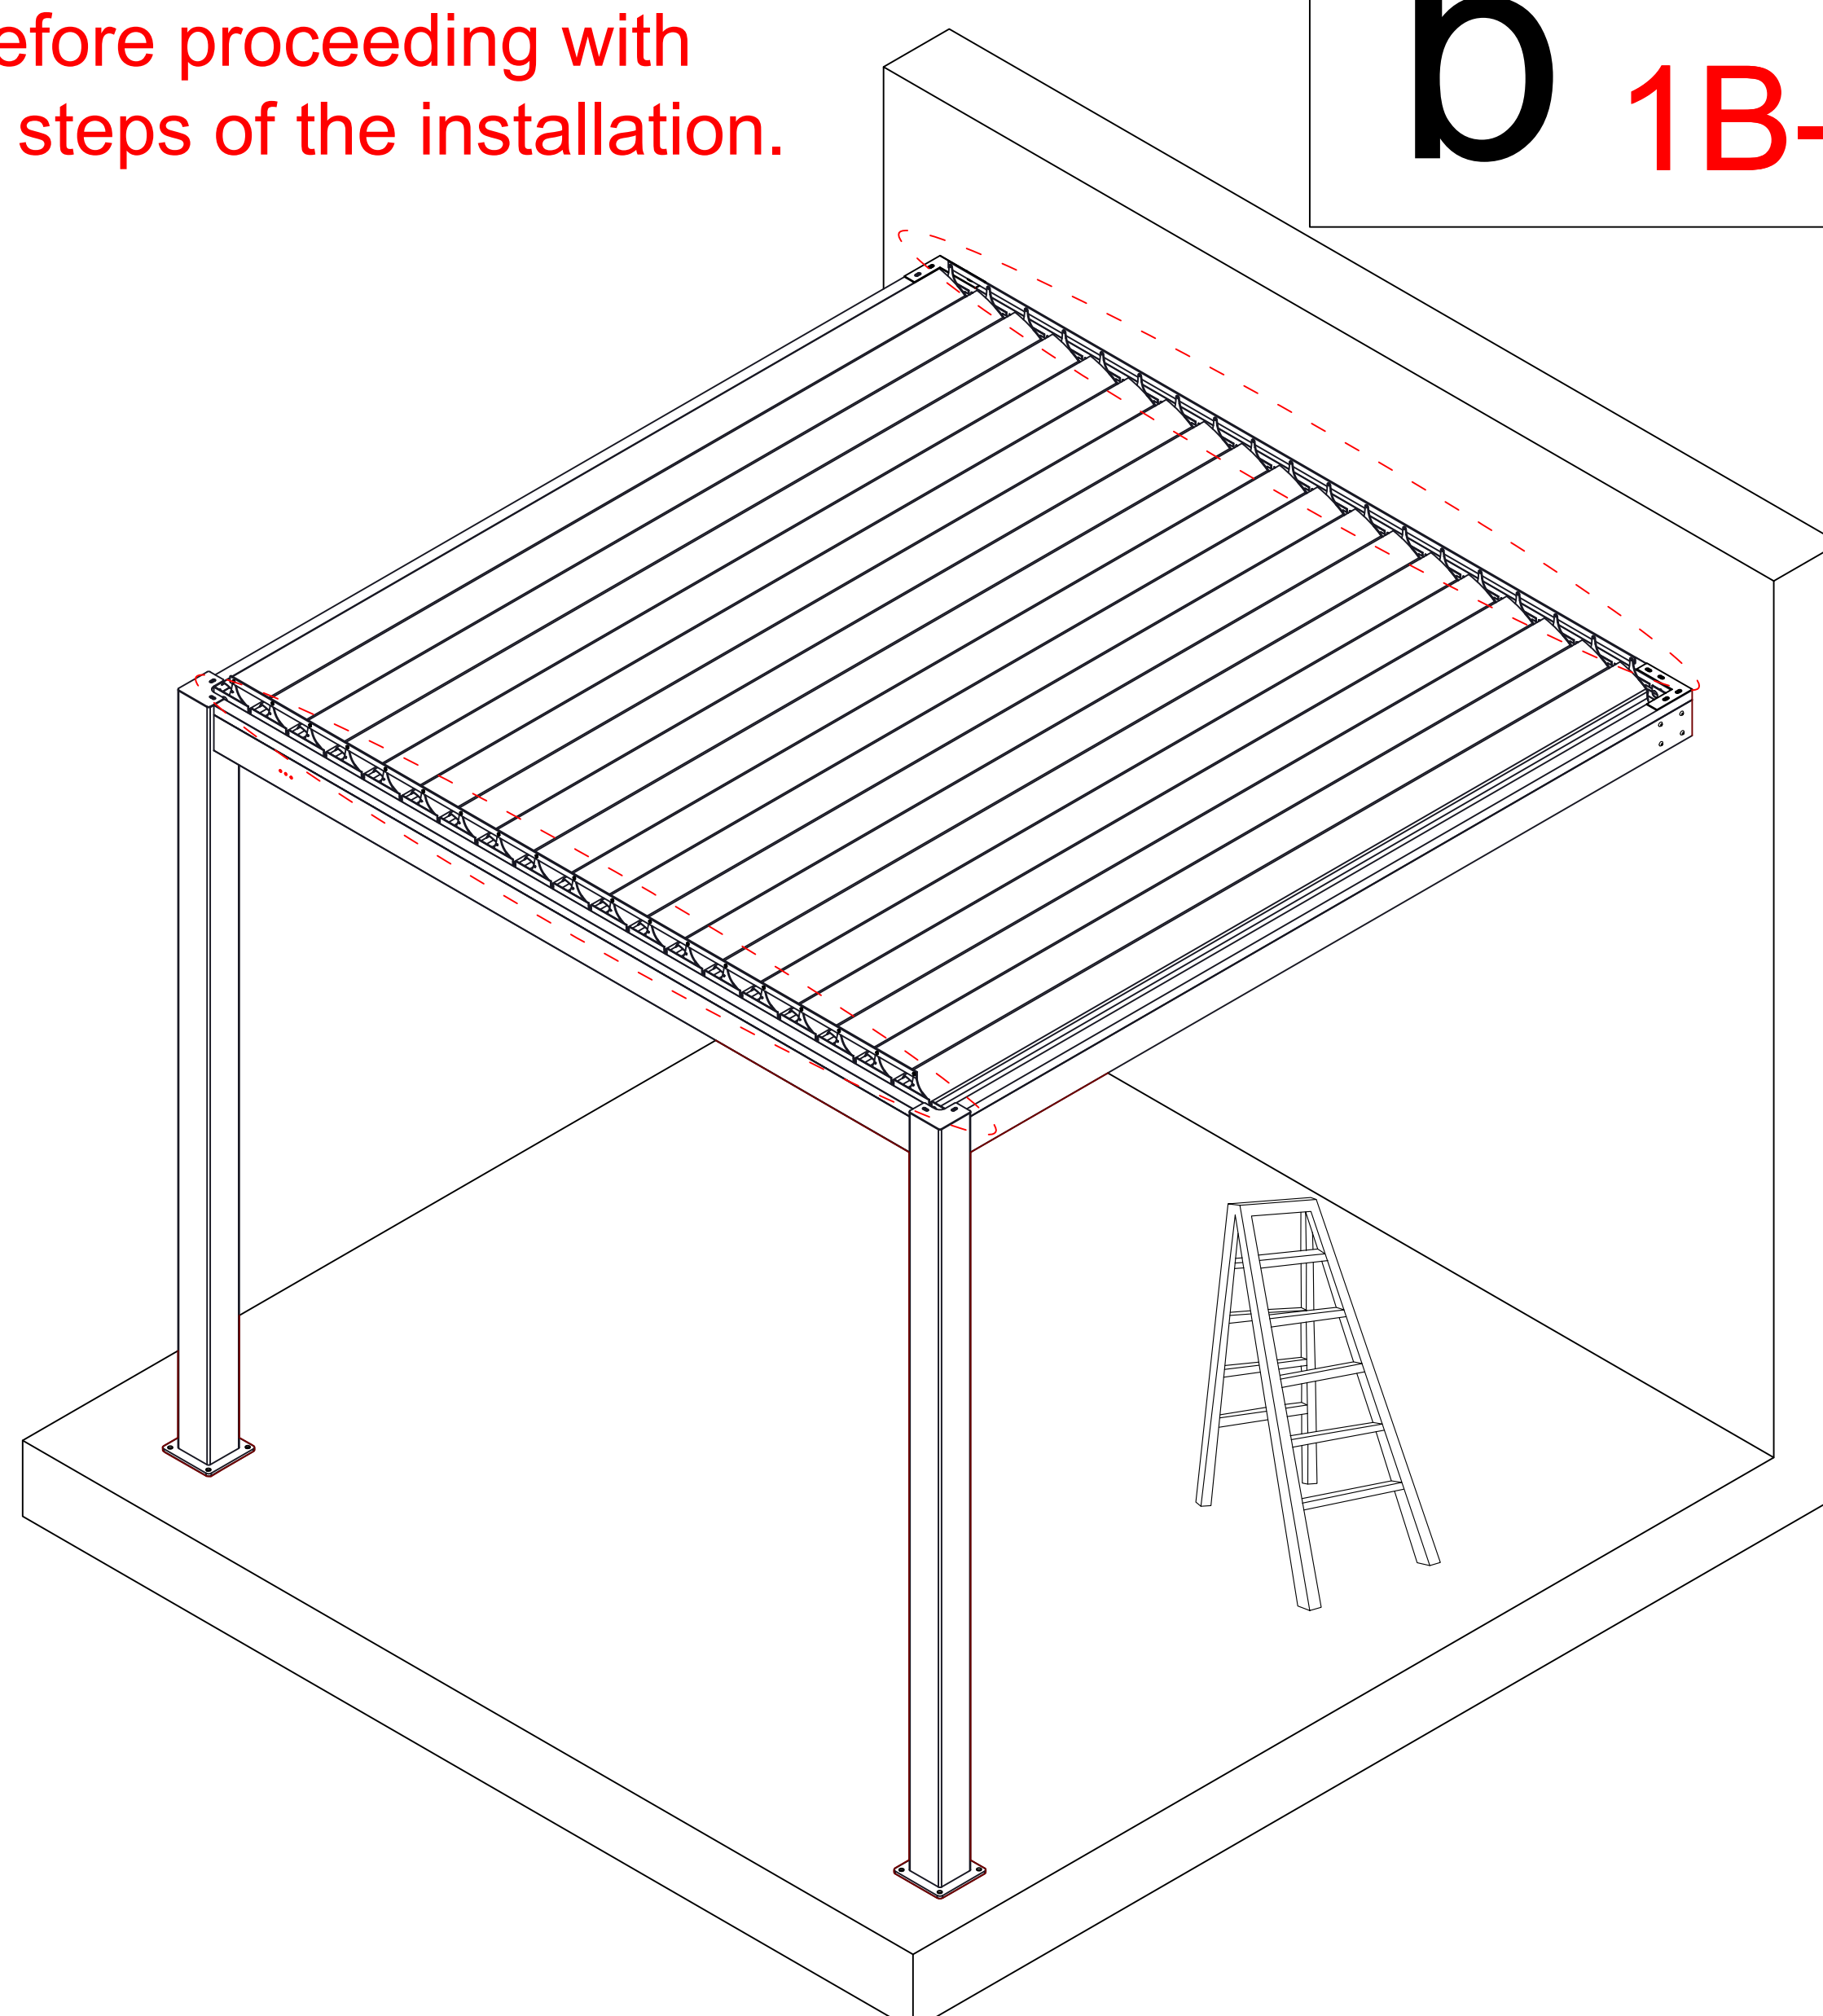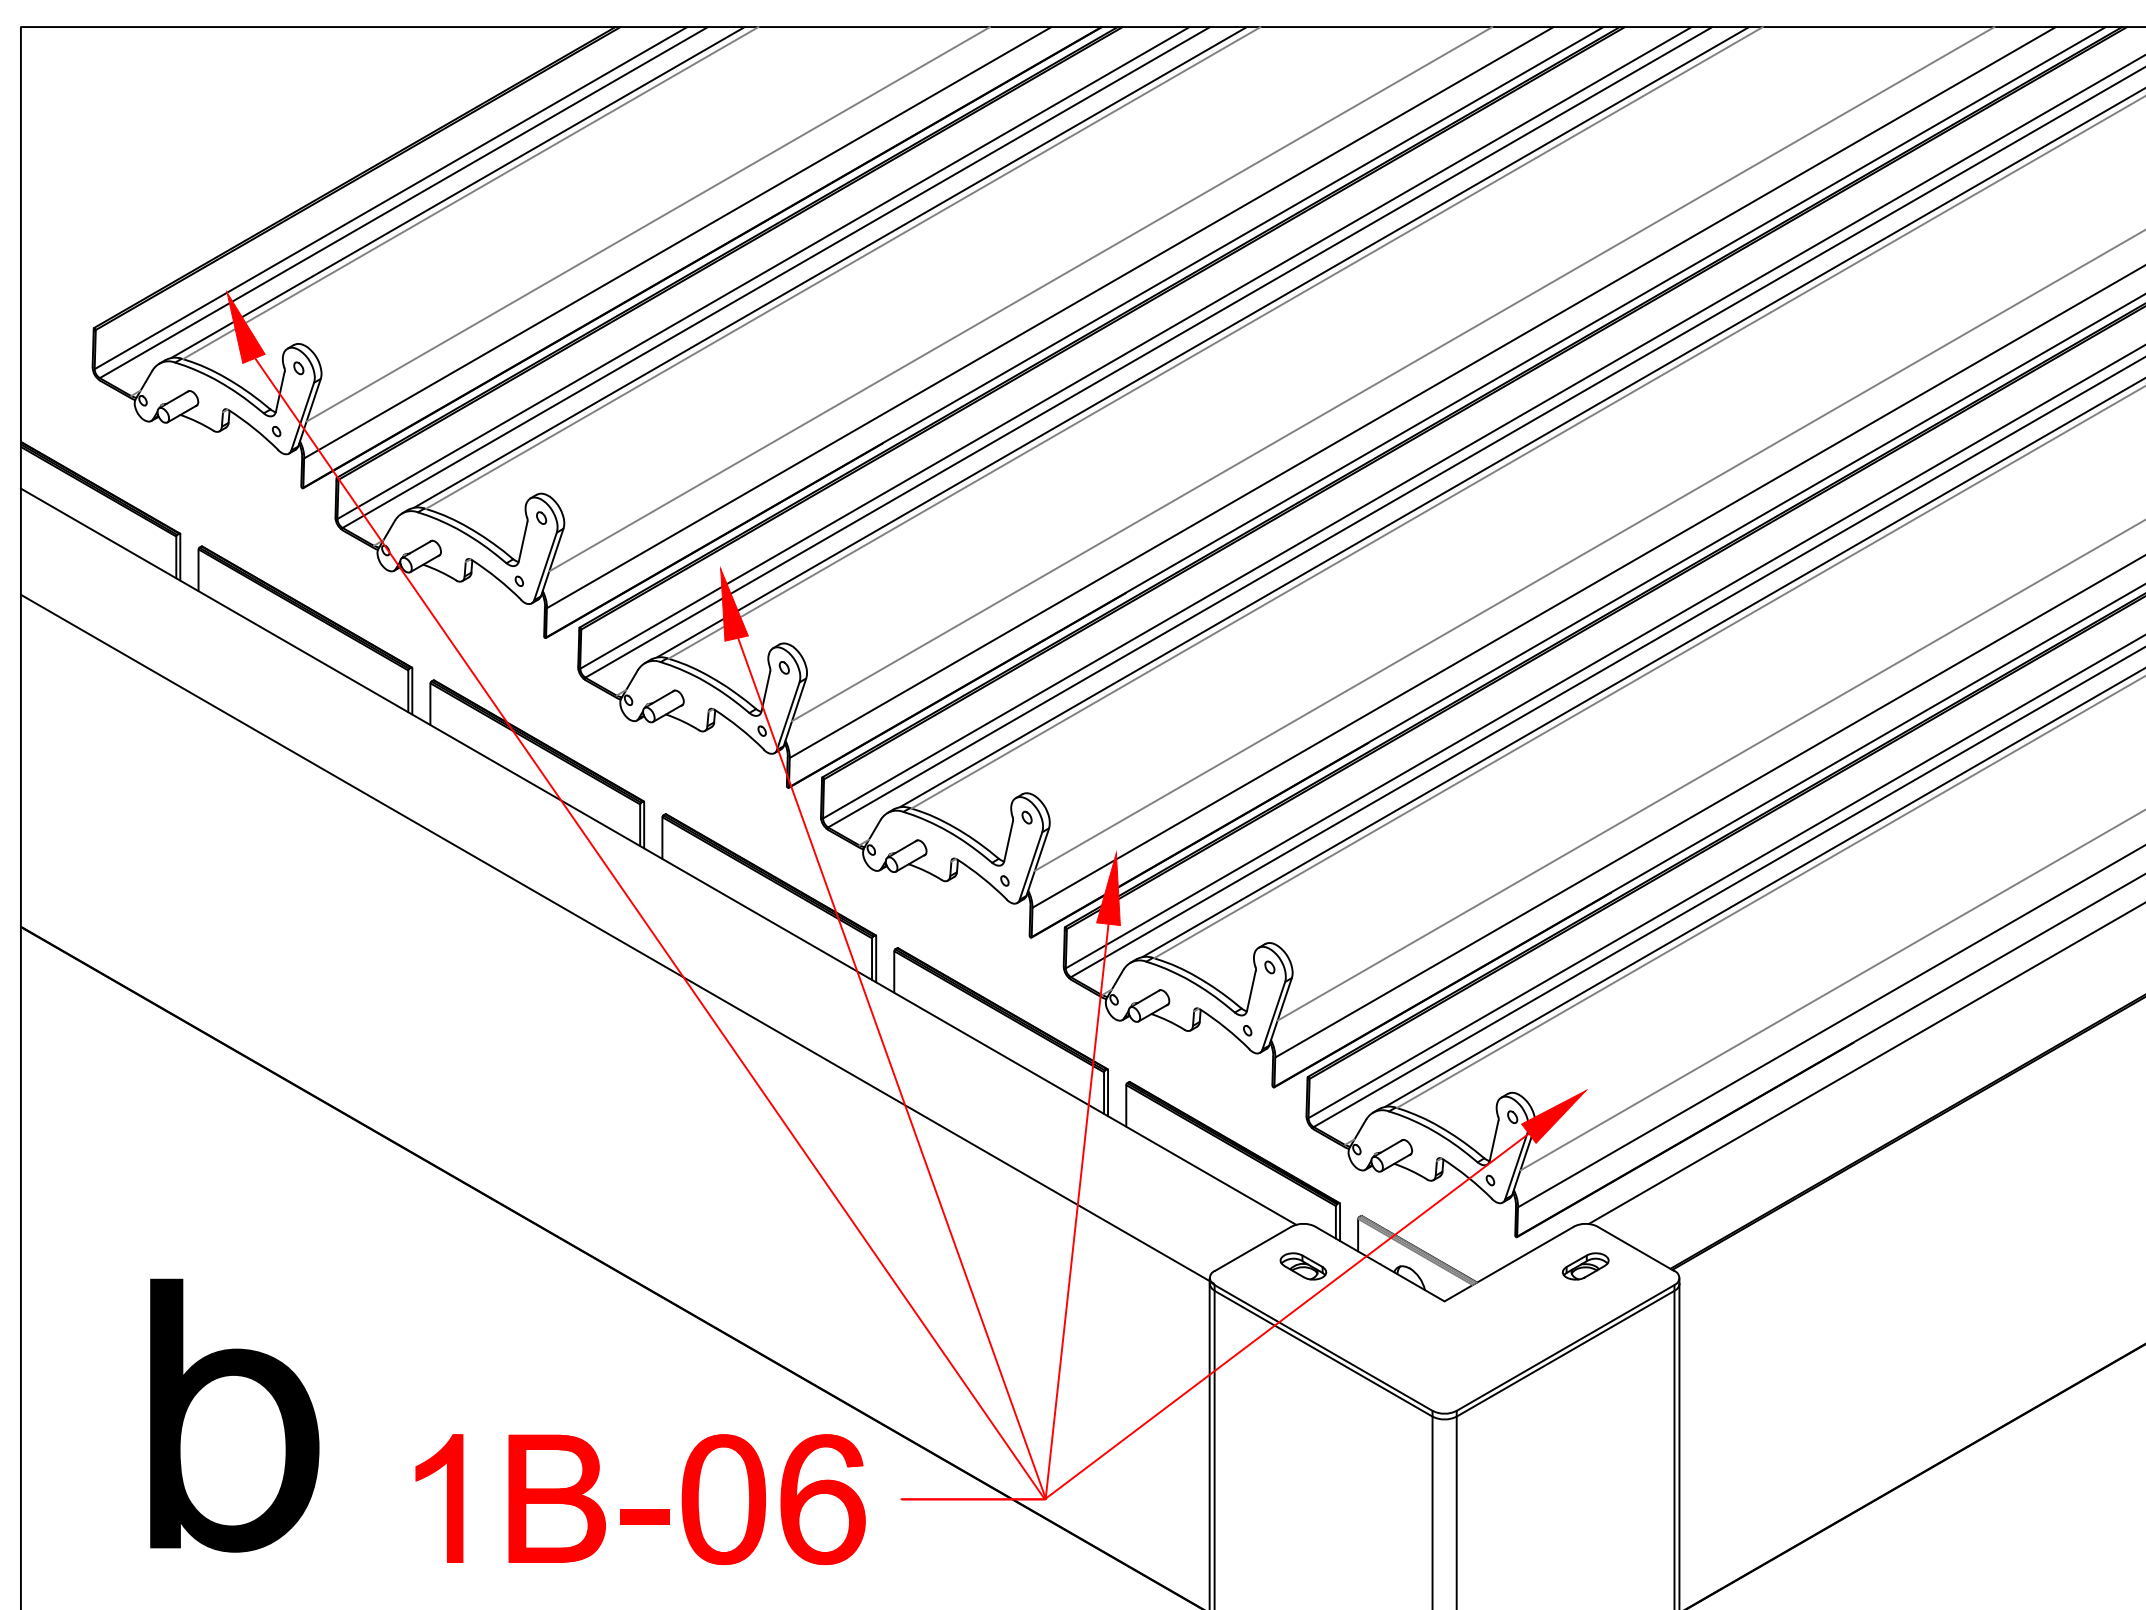


1B-06		X
-------	--	---

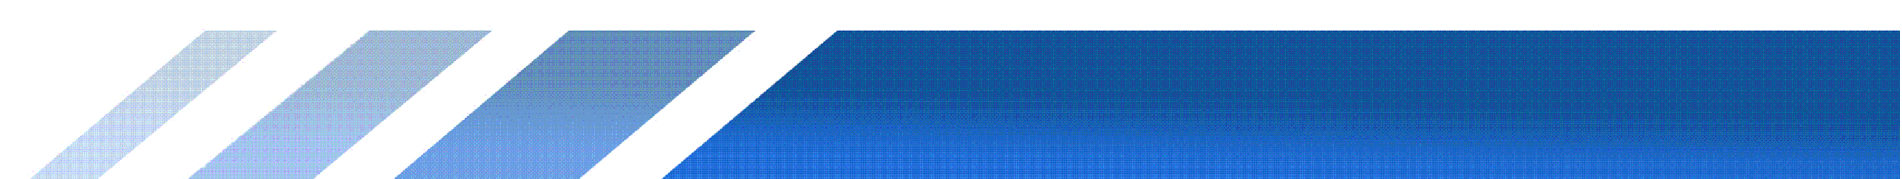


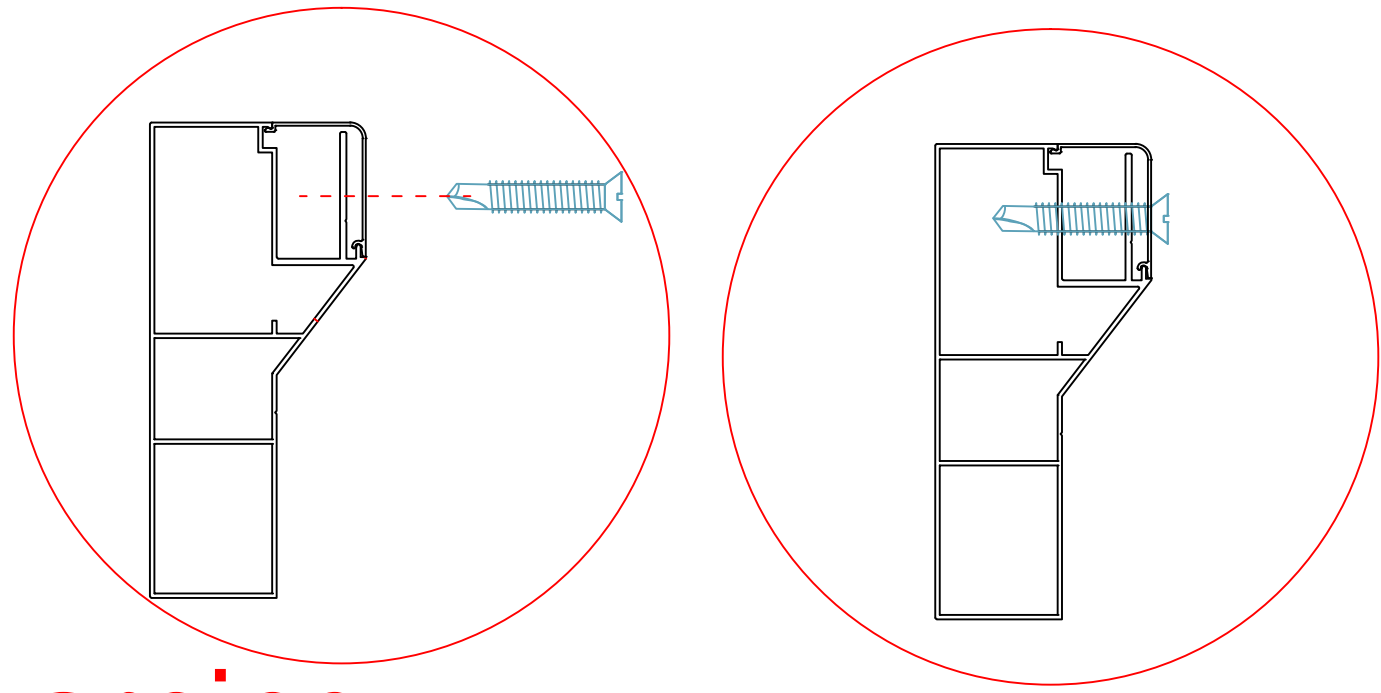


warning:
Here the screw must be
hit, do not miss

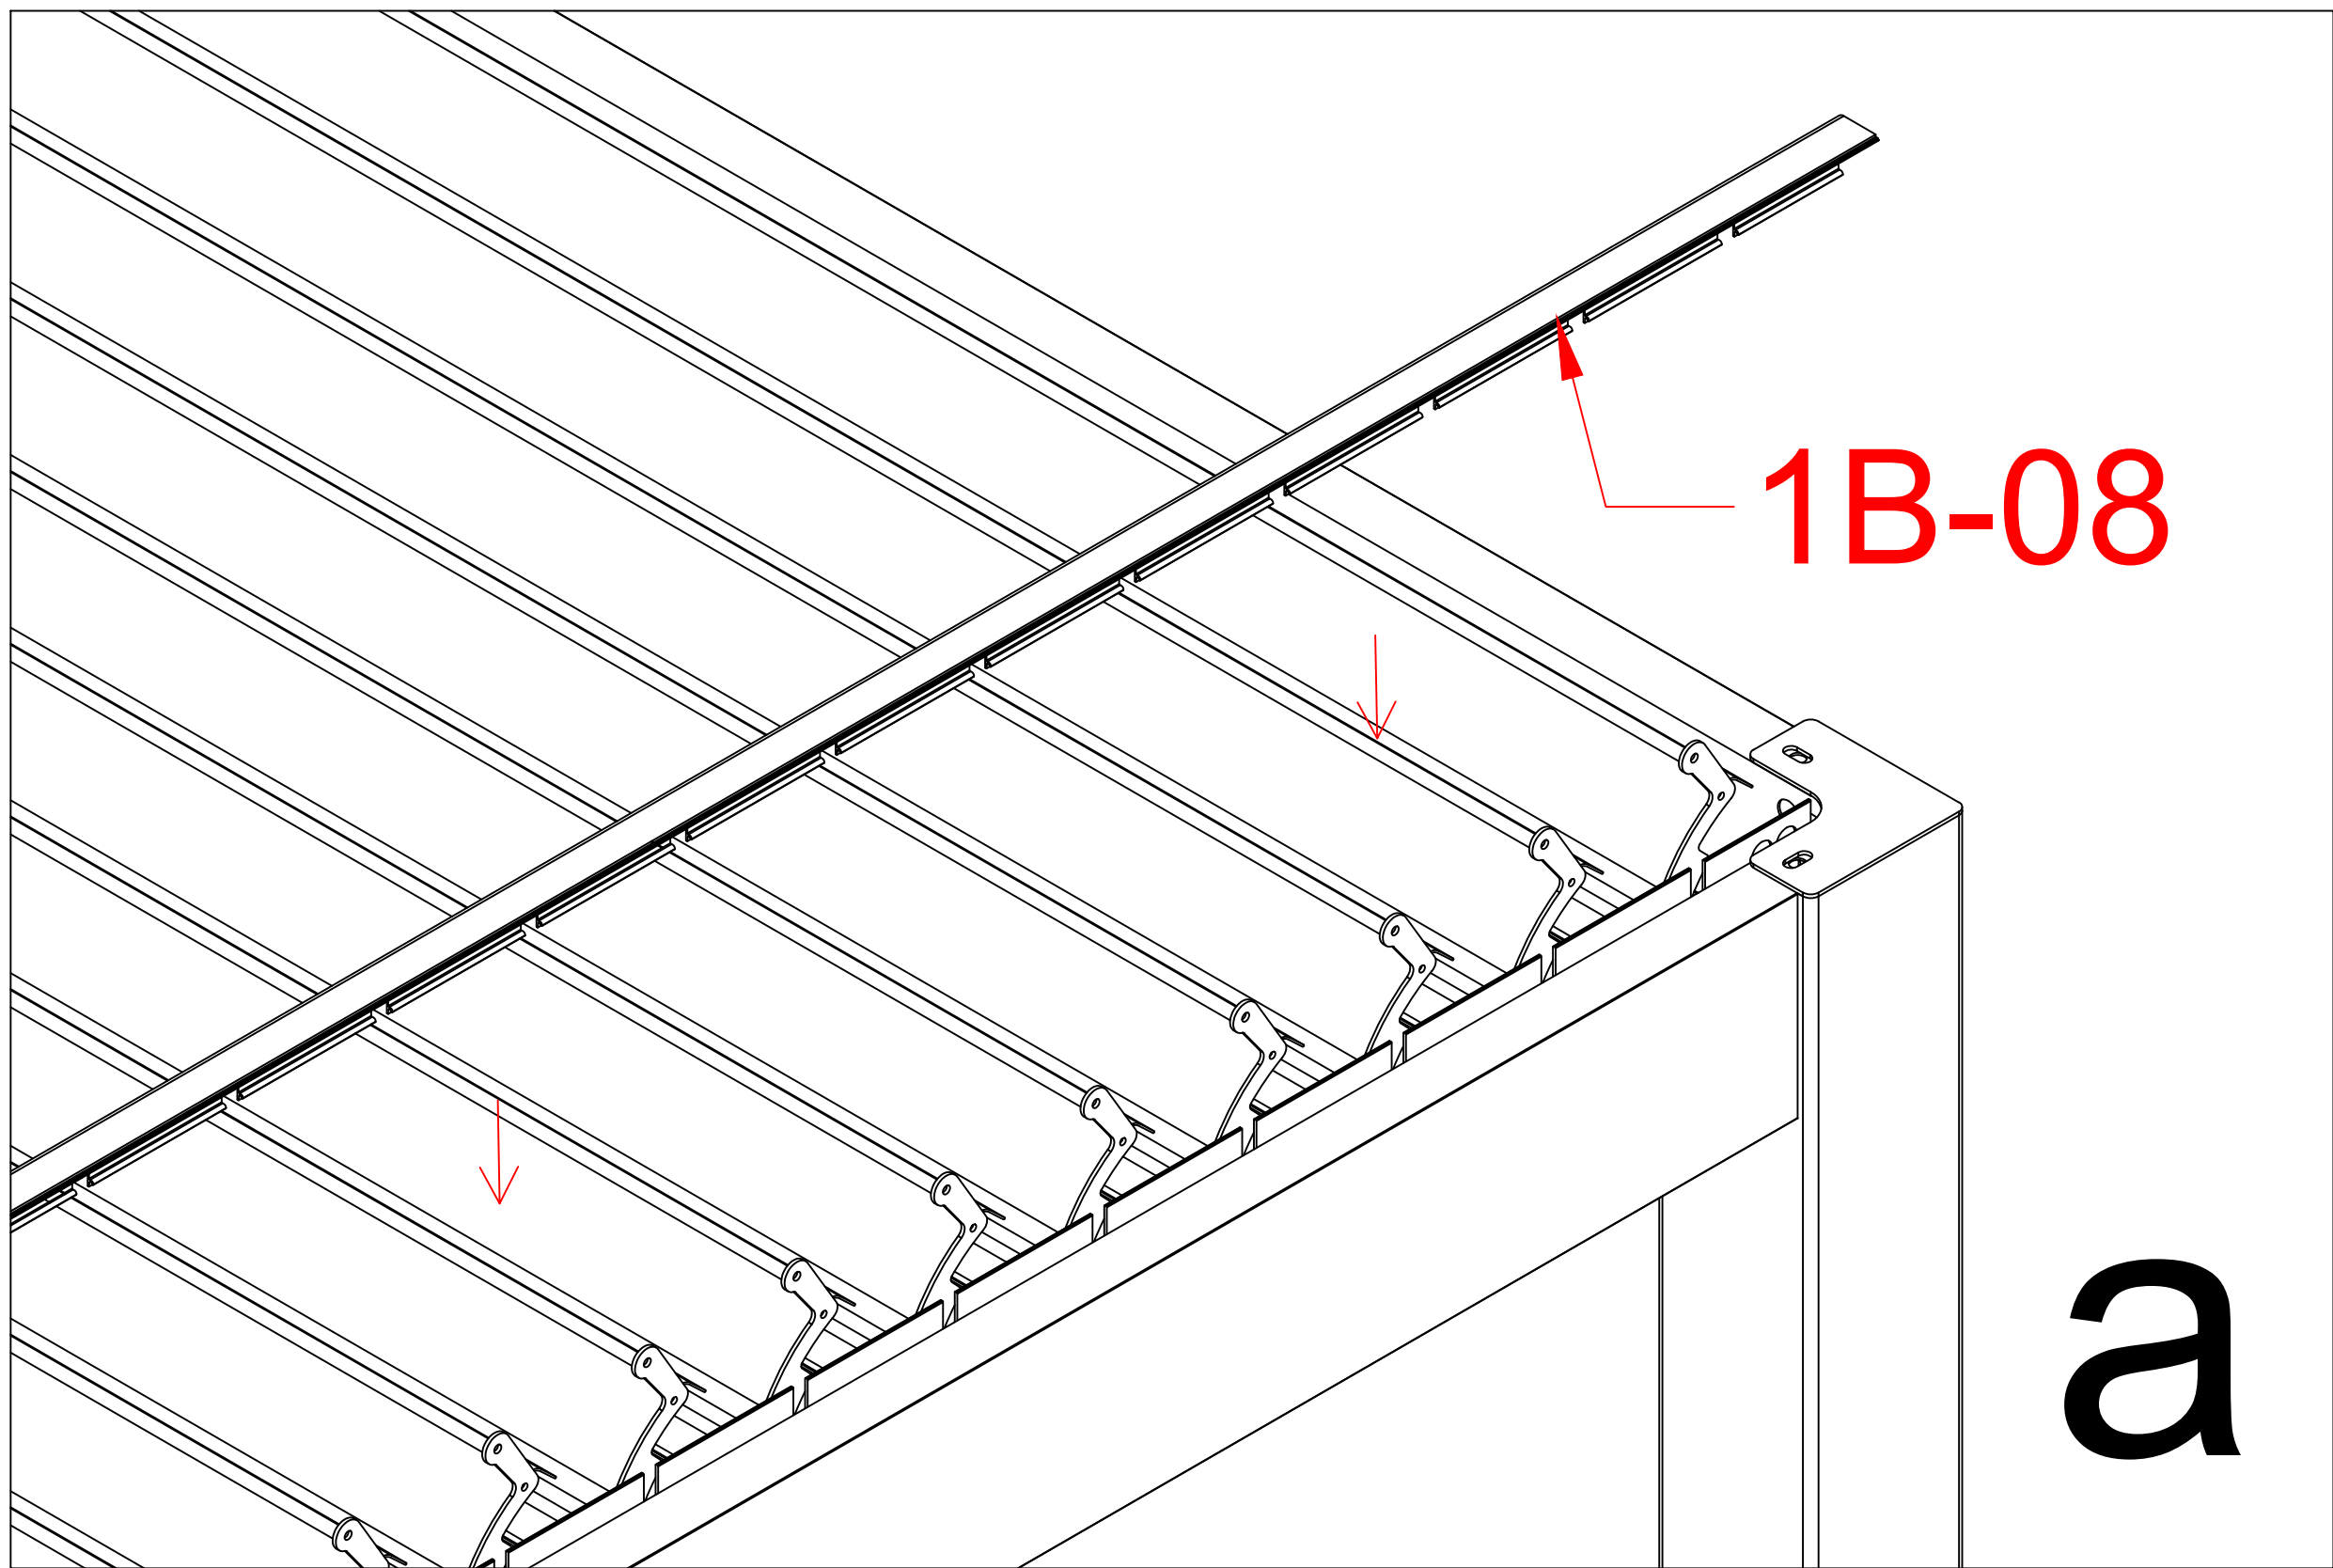


a

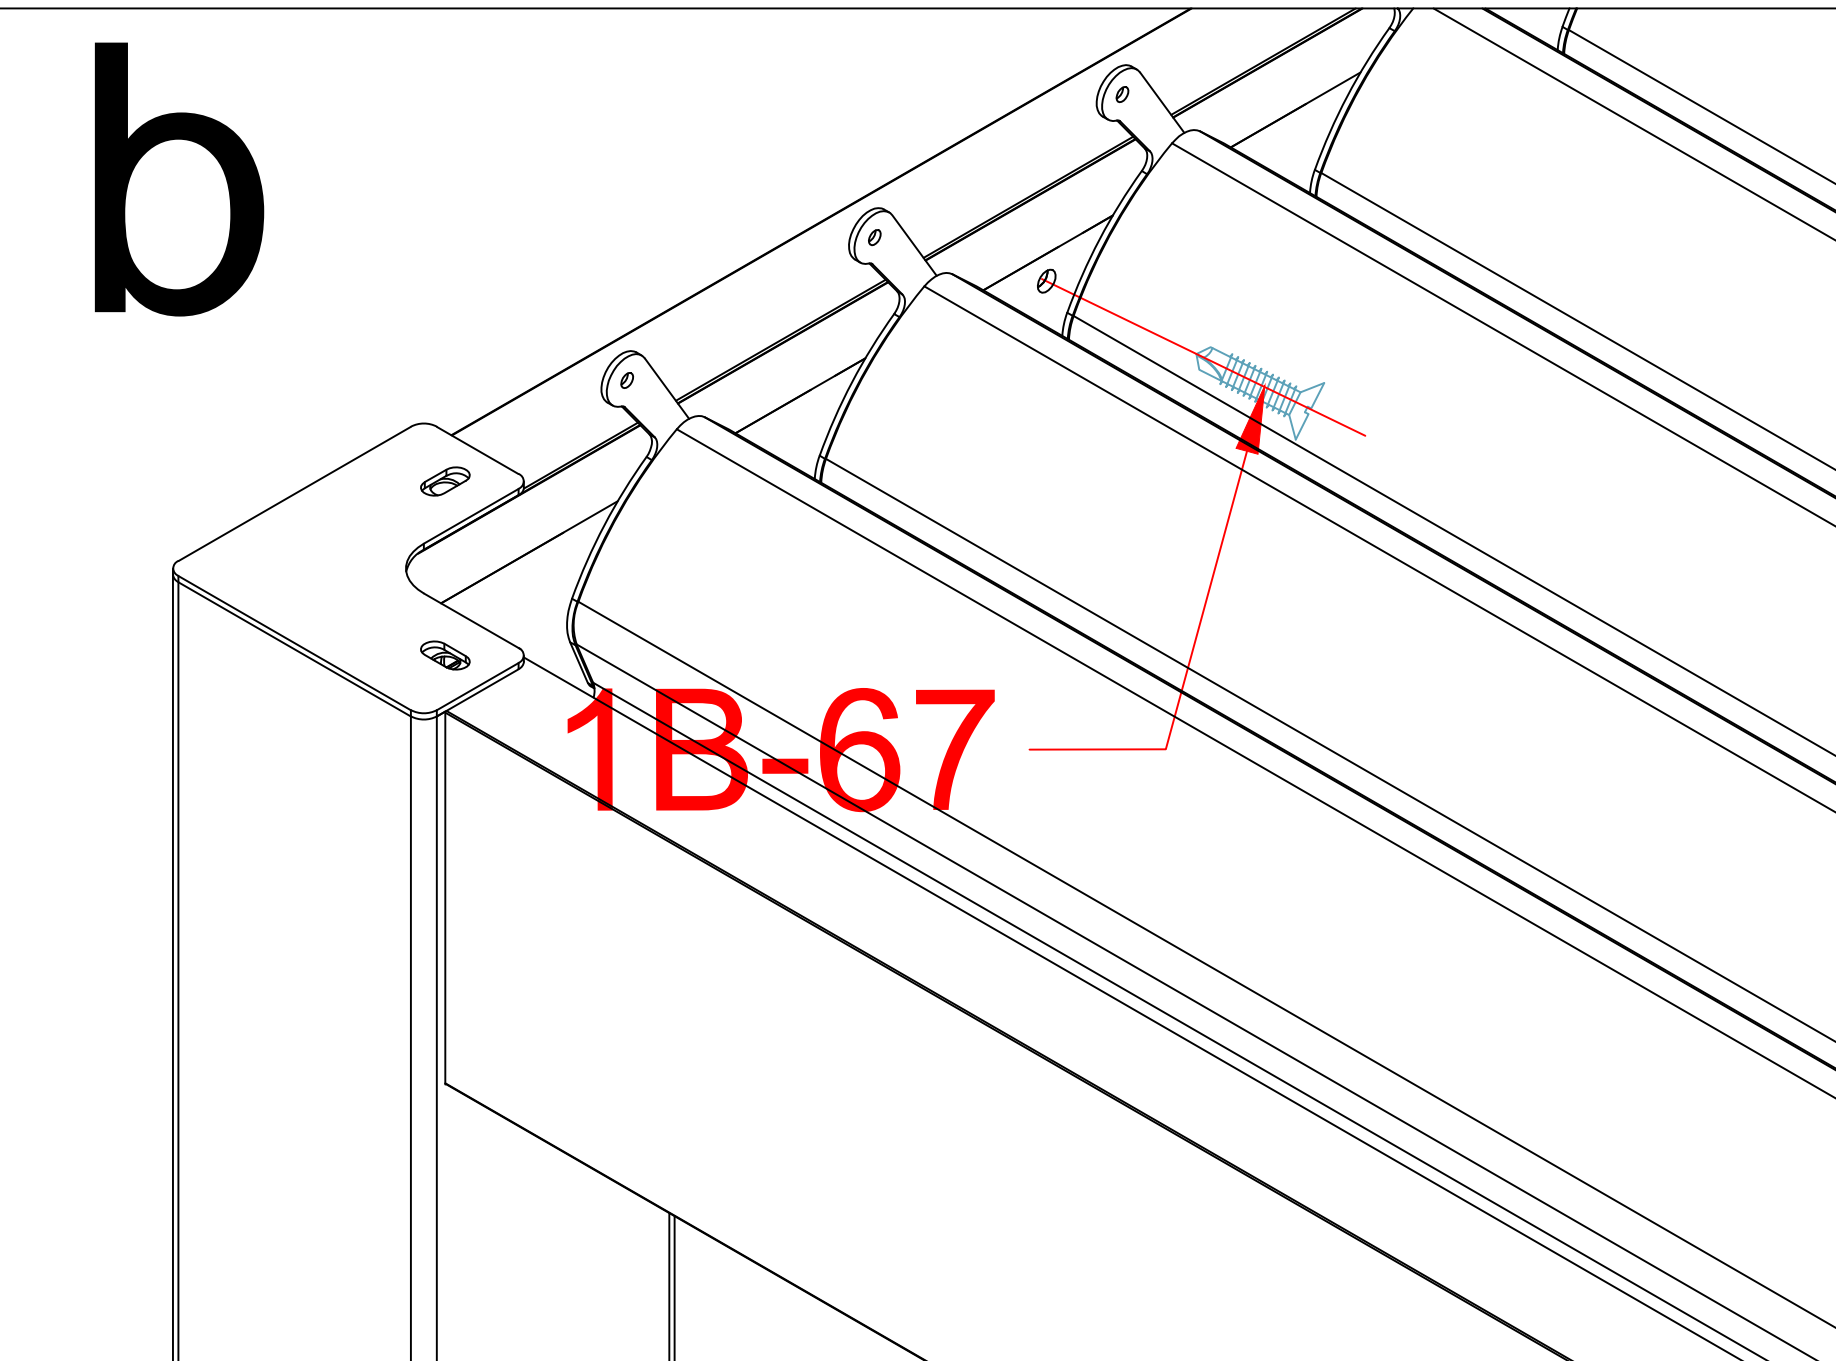



b

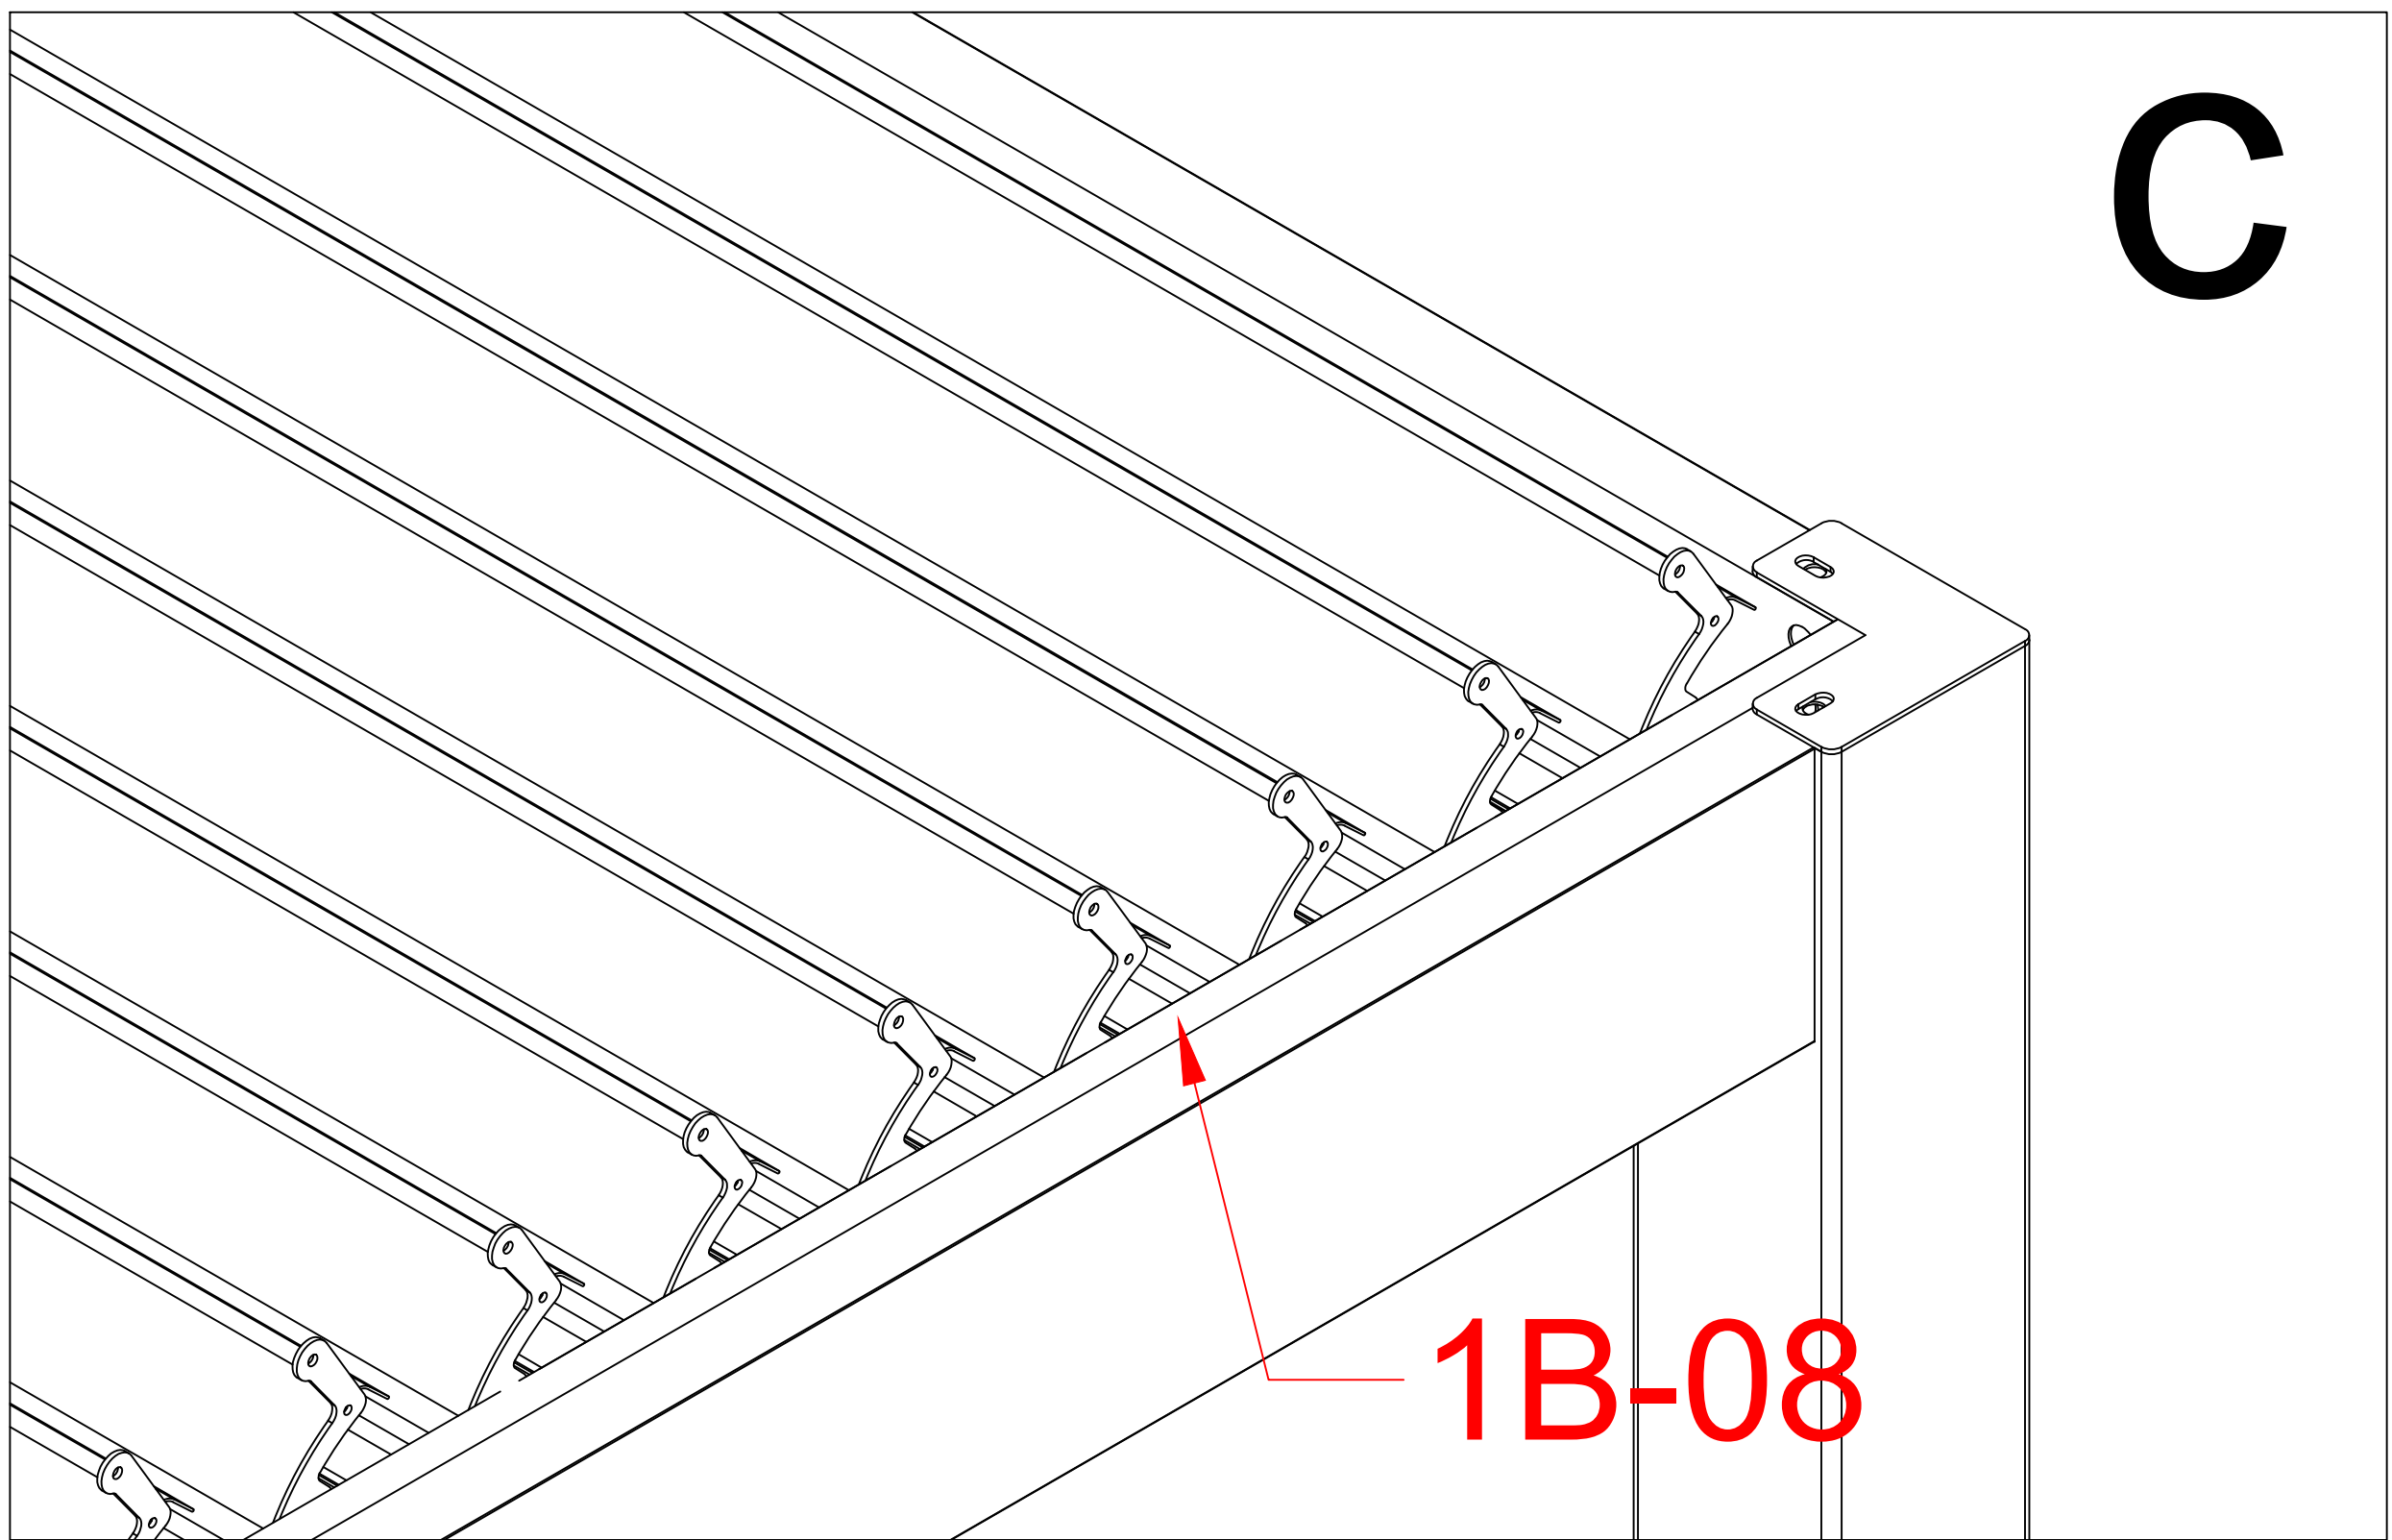





c

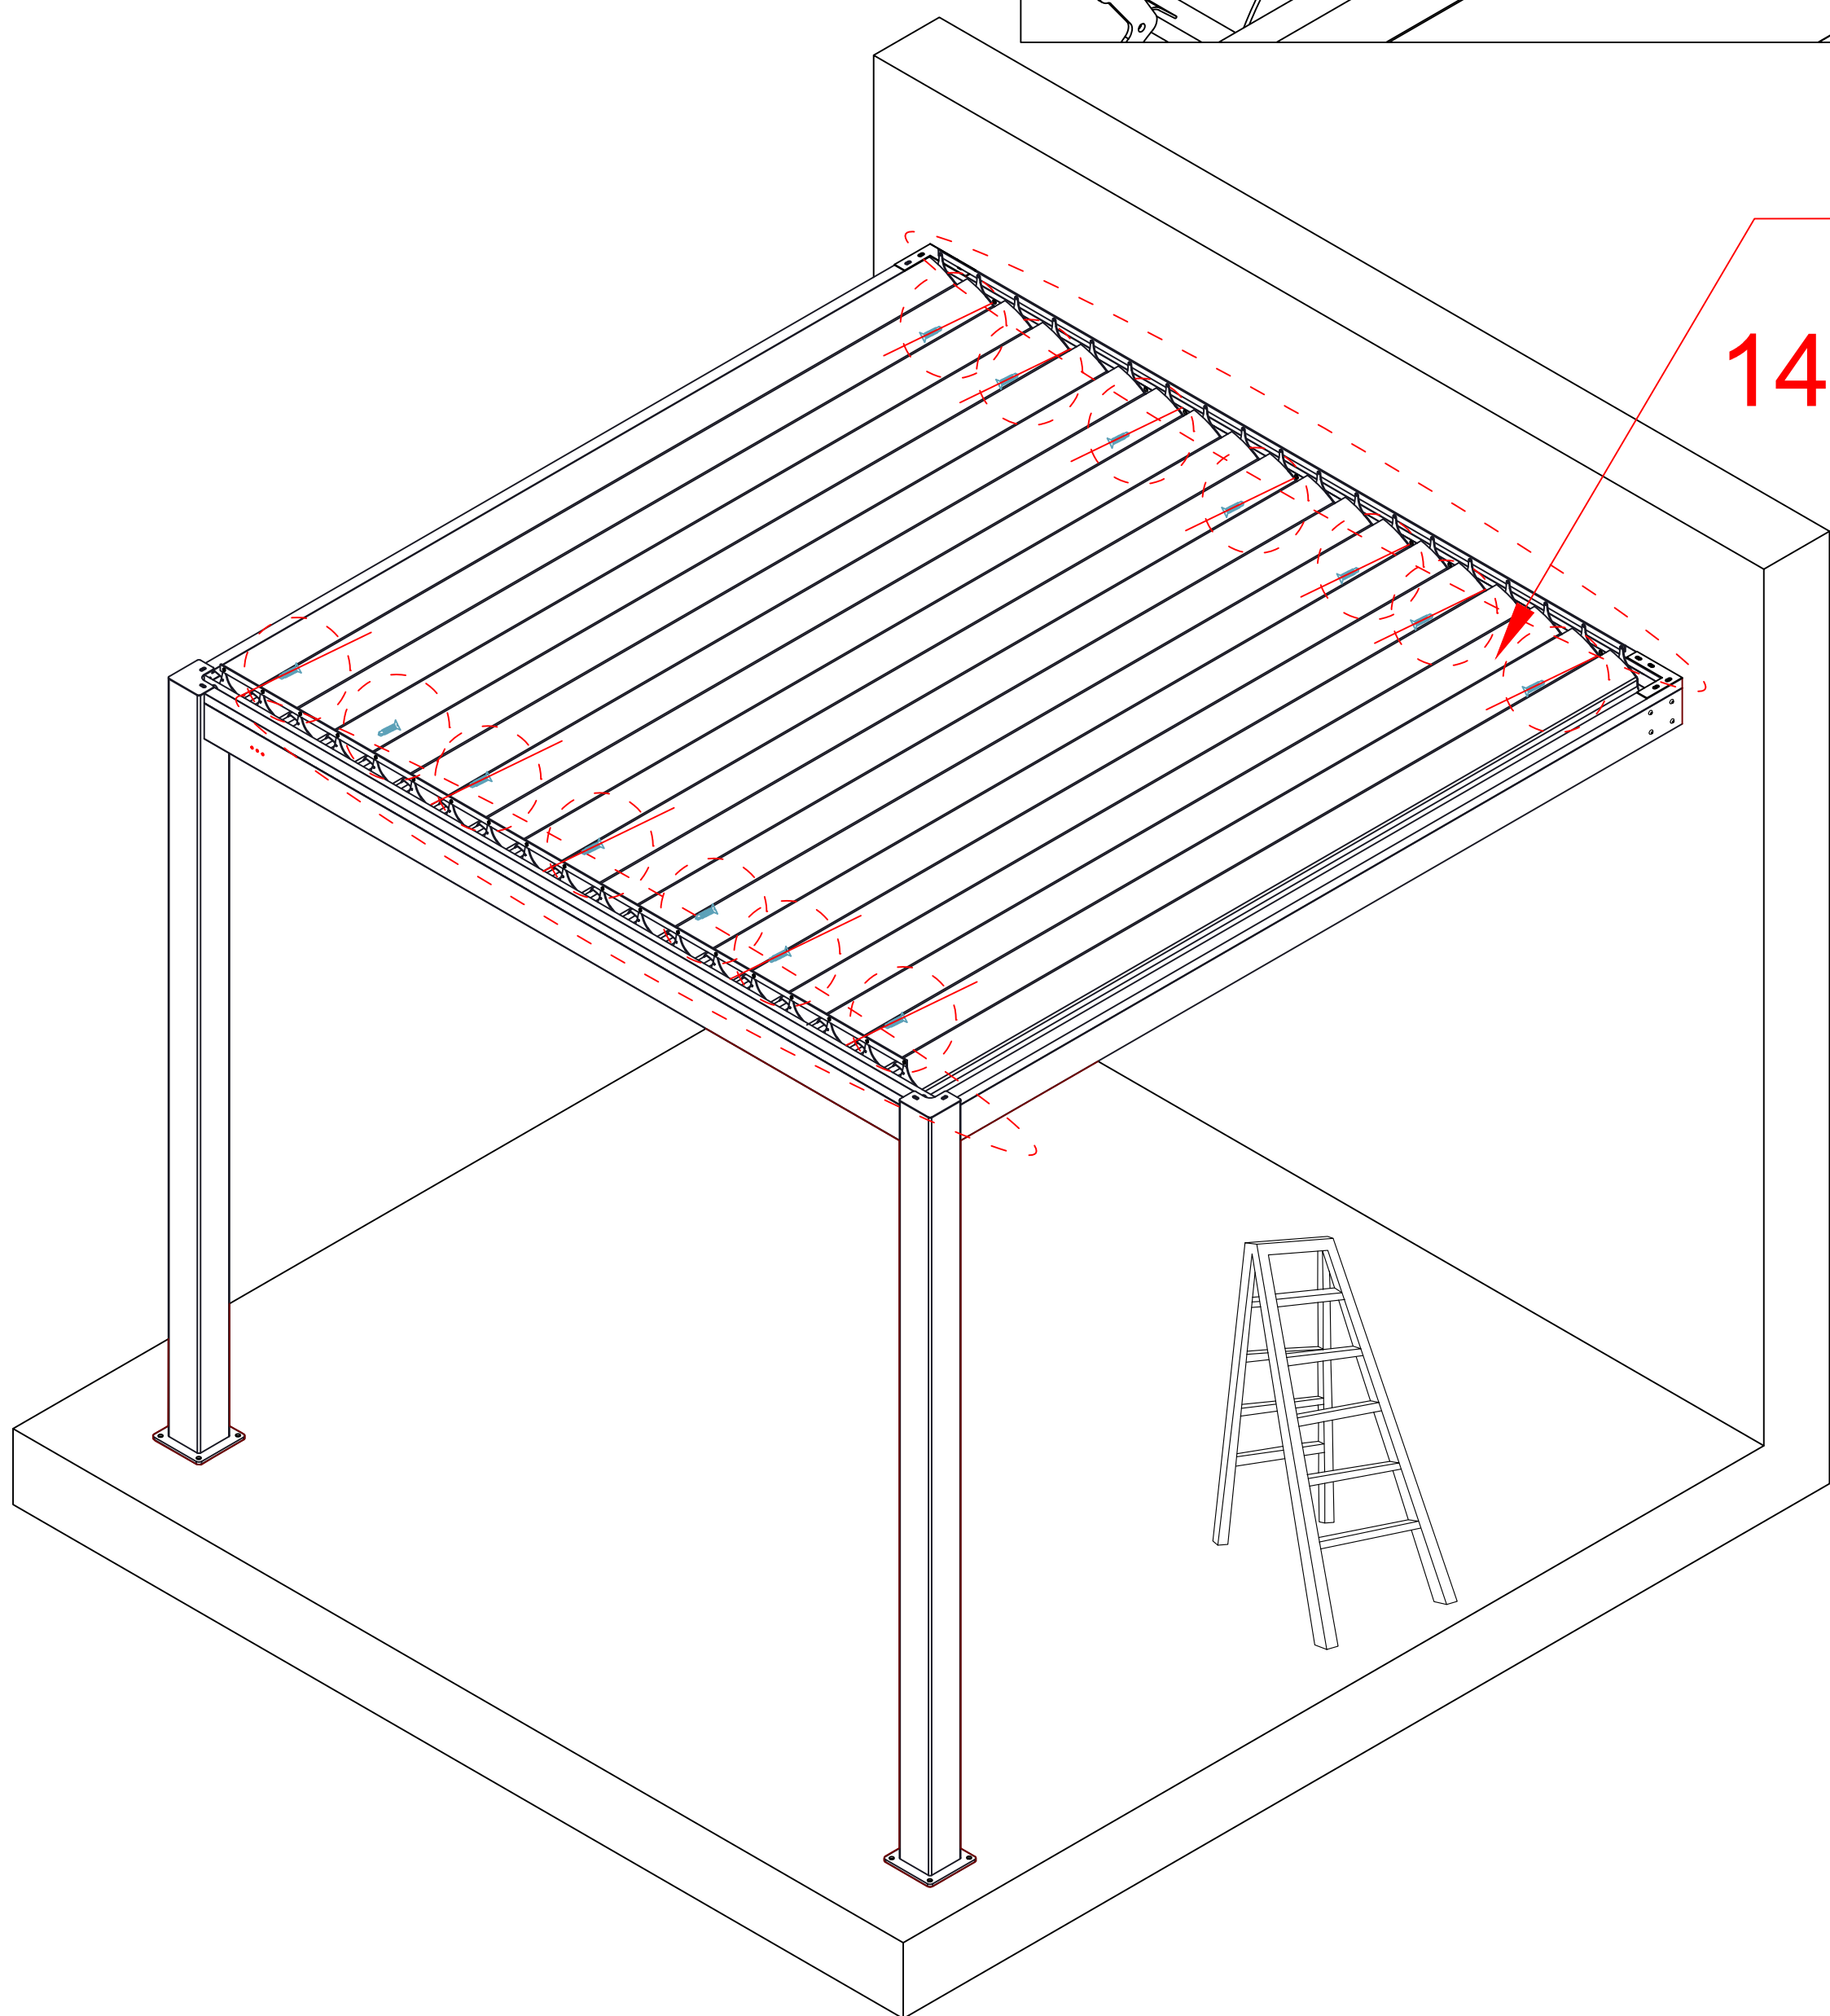

1B-67
14 screws: 7 screws / strip

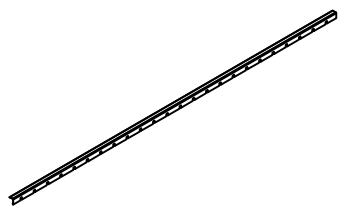
1B-67		14
1B-08	 	2

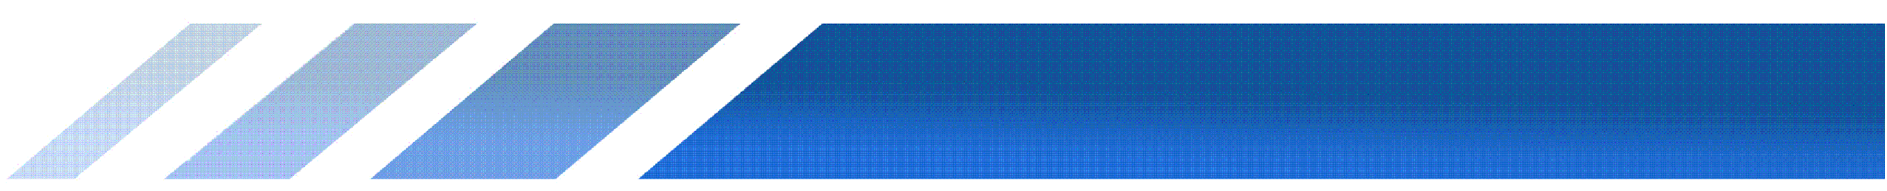

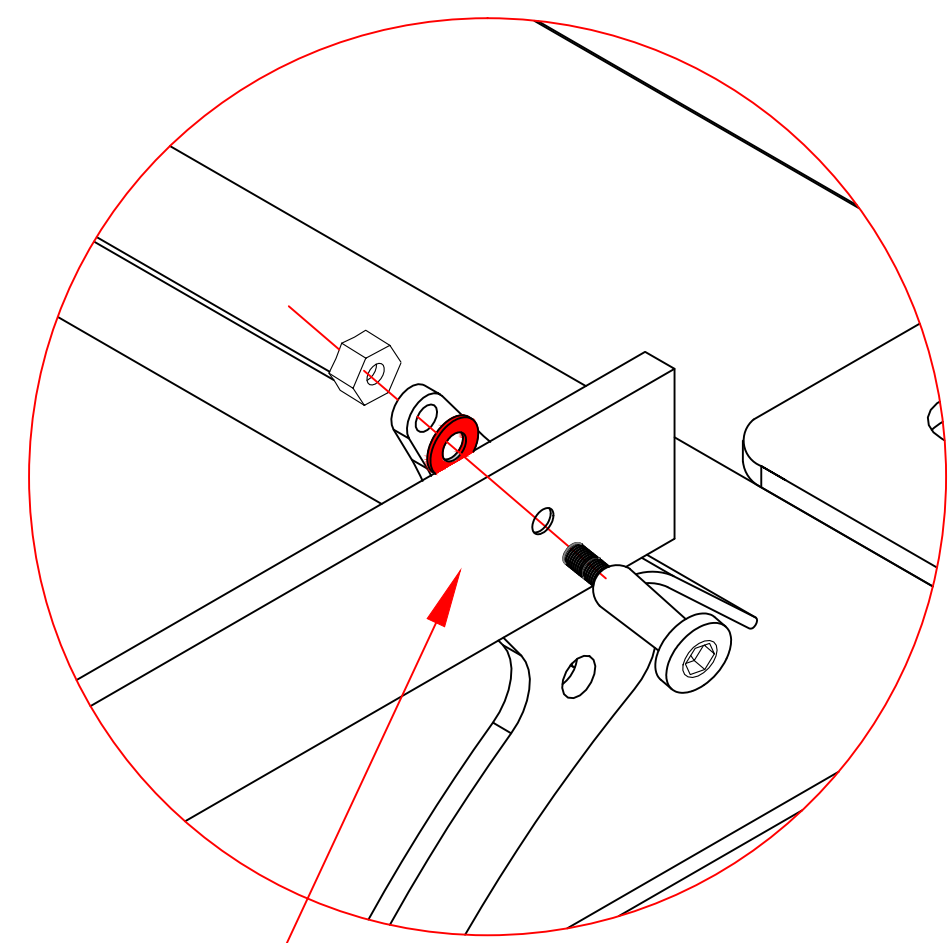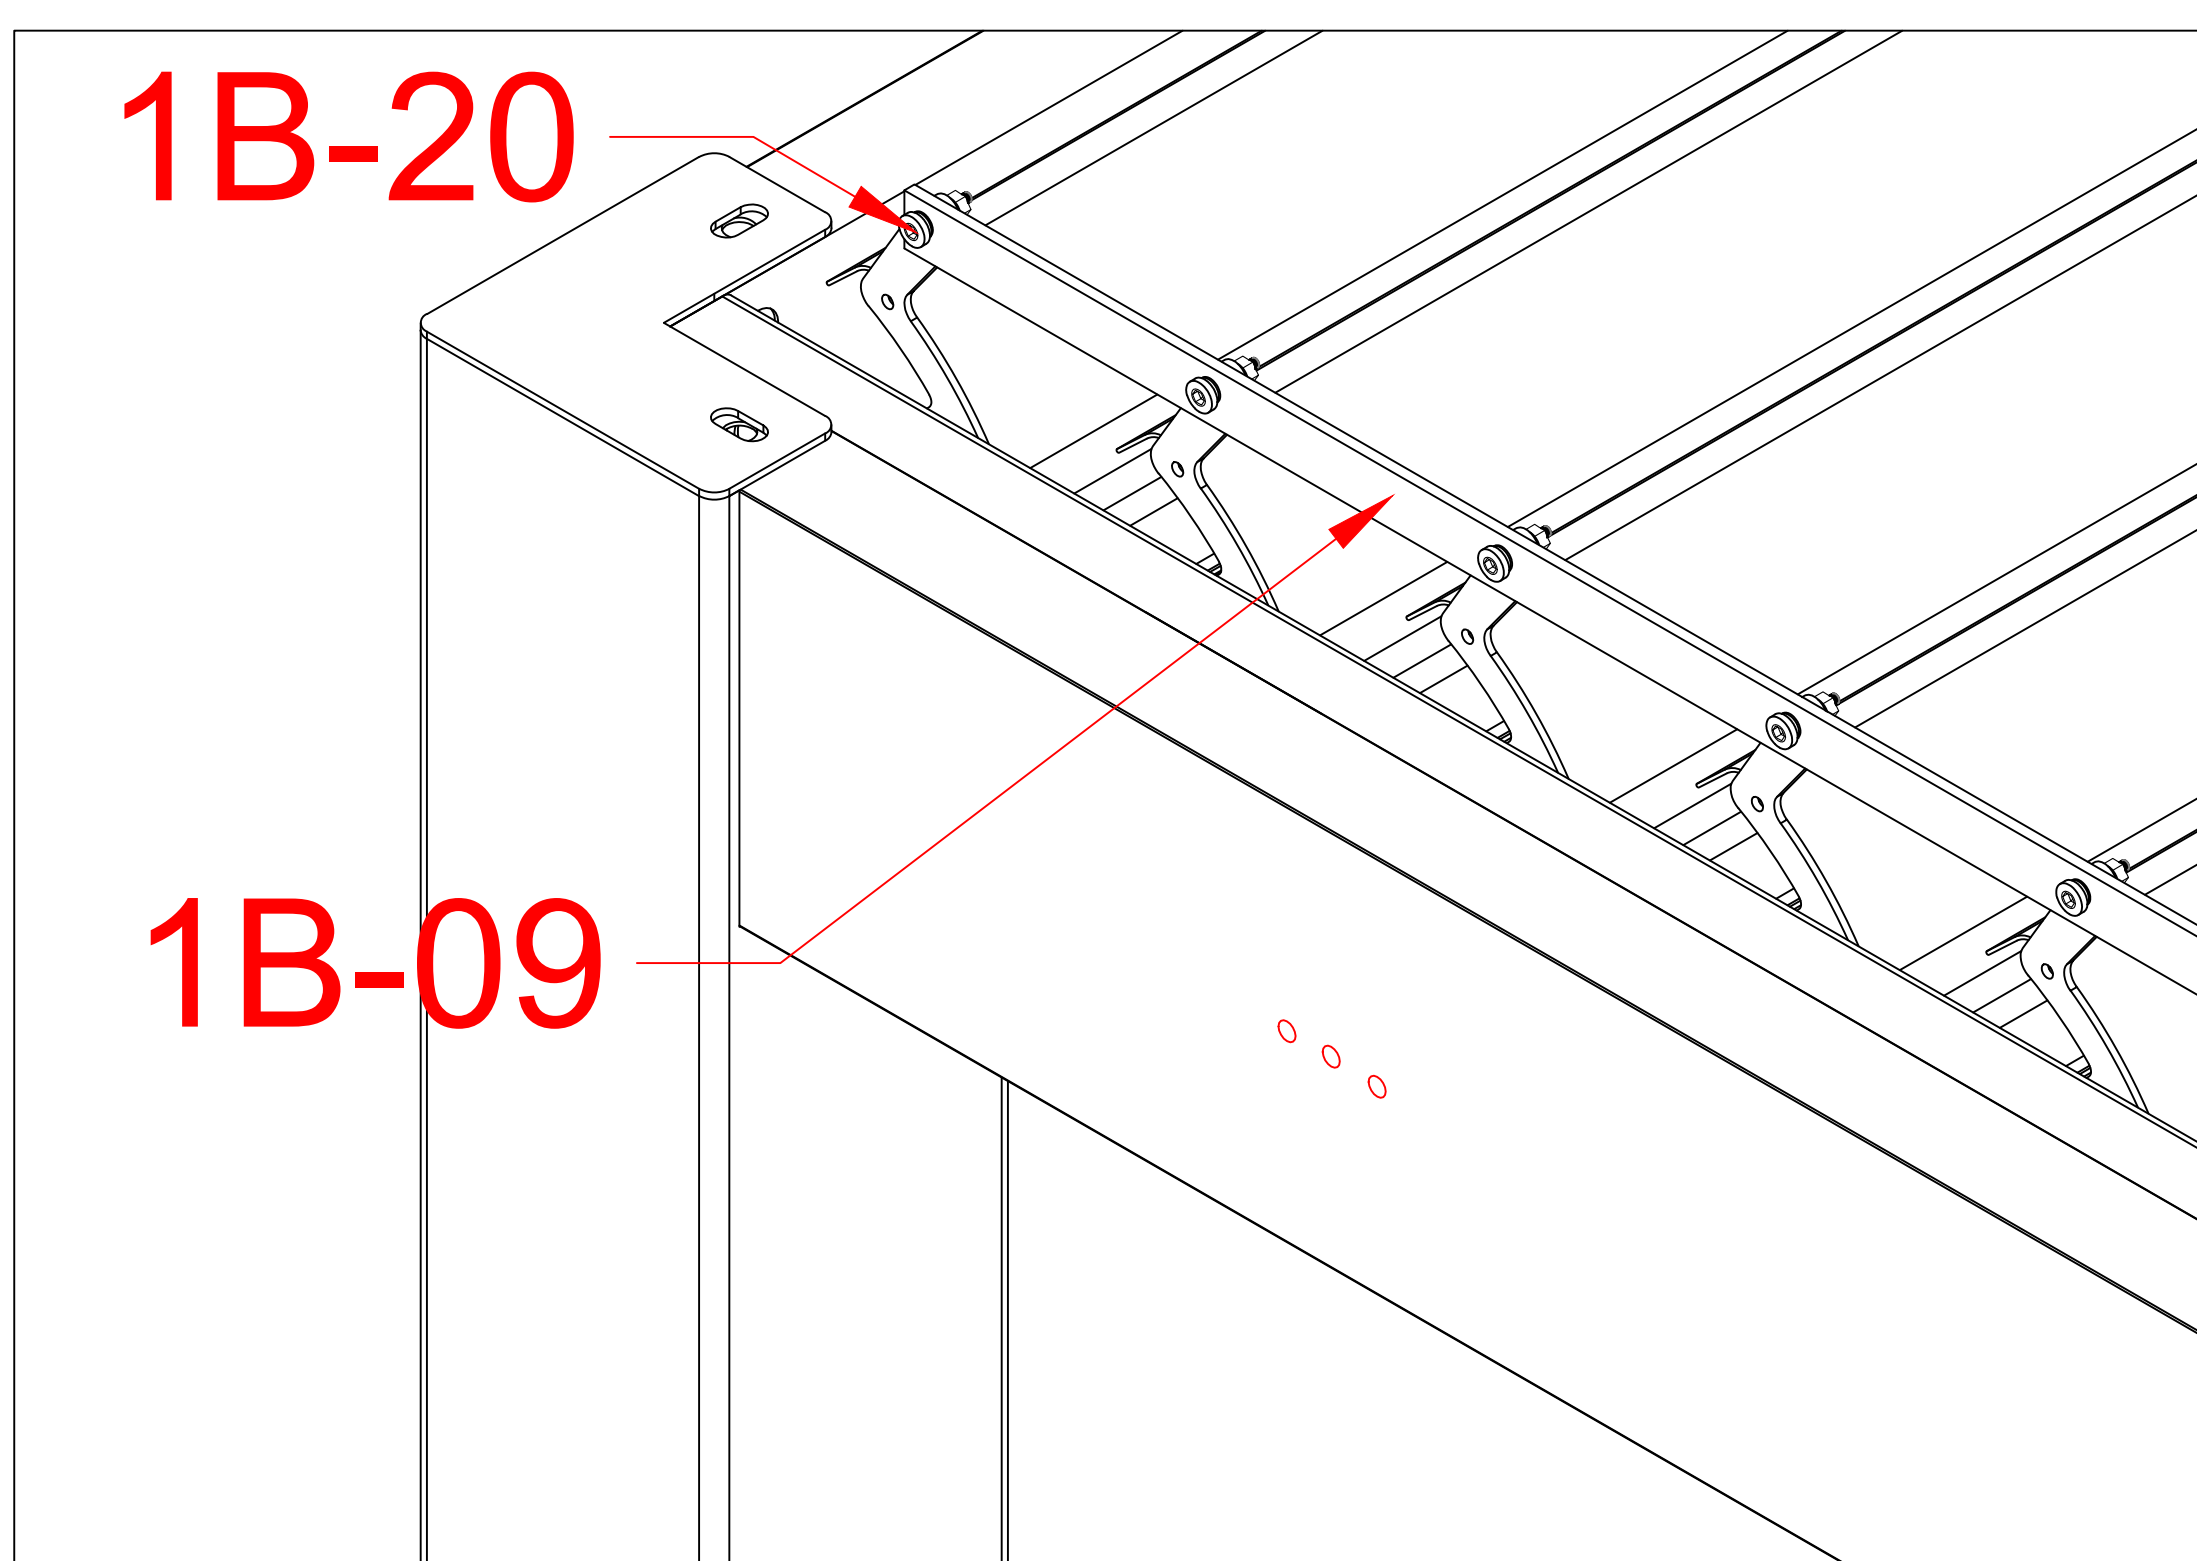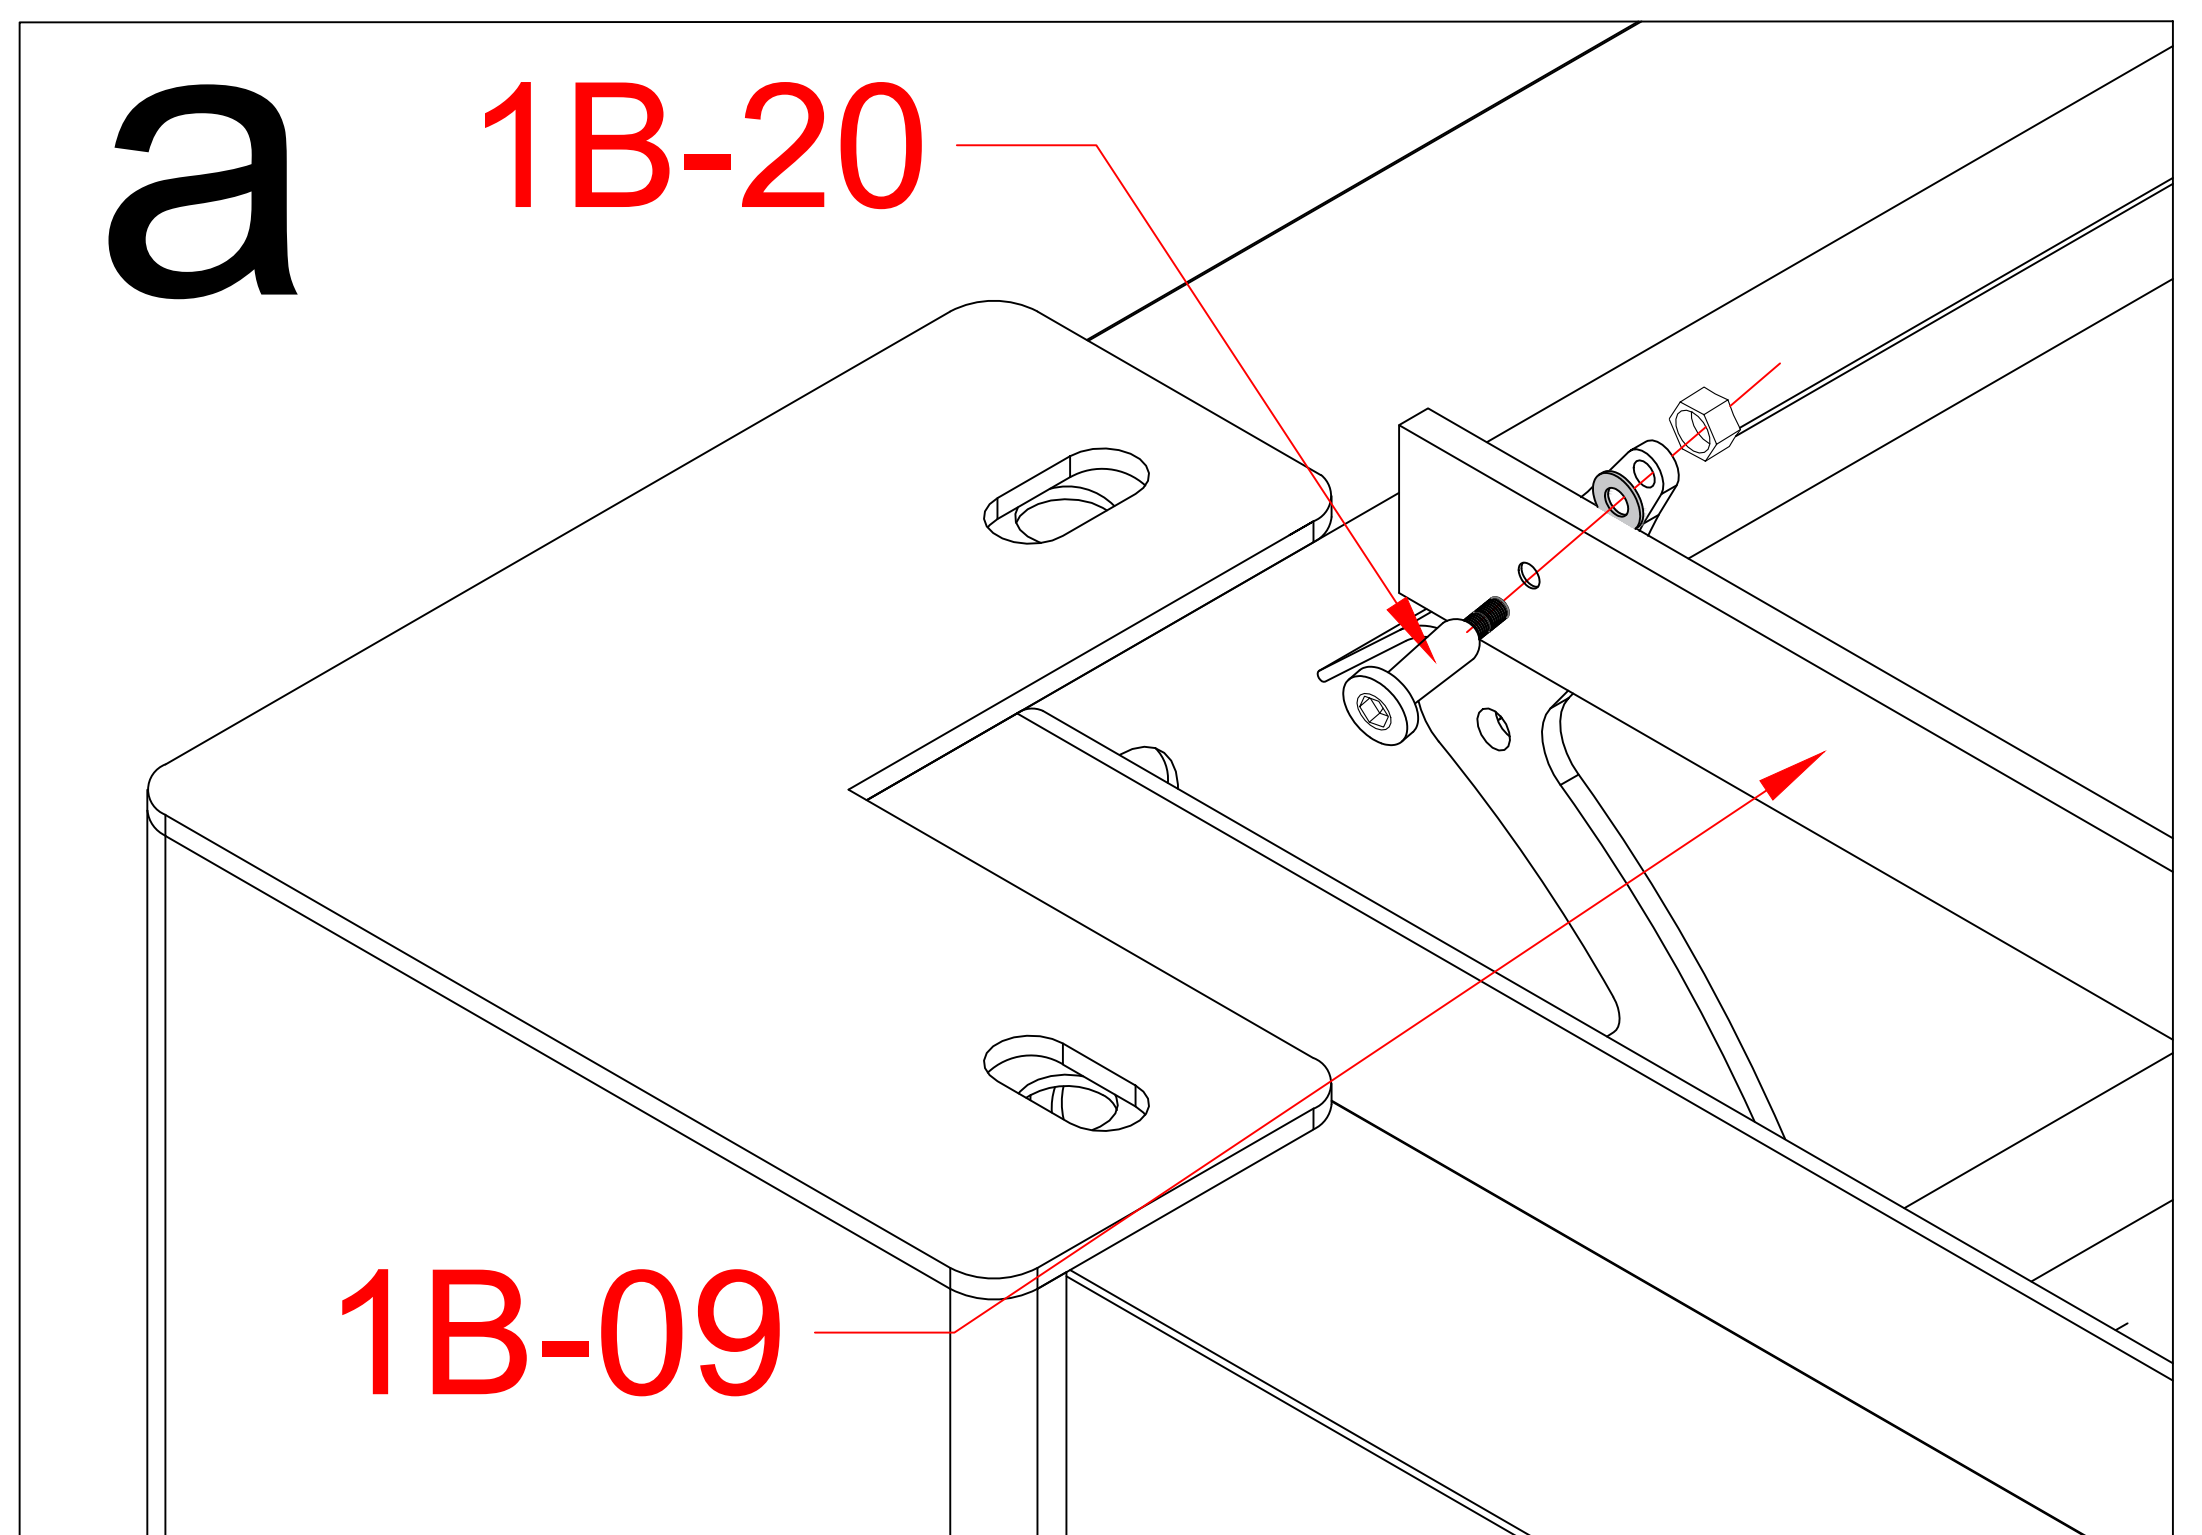






The driving bar shall be always outside of louver end caps. If inside, louvers could not be opened 100%

b

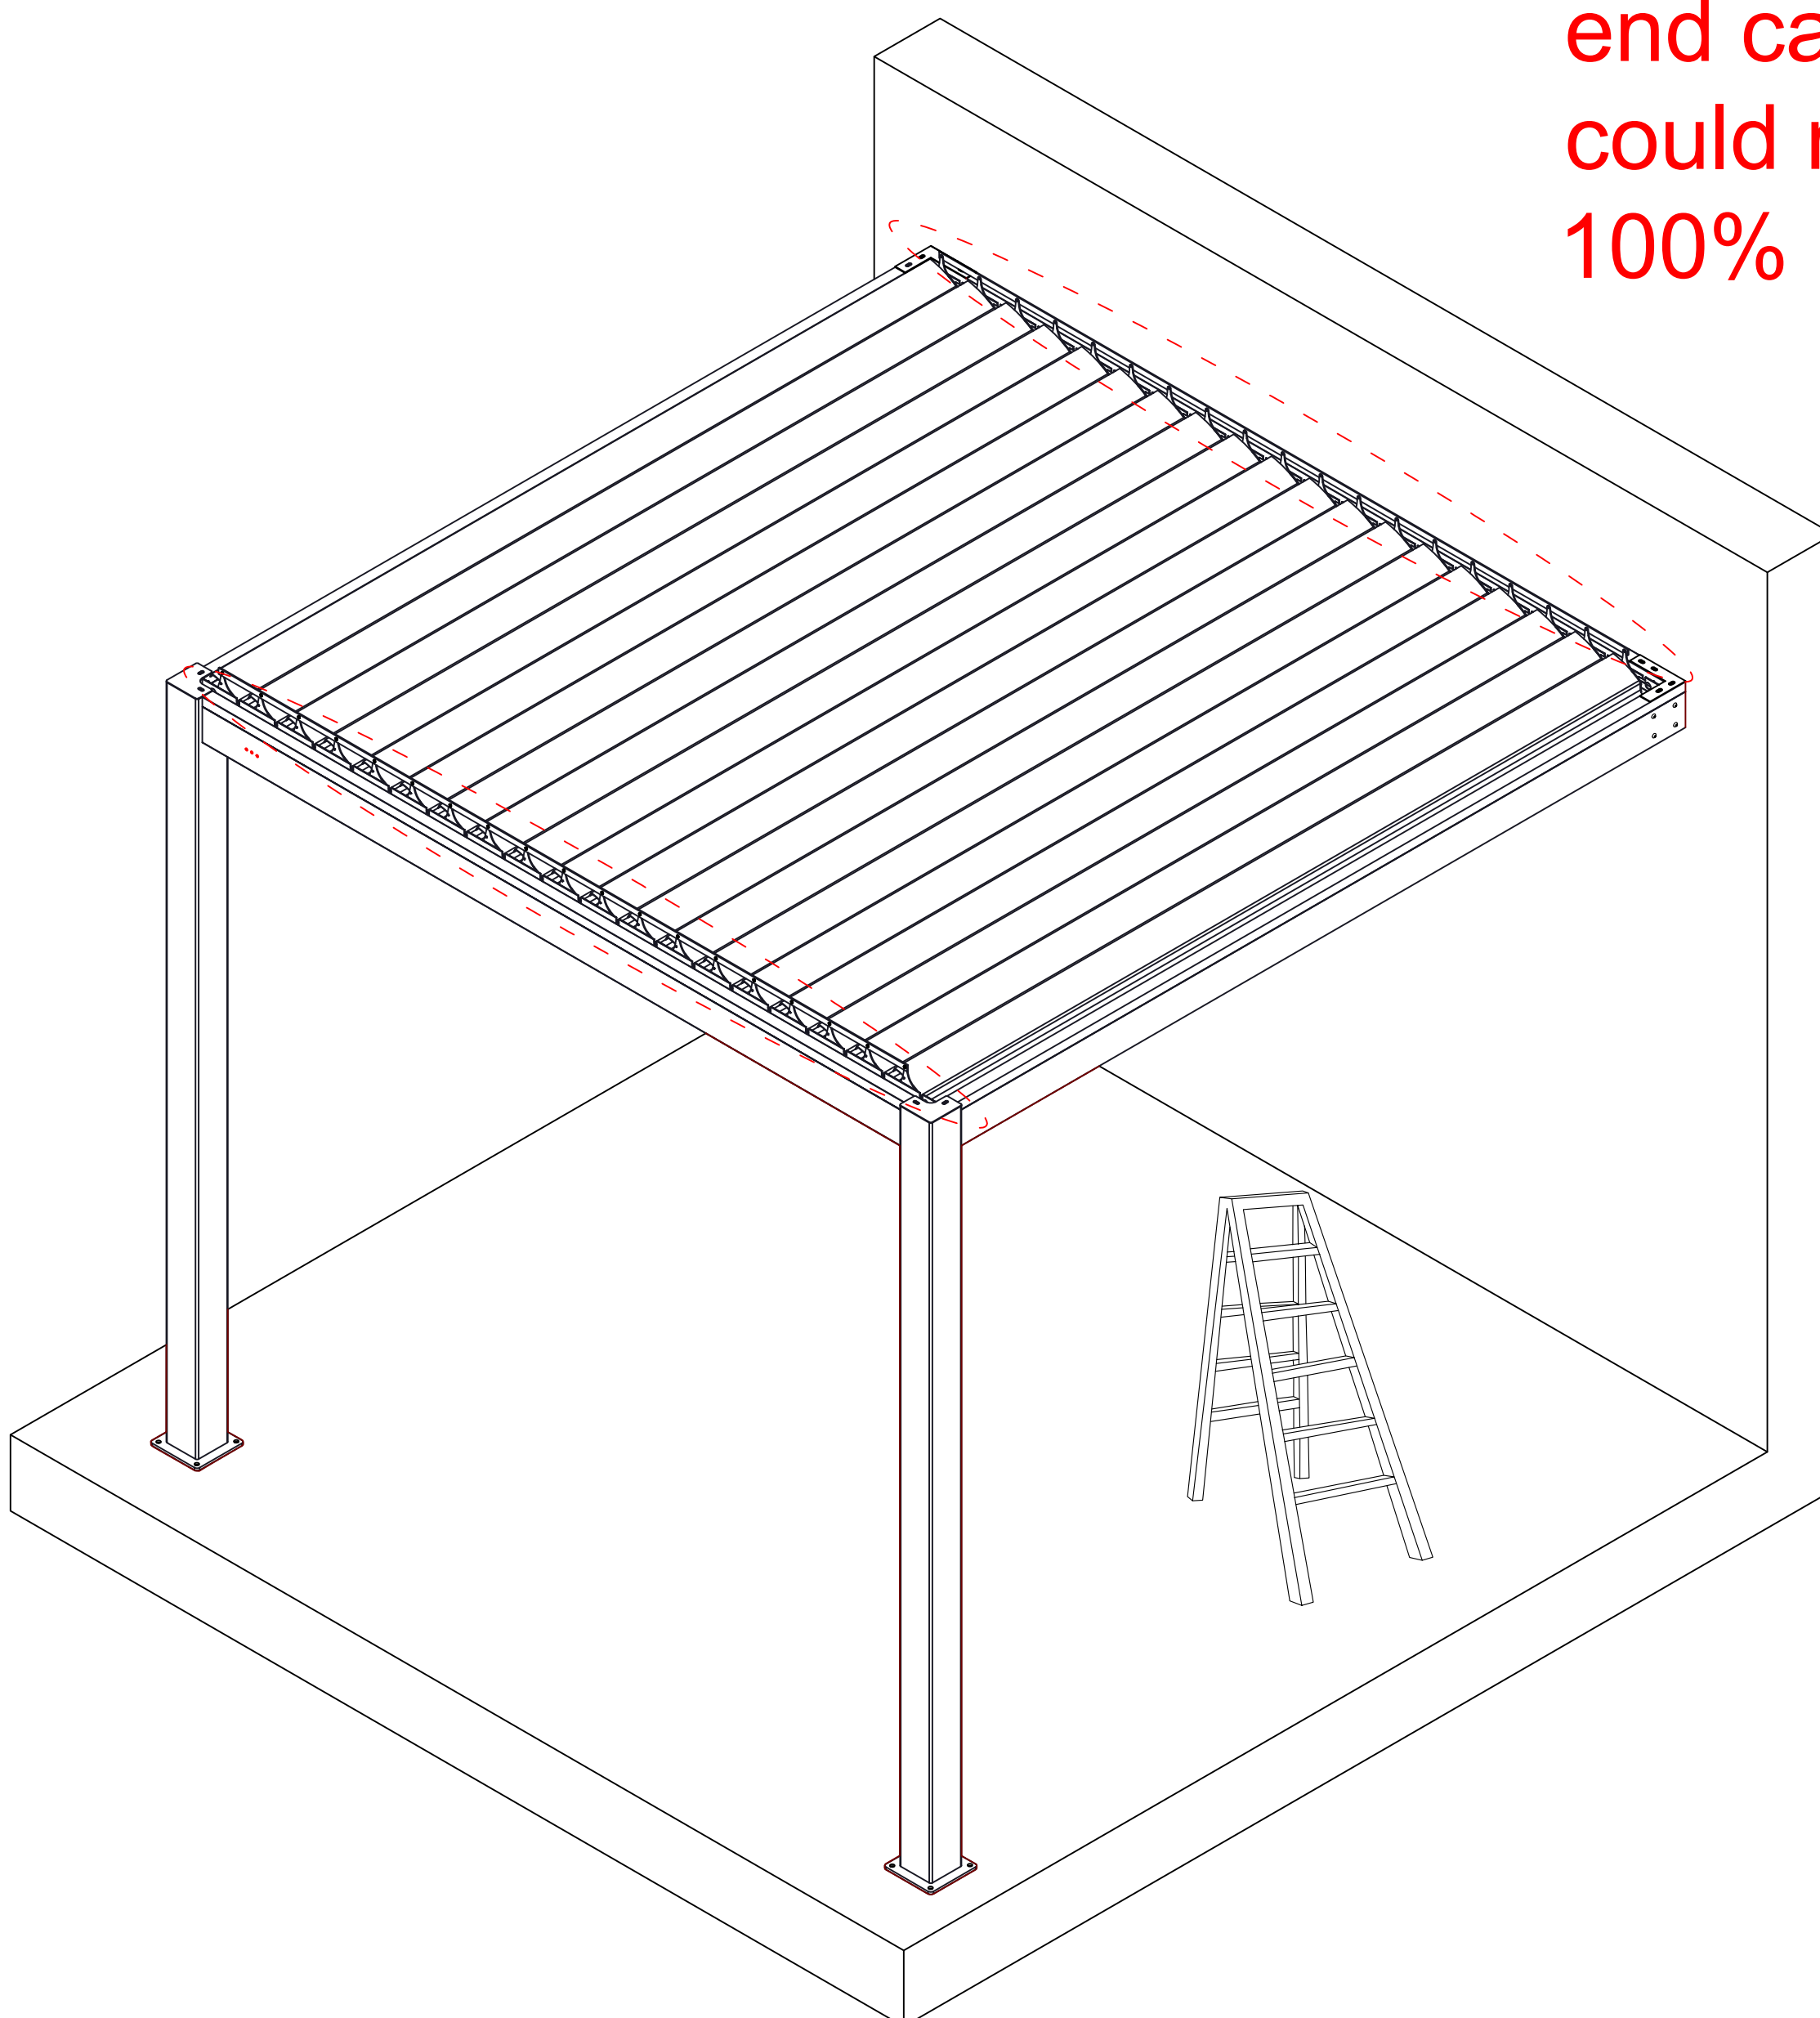






1B-09		2
1B-20		X

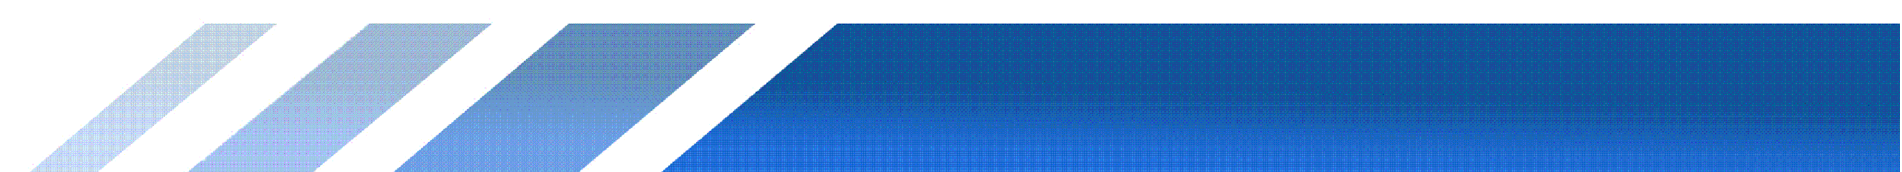

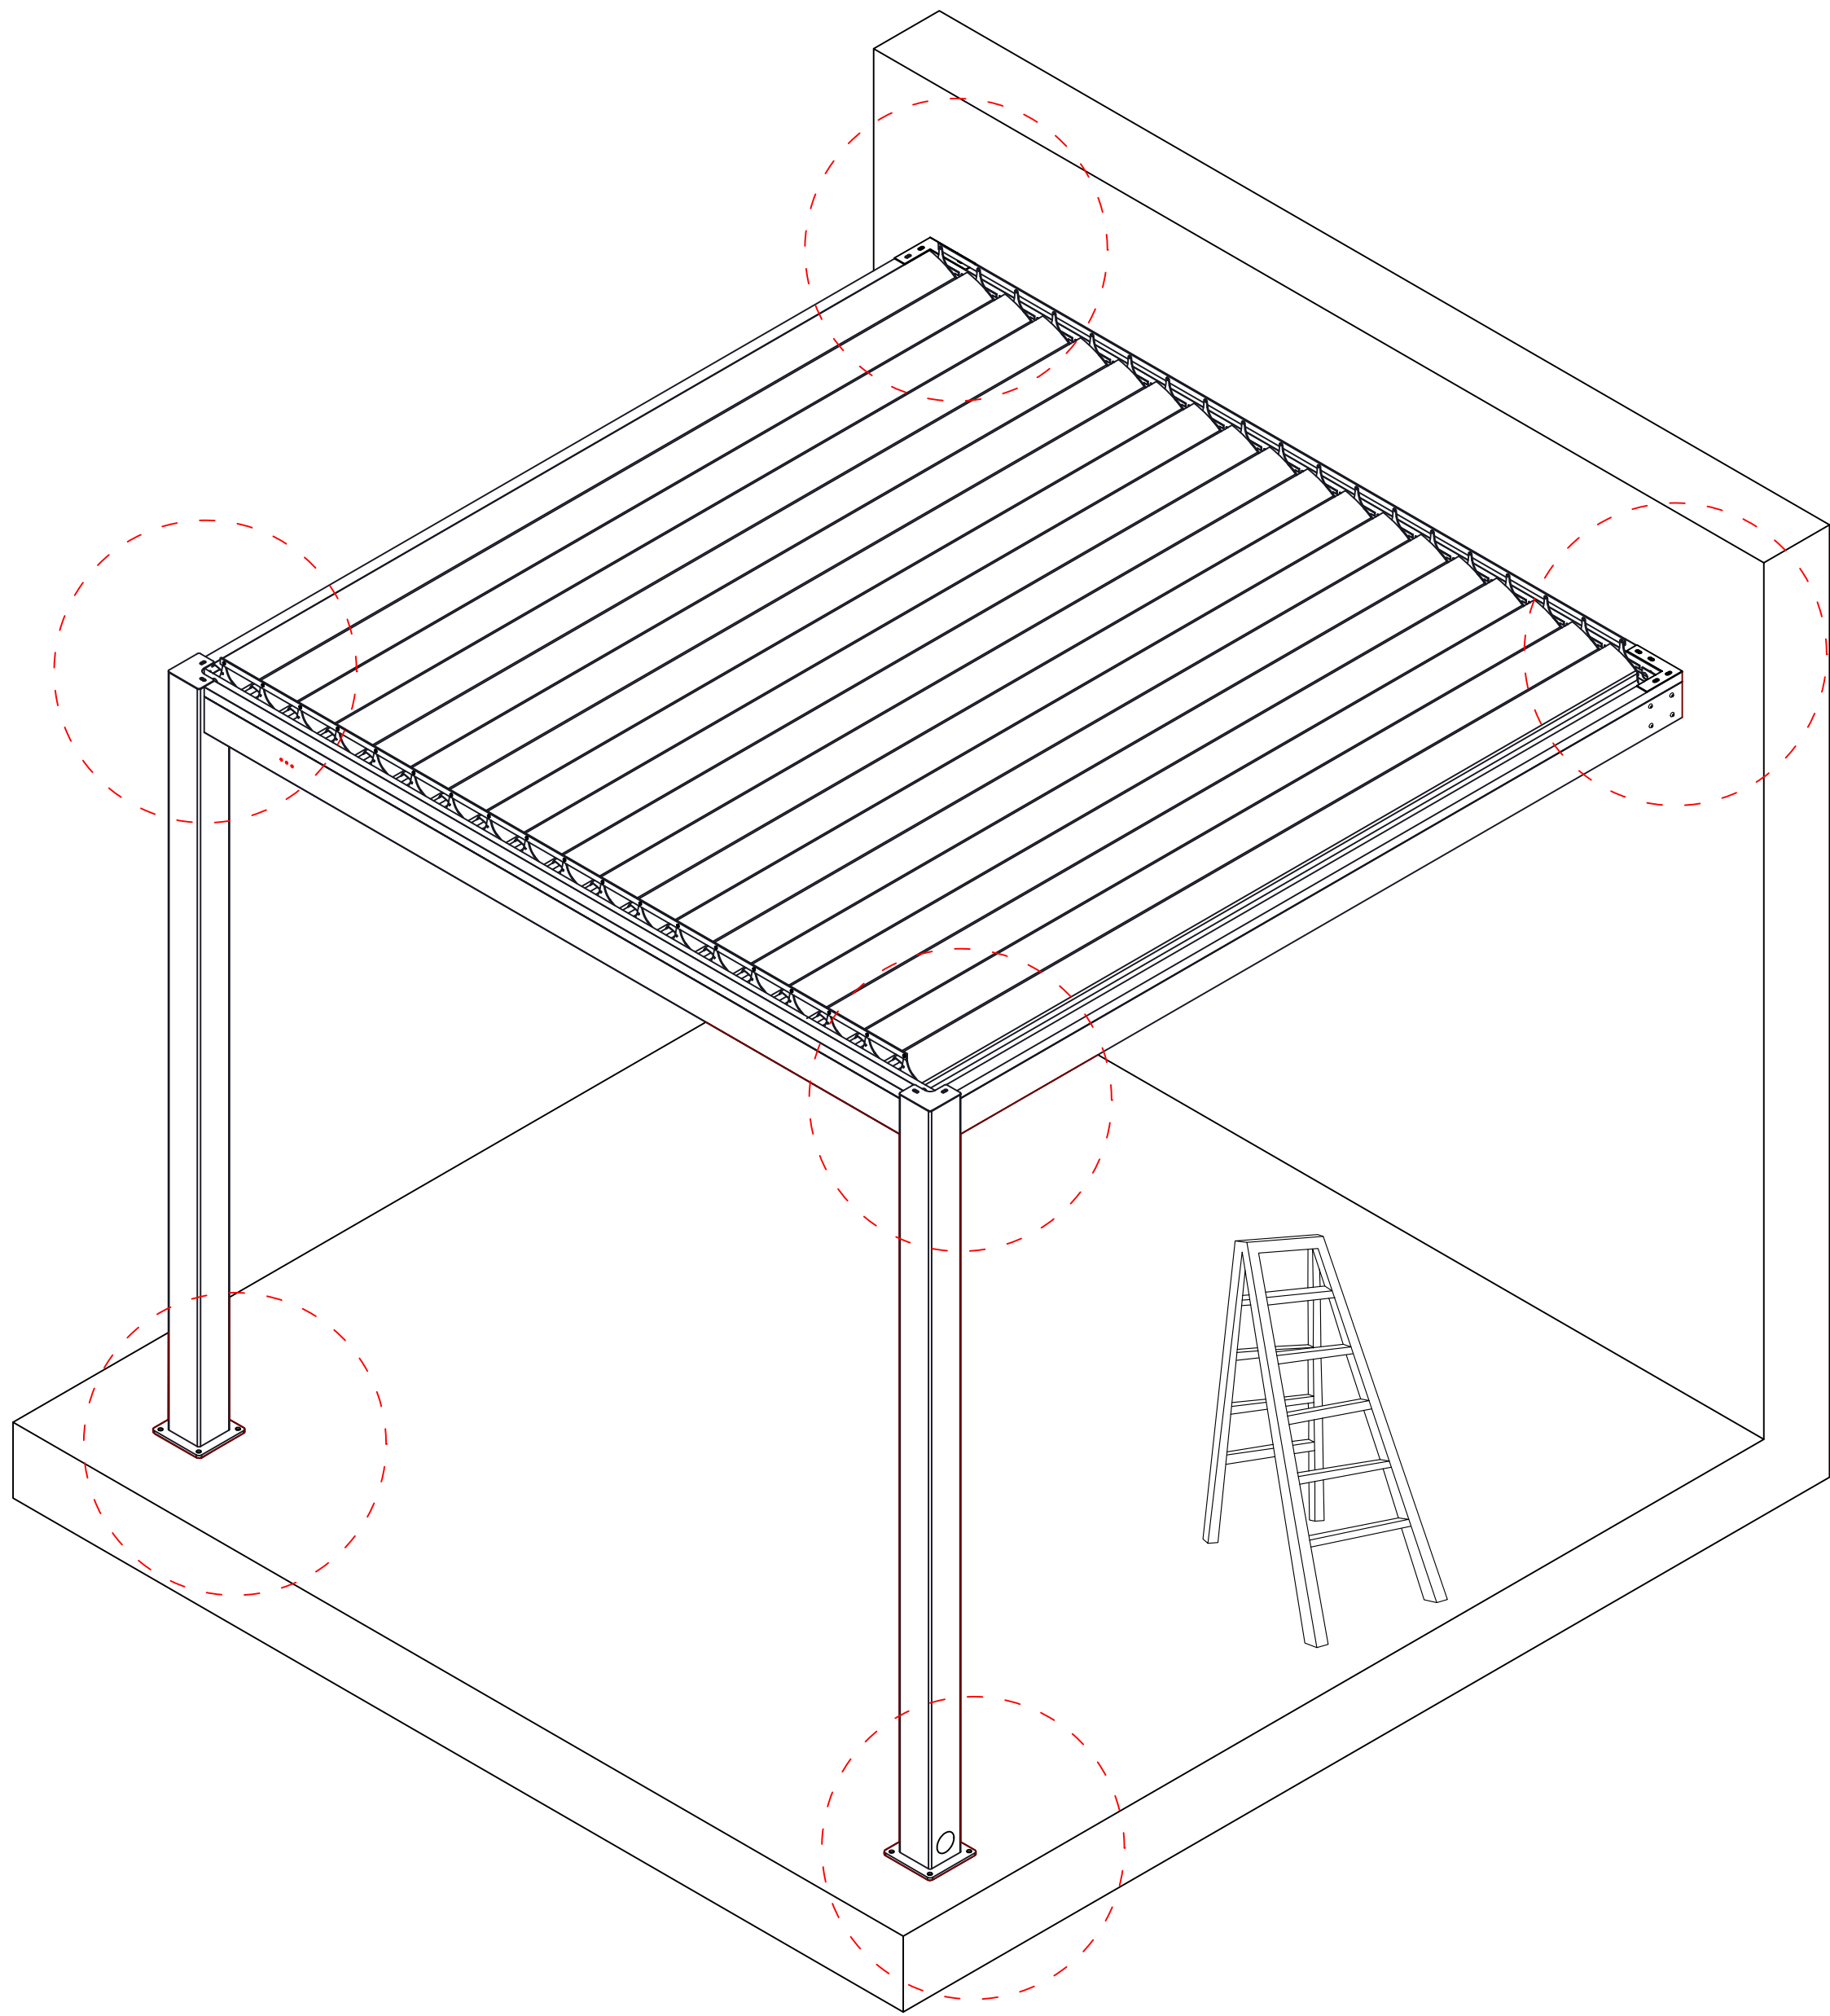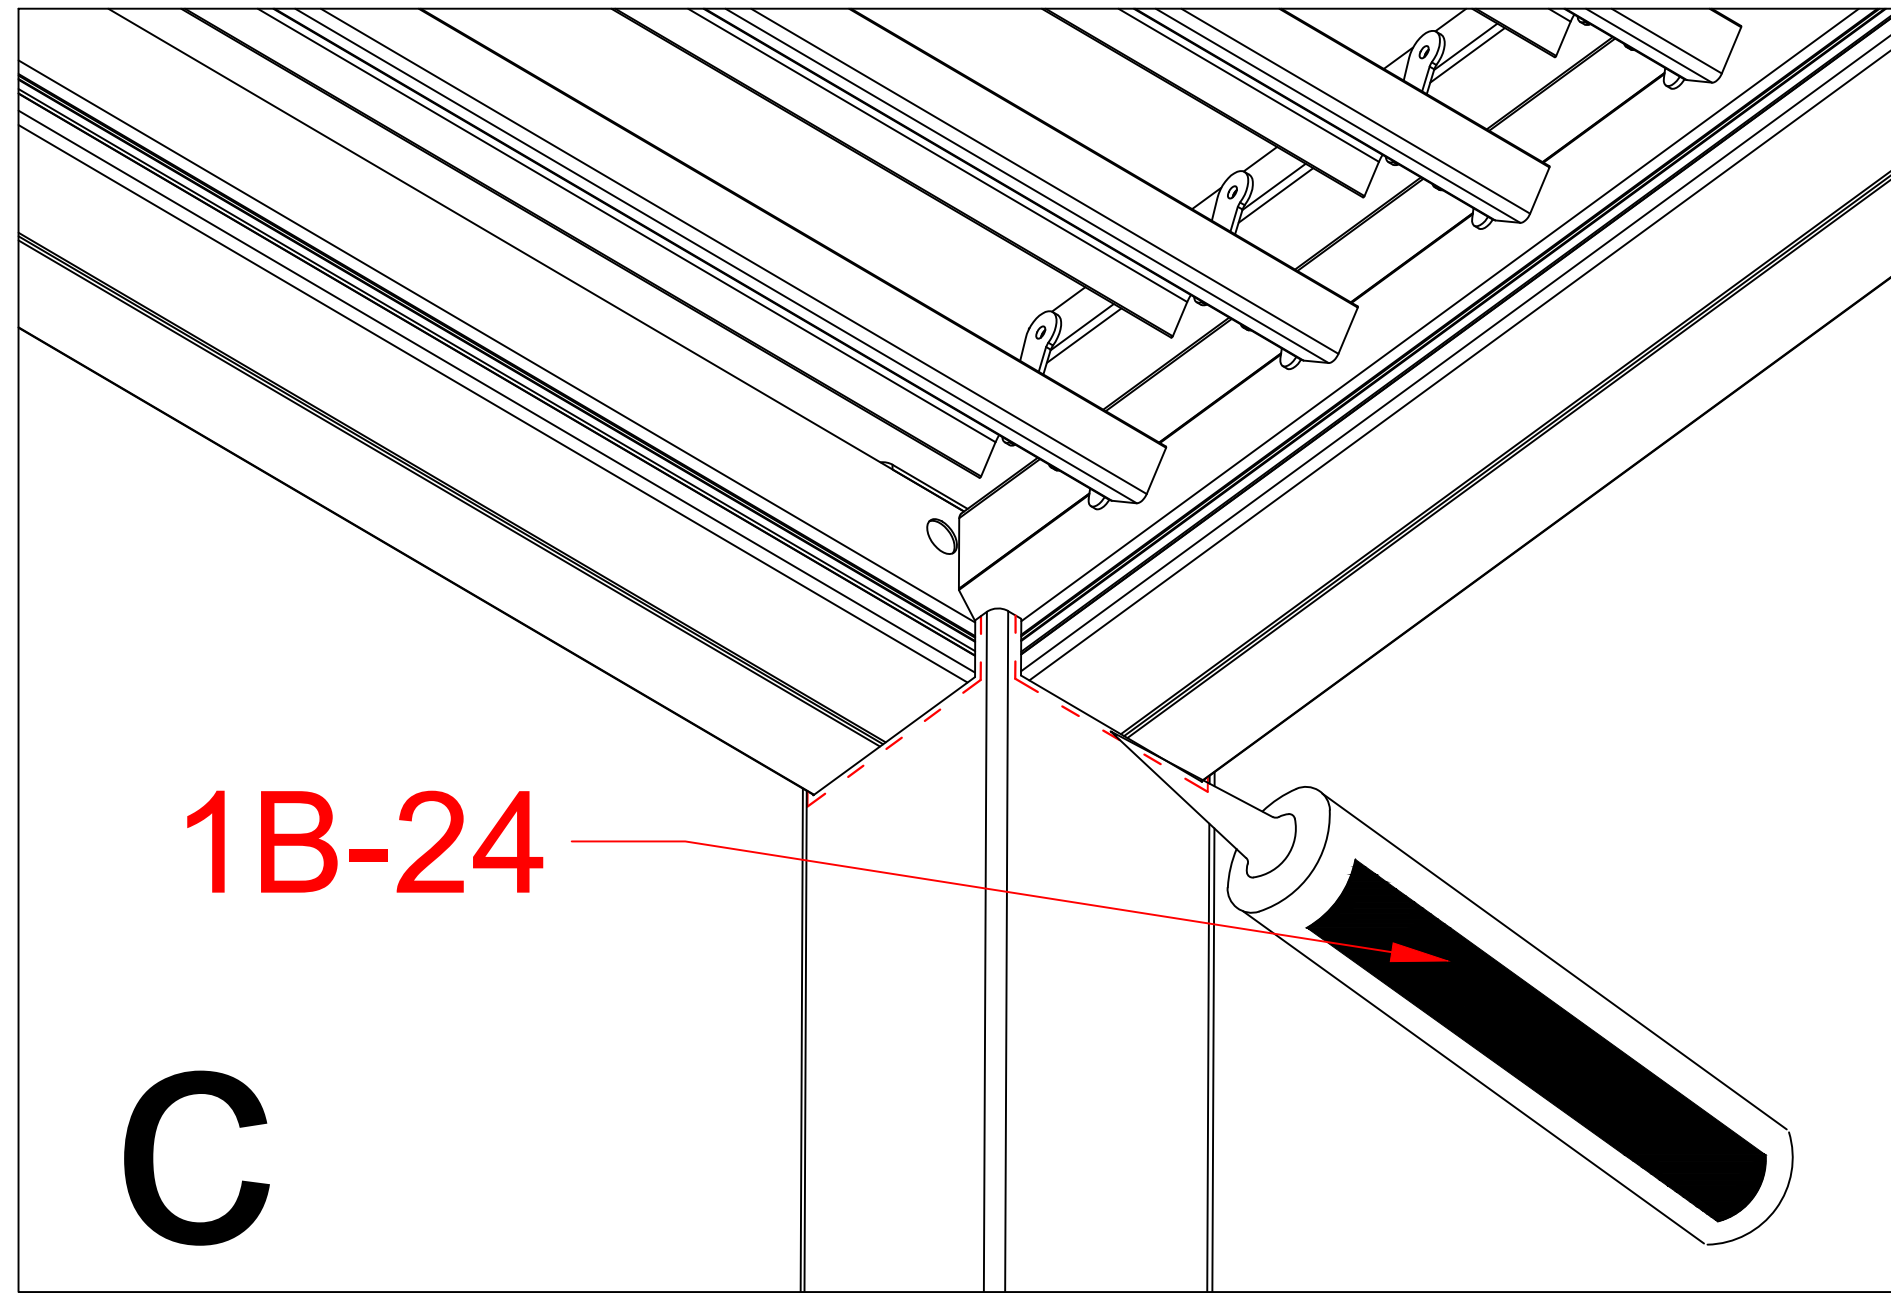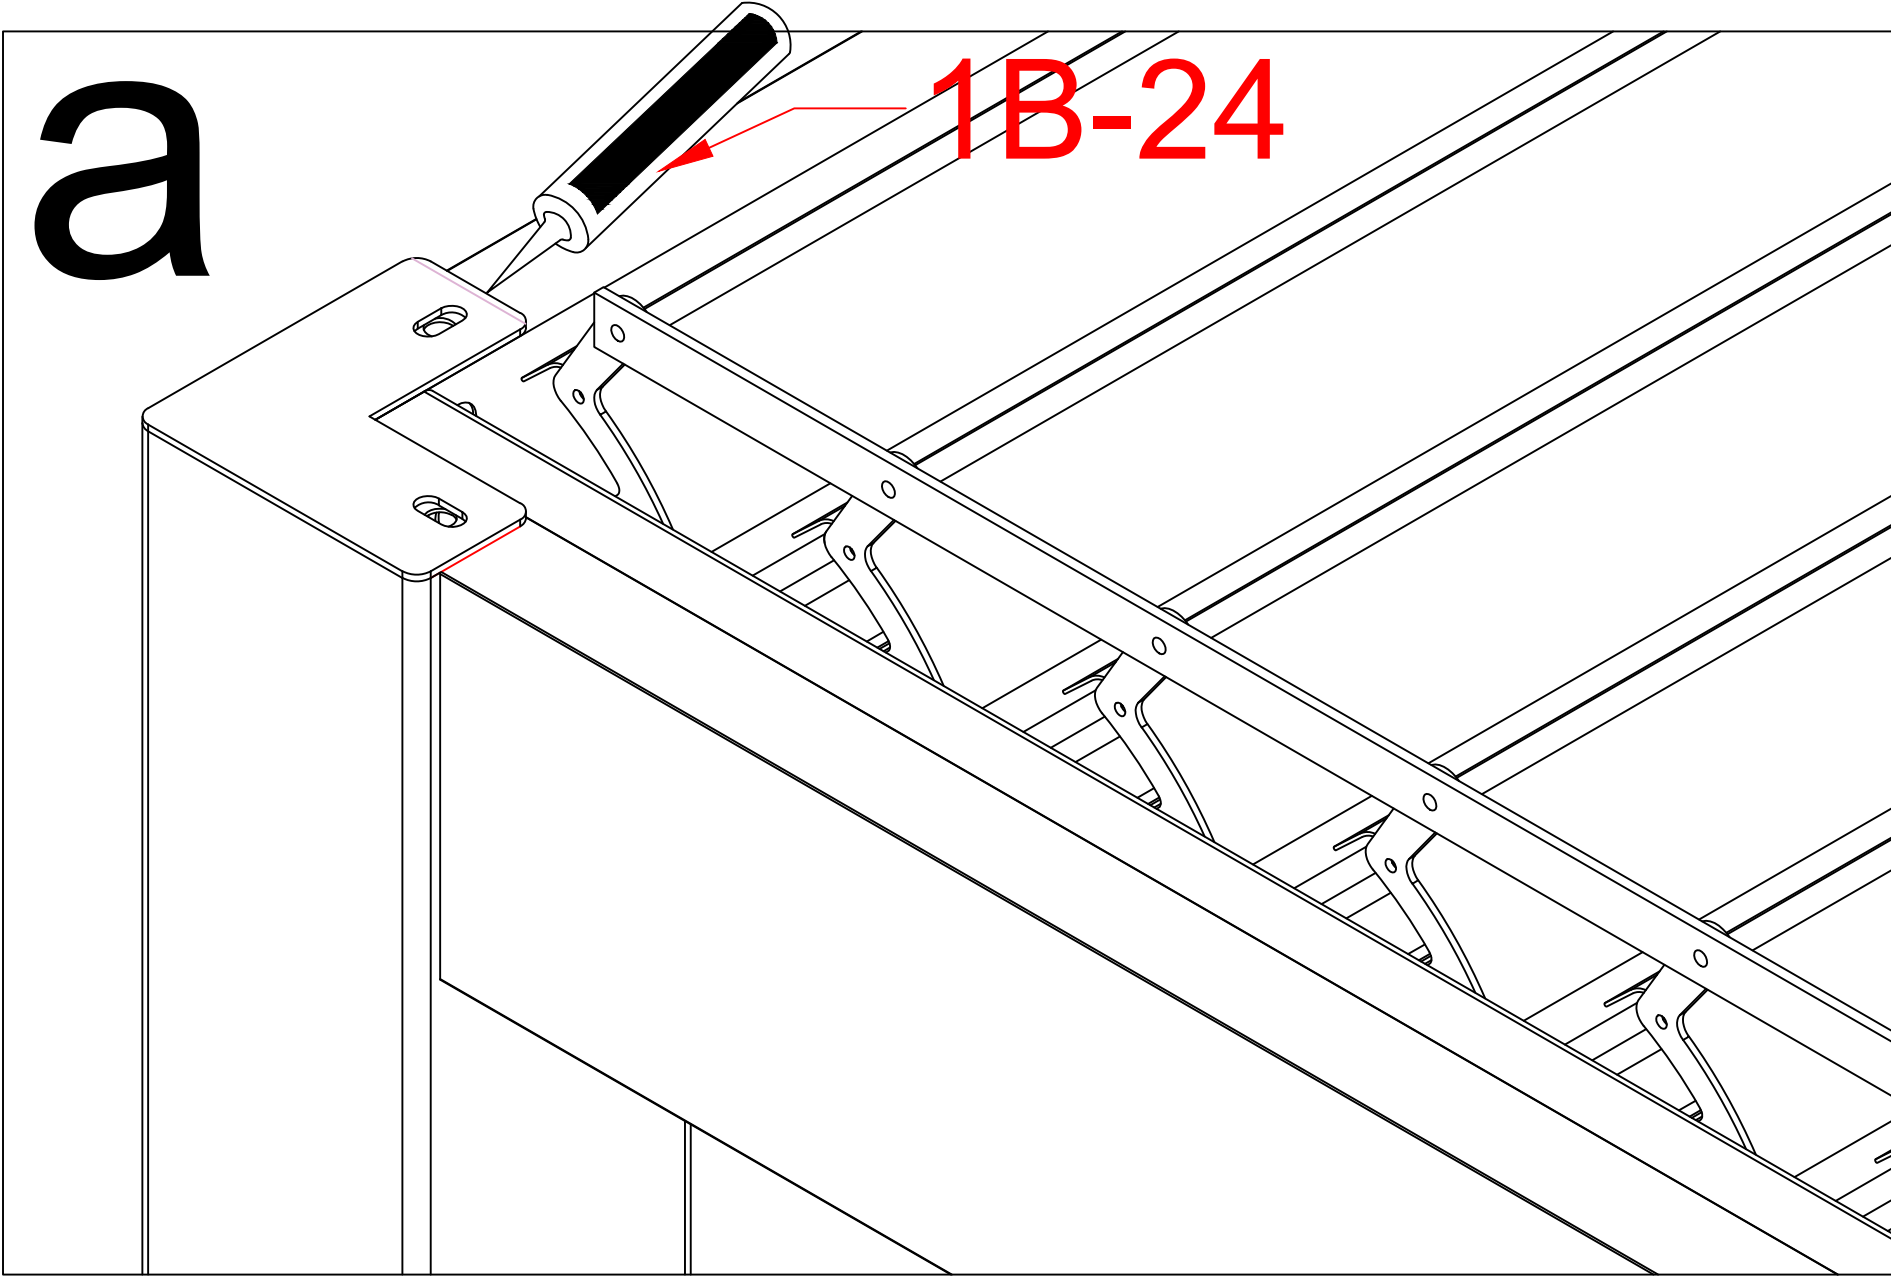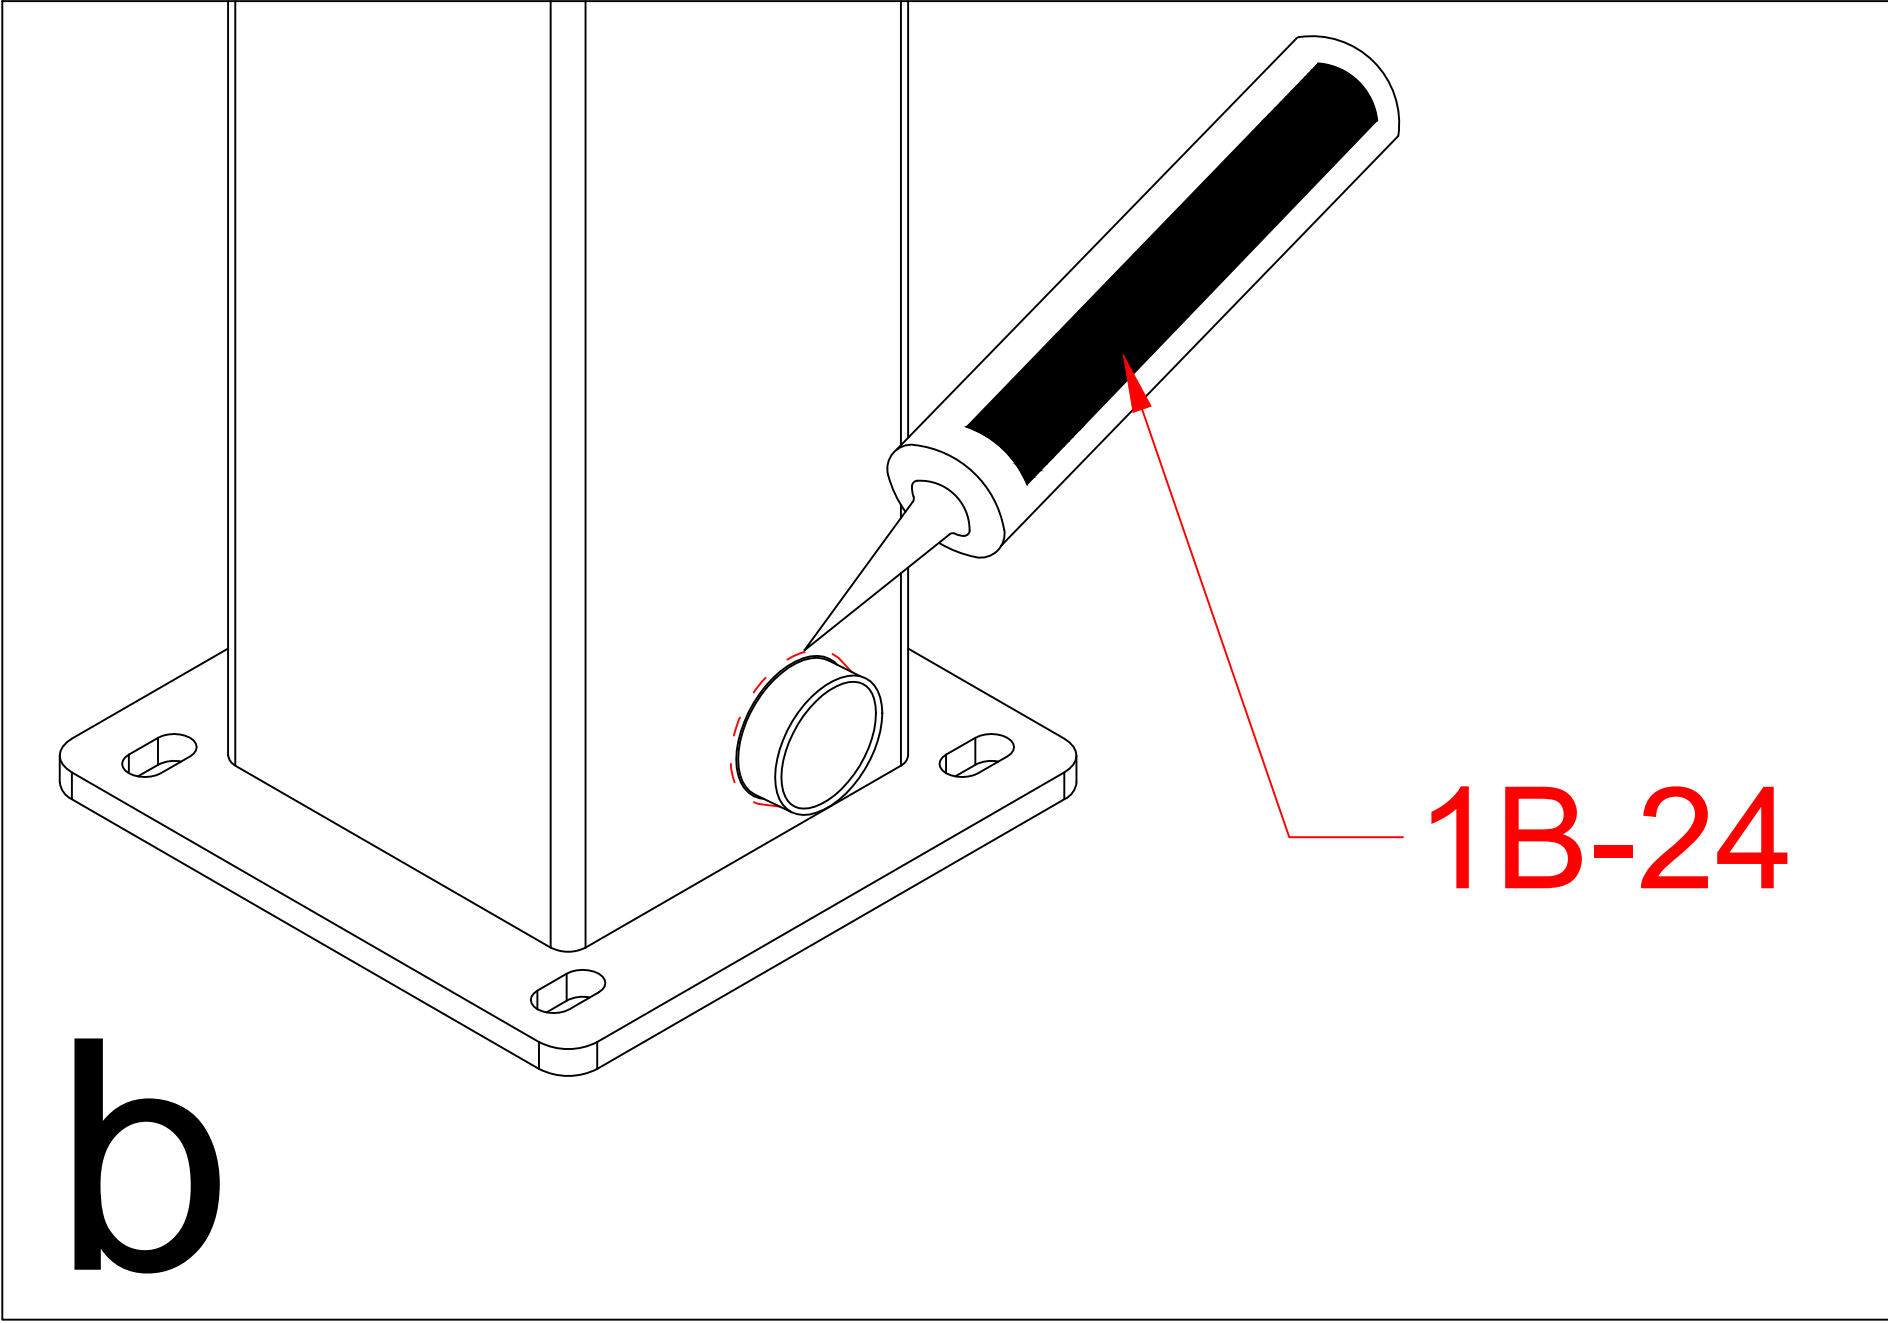


1B-24		1
-------	--	---

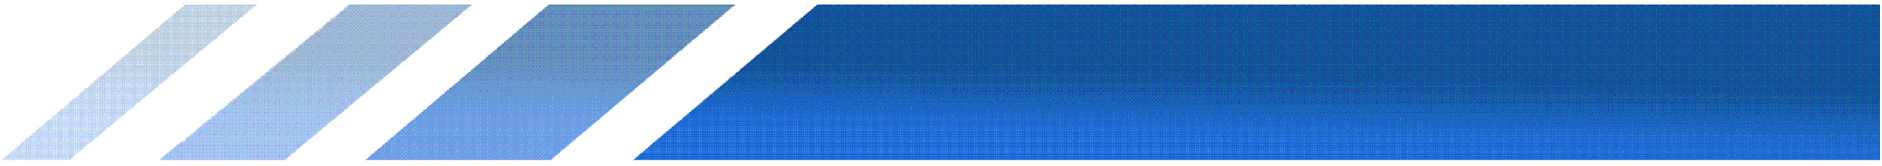


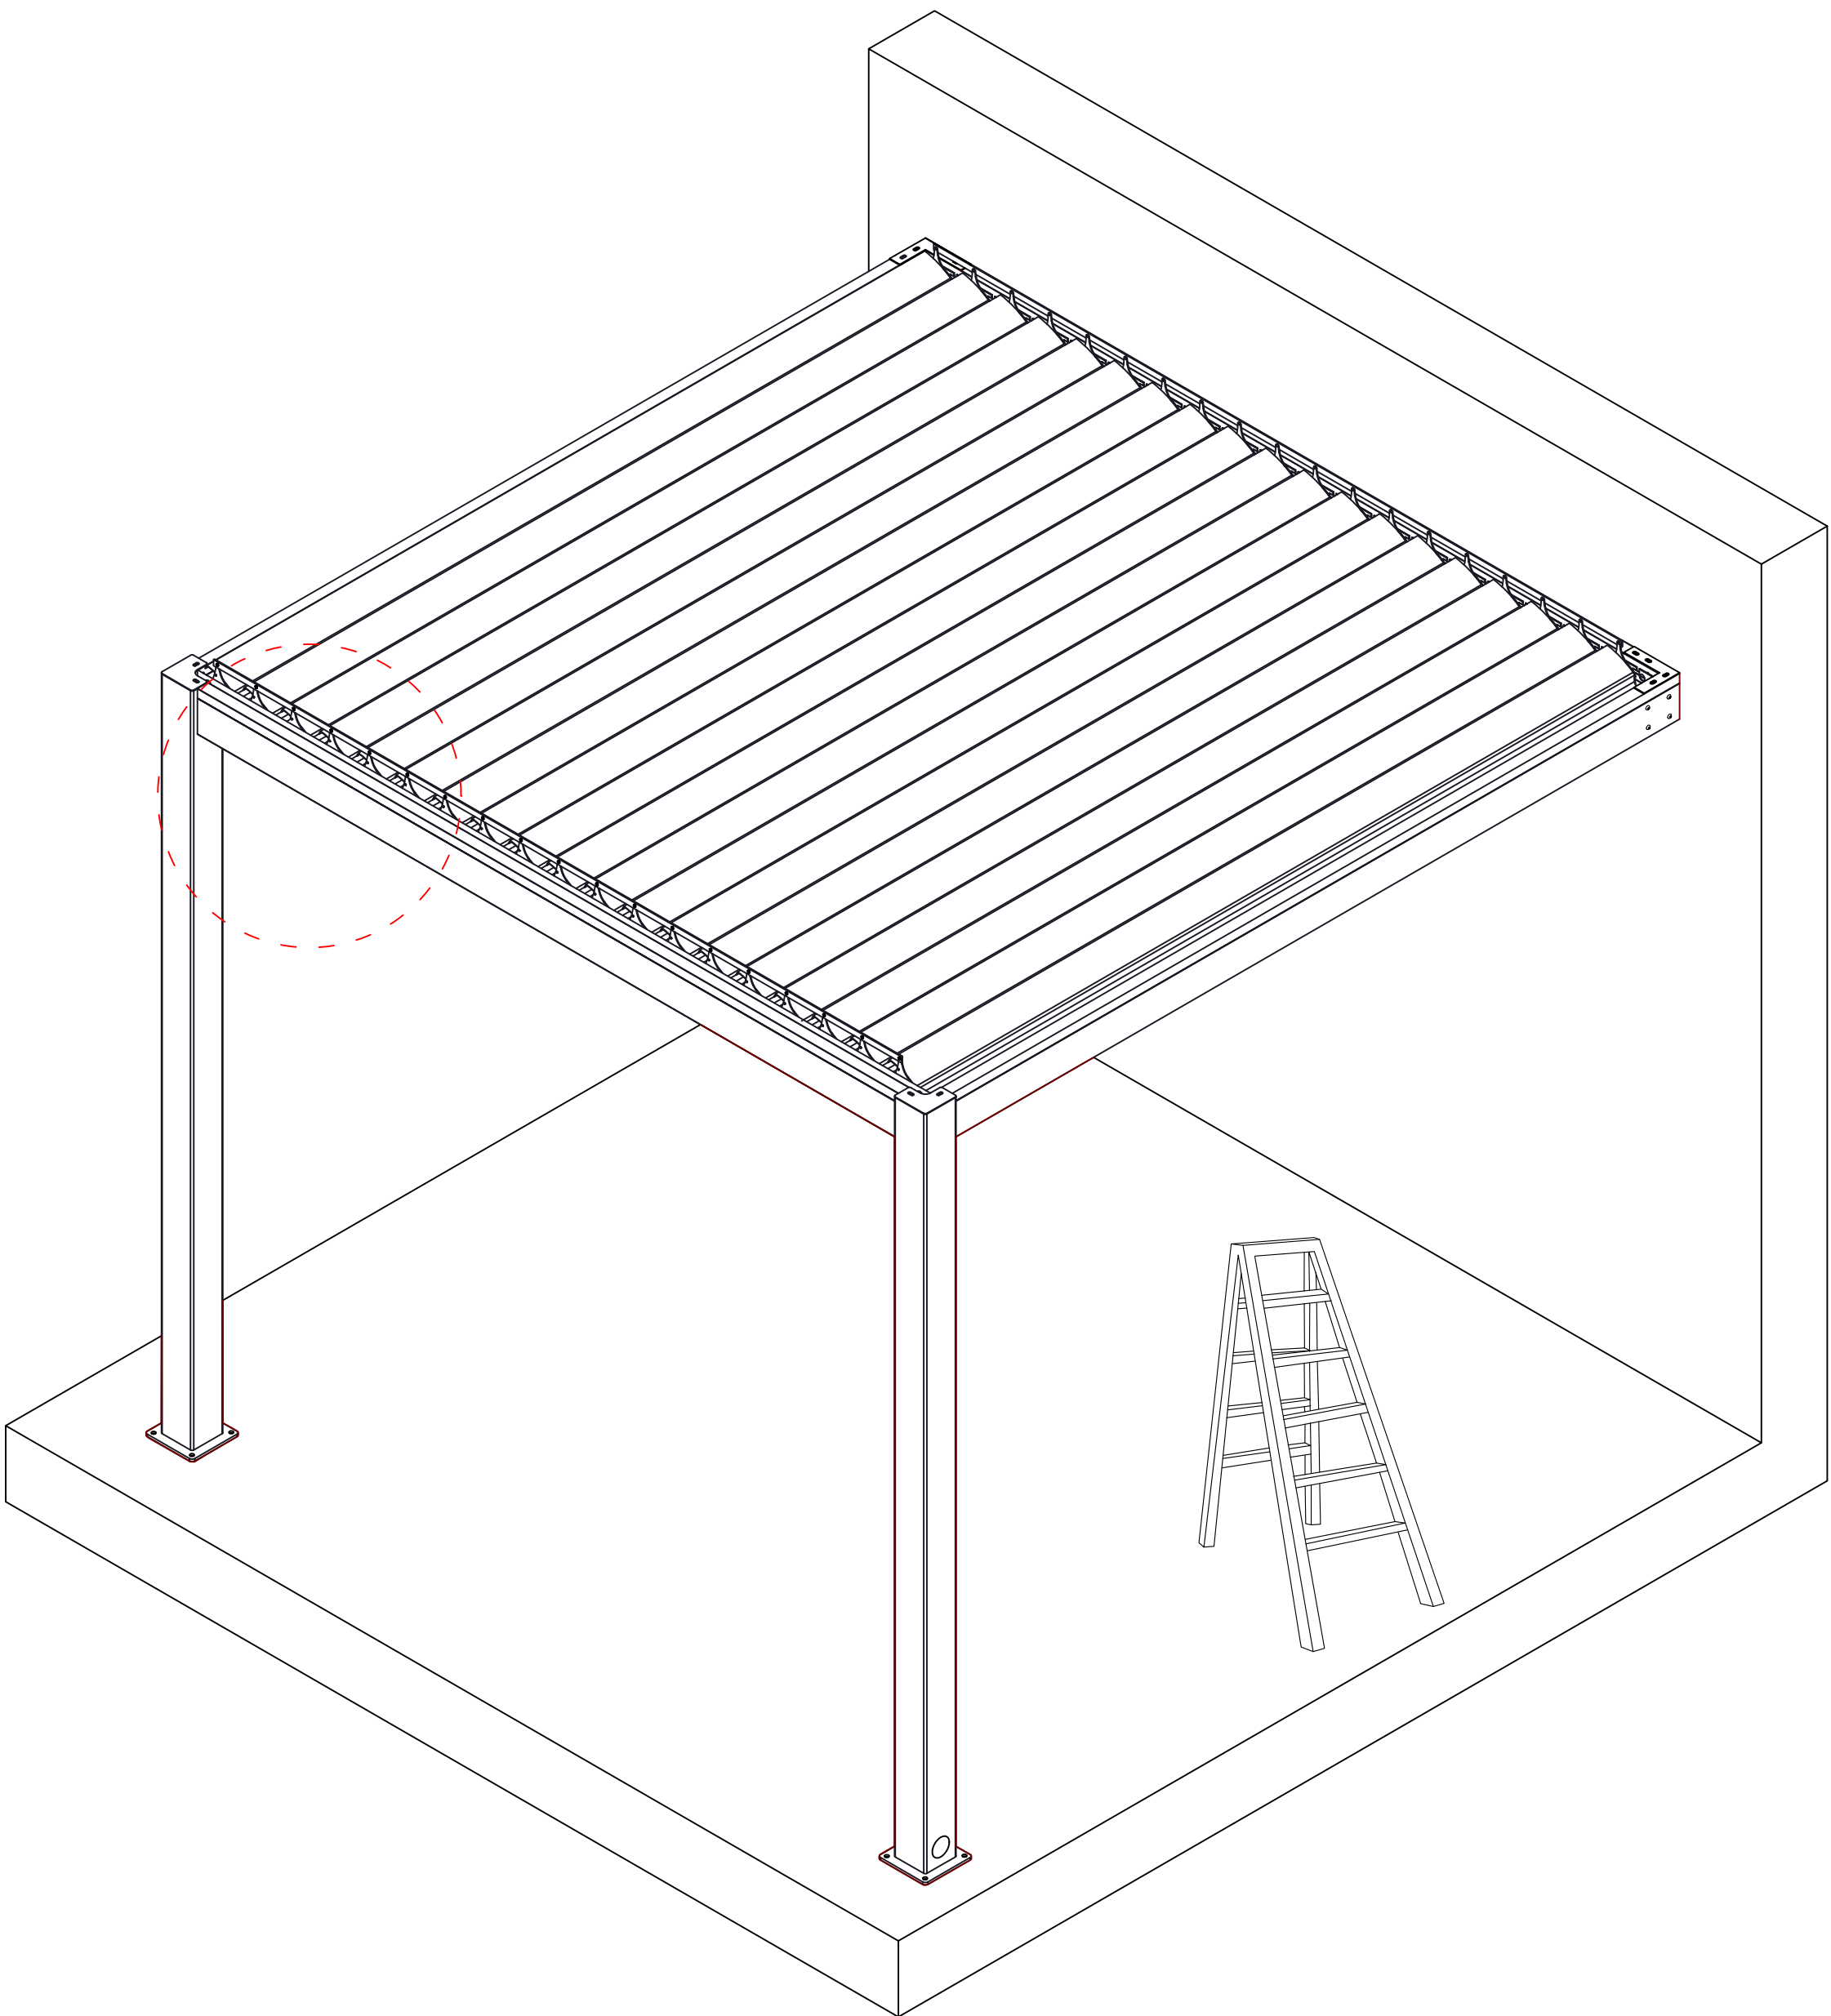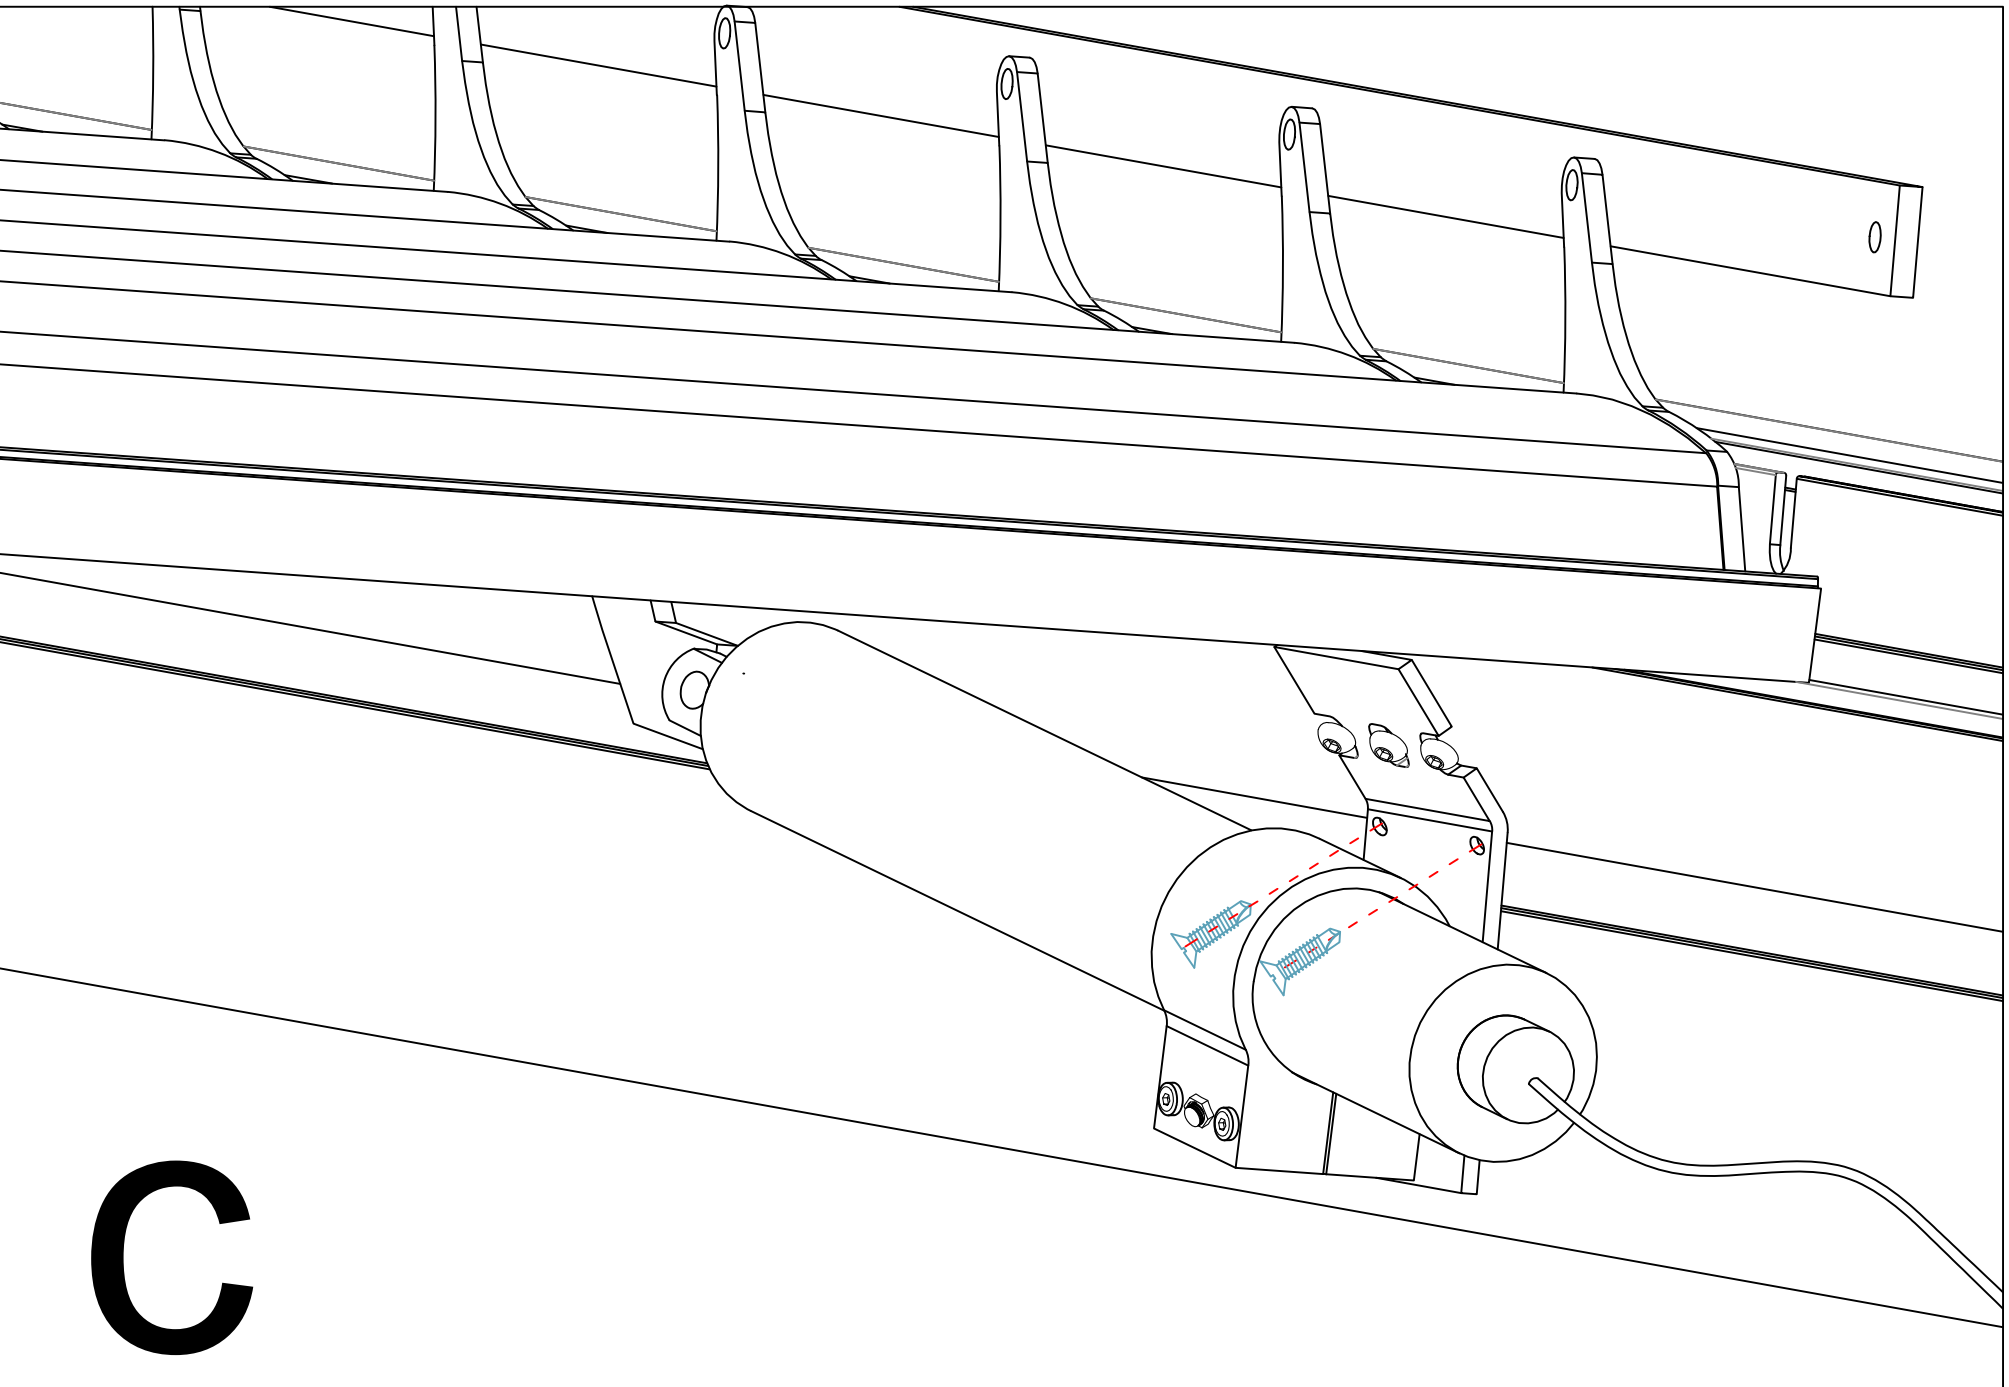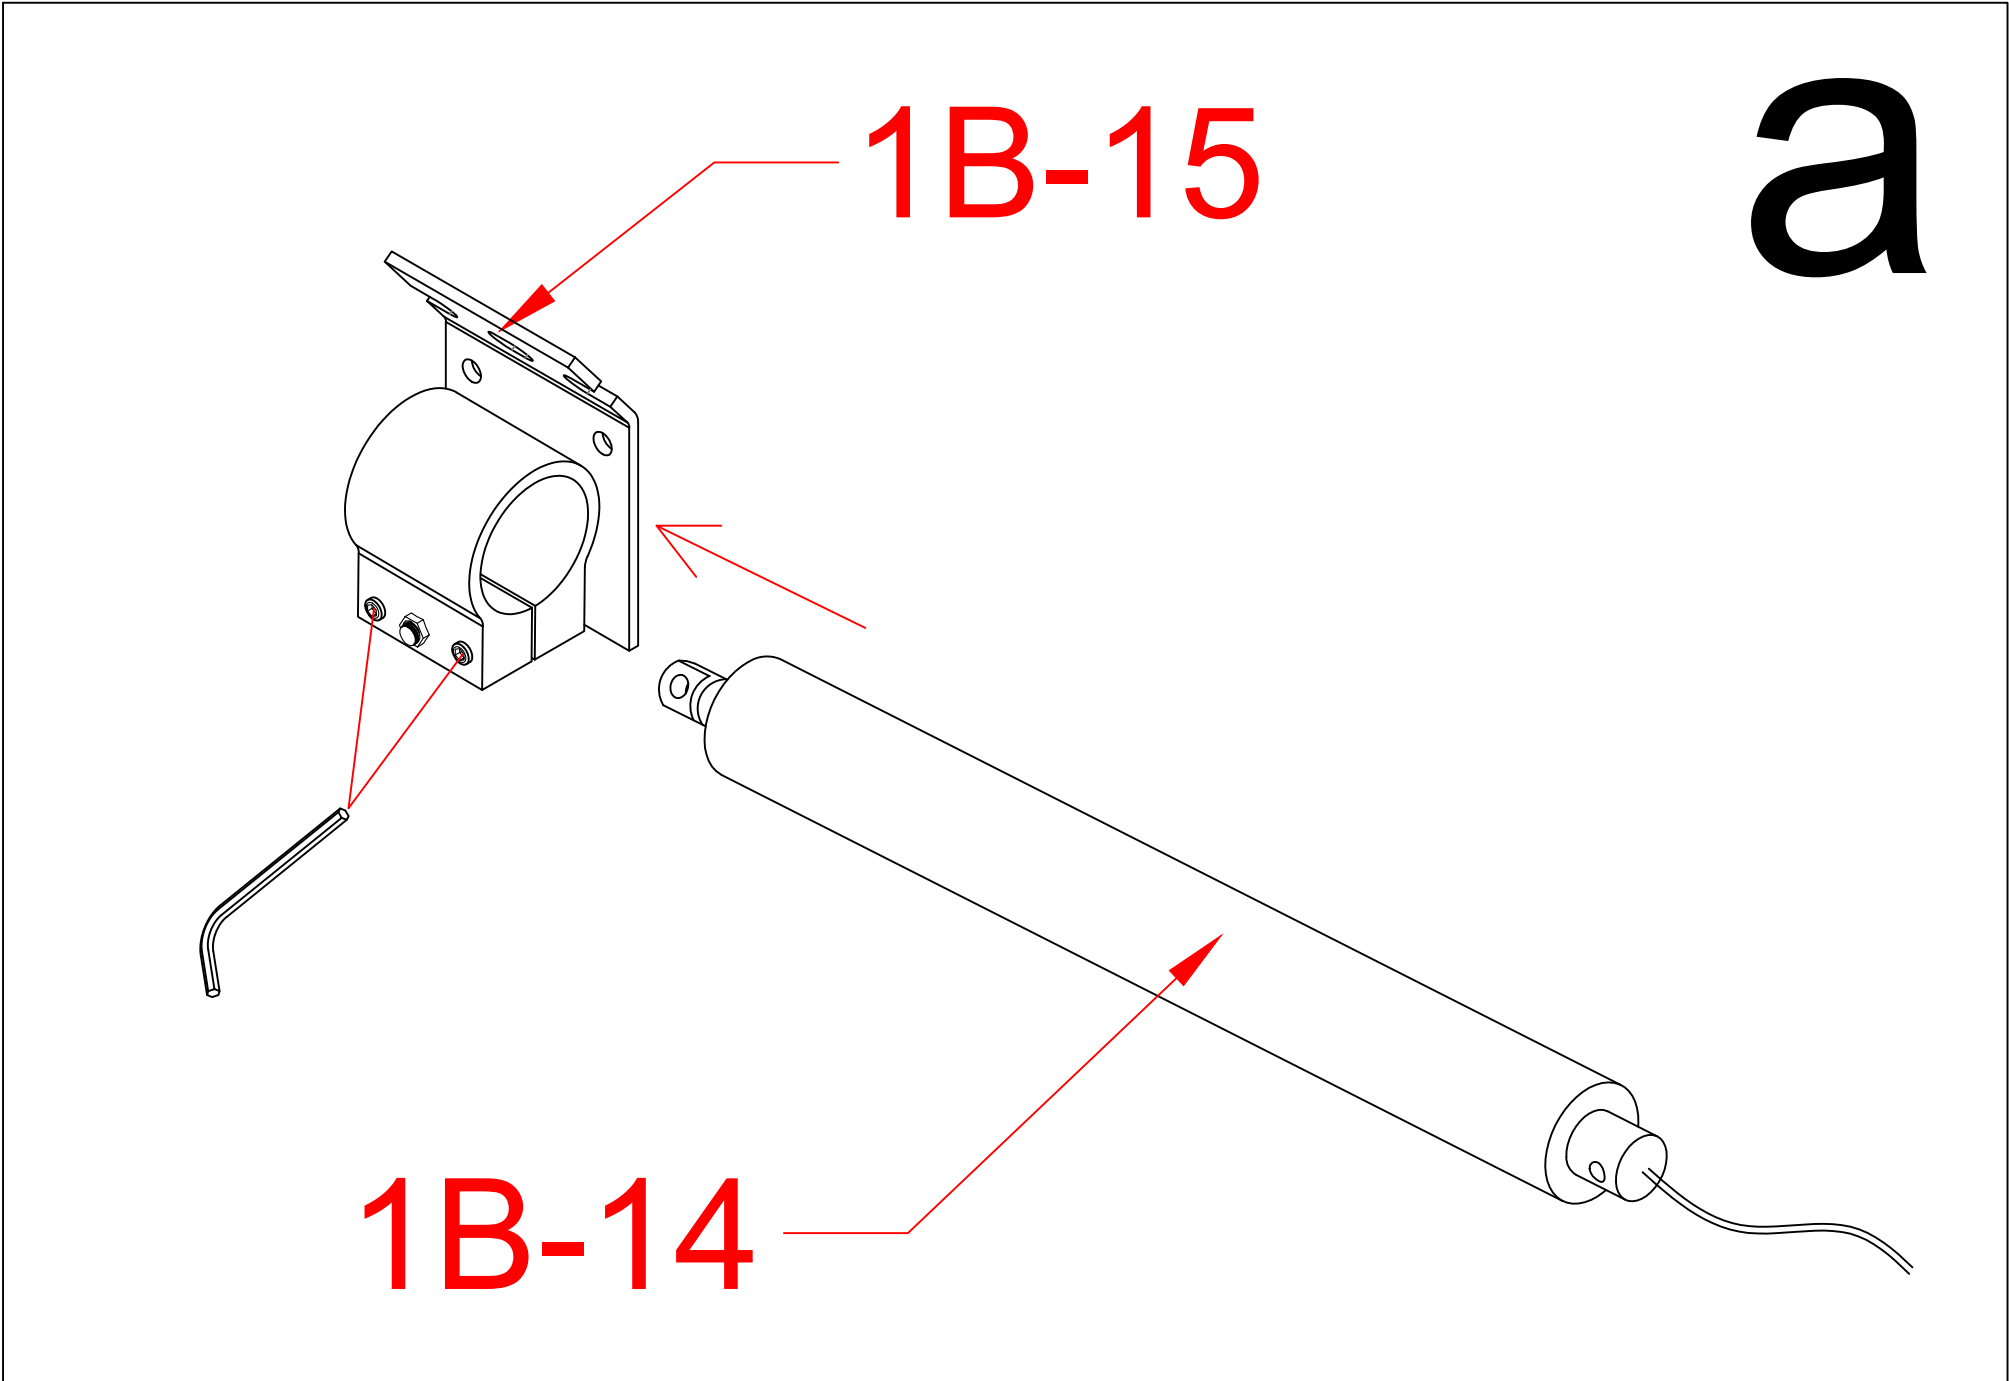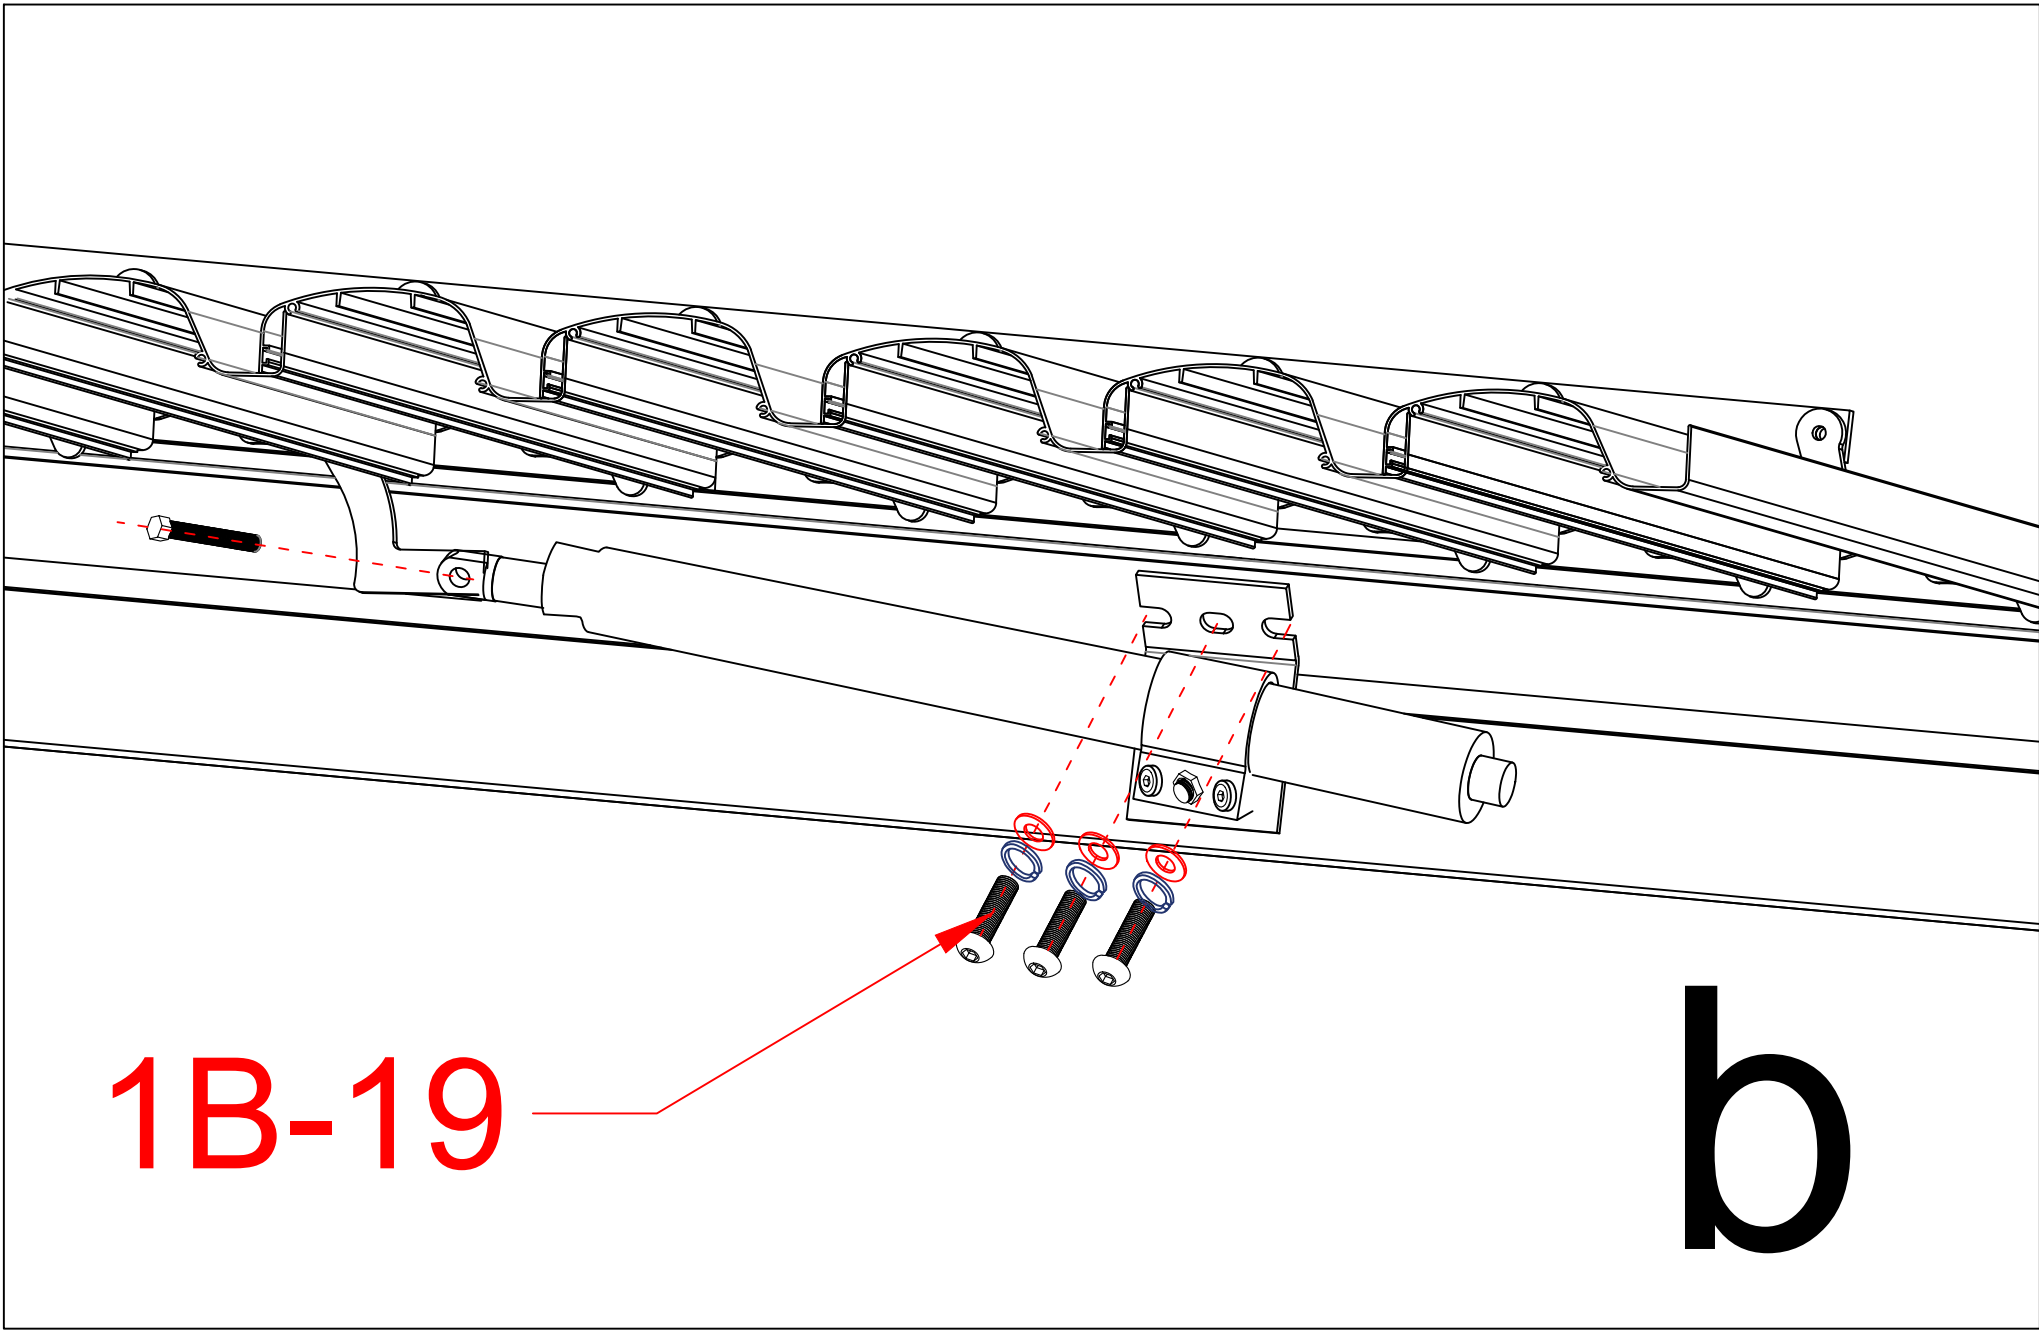

1B-14		1
1B-15		1
1B-19	 M8*20	3
1B-18		1

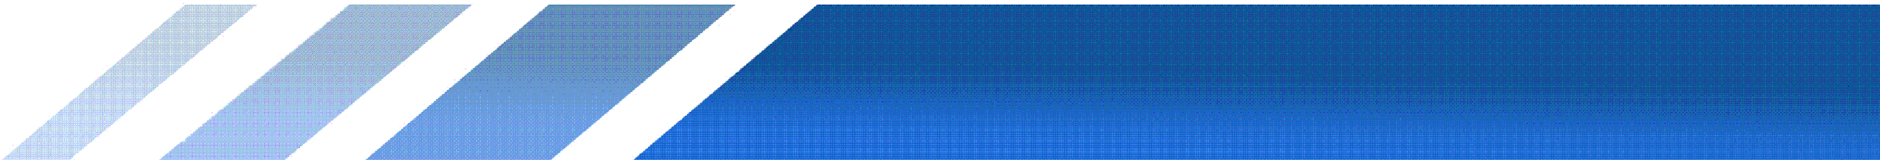


The control box is on the post

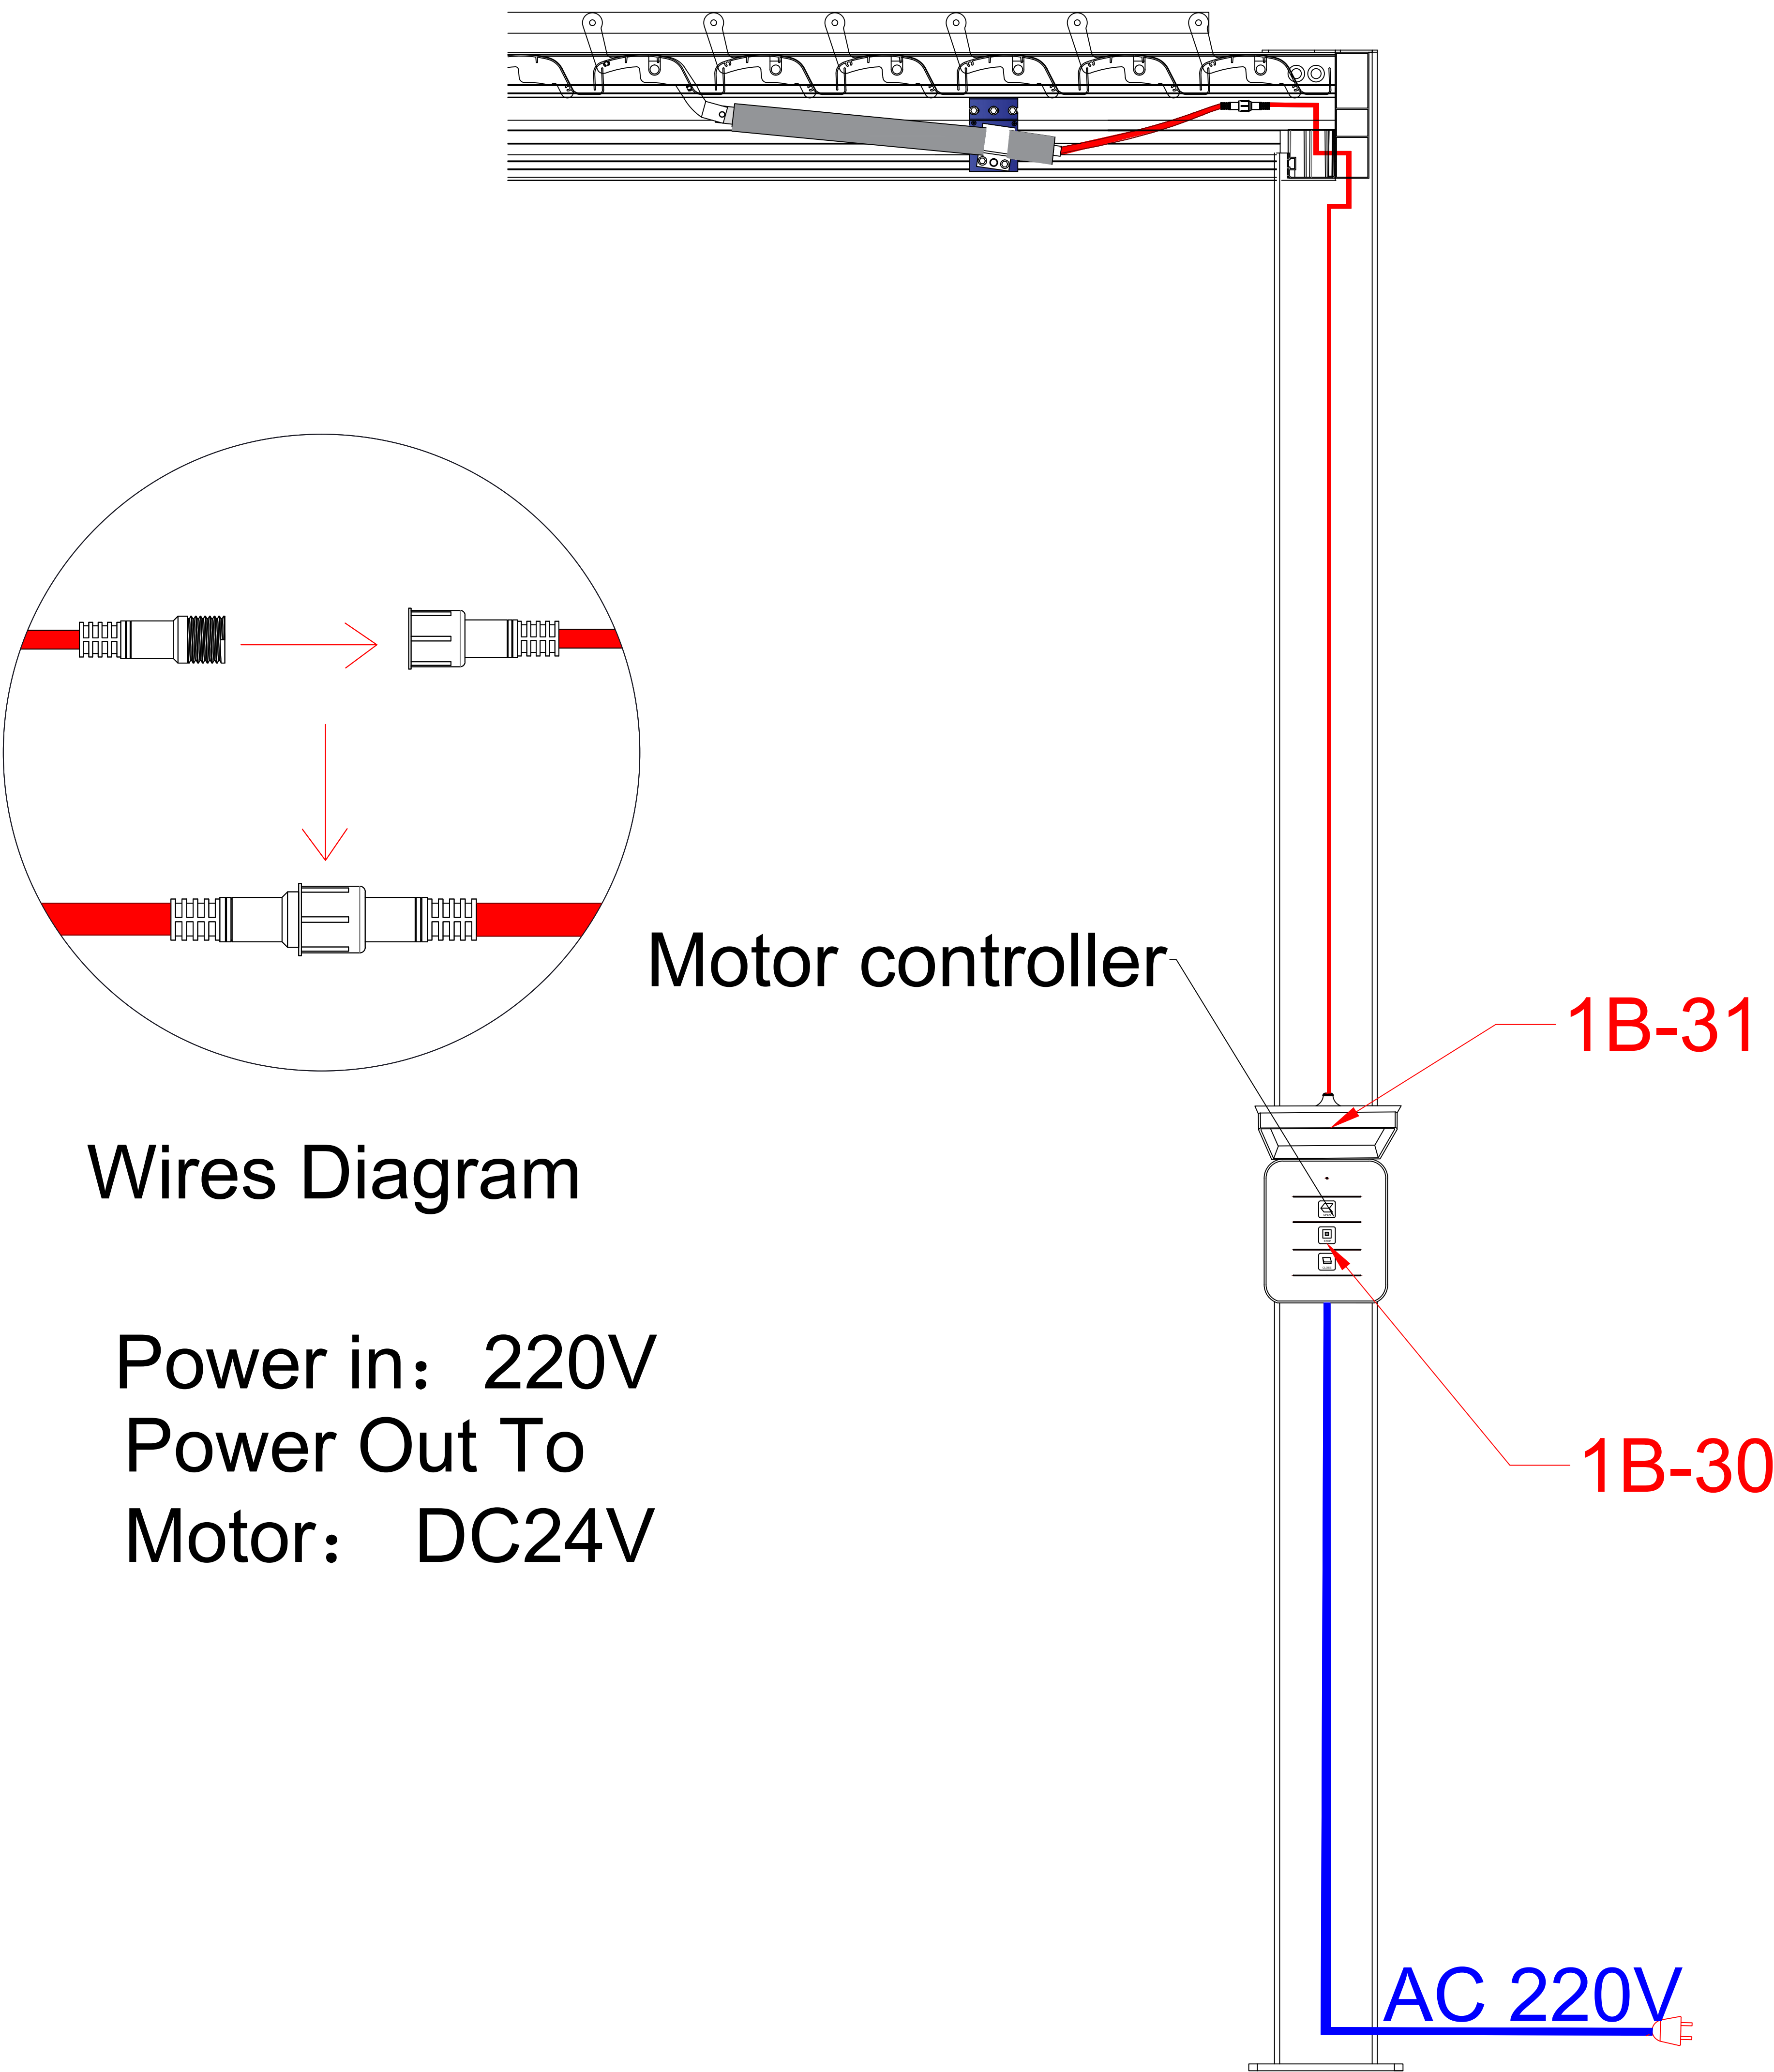

1B-30		1
1B-31		1



The control box is not on the post

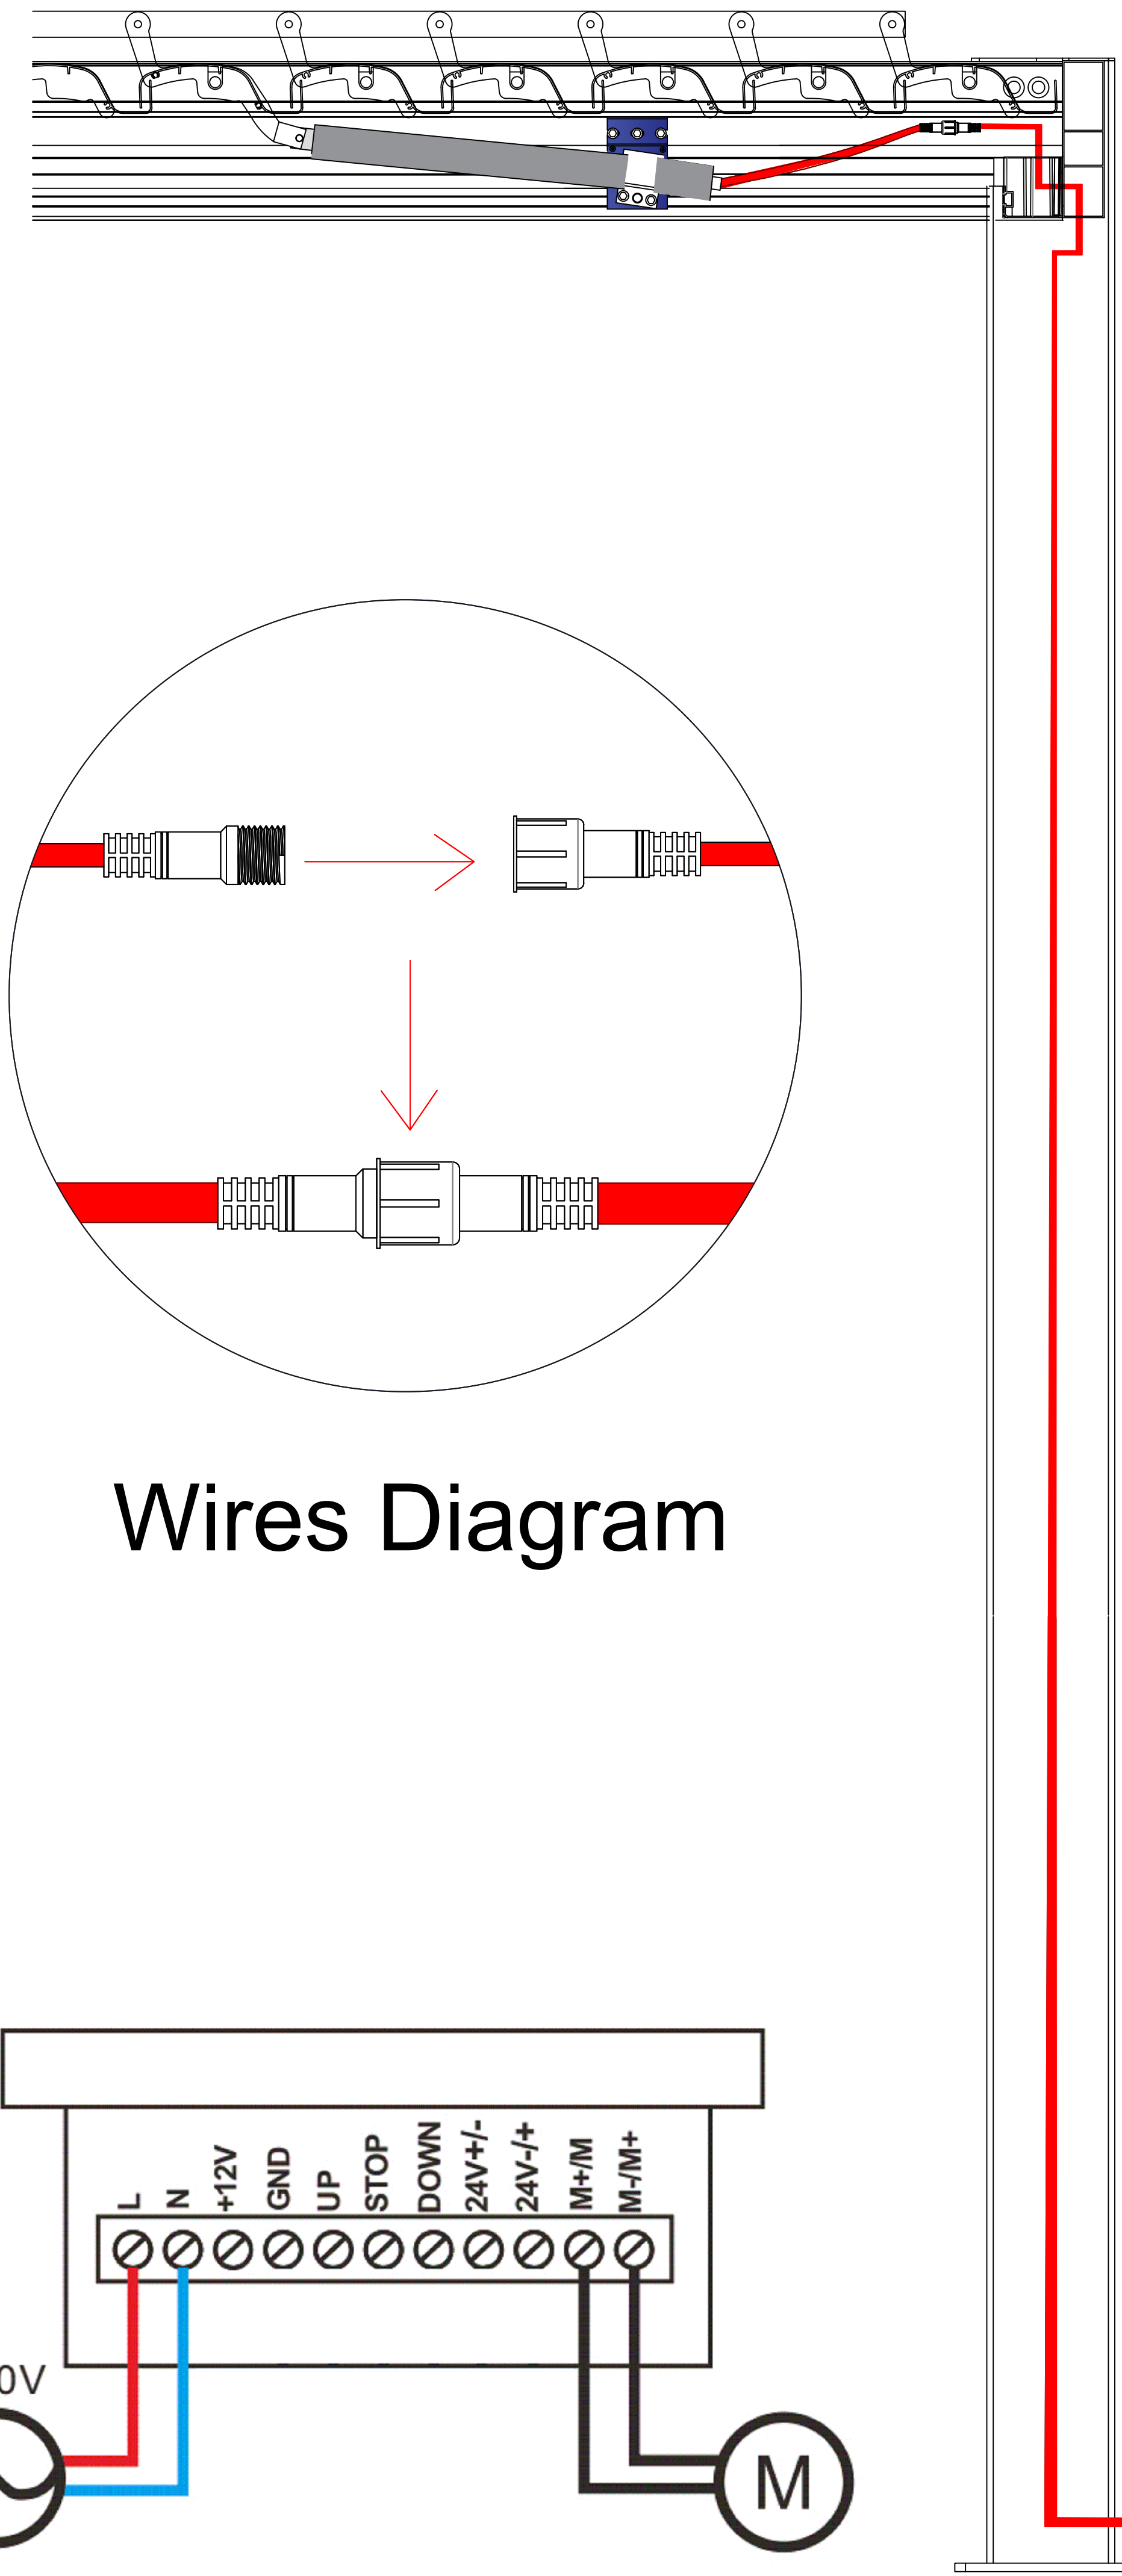

Wires Diagram

Power in: 220V
Power Out To
Motor: DC24V

MOTOR 1B-31

1B-30

AC 220V

E022
E012

1B-30		1
1B-31		1

