



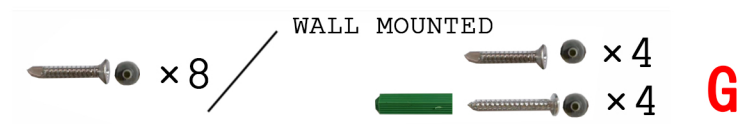


# WINDPROOF CURTAIN INSTALLATION MANUAL

**Manual Type**

1、Detail of goods

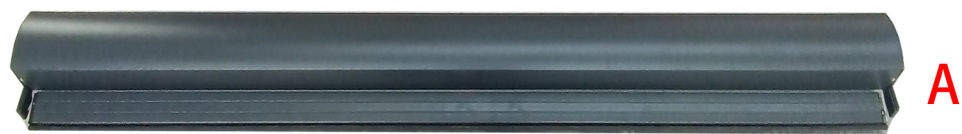

Packaging and delivery of finished products

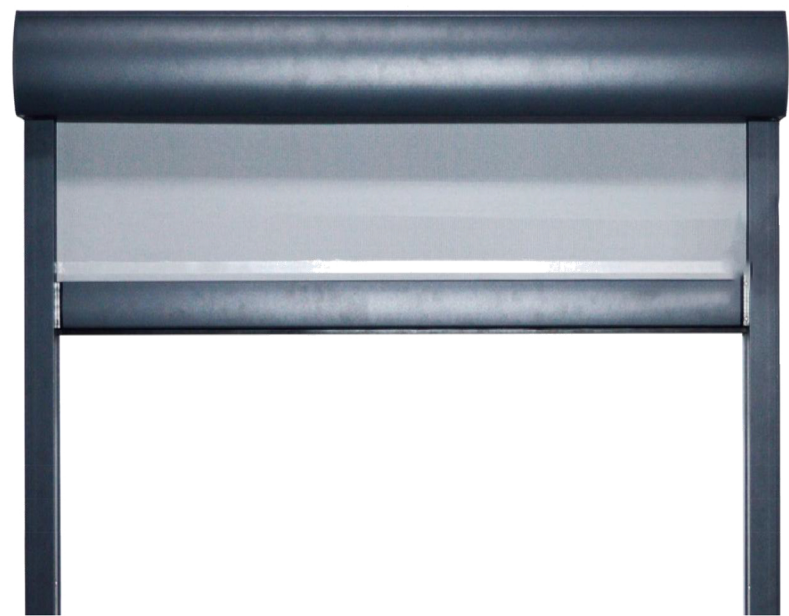

Direct assembly, easy installation



## 2、 Tool preparation

The tools required for installation include: electric hand drill, hammer drill, a set of hex key, level, hammer, laser level, tape measure, ladder, gloves, safety hat, and marker.



Drill



Hexagon Wrench Key



Hammer



Laser level



Tape measure



Ladders




Labor gloves




Hard Hat

### 3、 Measurement and positioning

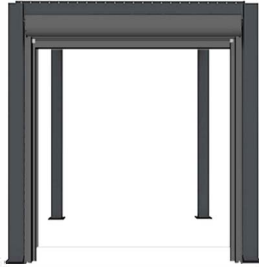

#### Horizontal and vertical measurement


Preparation: Level measuring instrument

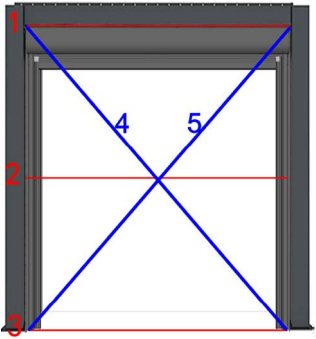

Measure whether the dimensions **1, 2, and 3** are the same.

Measure **4, 5,** and whether the diagonal dimensions are the same.

**!** The difference between 1, 2 and 3 must be less than or equal to 5mm.

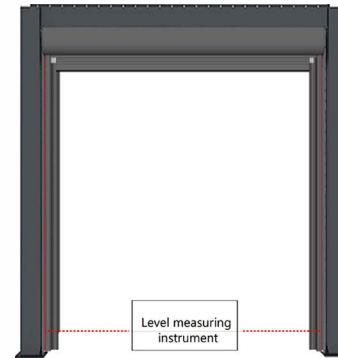

Use a level measuring instrument to measure whether the two sides of the wind-proof roller blind are vertical and whether the side rails on both sides are parallel.

If you ignore the measurement difference and exceed the allowable value, the following situations may occur during installation:


1. The shutter is stuck (please check whether the height of the left and right rails are the same, or whether the width of the wall is different from top to bottom)
2. The fabric is not flat (please measure again whether the diagonals of the wall are consistent and whether they are on the same plane)
3. During transportation, the roller spring for drop blind may get loose, so before installed the blind on pergola, please check if the blind is loose and fall automatically, if yes, pls open the top roll spring box and tighten the spring, then finish the installation.



## 4、 Installation of rolling curtain



1. Unpack and use the hex wrench to disassemble the screws on the track

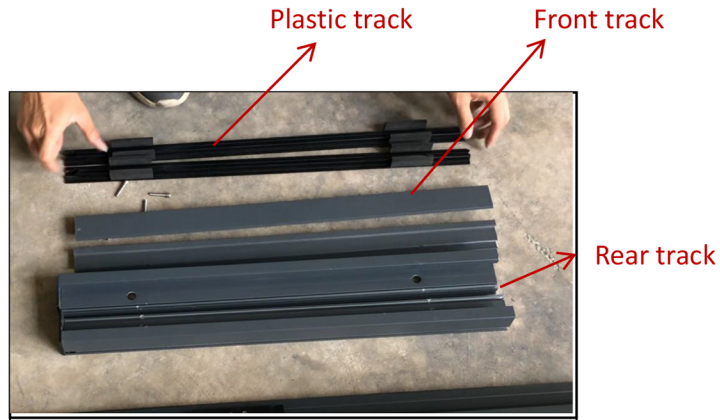


2. After disassembling the track, there are three parts: the rear track, the plastic track and the front track



3. Put the rear rail into the end cover foot corresponding to the main body of the rolling curtain



4. Put the rolling curtain into the installation position, observe whether the rolling curtain matches the installation position, and measure whether the diagonal length on both sides is consistent?

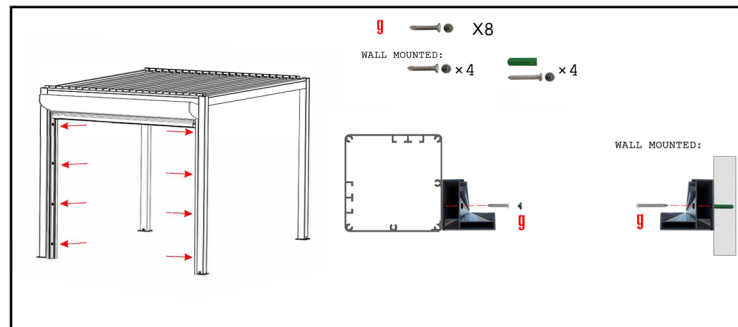

Side mounting: The rolling curtain is installed in the window frame  
Fix the screws by drilling holes on the bottom of the side rails

\* But if it is side installation, it is necessary to combine the curtain and the track after first, put it into the frame and then fix it with screws.

## 4、 Installation of rolling curtain




5. After ensuring that the diagonal length on both sides of the track is consistent, fix and lock the track with self-tapping screws at the left and right track openings.



6. After the rear track is fixed, begin to assemble the track. Take out the plastic track with the end of the triangular opening facing up



7, install plastic track and zipper, manual shutter pin will block the plastic track

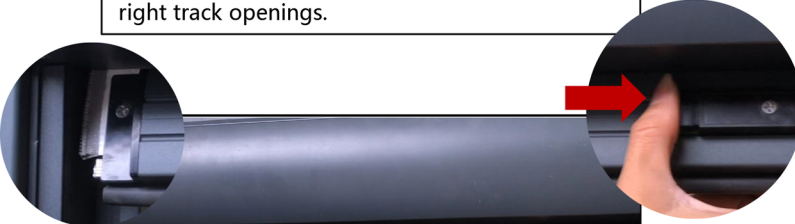

8. You need to press the opening and closing button of the curtain first, open the pin, and then insert the plastic track into the zipper



9. After the plastic track is installed, the silent sponge will enter the rear track



10. When installing the front track, it should also be noted that the silent sponge is also fortified into the slot of the front track.

Silent sponge  
fortress into  
the track  
card slot



## 4、 Installation of rolling curtain



11. After assembling the complete track, lock the track with the hex wrench



12. After the track fixing screws are tightened, plug the screw holes with rubber plugs

Notification: When using a manual windproof roller blind, you should generally open and close it by hand from the middle position. Do not use too much force and keep the speed even. If you encounter a jam when pulling up from the bottom, do not force it. Pull down a little first and then pull up to avoid shifting of the fabric during manual use, which may cause damage to the accessories.