



WALL MOUNTED PERGOLA GAZEBO 2 POSTS

3×4m






Installation and Wind Management Guidelines

1.Installation on Various Surfaces

For WPC (Wood Plastic Composite), antiseptic wood, ceramic, or stone flooring, it is essential to either concrete the post directly or construct a 50cm concrete foundation beneath the base plate to secure it firmly.













2.Wind Management


In the event of strong winds, the louvers must be opened to maintain proper air circulation and minimise wind resistance.”

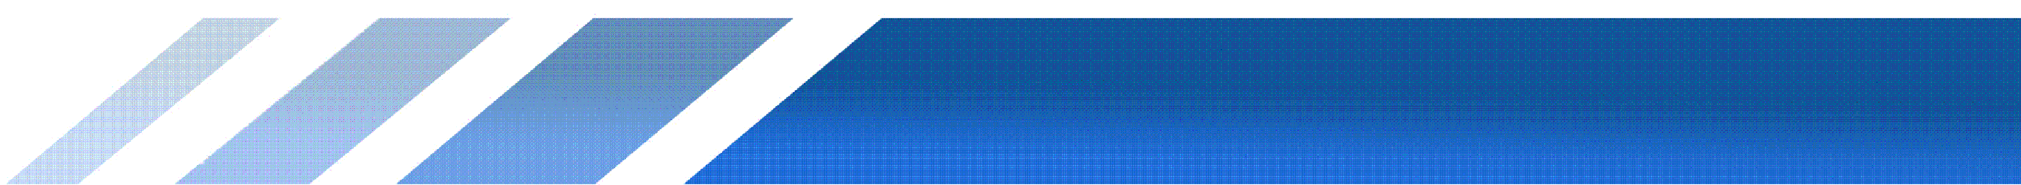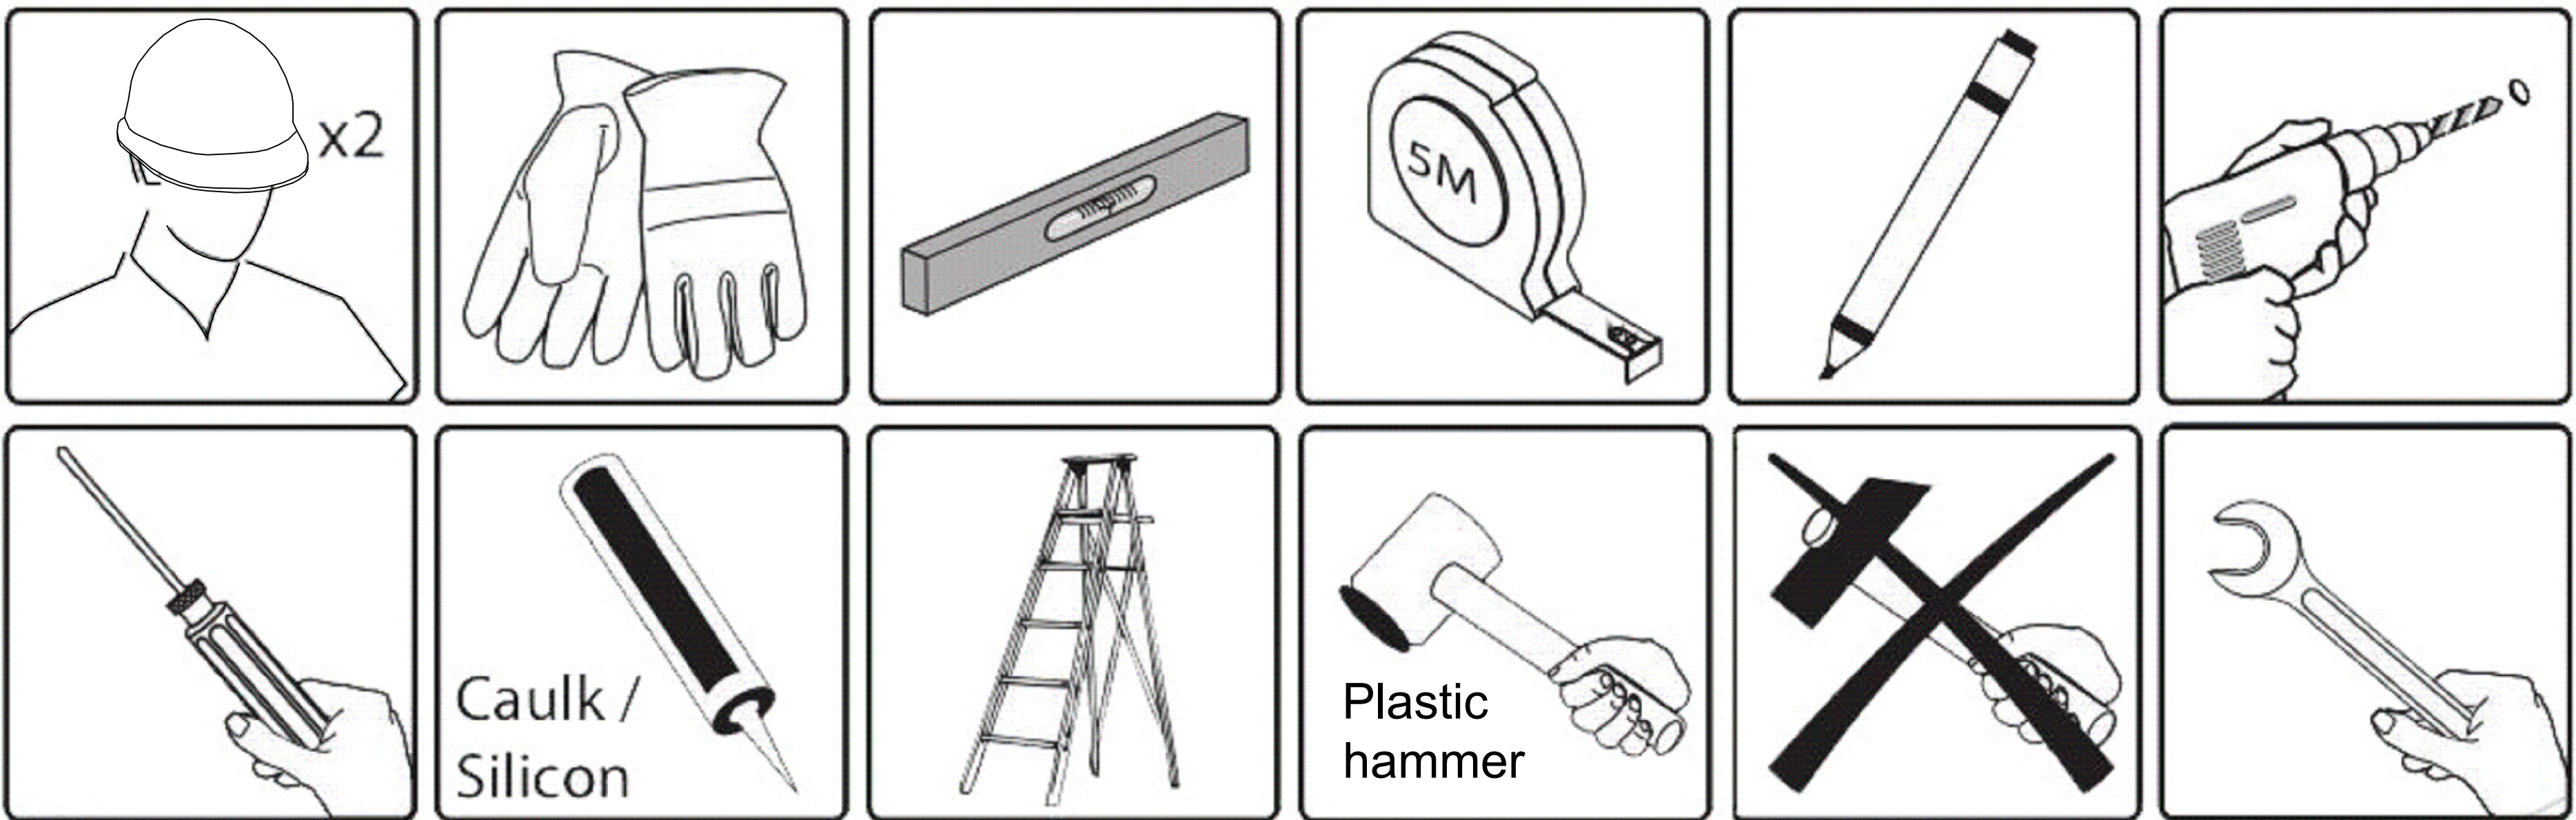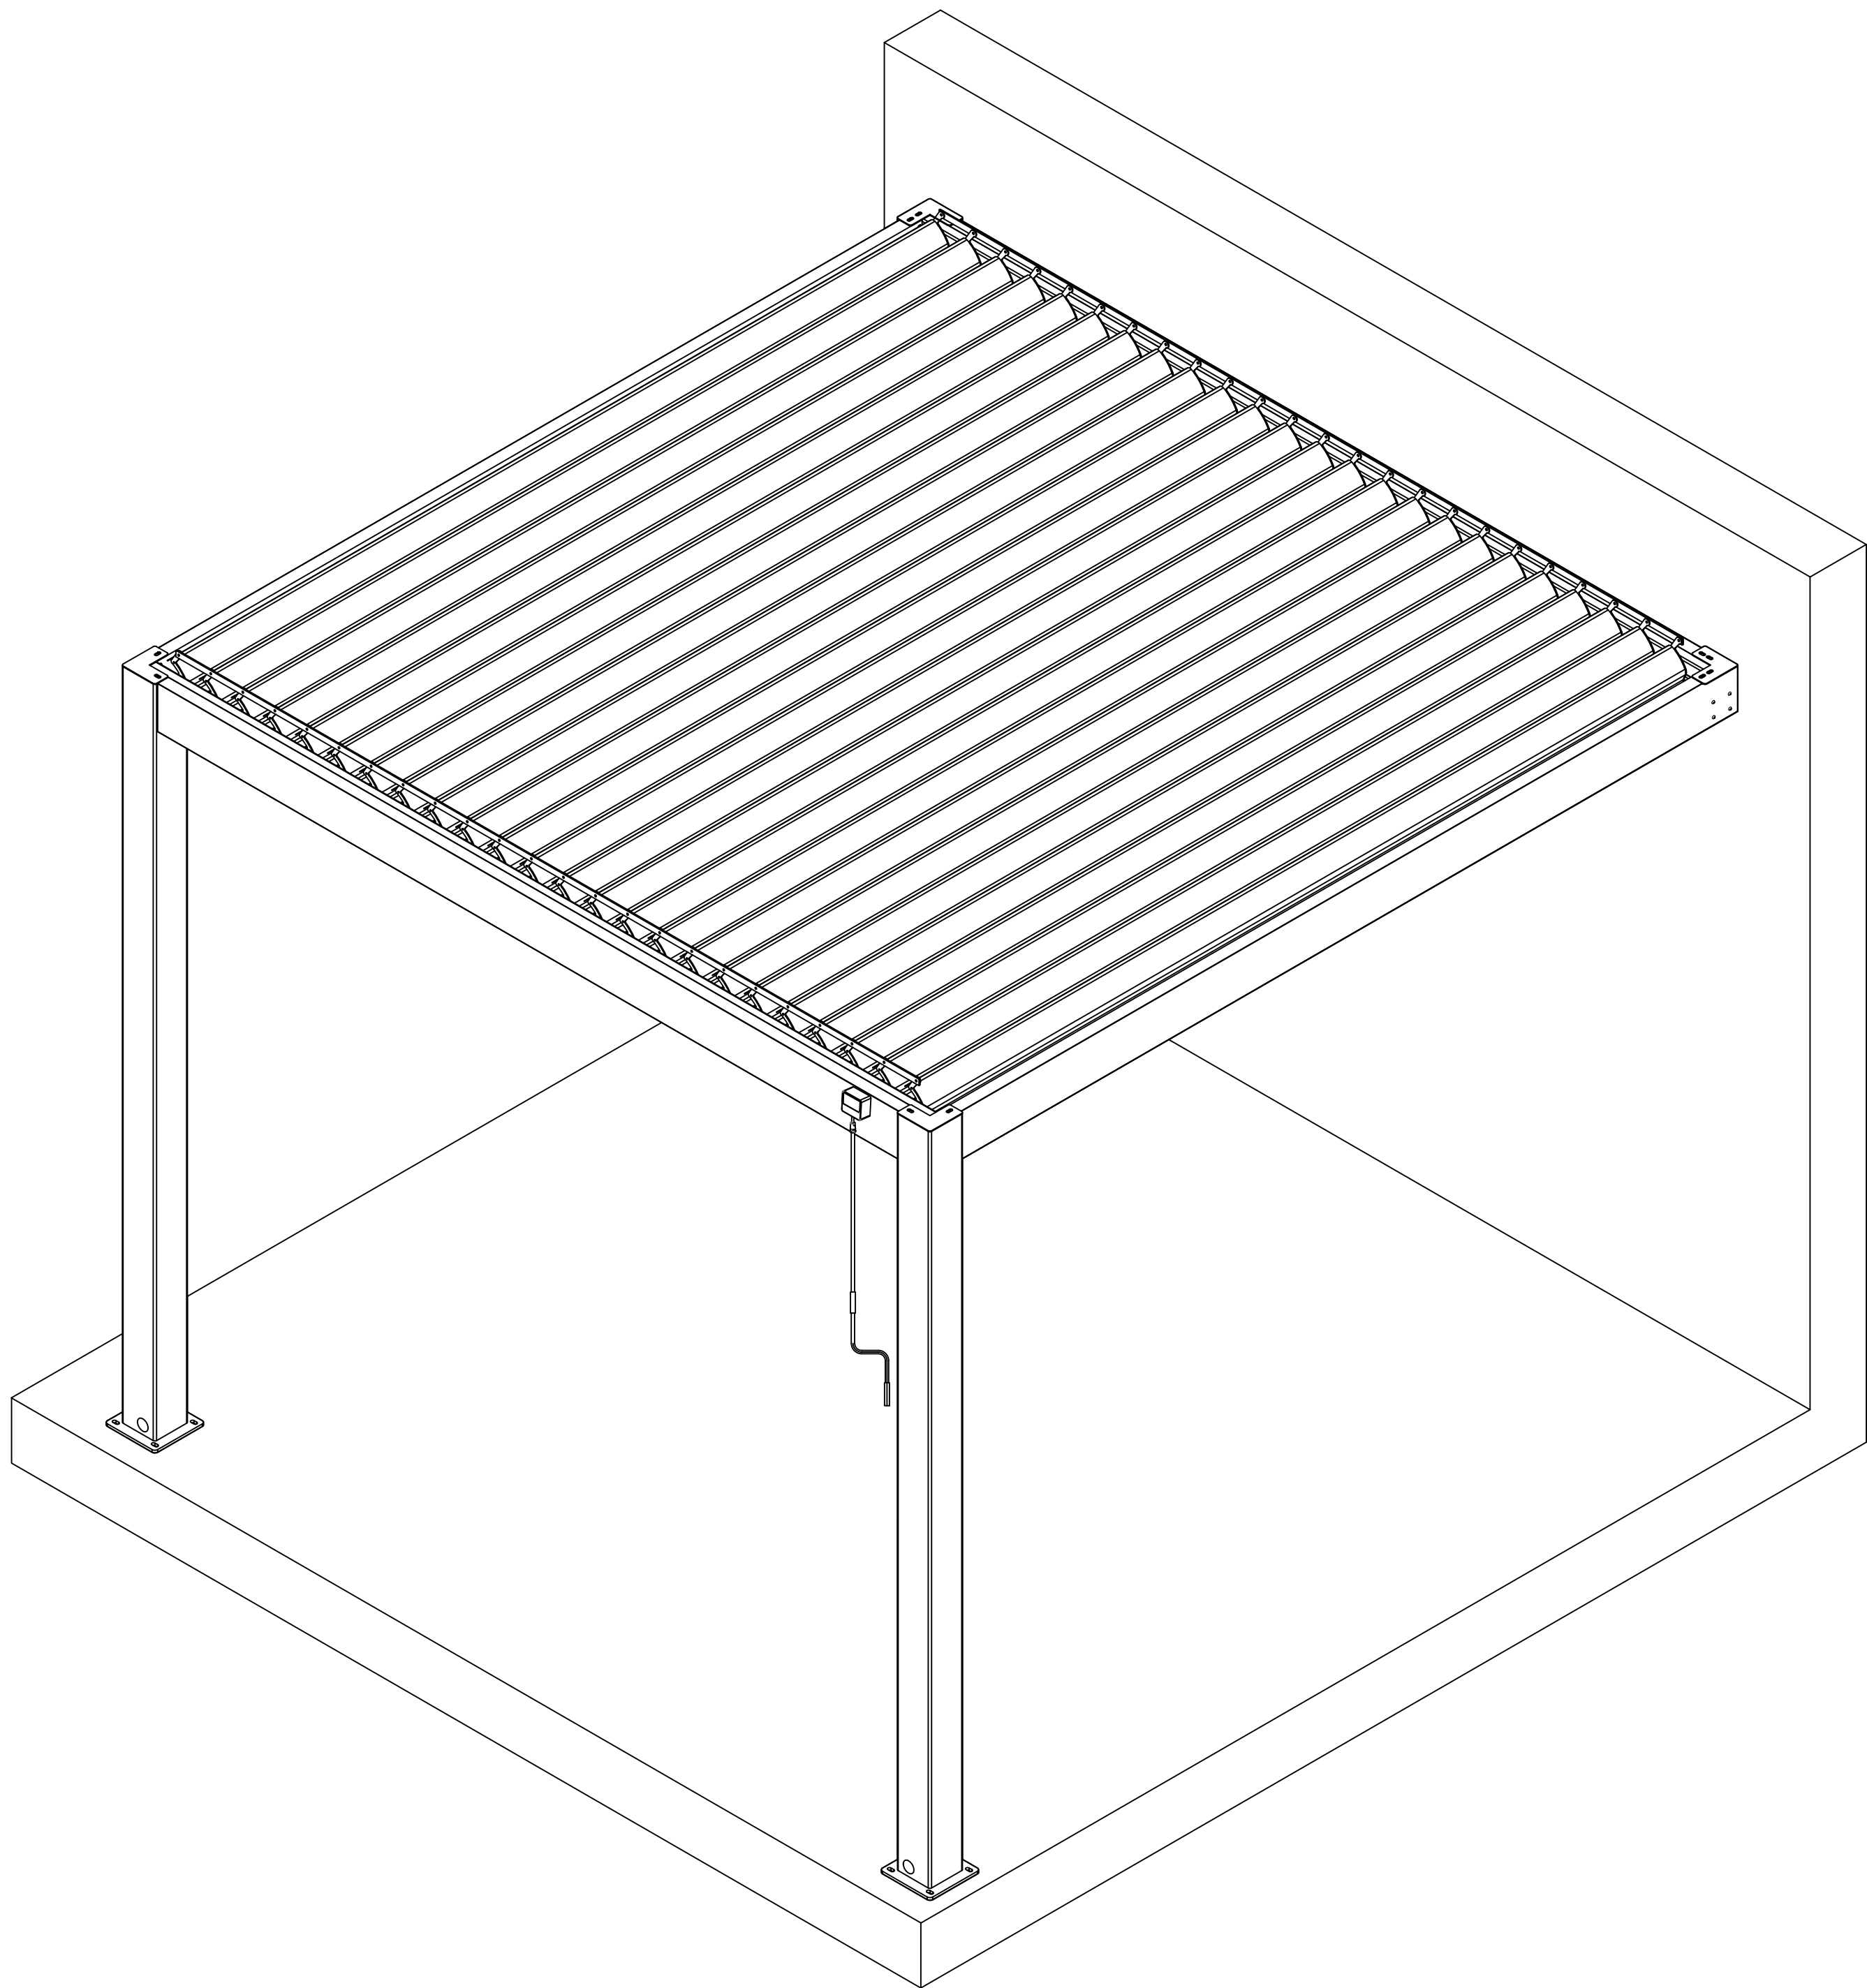

	Item	Qty	Item	Qty	Item	Qty
Carton 1/4	1B-01	2	1B-11	2	1B-12	2
	1B-13	2	1B-14	1	1B-15	1
	1B-16	1	1B-18	1	1B-19	12+
	1B-20	66+	1B-21	8	1B-22	12+
	1B-23	18+	1B-24	1	1B-35	2
	1B-36	8	1B-38	4	1B-39	12+
	1B-40	2	1B-41	2	1B-42	8
	1B-48	33+	1B-49	32+	1B-50	1
	1B-51	132+	1B-67	14+		
Carton 2/4	1B-02	1	1B-03	1	1B-04	2
	1B-05 A/B/C	4	1B-08	2	1B-09	2
	1B-34	1	1B-29	2		
Carton 3/4	1B-06	12				
Carton 4/4	1B-06	21				

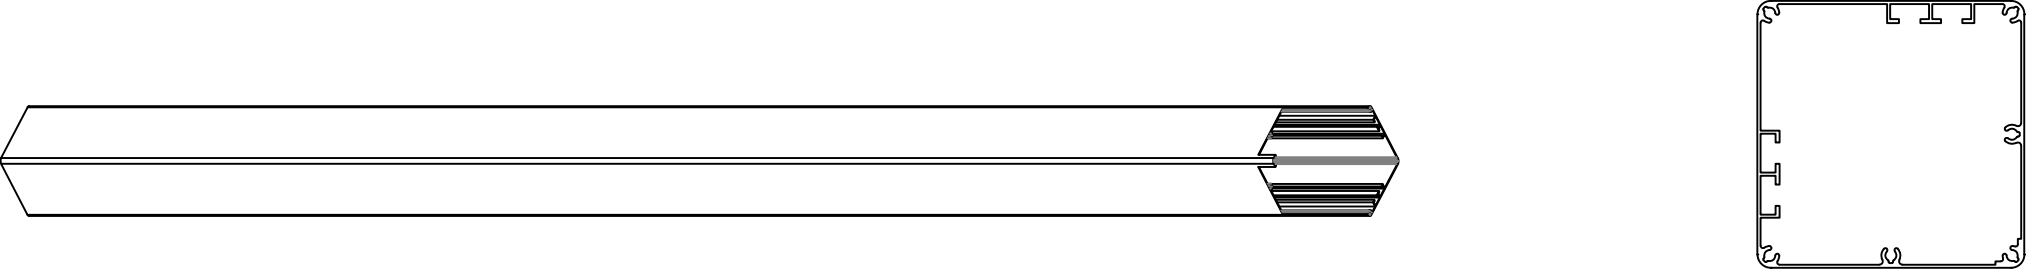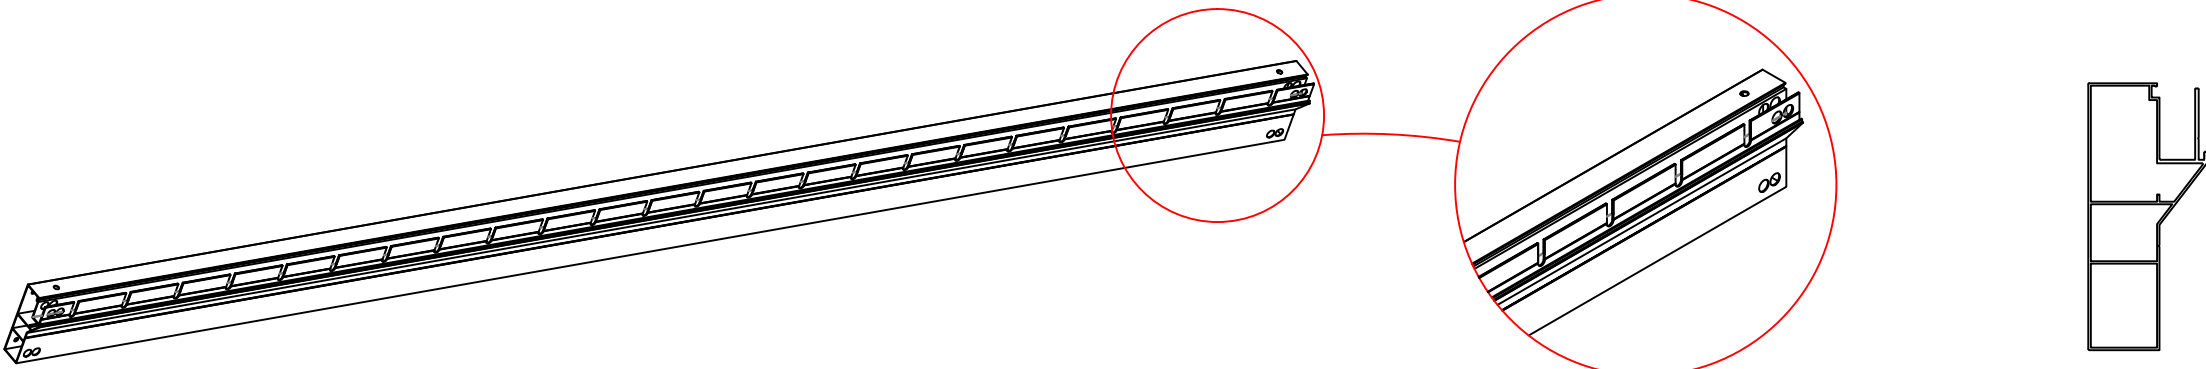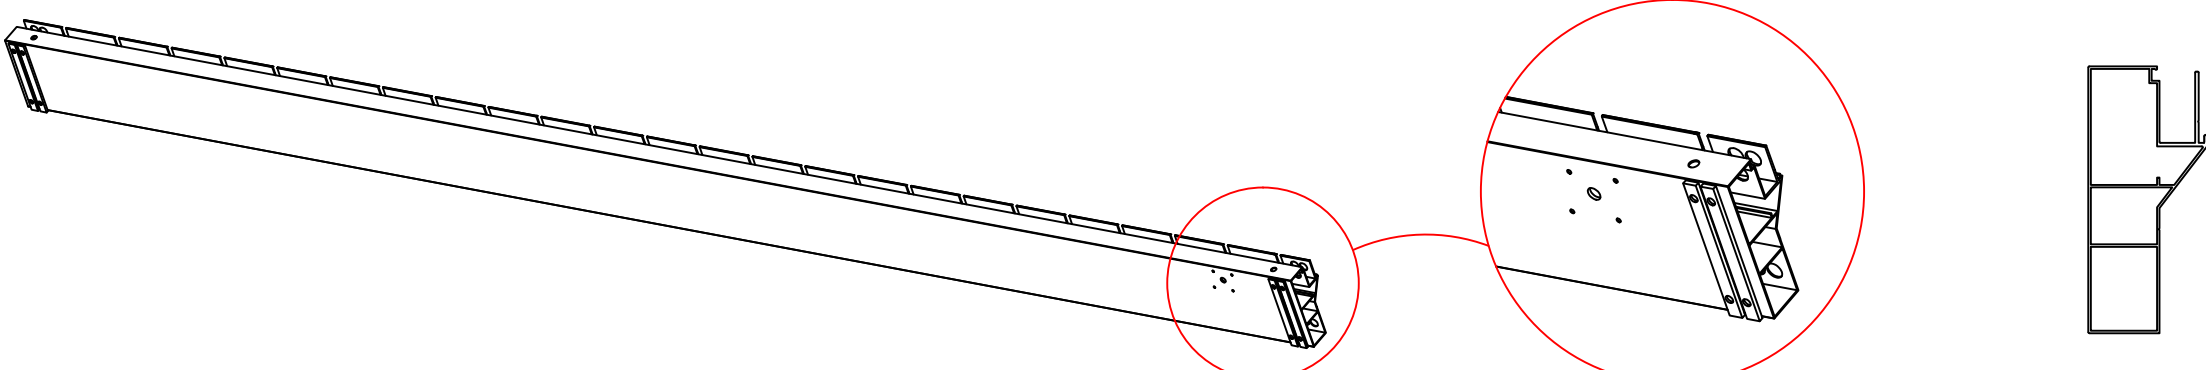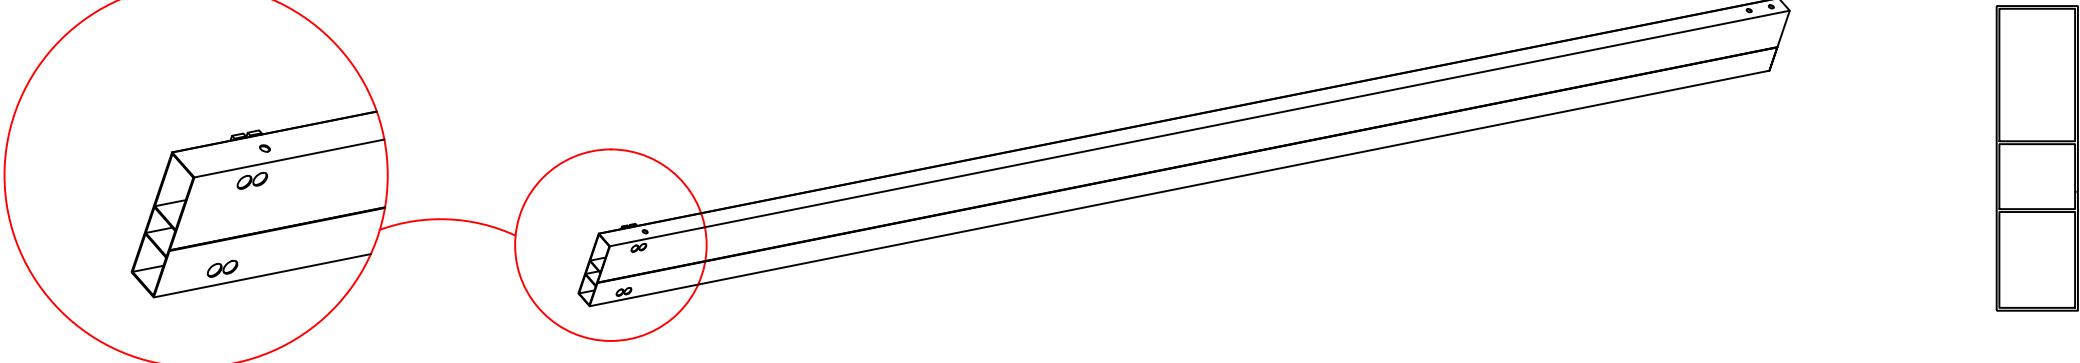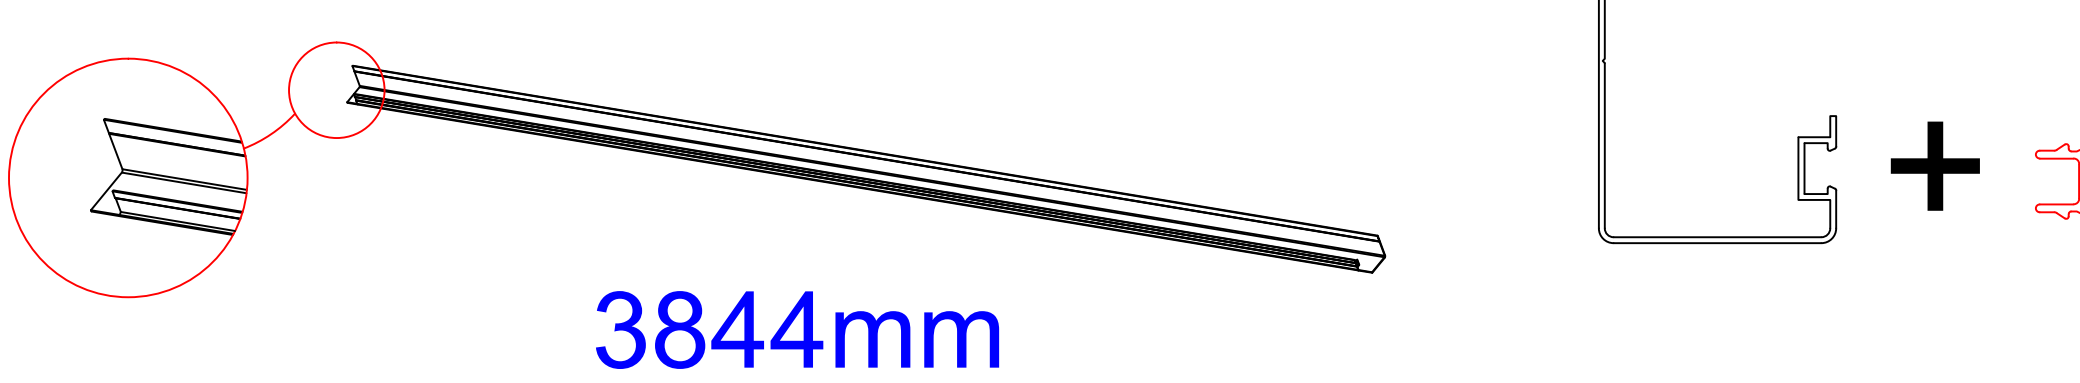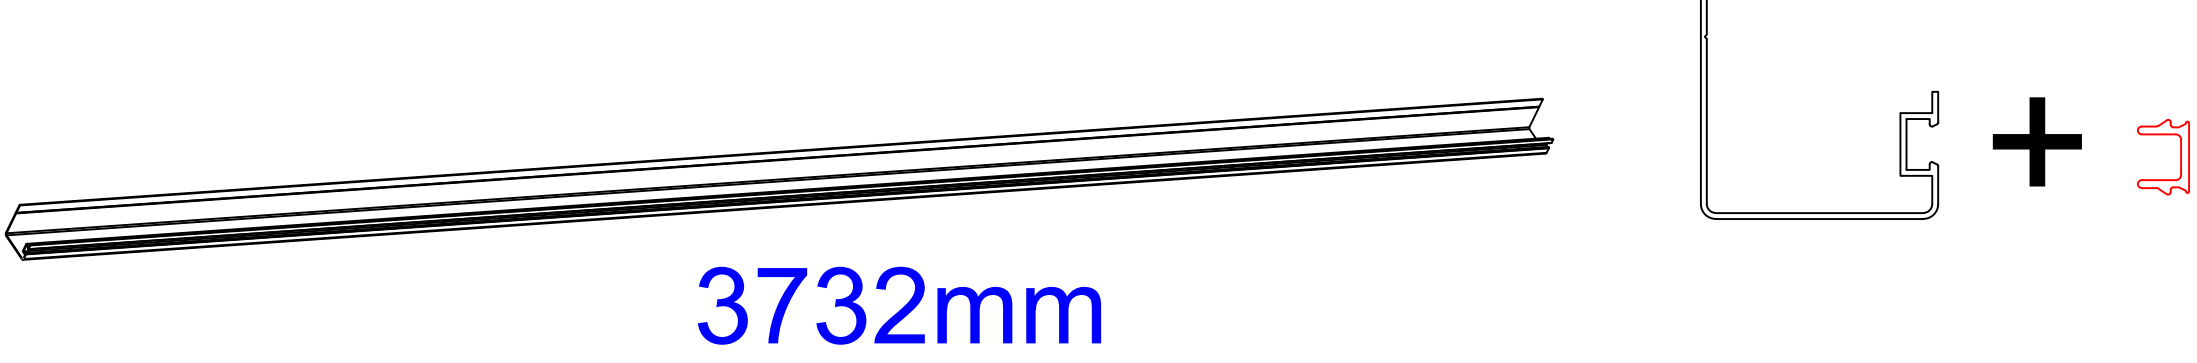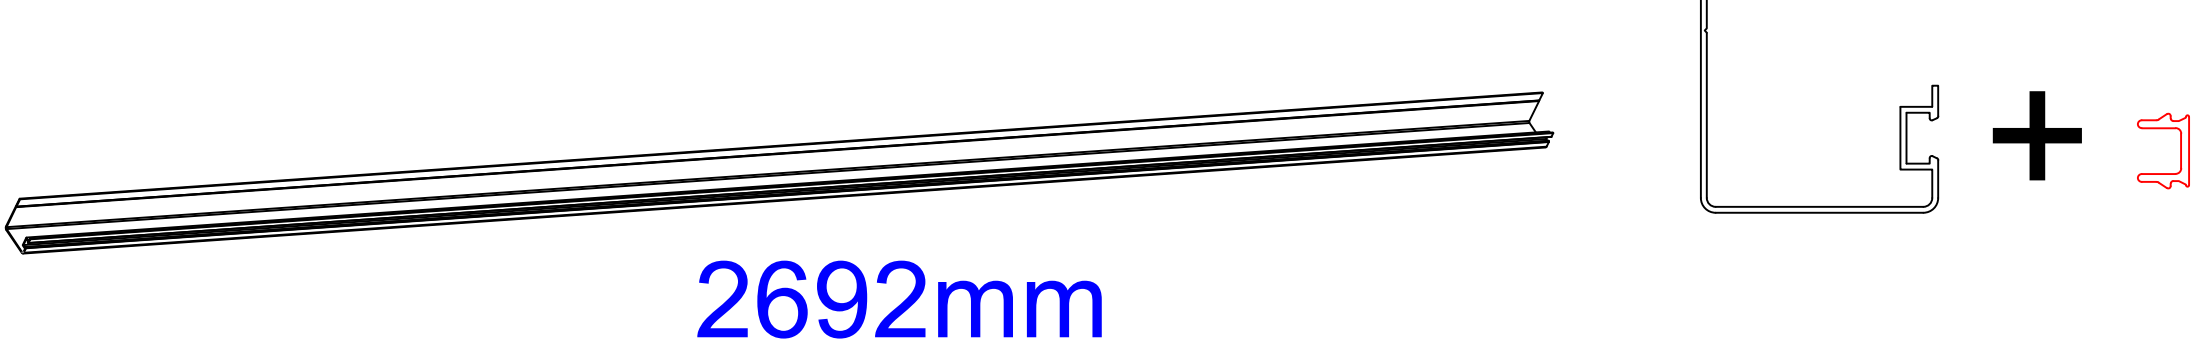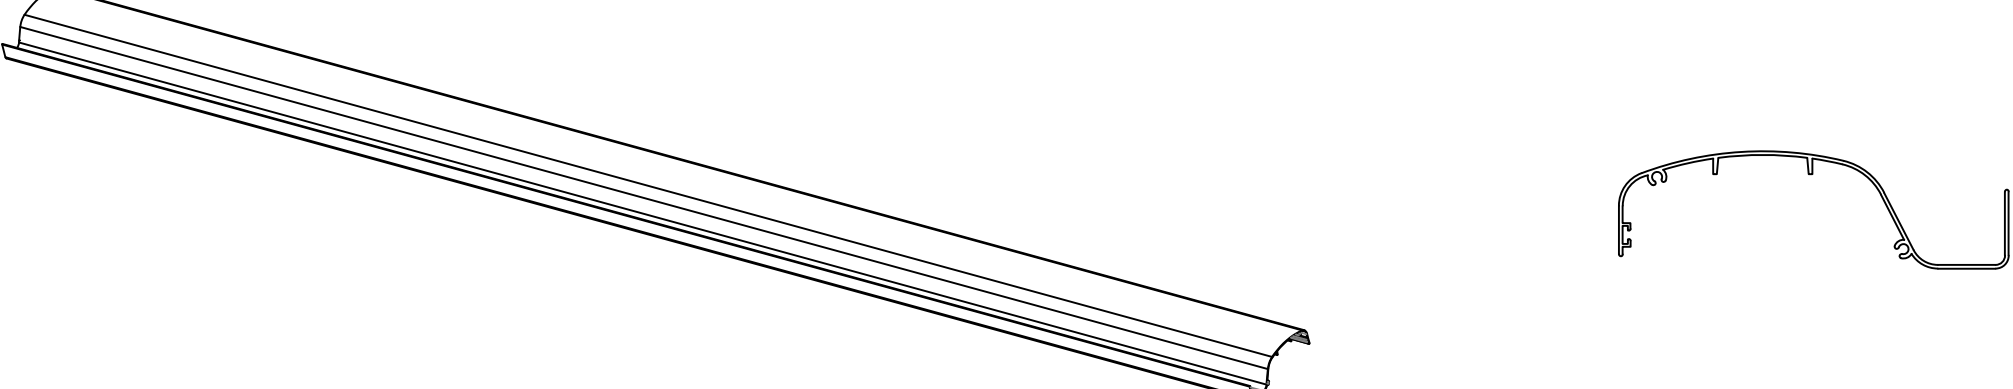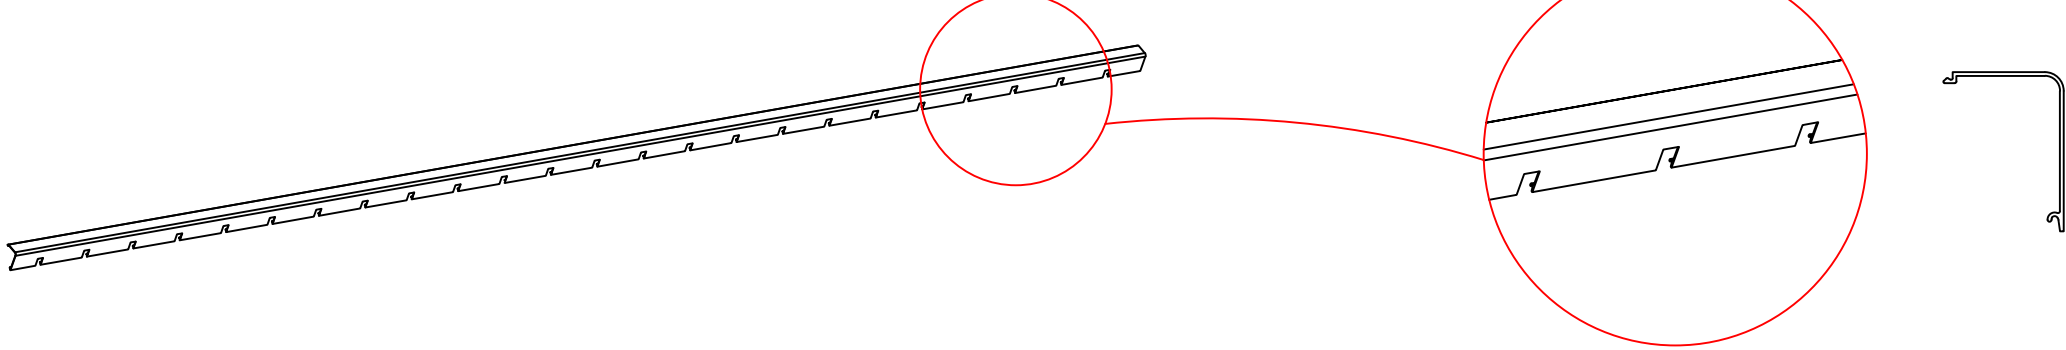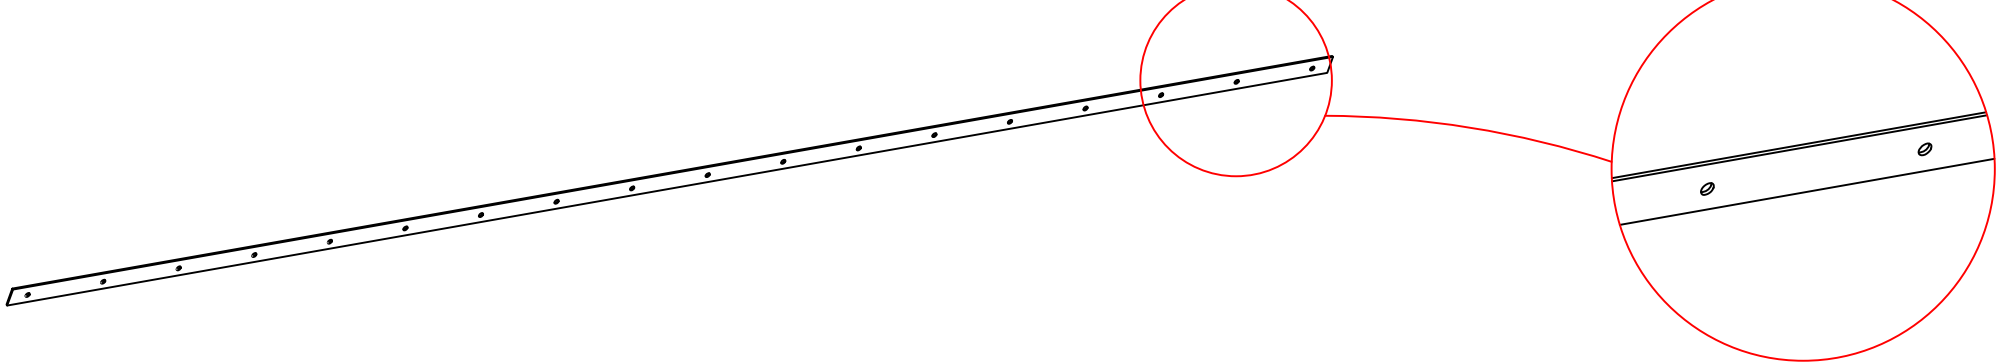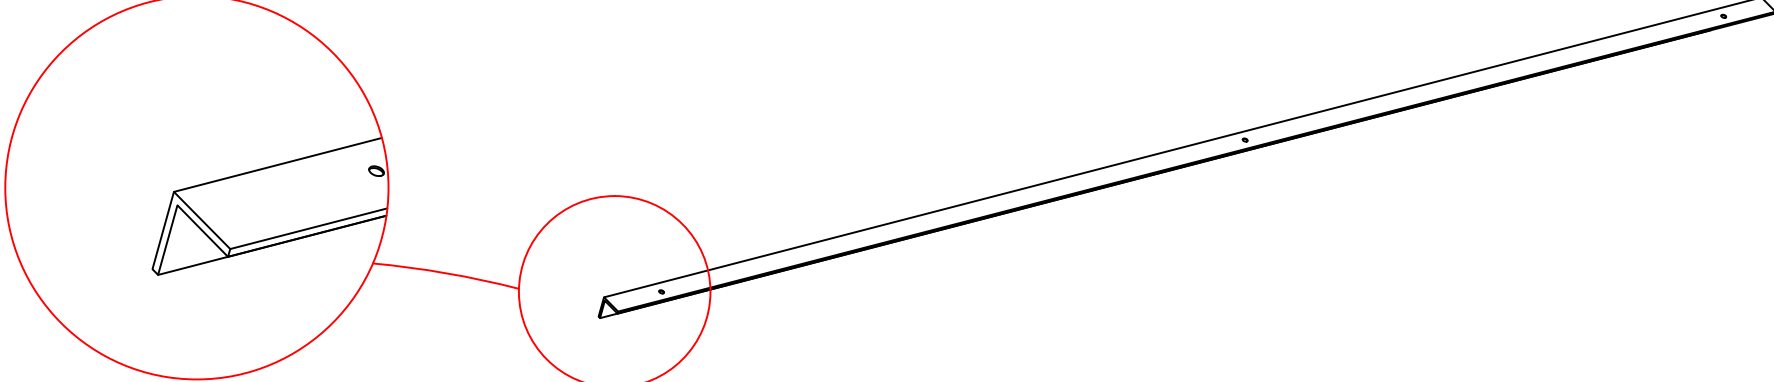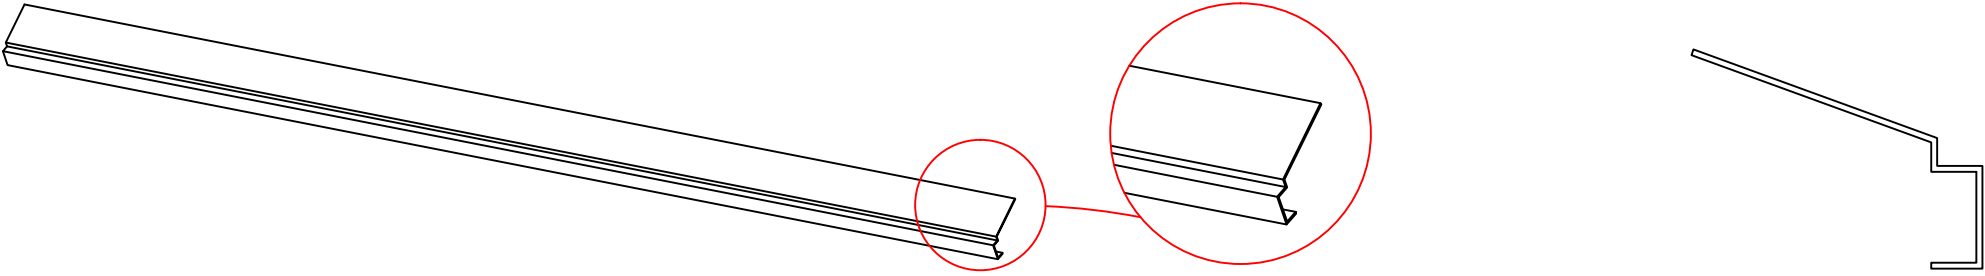


Item	Drawings	Qty
1B-01		2
1B-02		1
1B-03		1
1B-04		2
1B-05A	 3844mm	1
1B-05B	 3732mm	1
1B-05C	 2692mm	2
1B-06		33
1B-08		2
1B-09		2
1B-34		1
1B-29		2

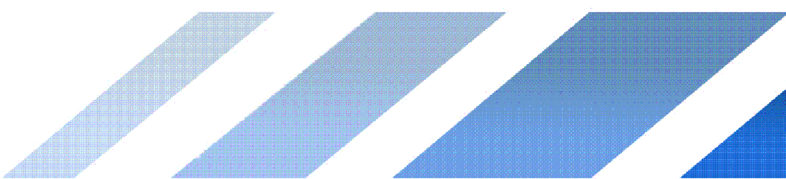




Item	Drawings	Qty
1B-11		2
1B-12		2
1B-13		2
1B-14		1
1B-15		1
1B-16		1
1B-18		1
1B-19	 M8*20	12+
1B-20		66+
1B-21	 M10*80	8
1B-22	 M5.5*50	12+
1B-23	 M4.2*19	18+
1B-24		1
1B-35		2

Item	Drawings	Qty
1B-36	 M8*80	8
1B-38	 M5.5*25	4
1B-40		2
1B-41		2
1B-42	 M10*20	8
1B-39	 M8*60	12+
1B-48		33+
1B-49		32+
1B-50		1
1B-51	 M3.5*25	132+
1B-67	 M4.2*50	14+

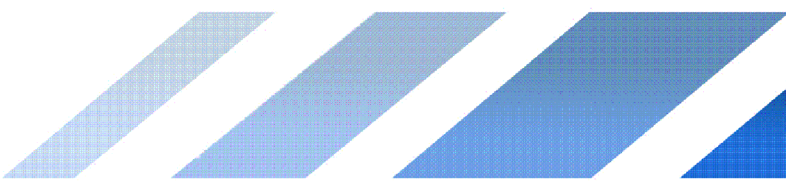





3×4m


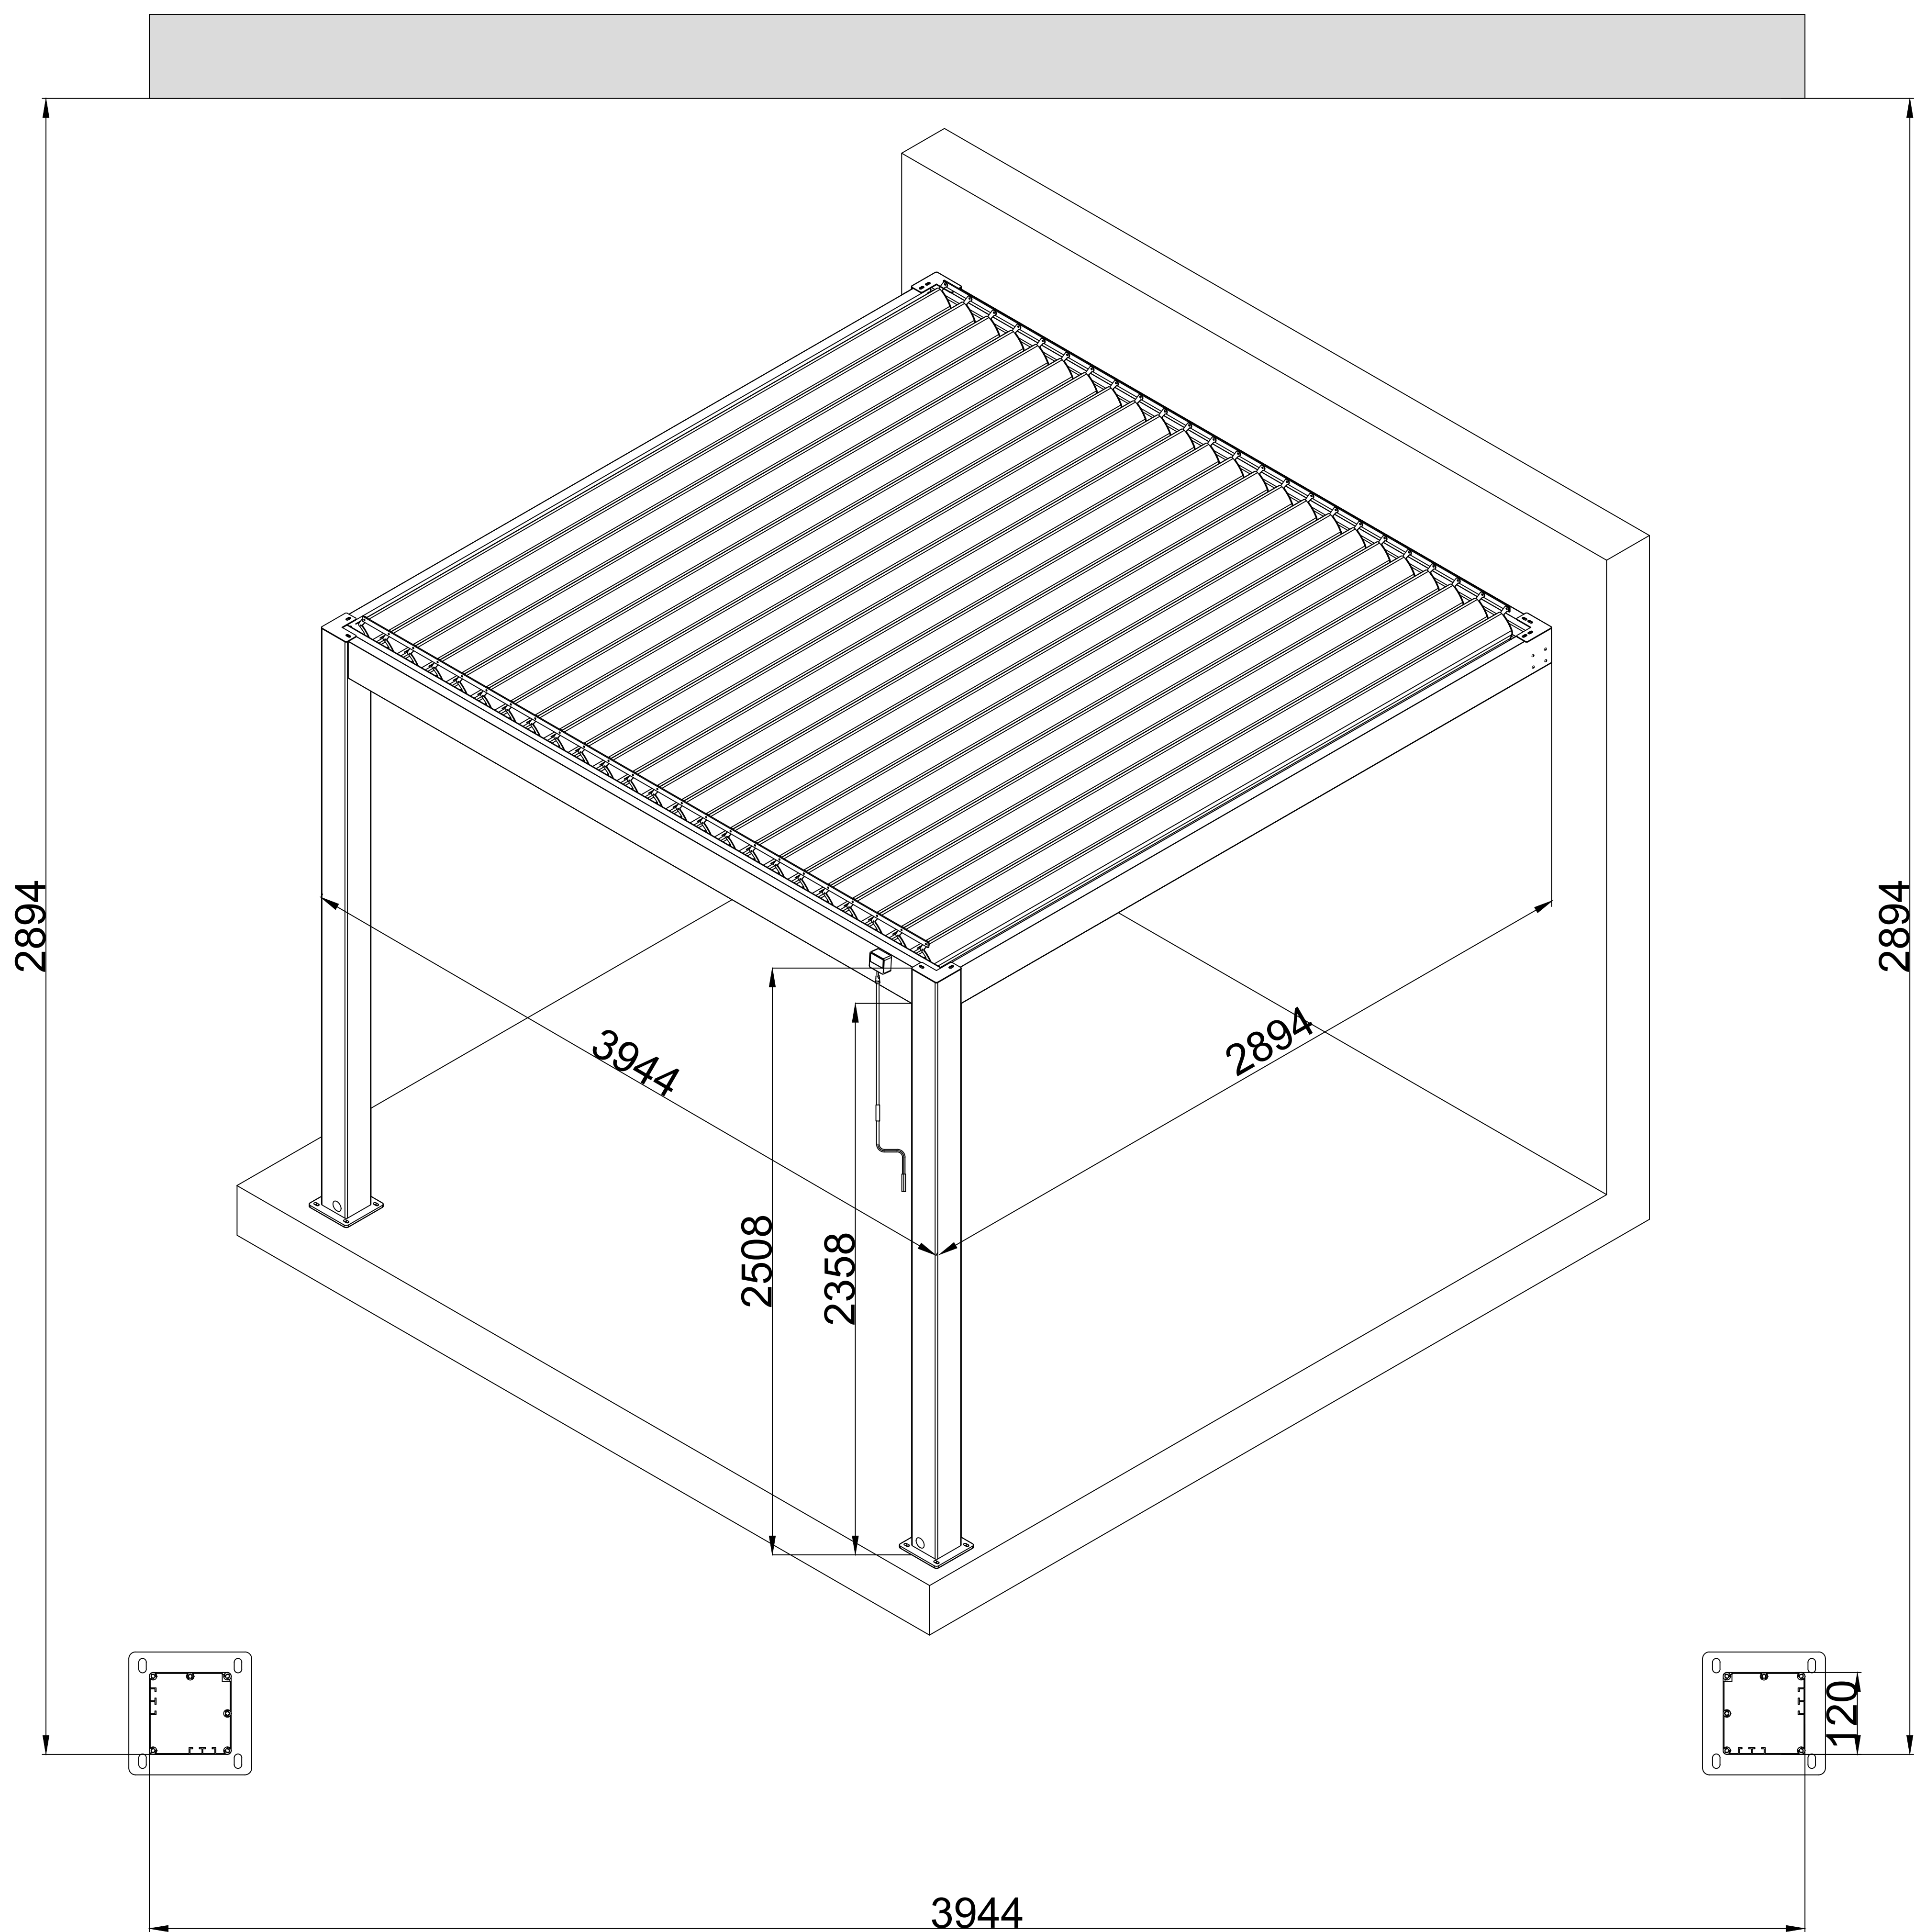


3×4-4

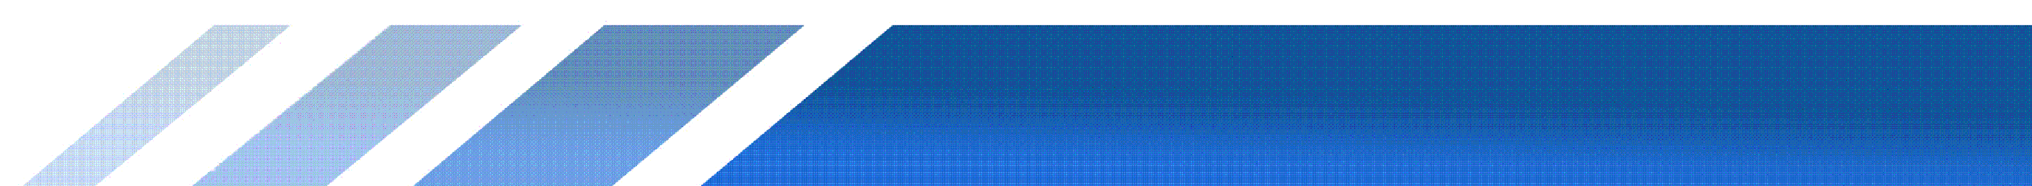




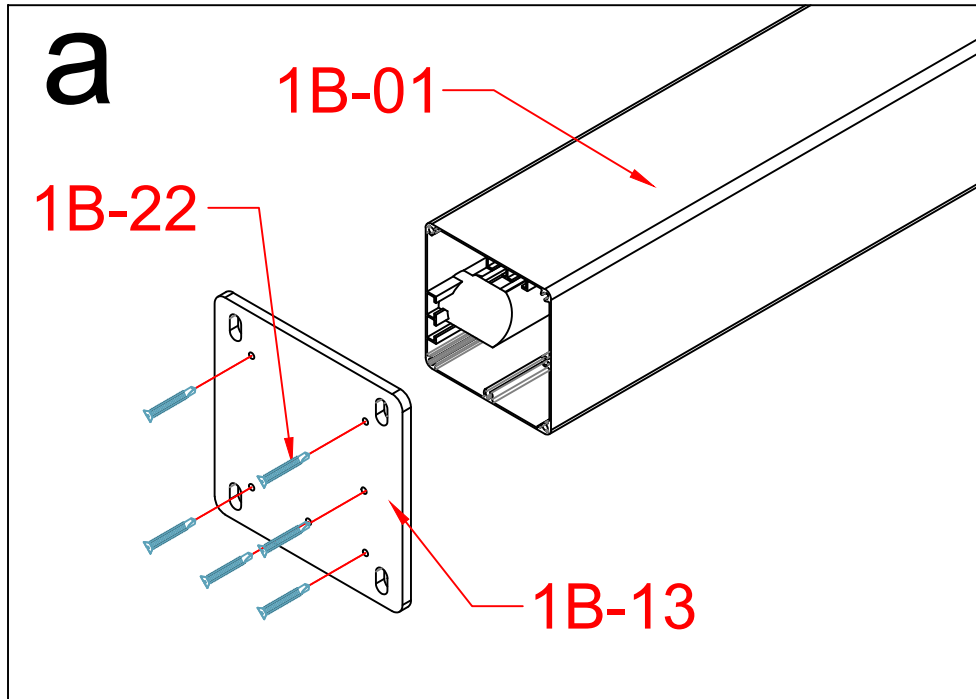


If there are electrical components including motor, blinds or LED light, Set the wire through the post firstly, otherwise it would be very difficult to do so after pergola was assembled.



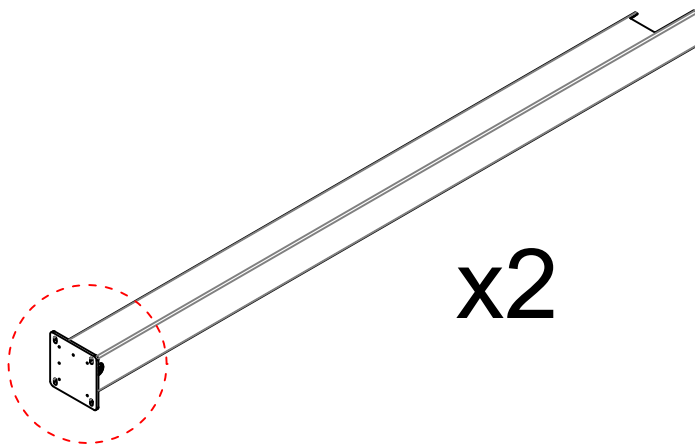
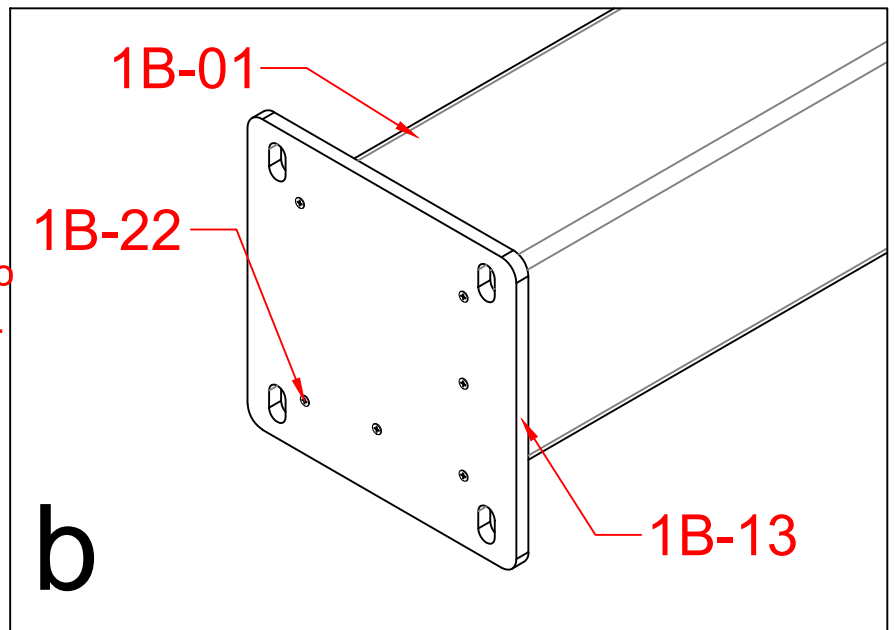




1B-01		2
1B-13		2
1B-22	 M5.5*50	12





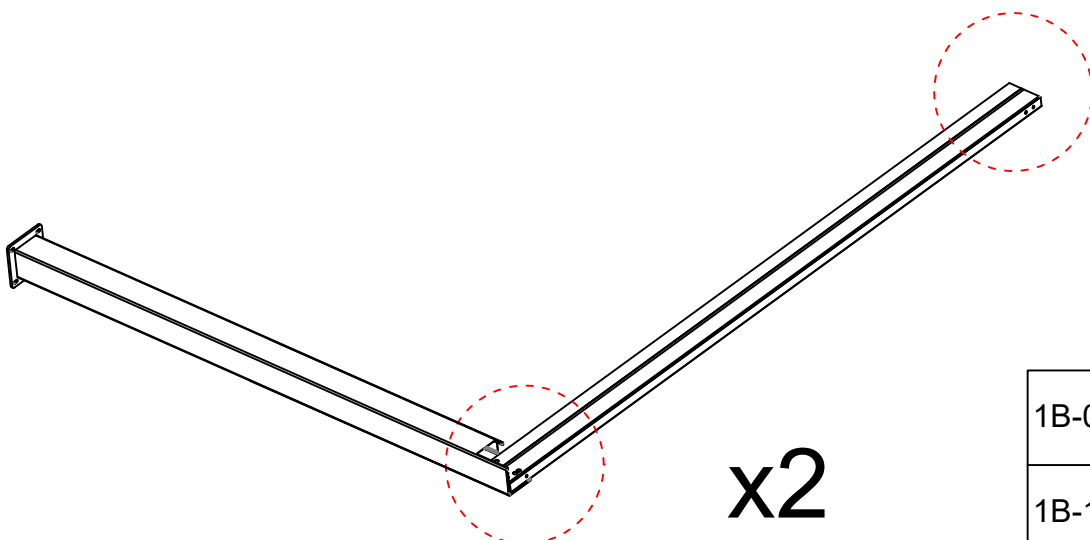
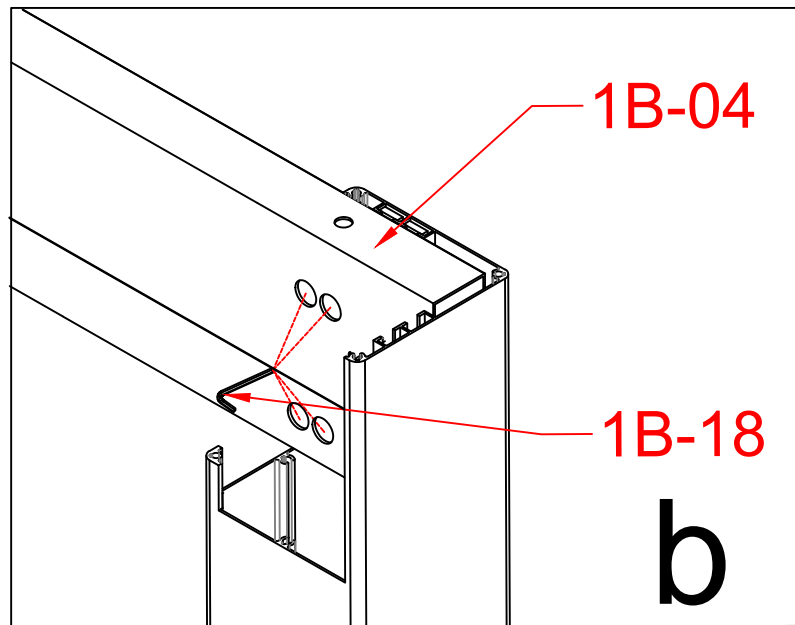
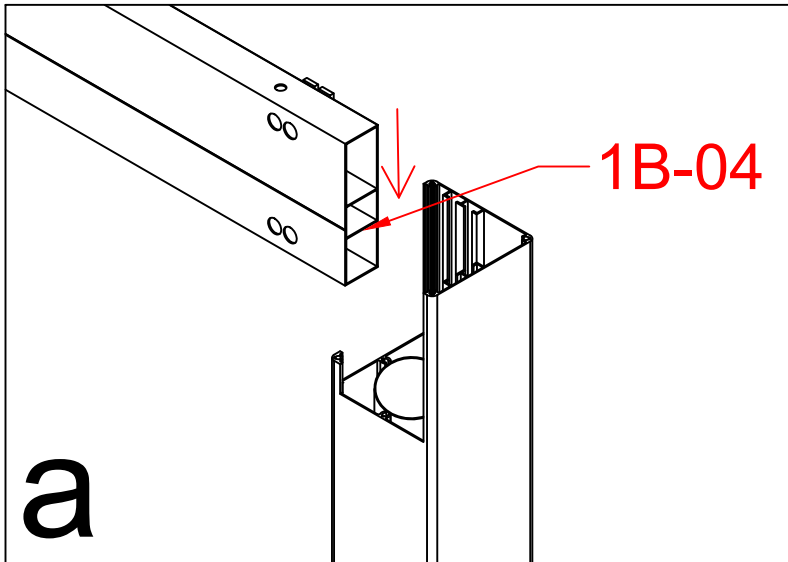




1B-04		2
1B-18		1

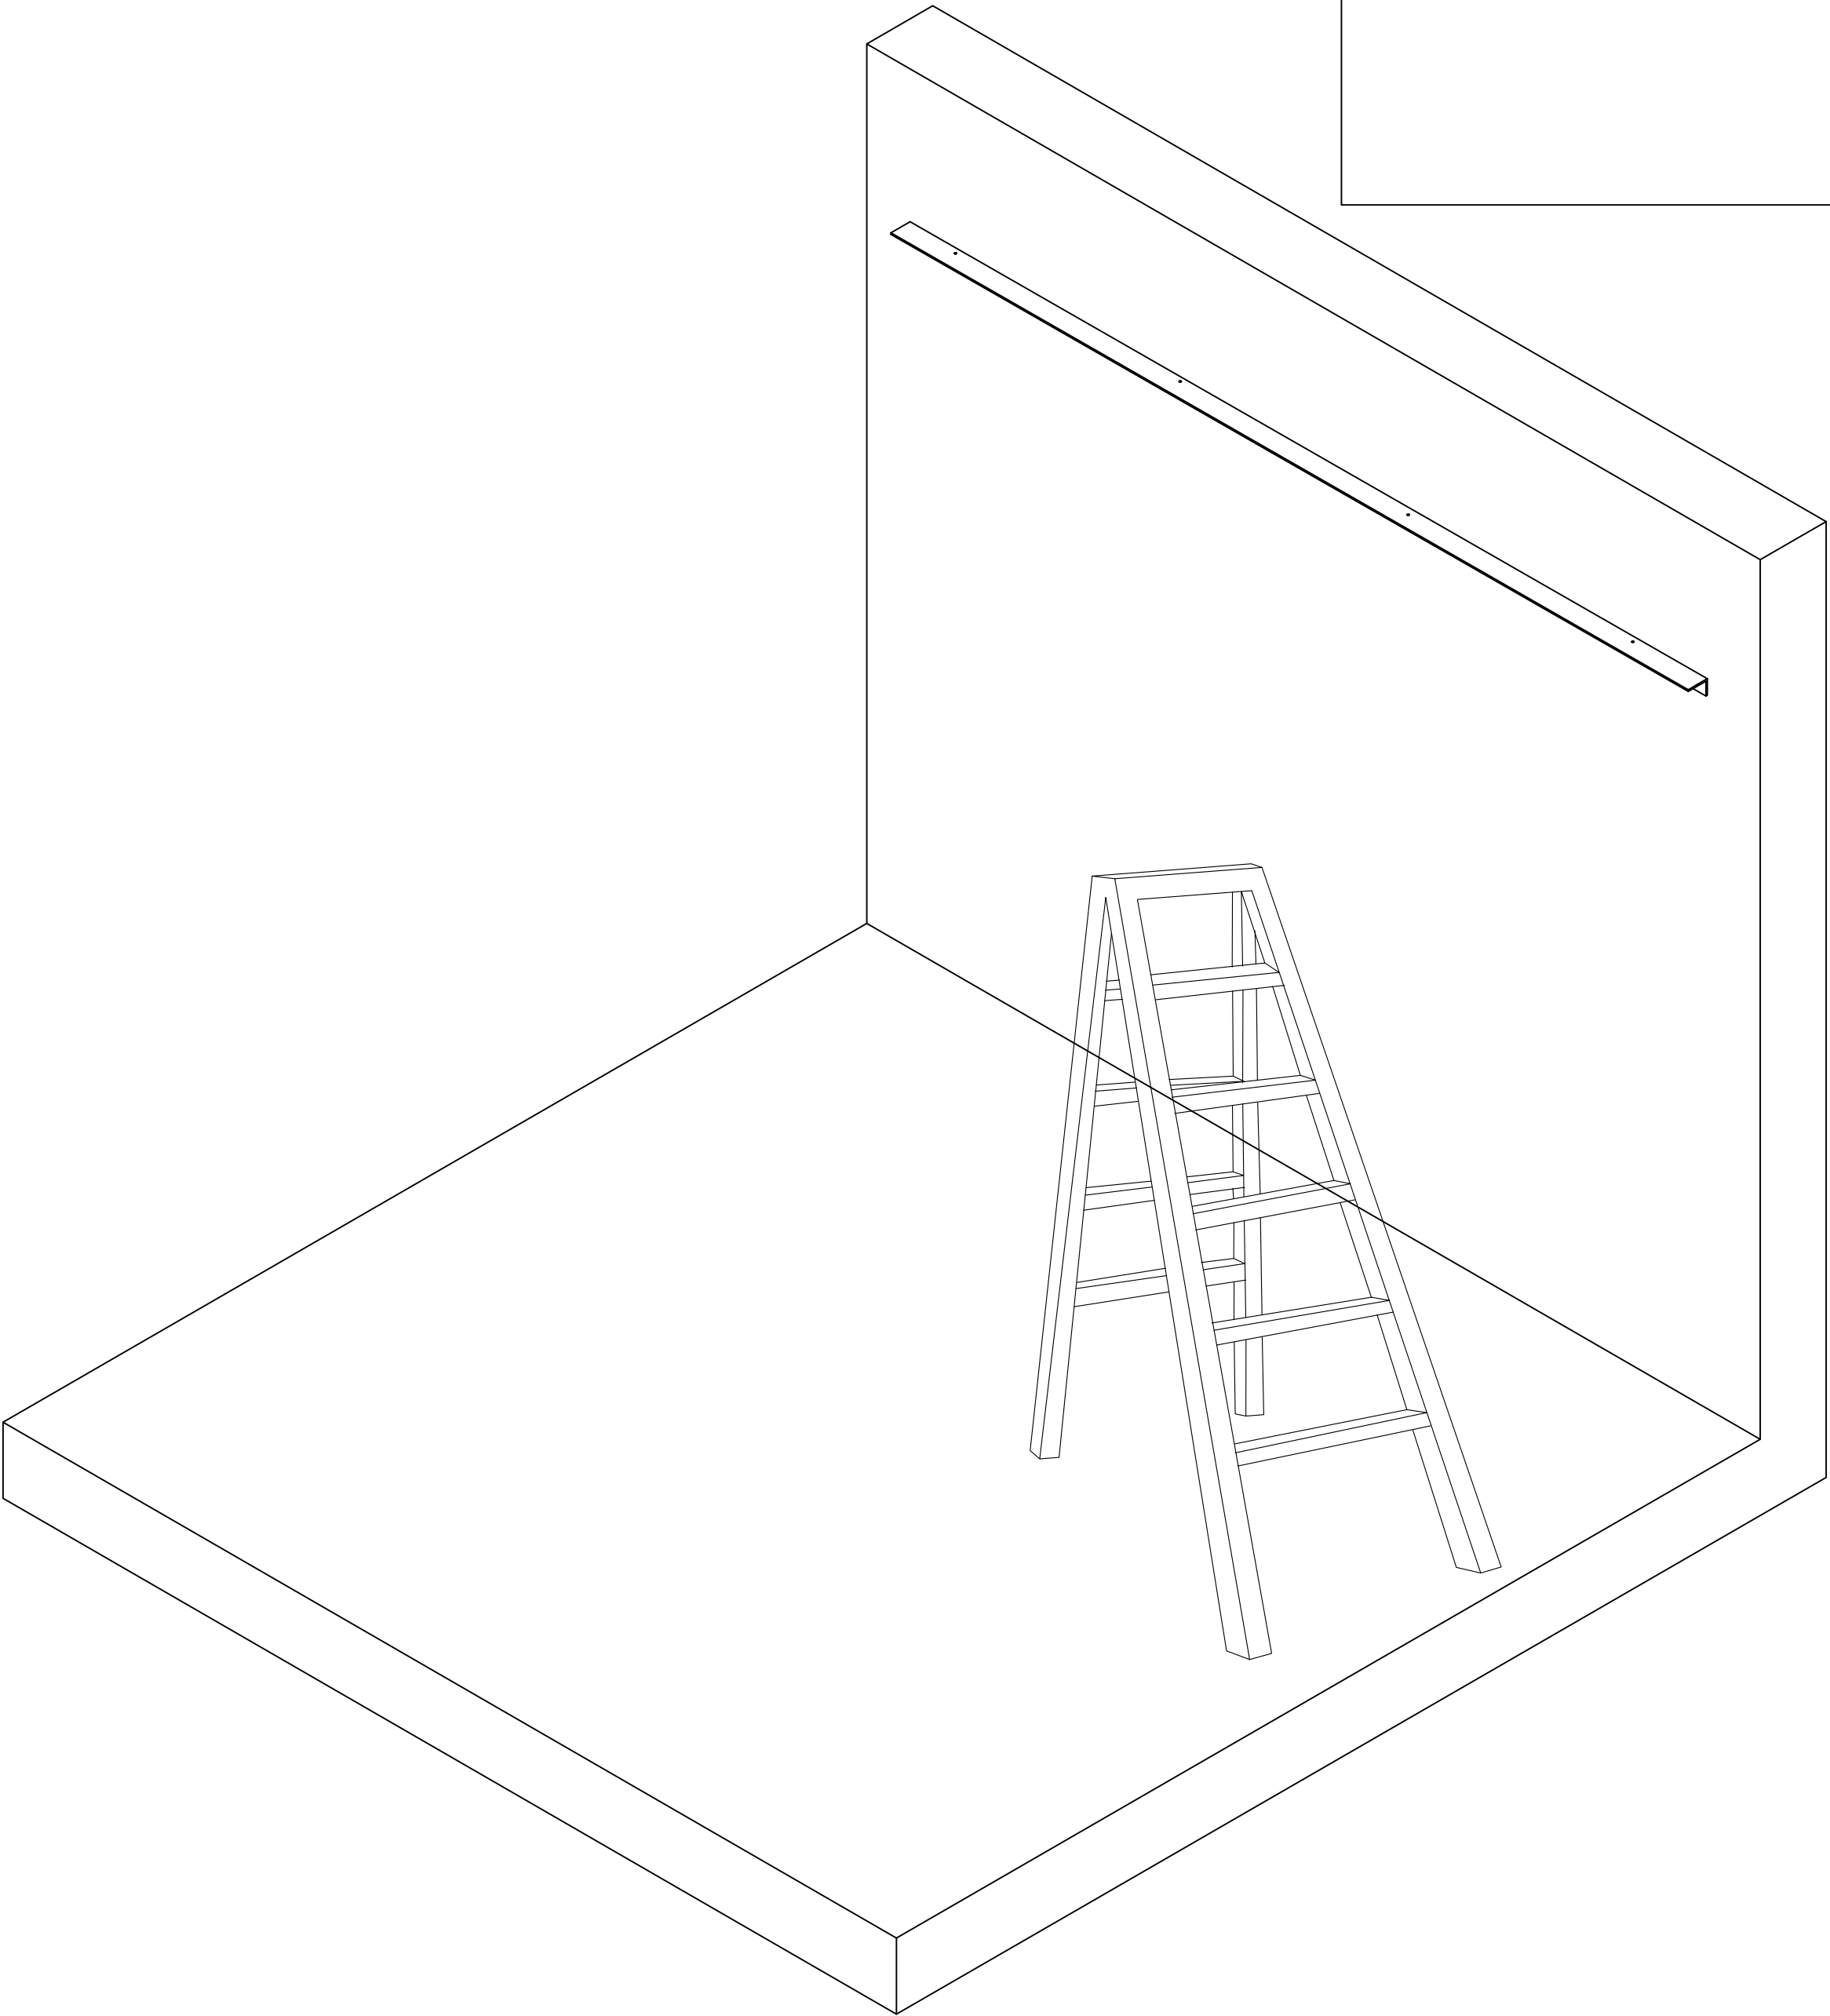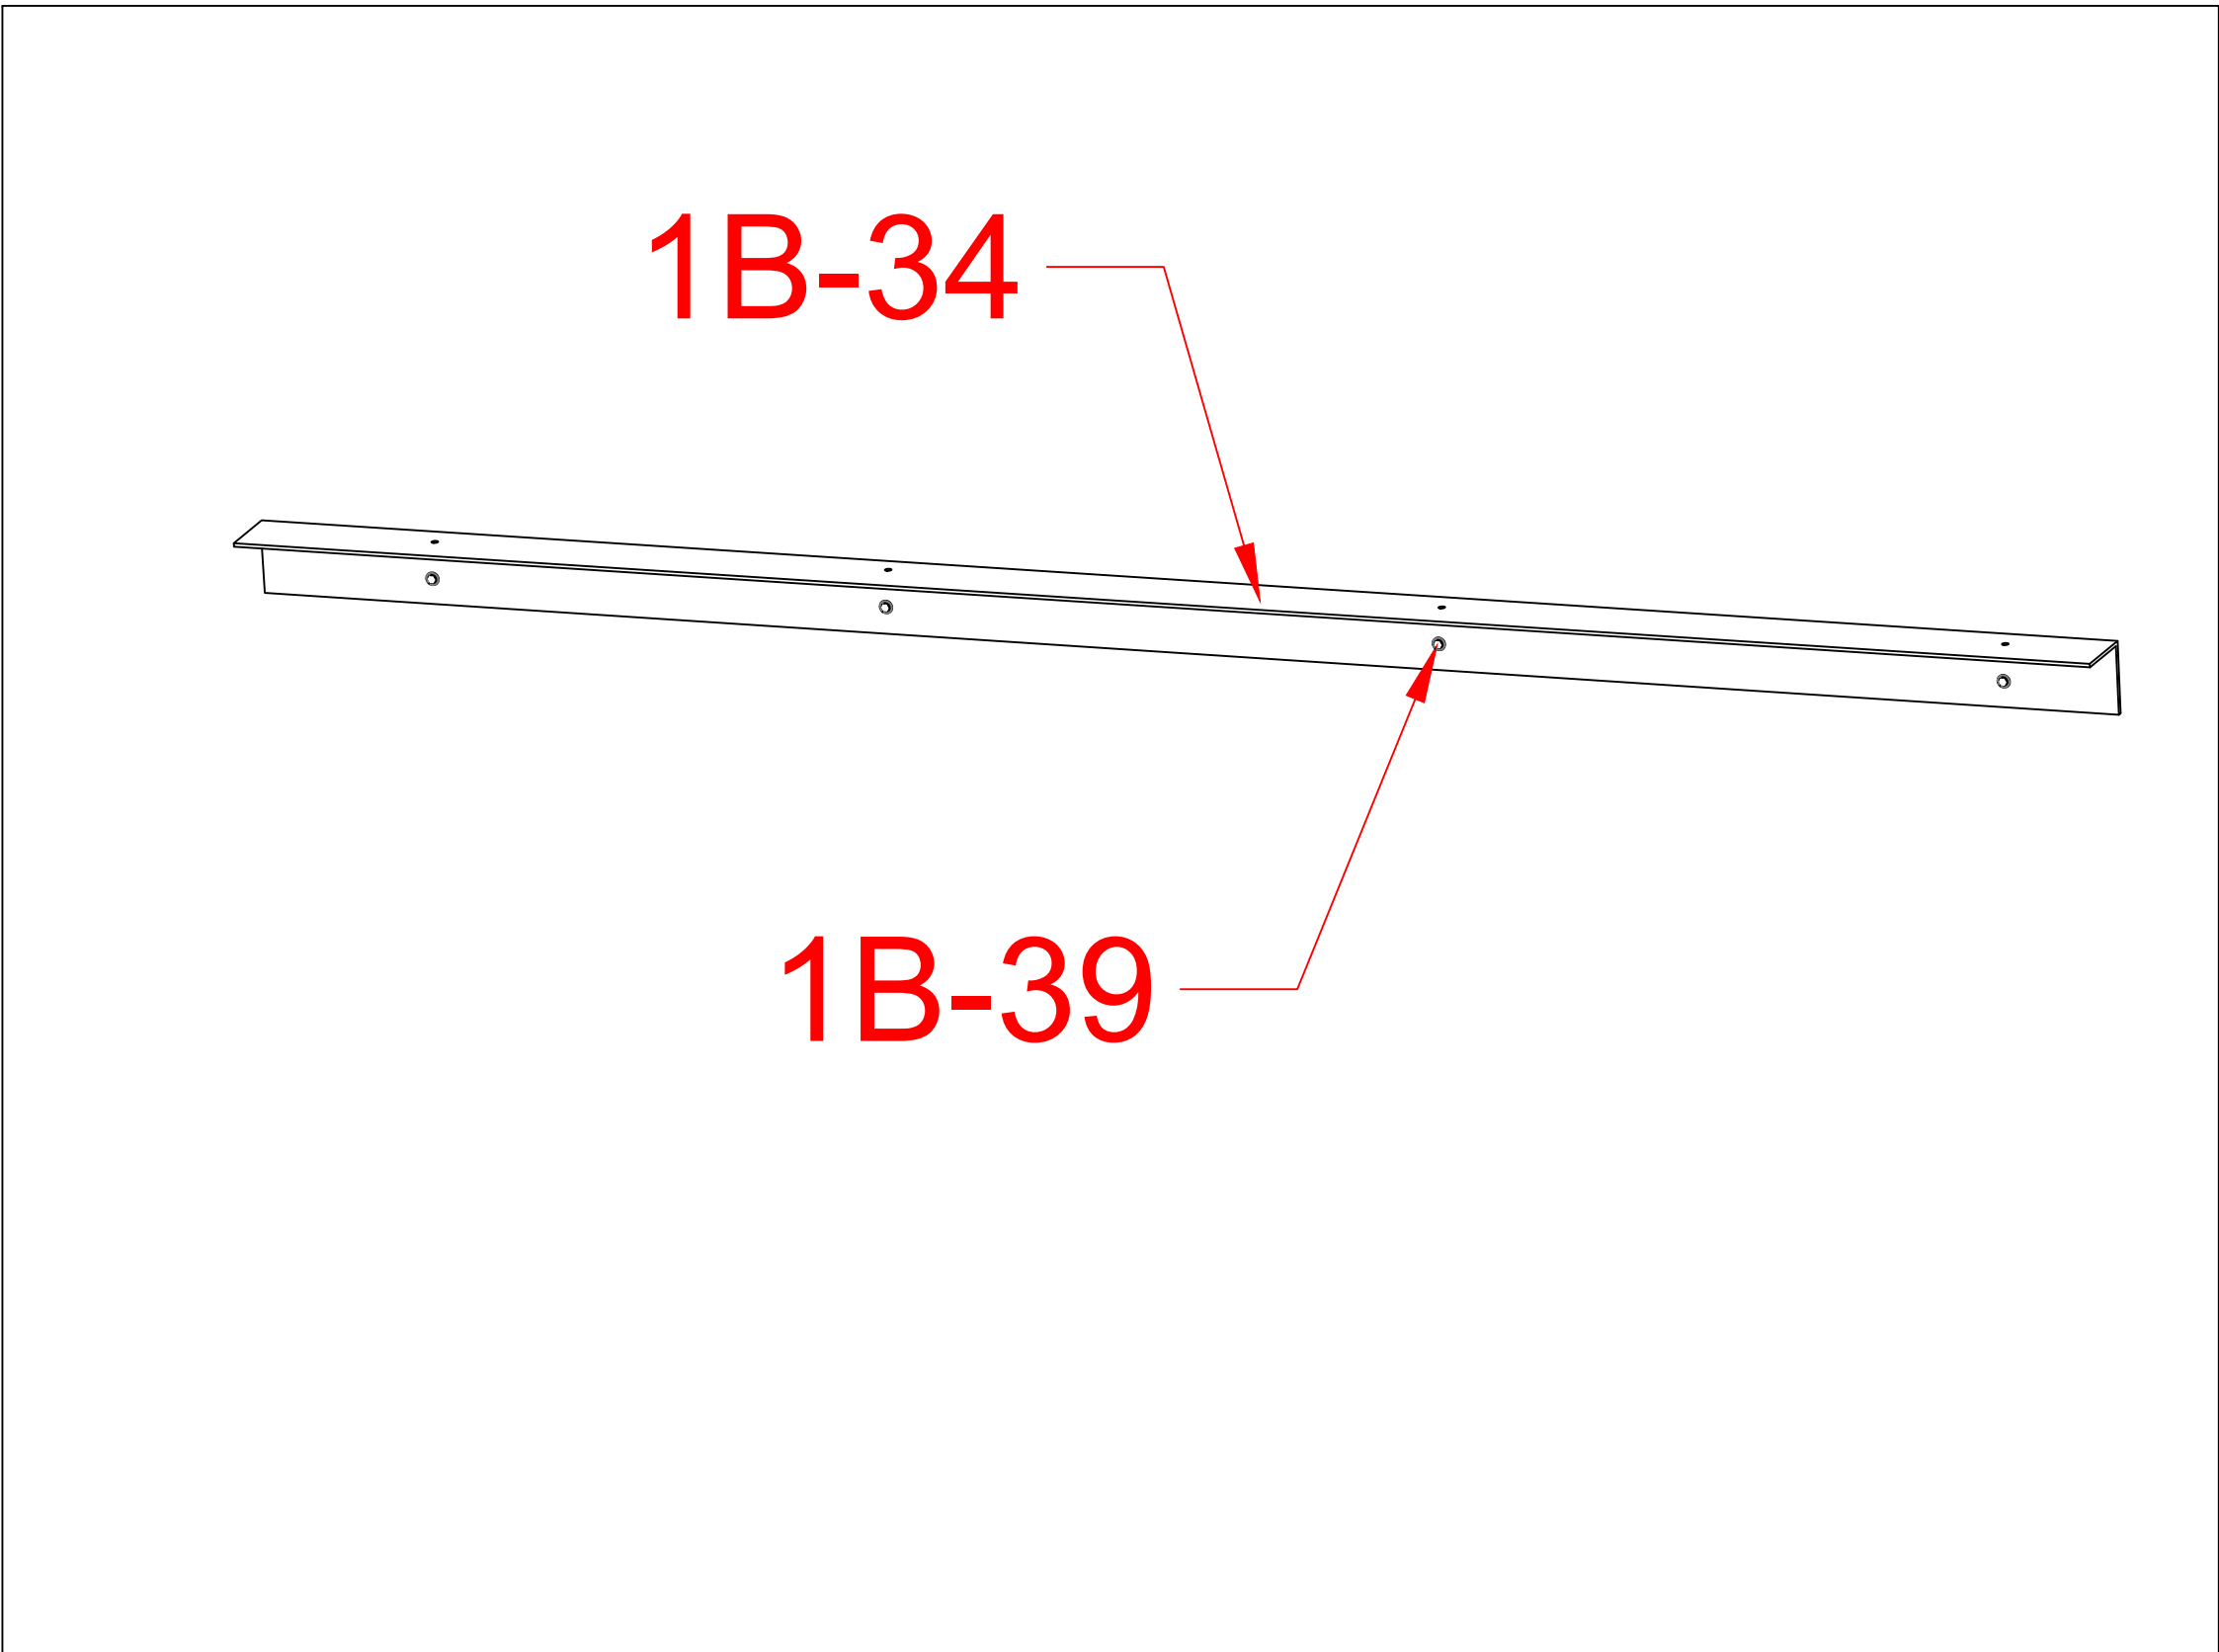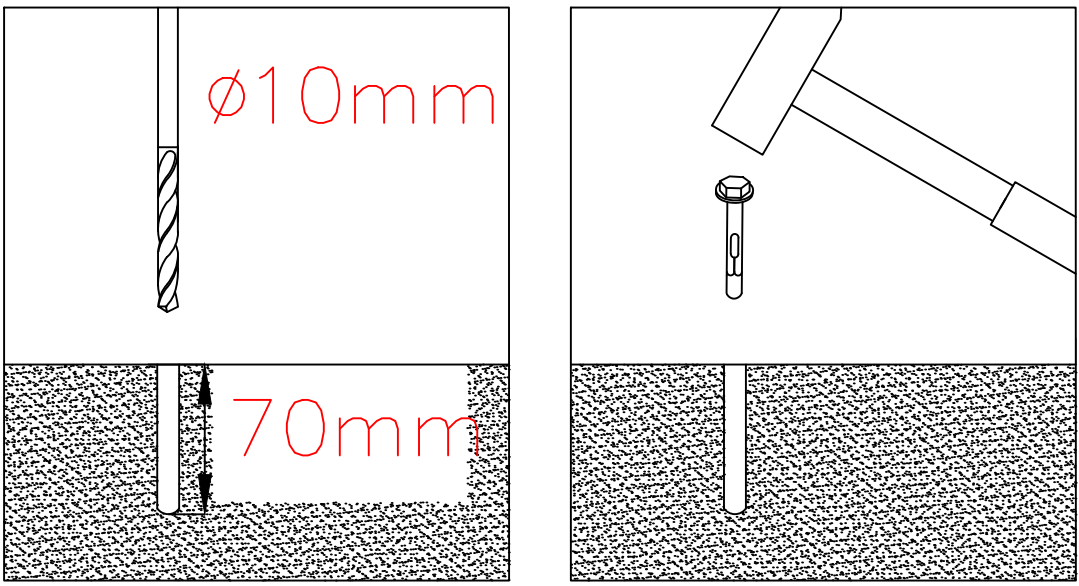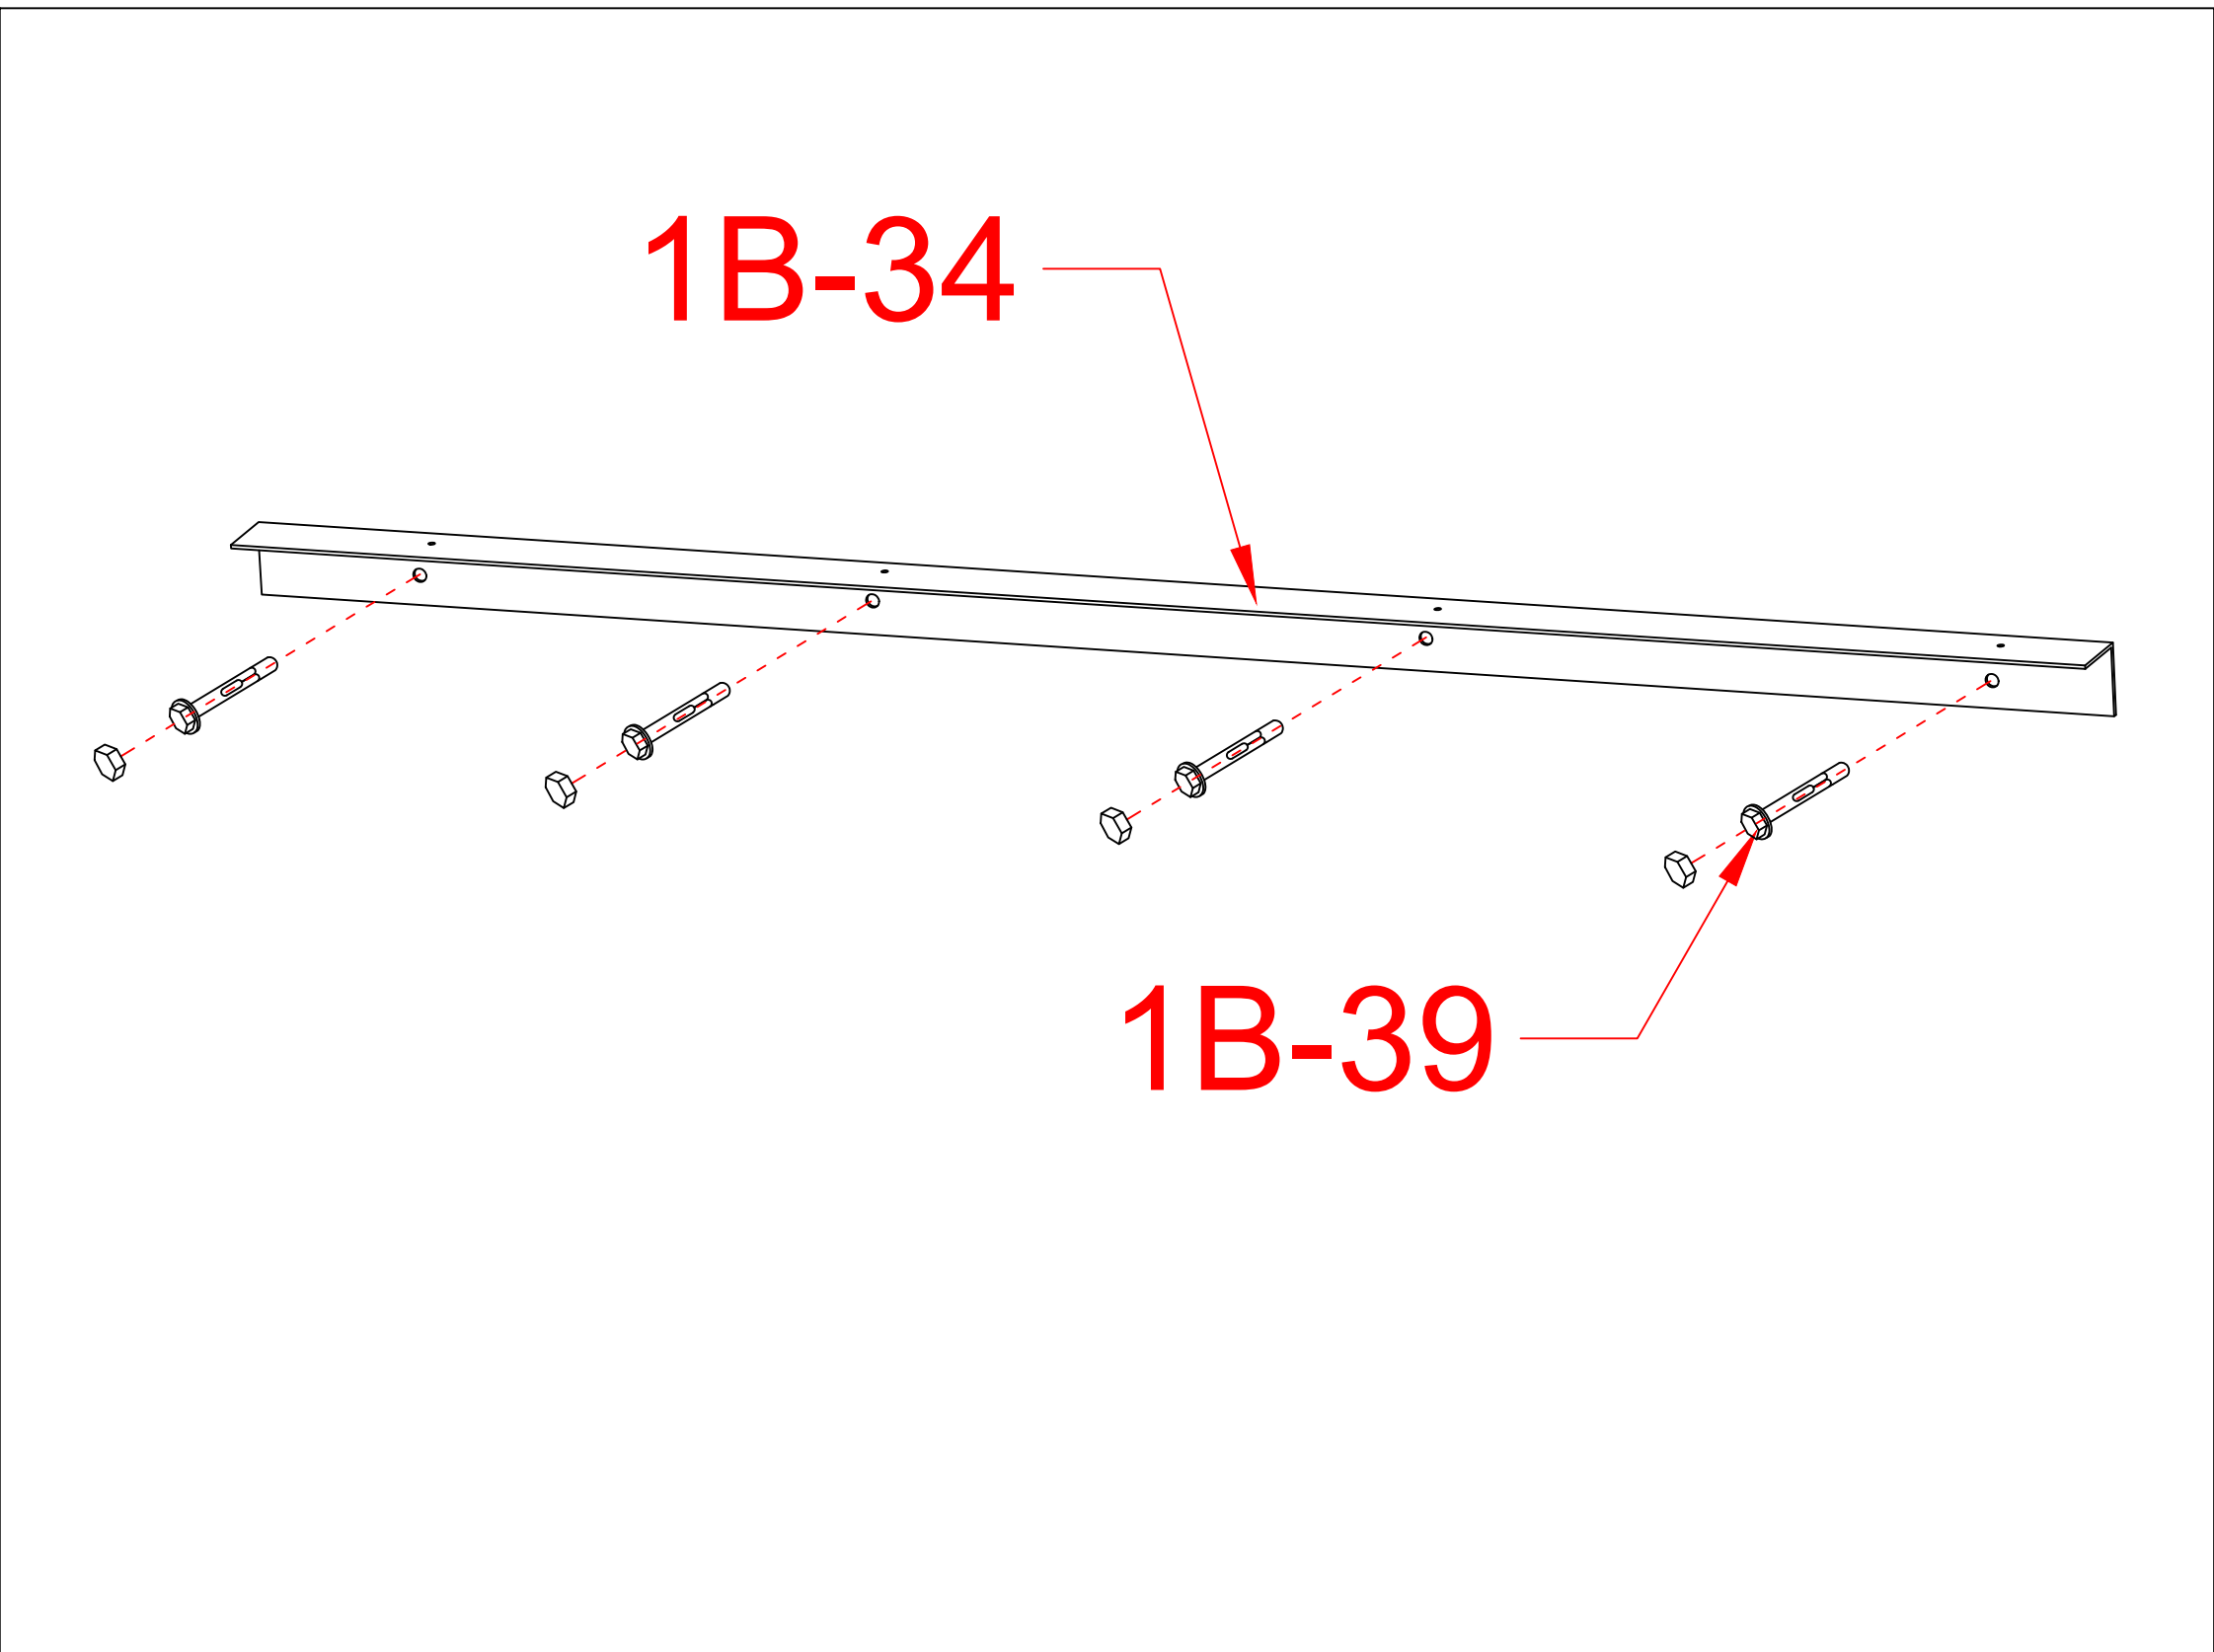





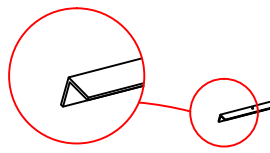
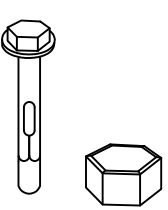
1B-34		1
1B-39		4





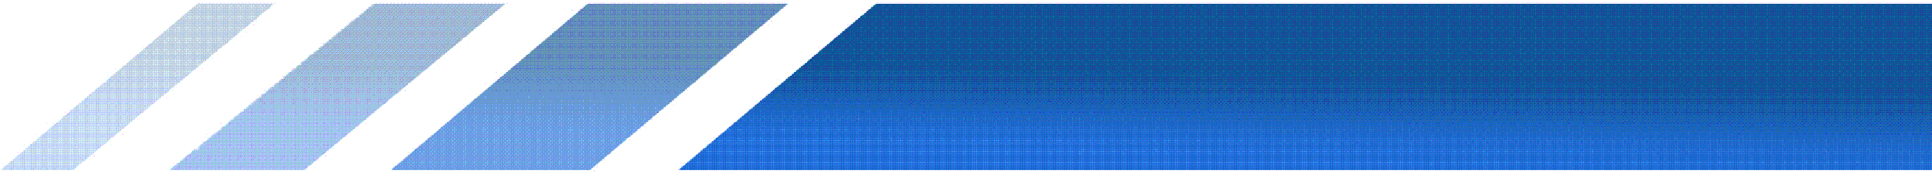


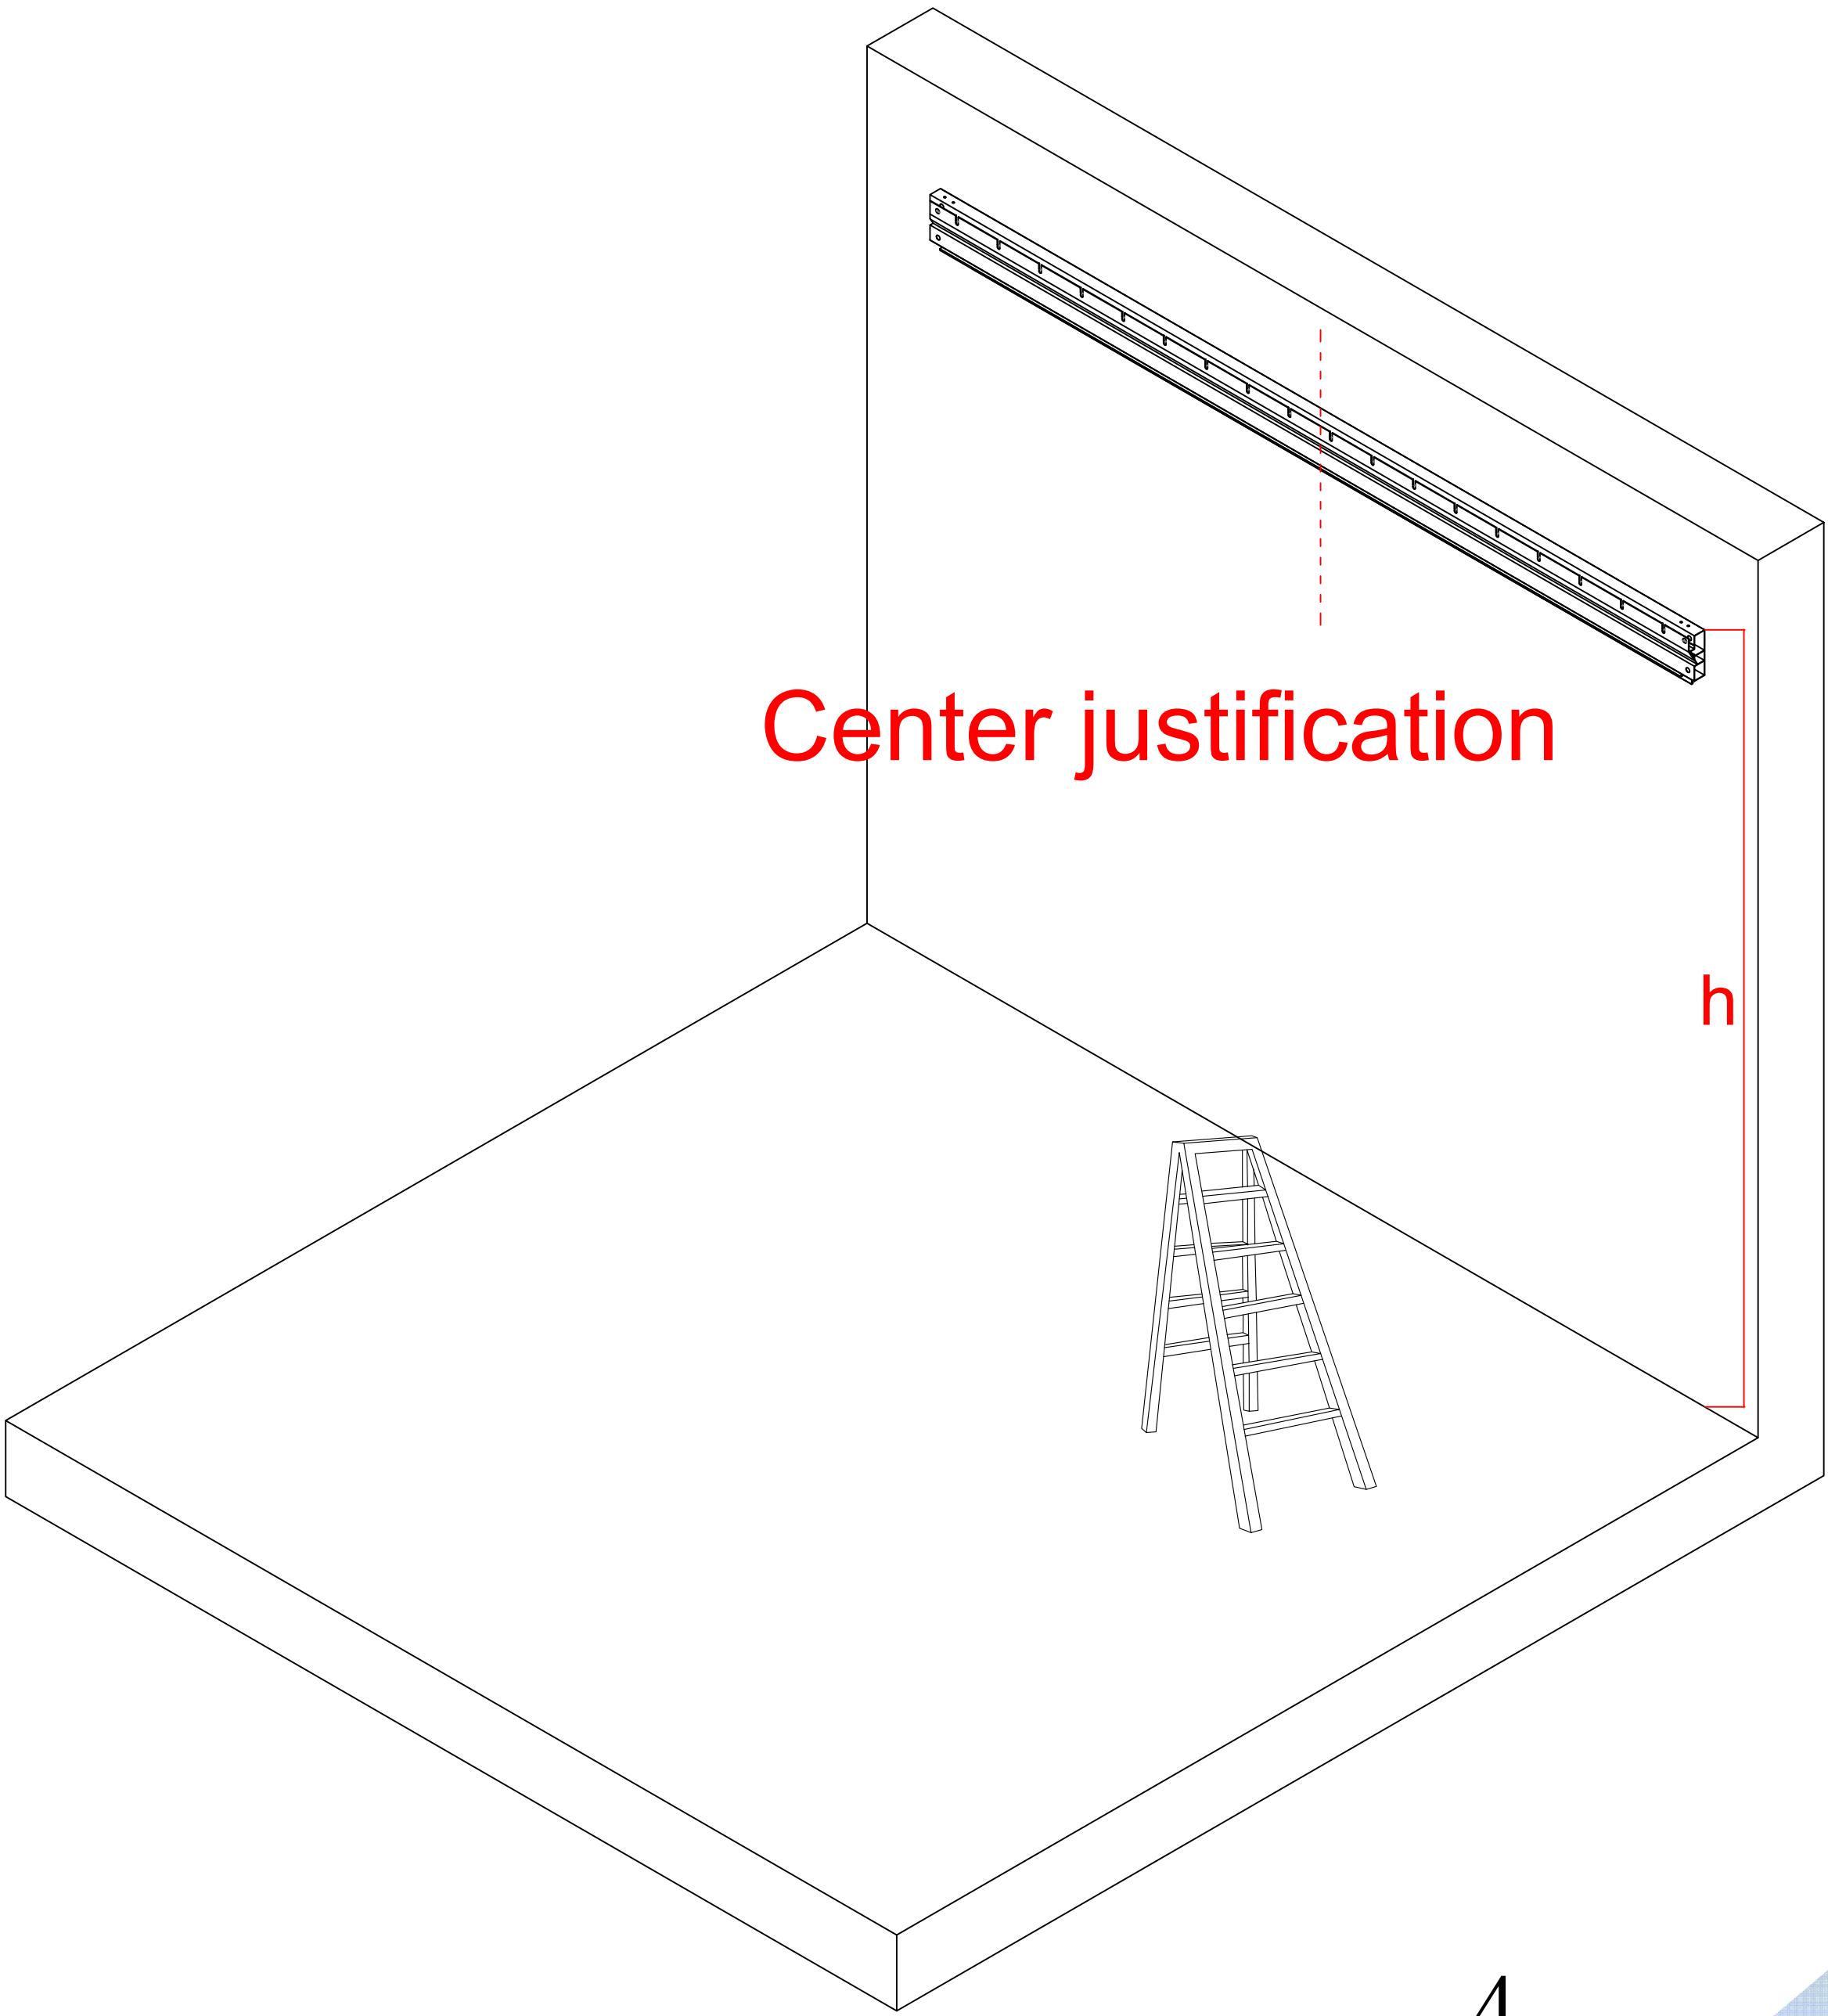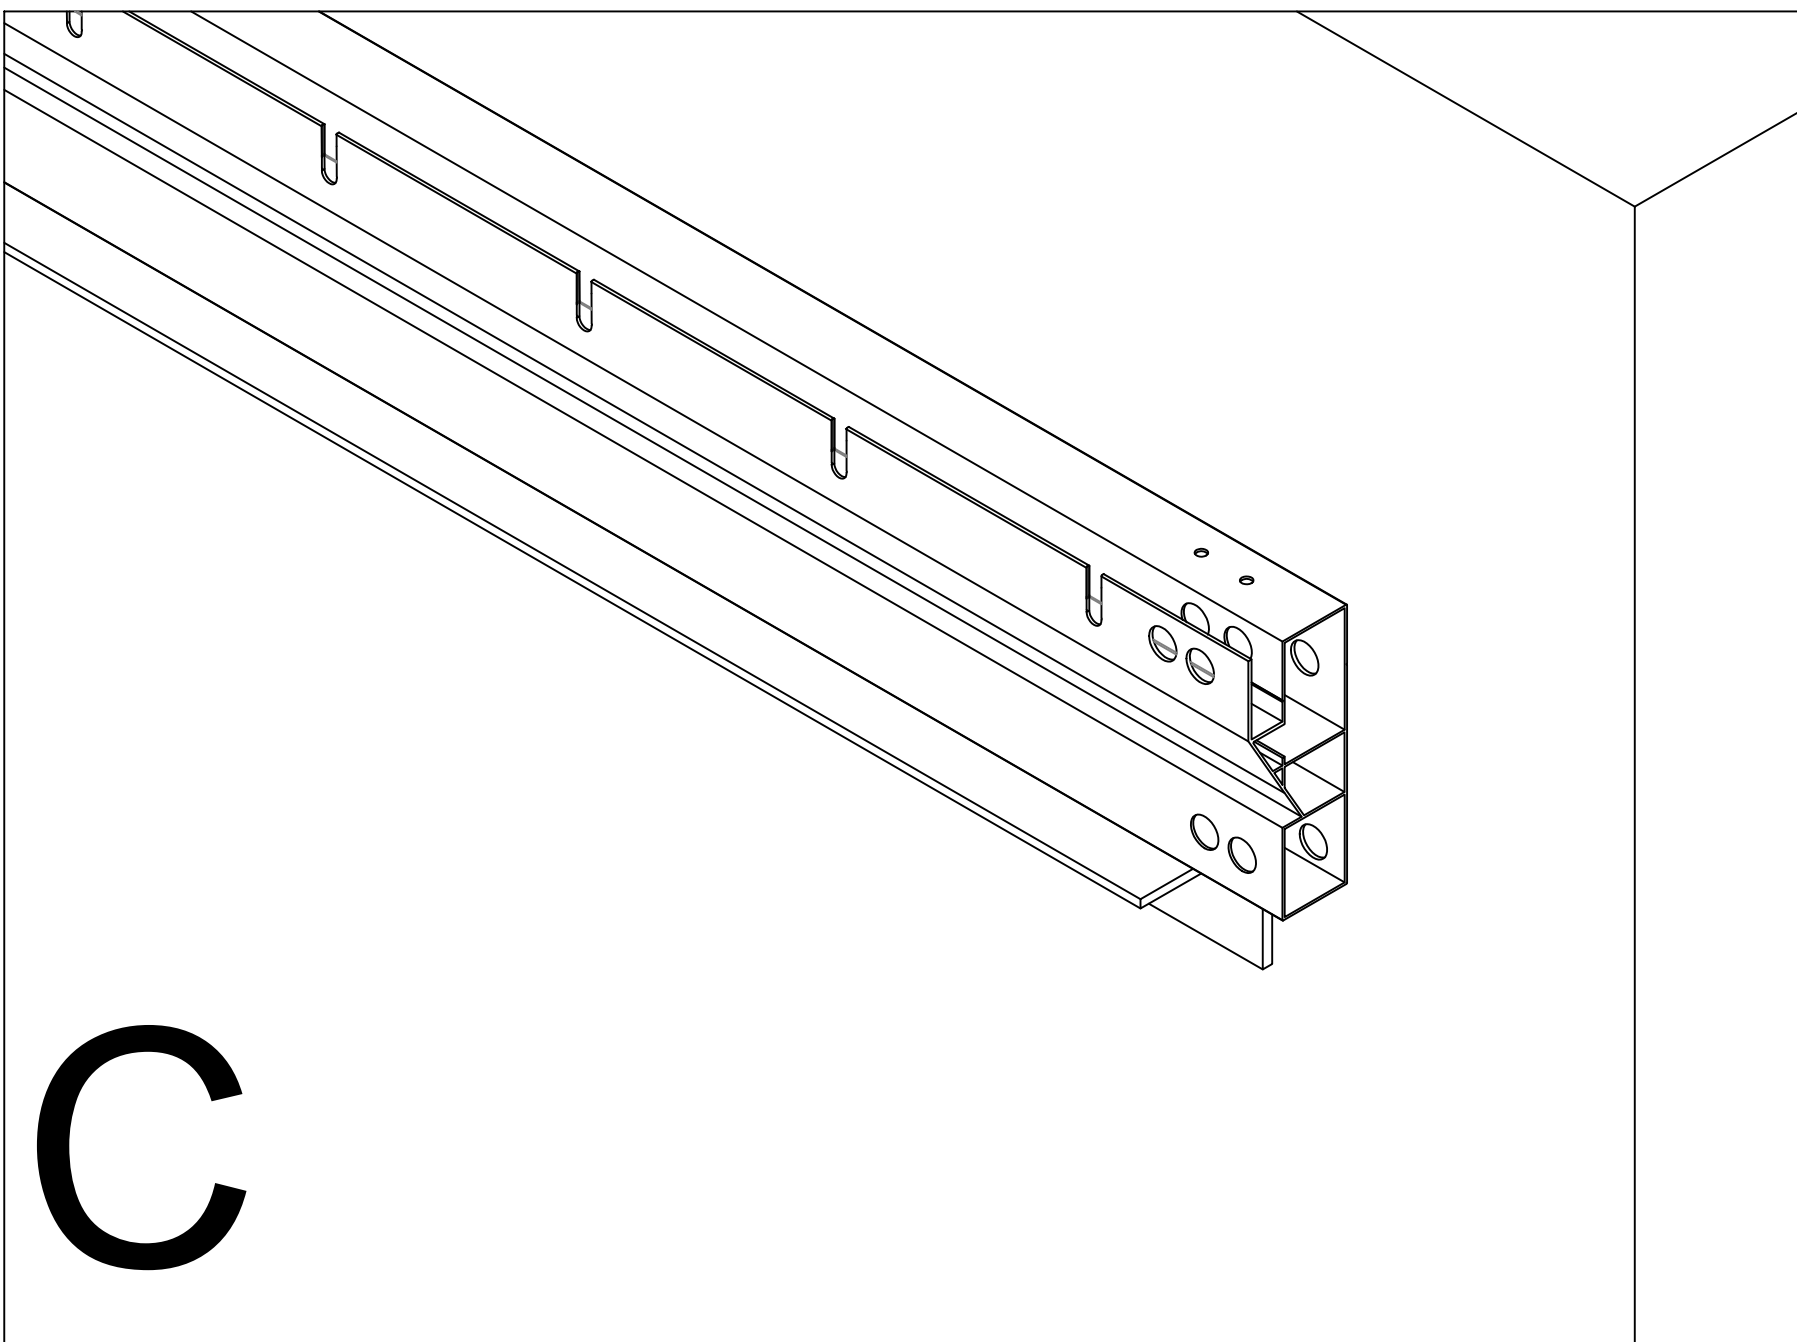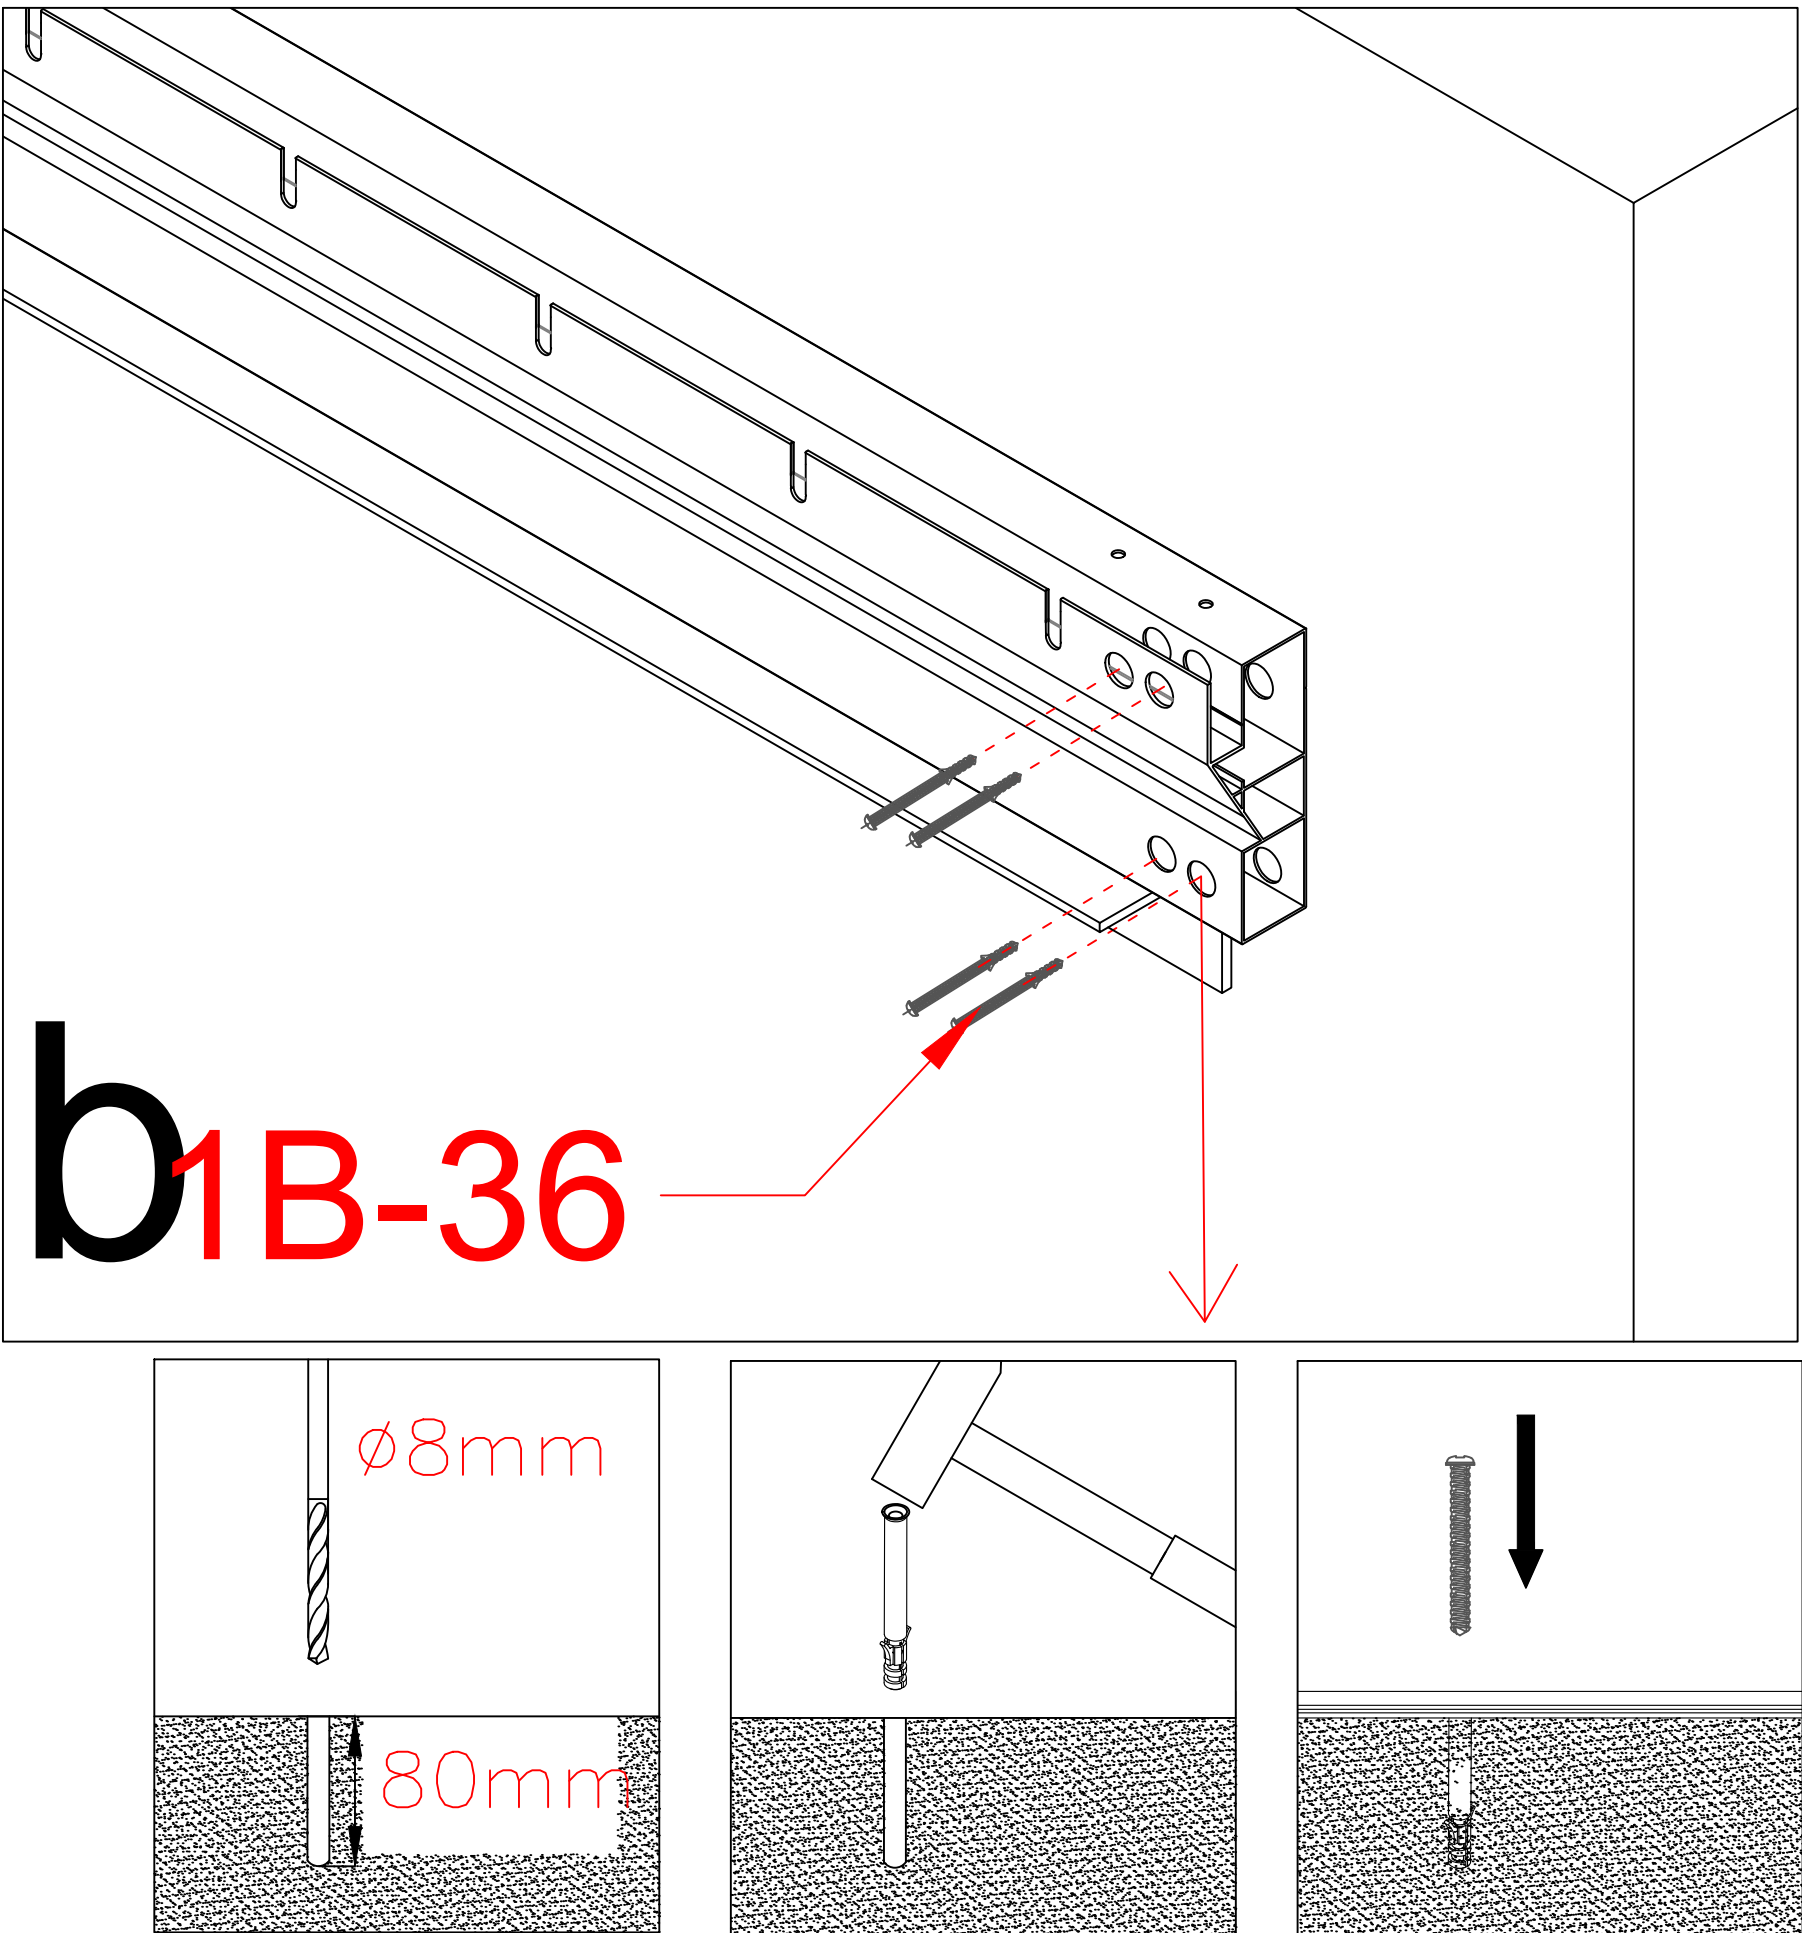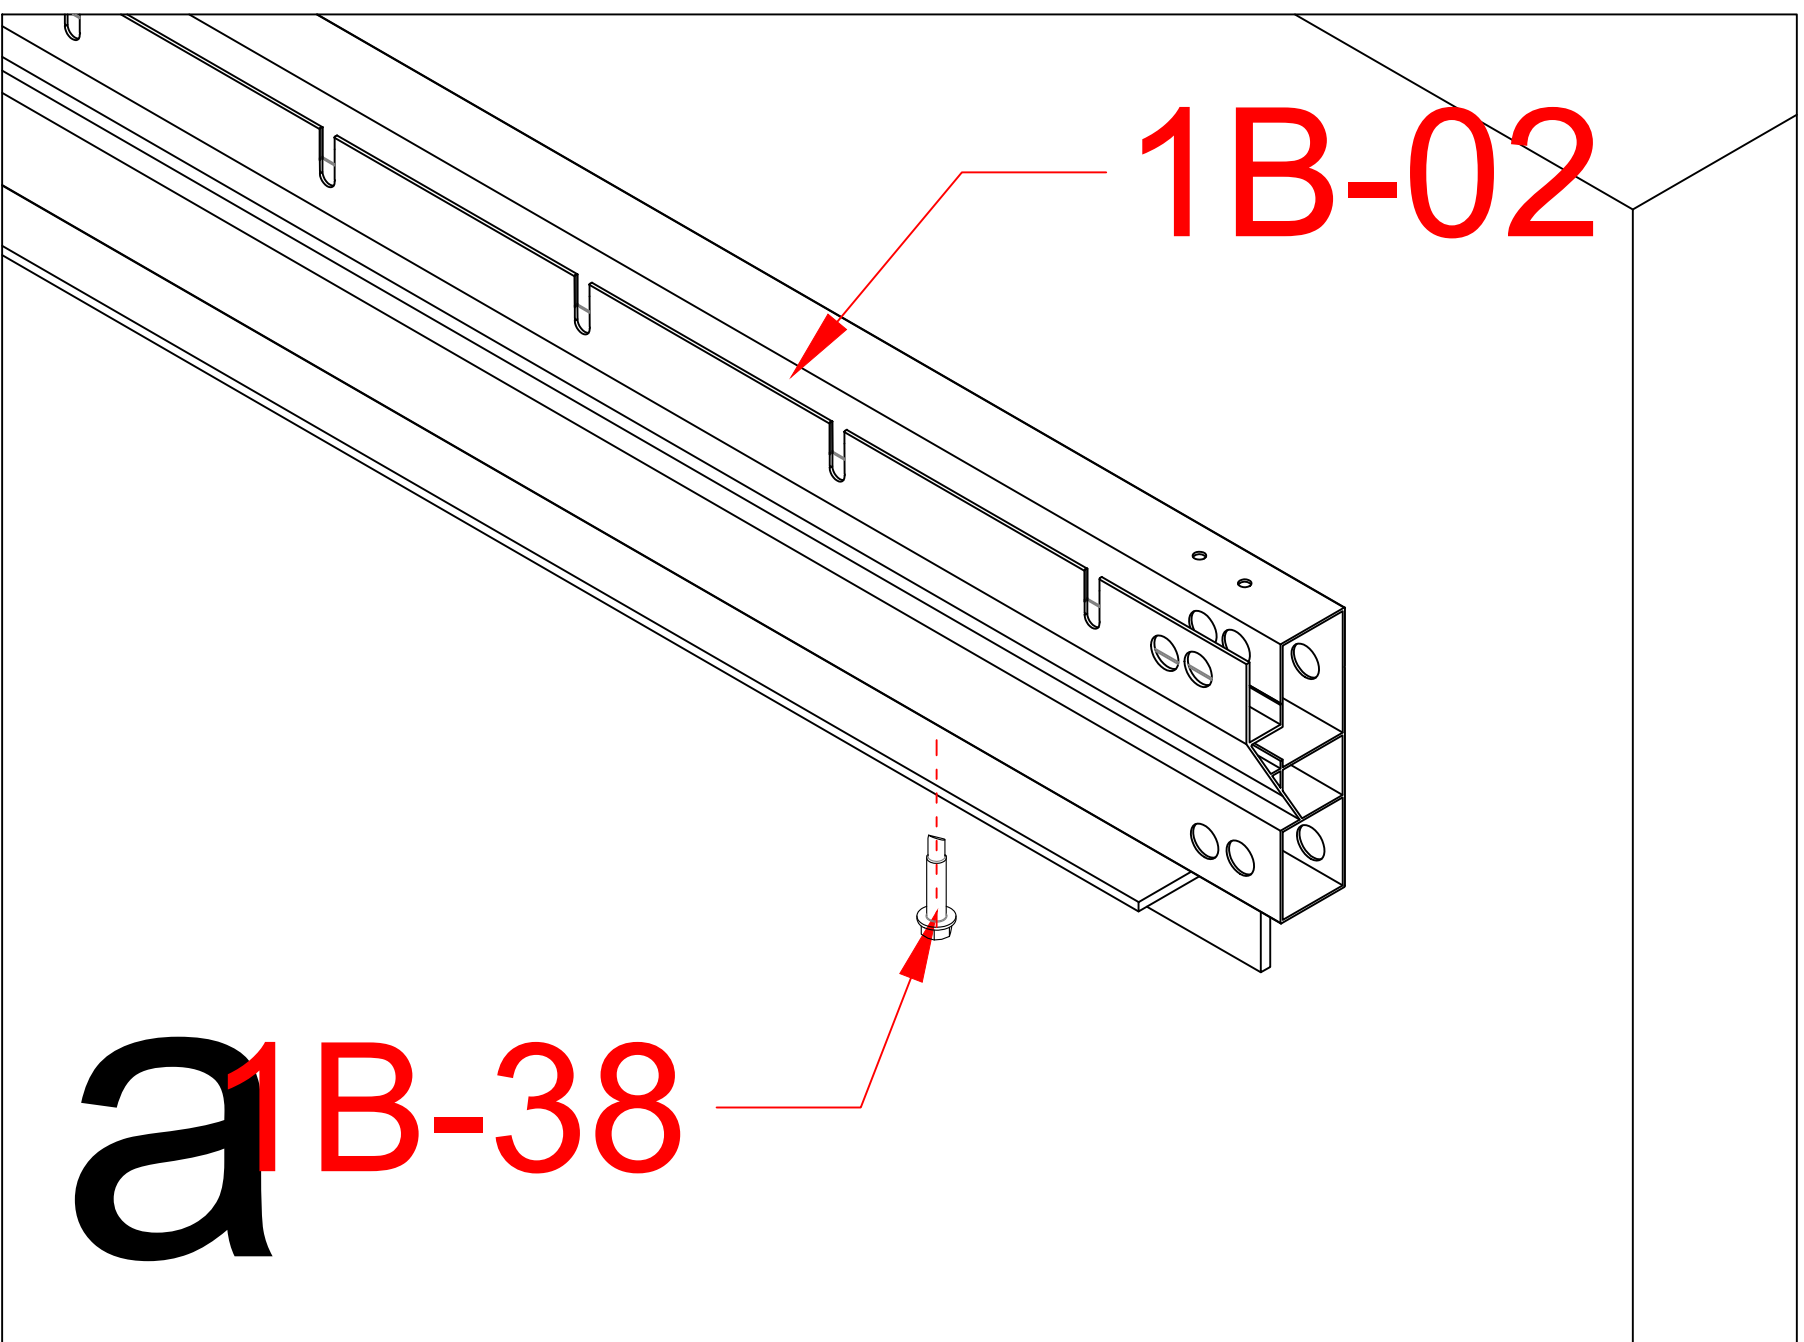



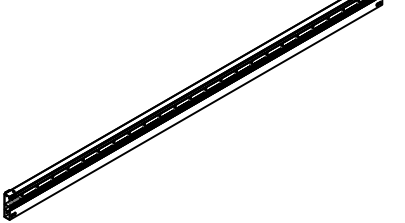

1B-02			1
1B-38			4
1B-36			8

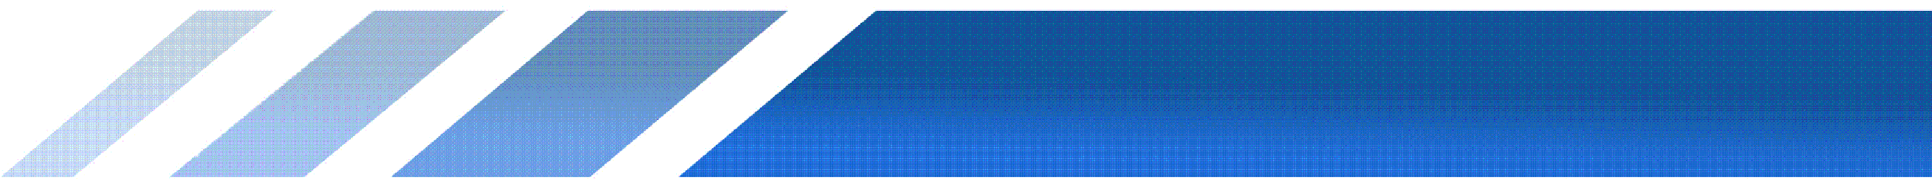

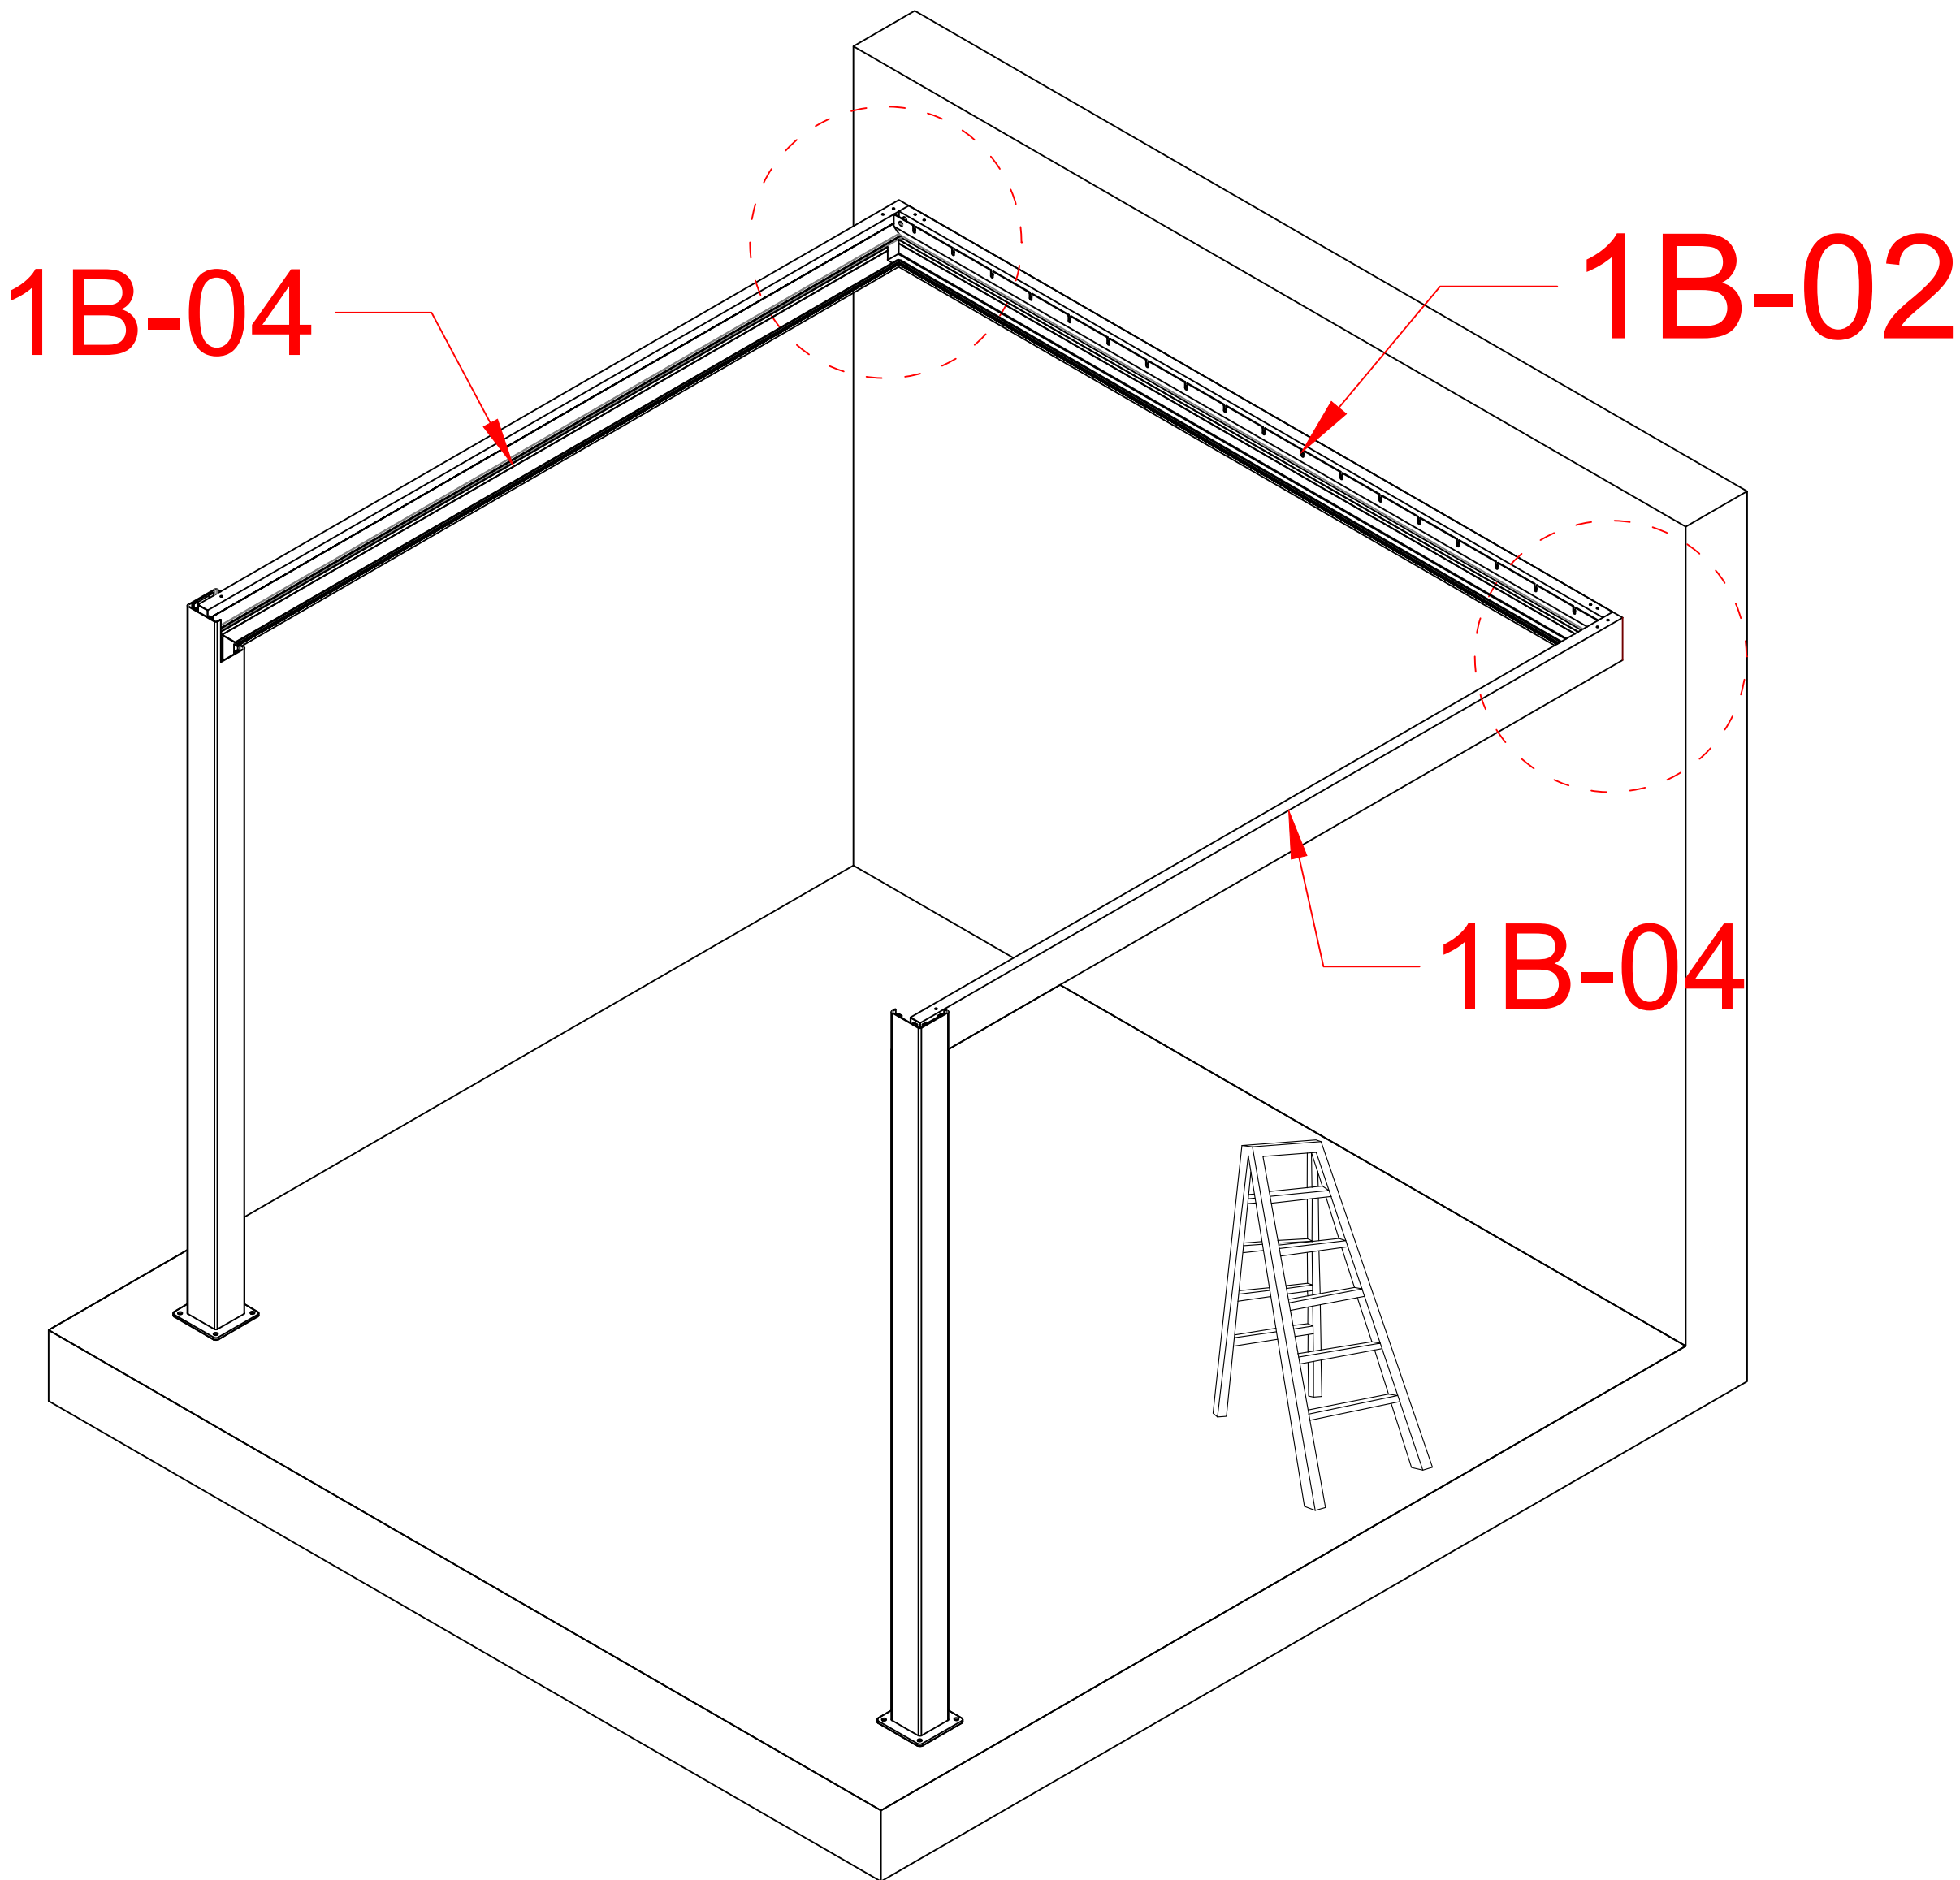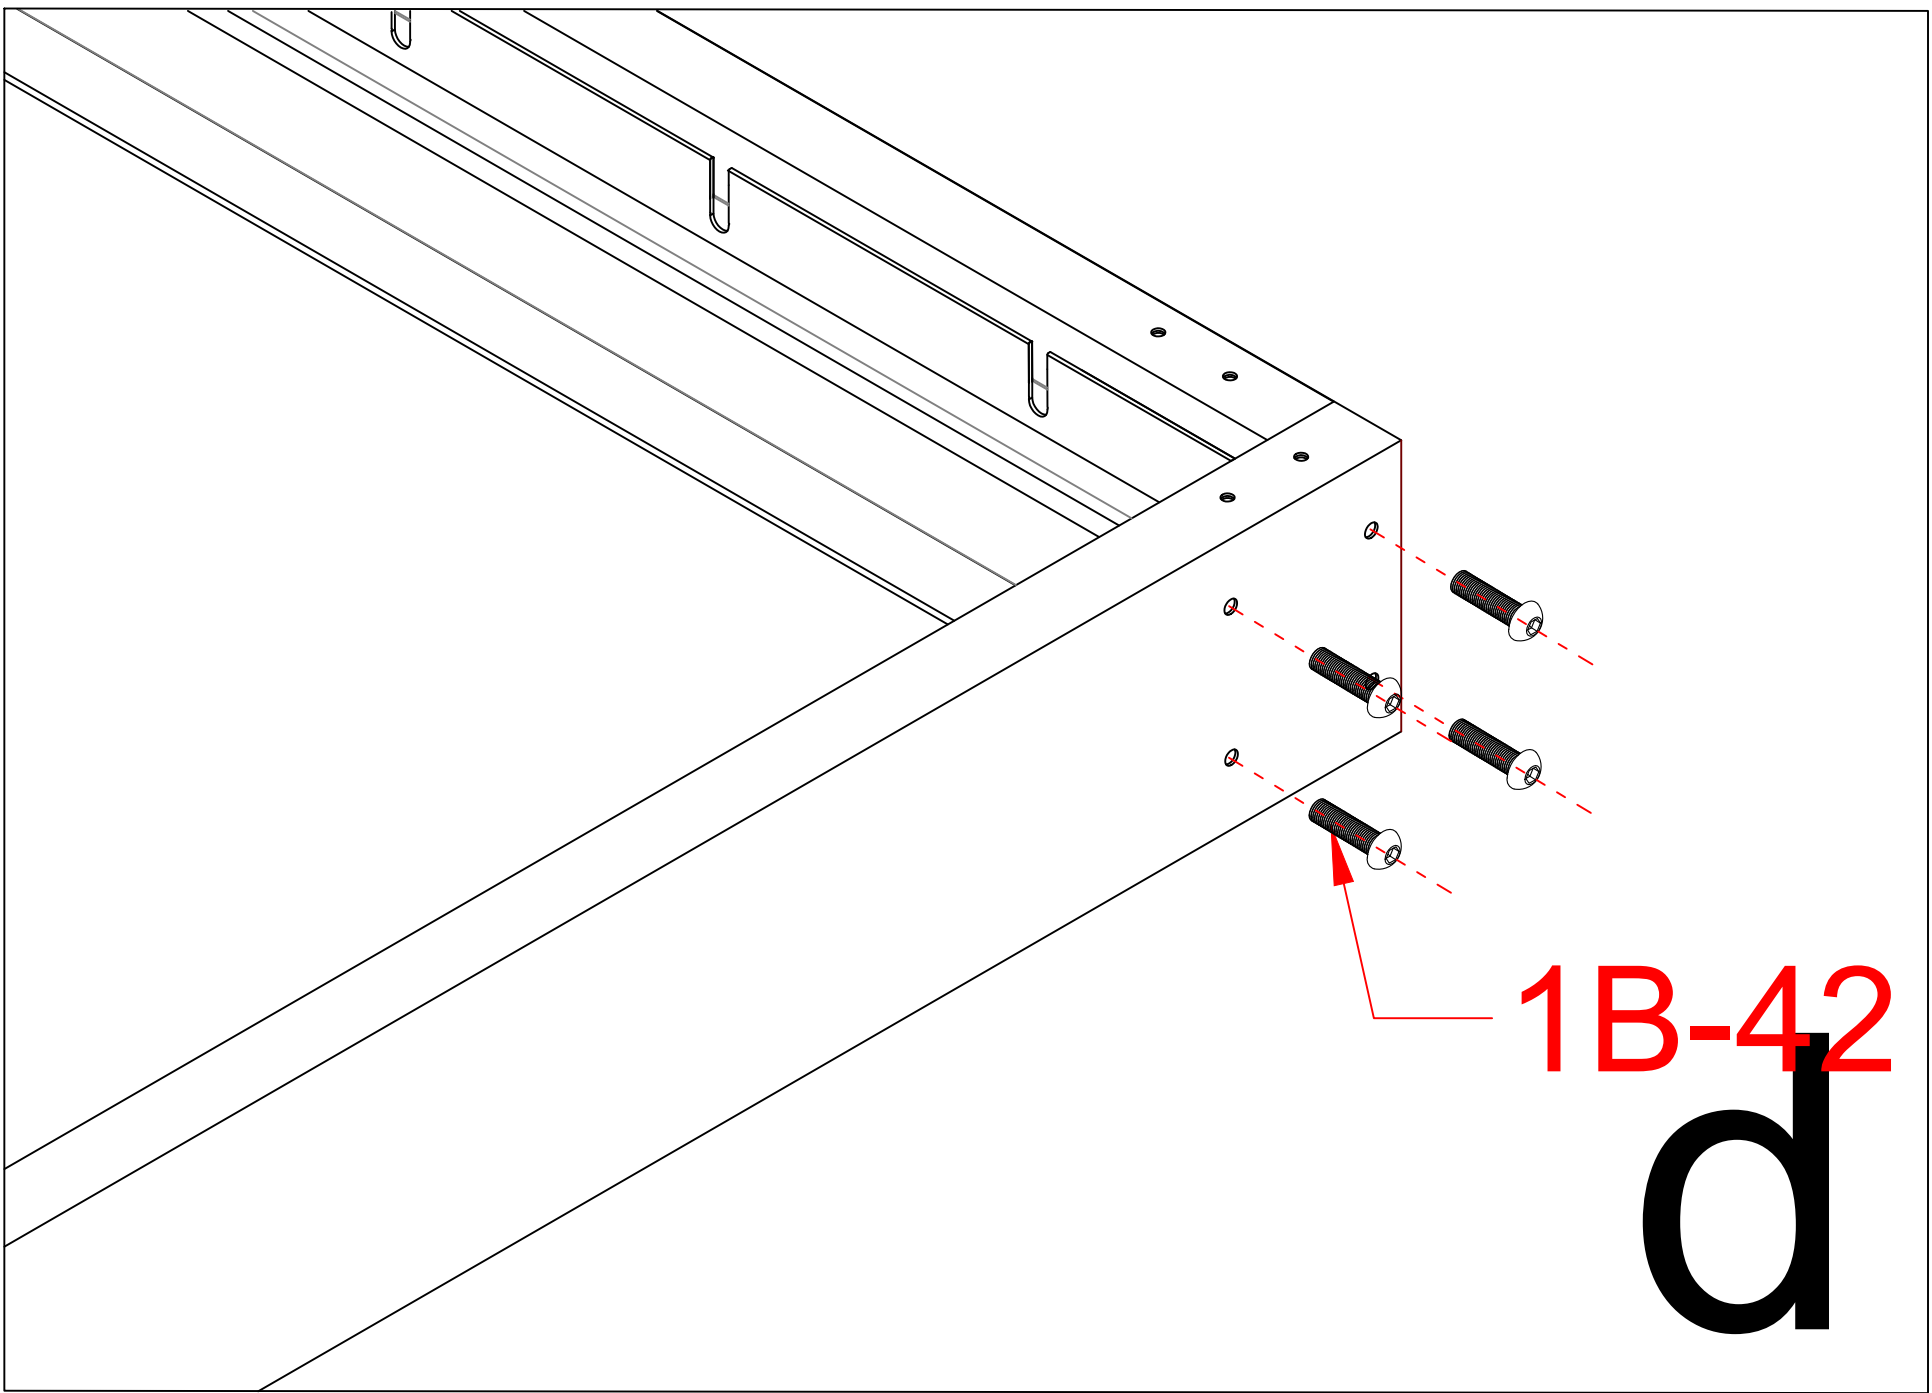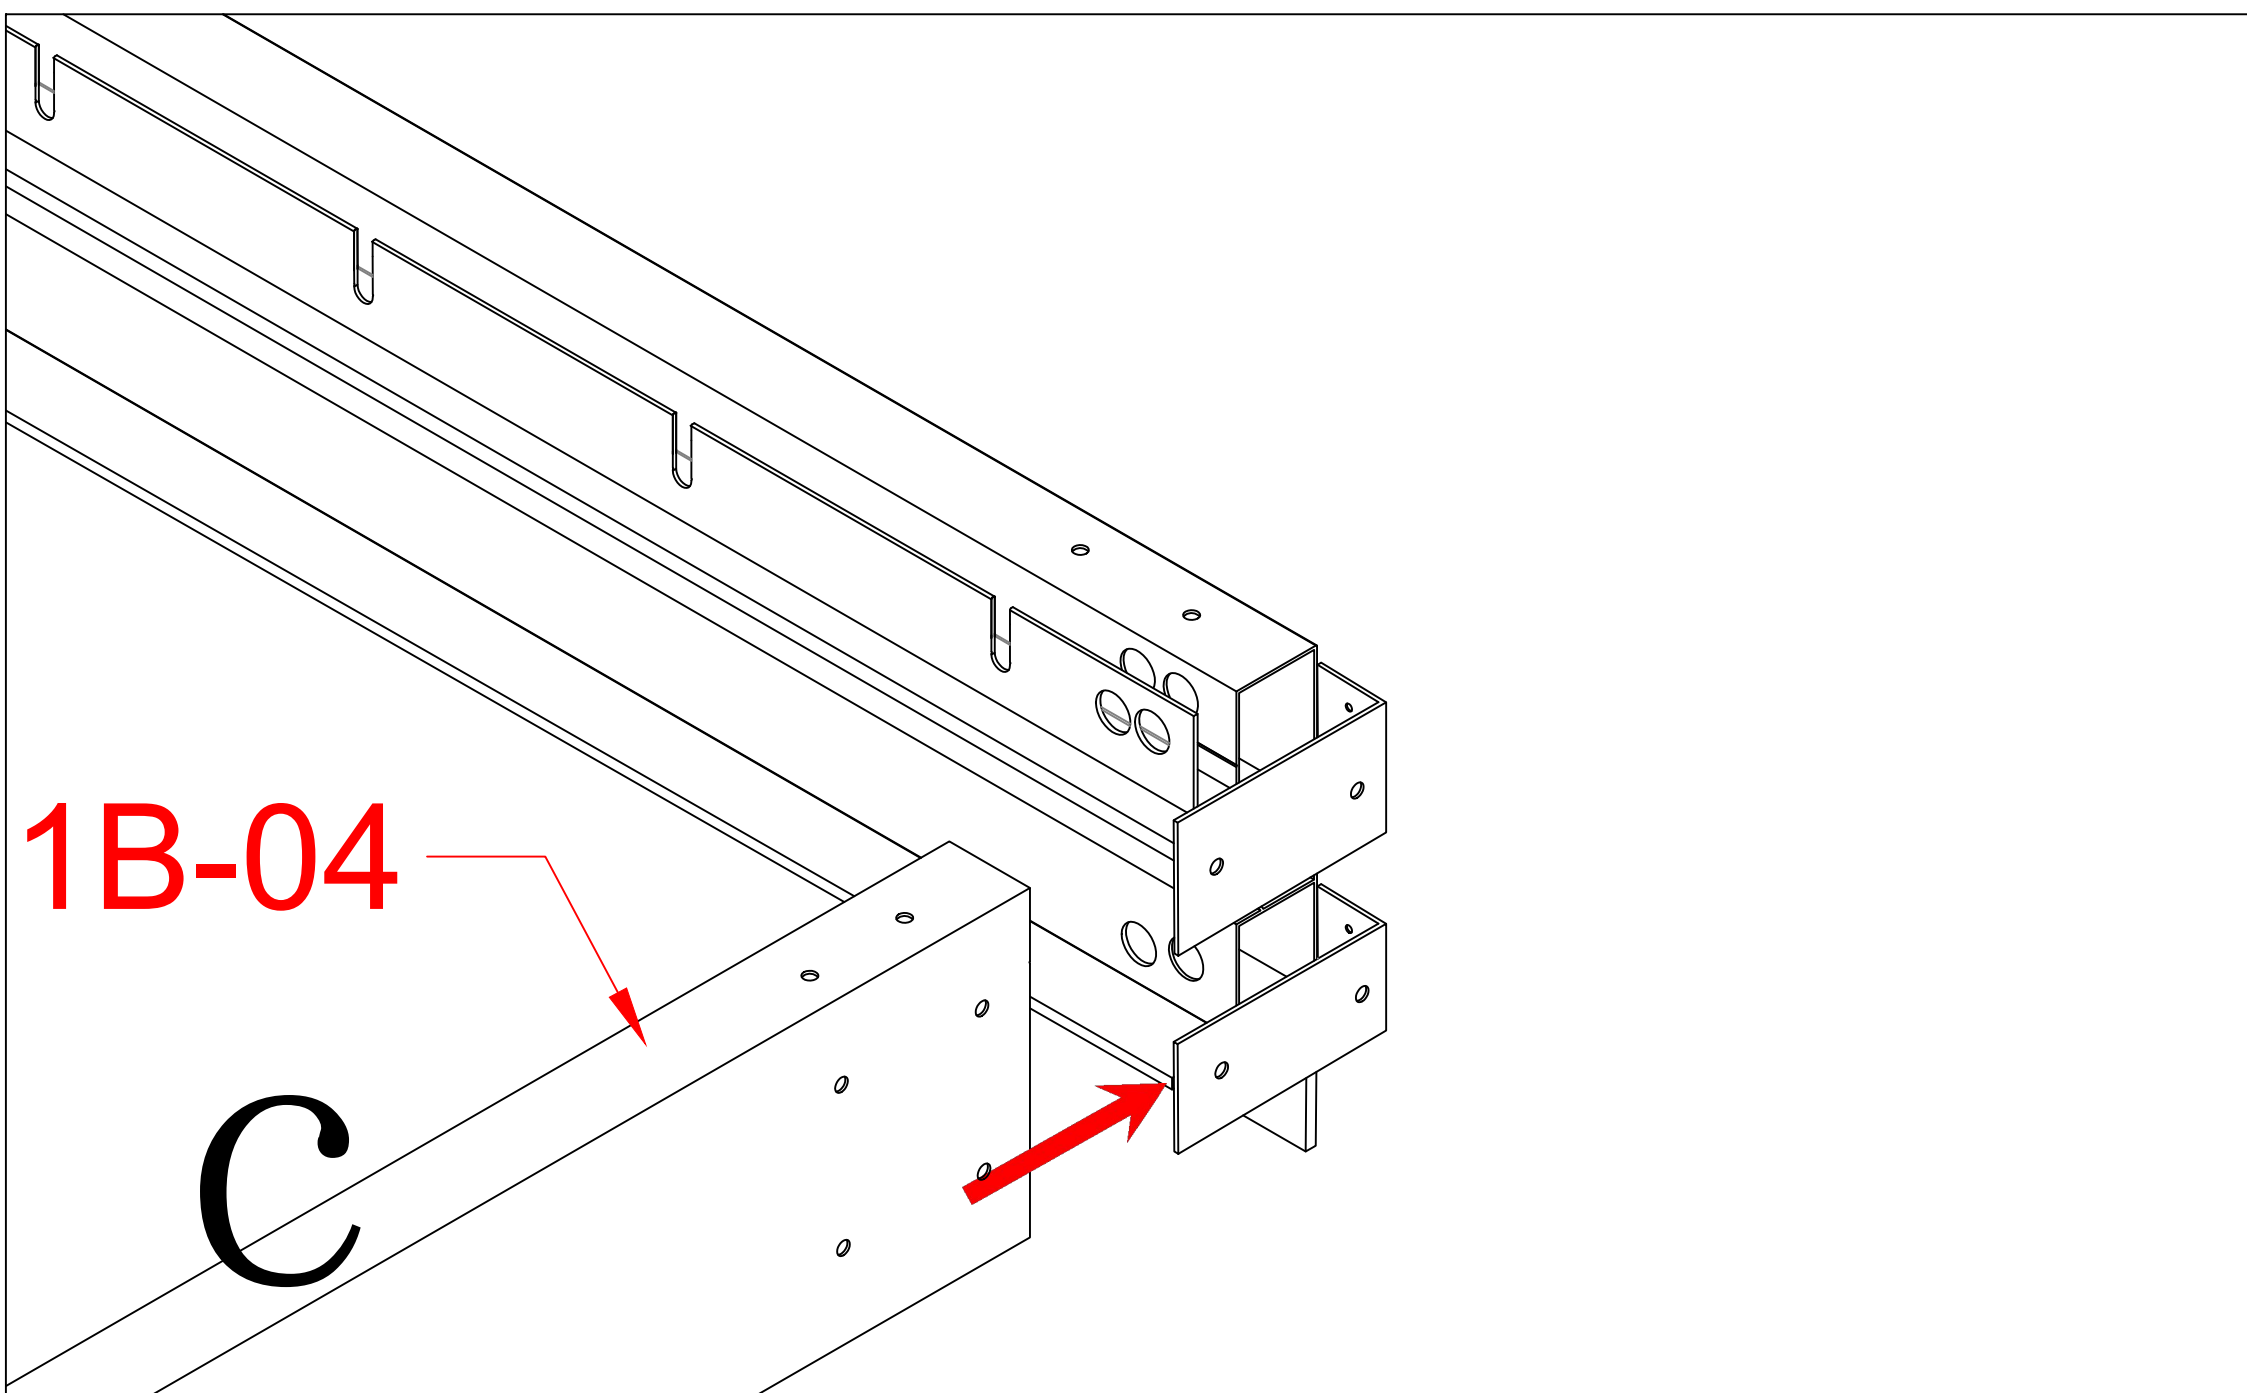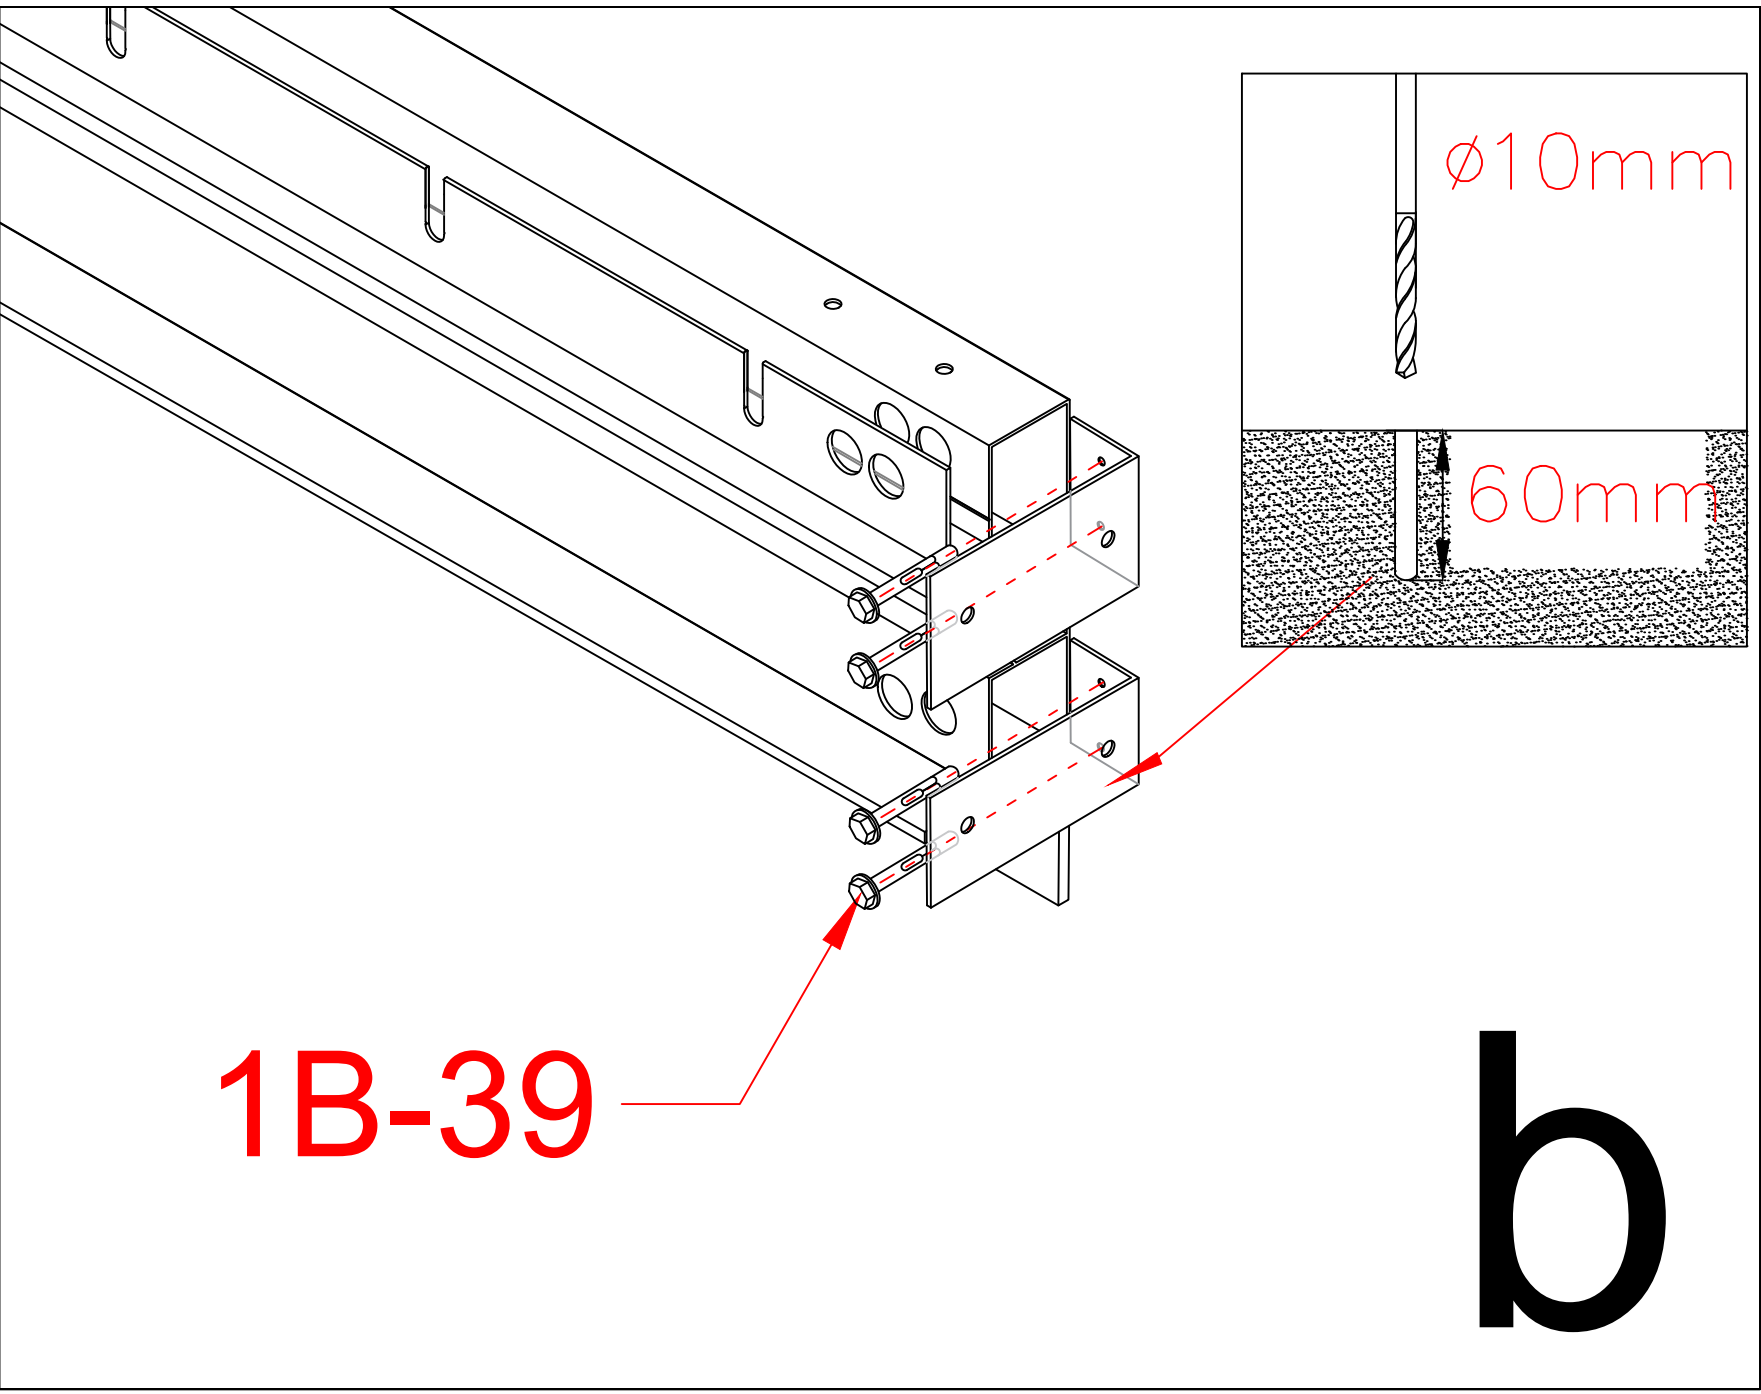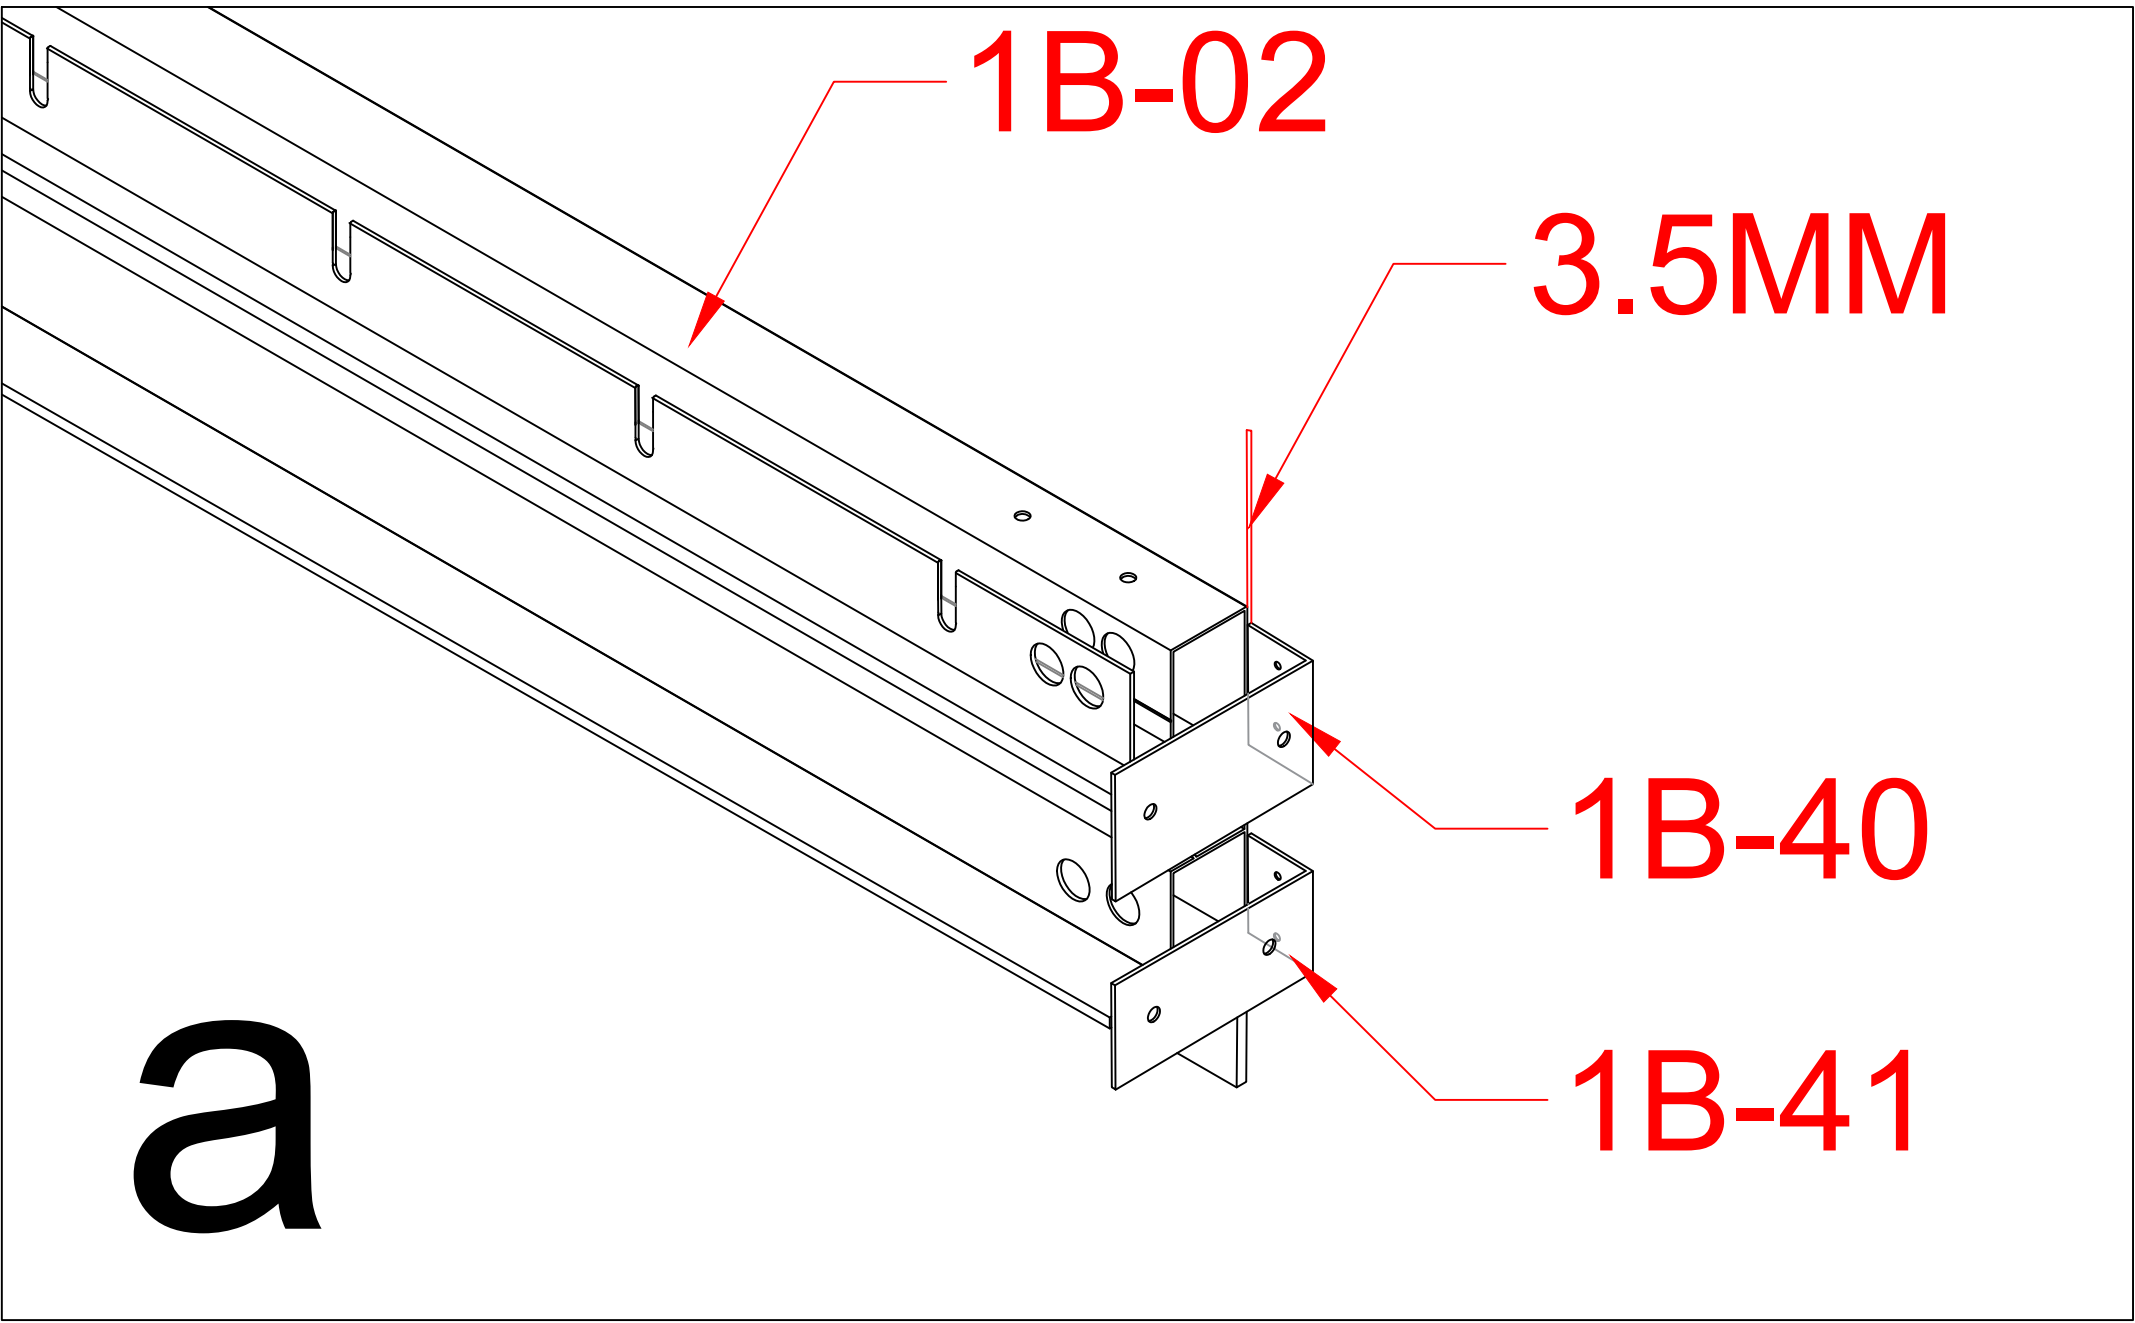


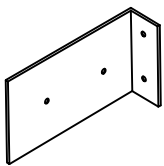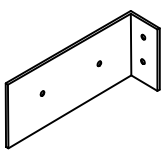
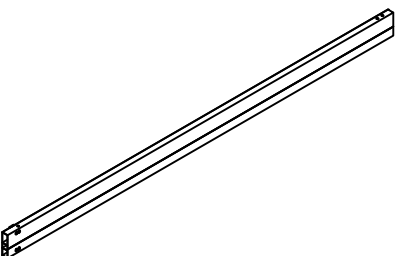

1B-42	 M10*20	8
1B-40		2
1B-41		2
1B-04		2
1B-39		8

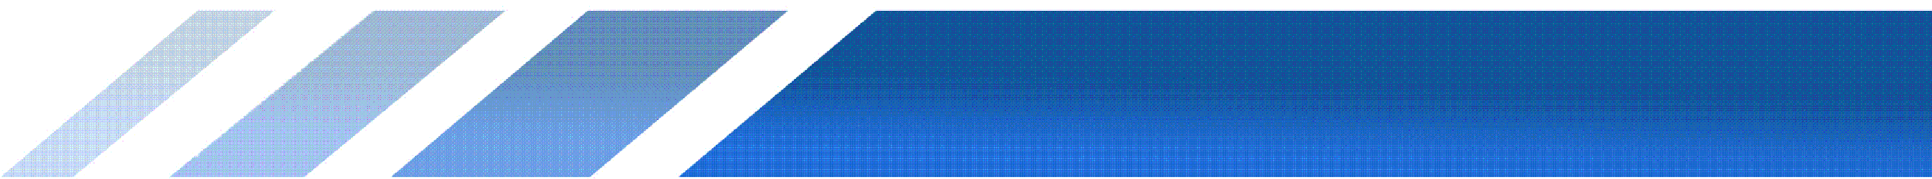

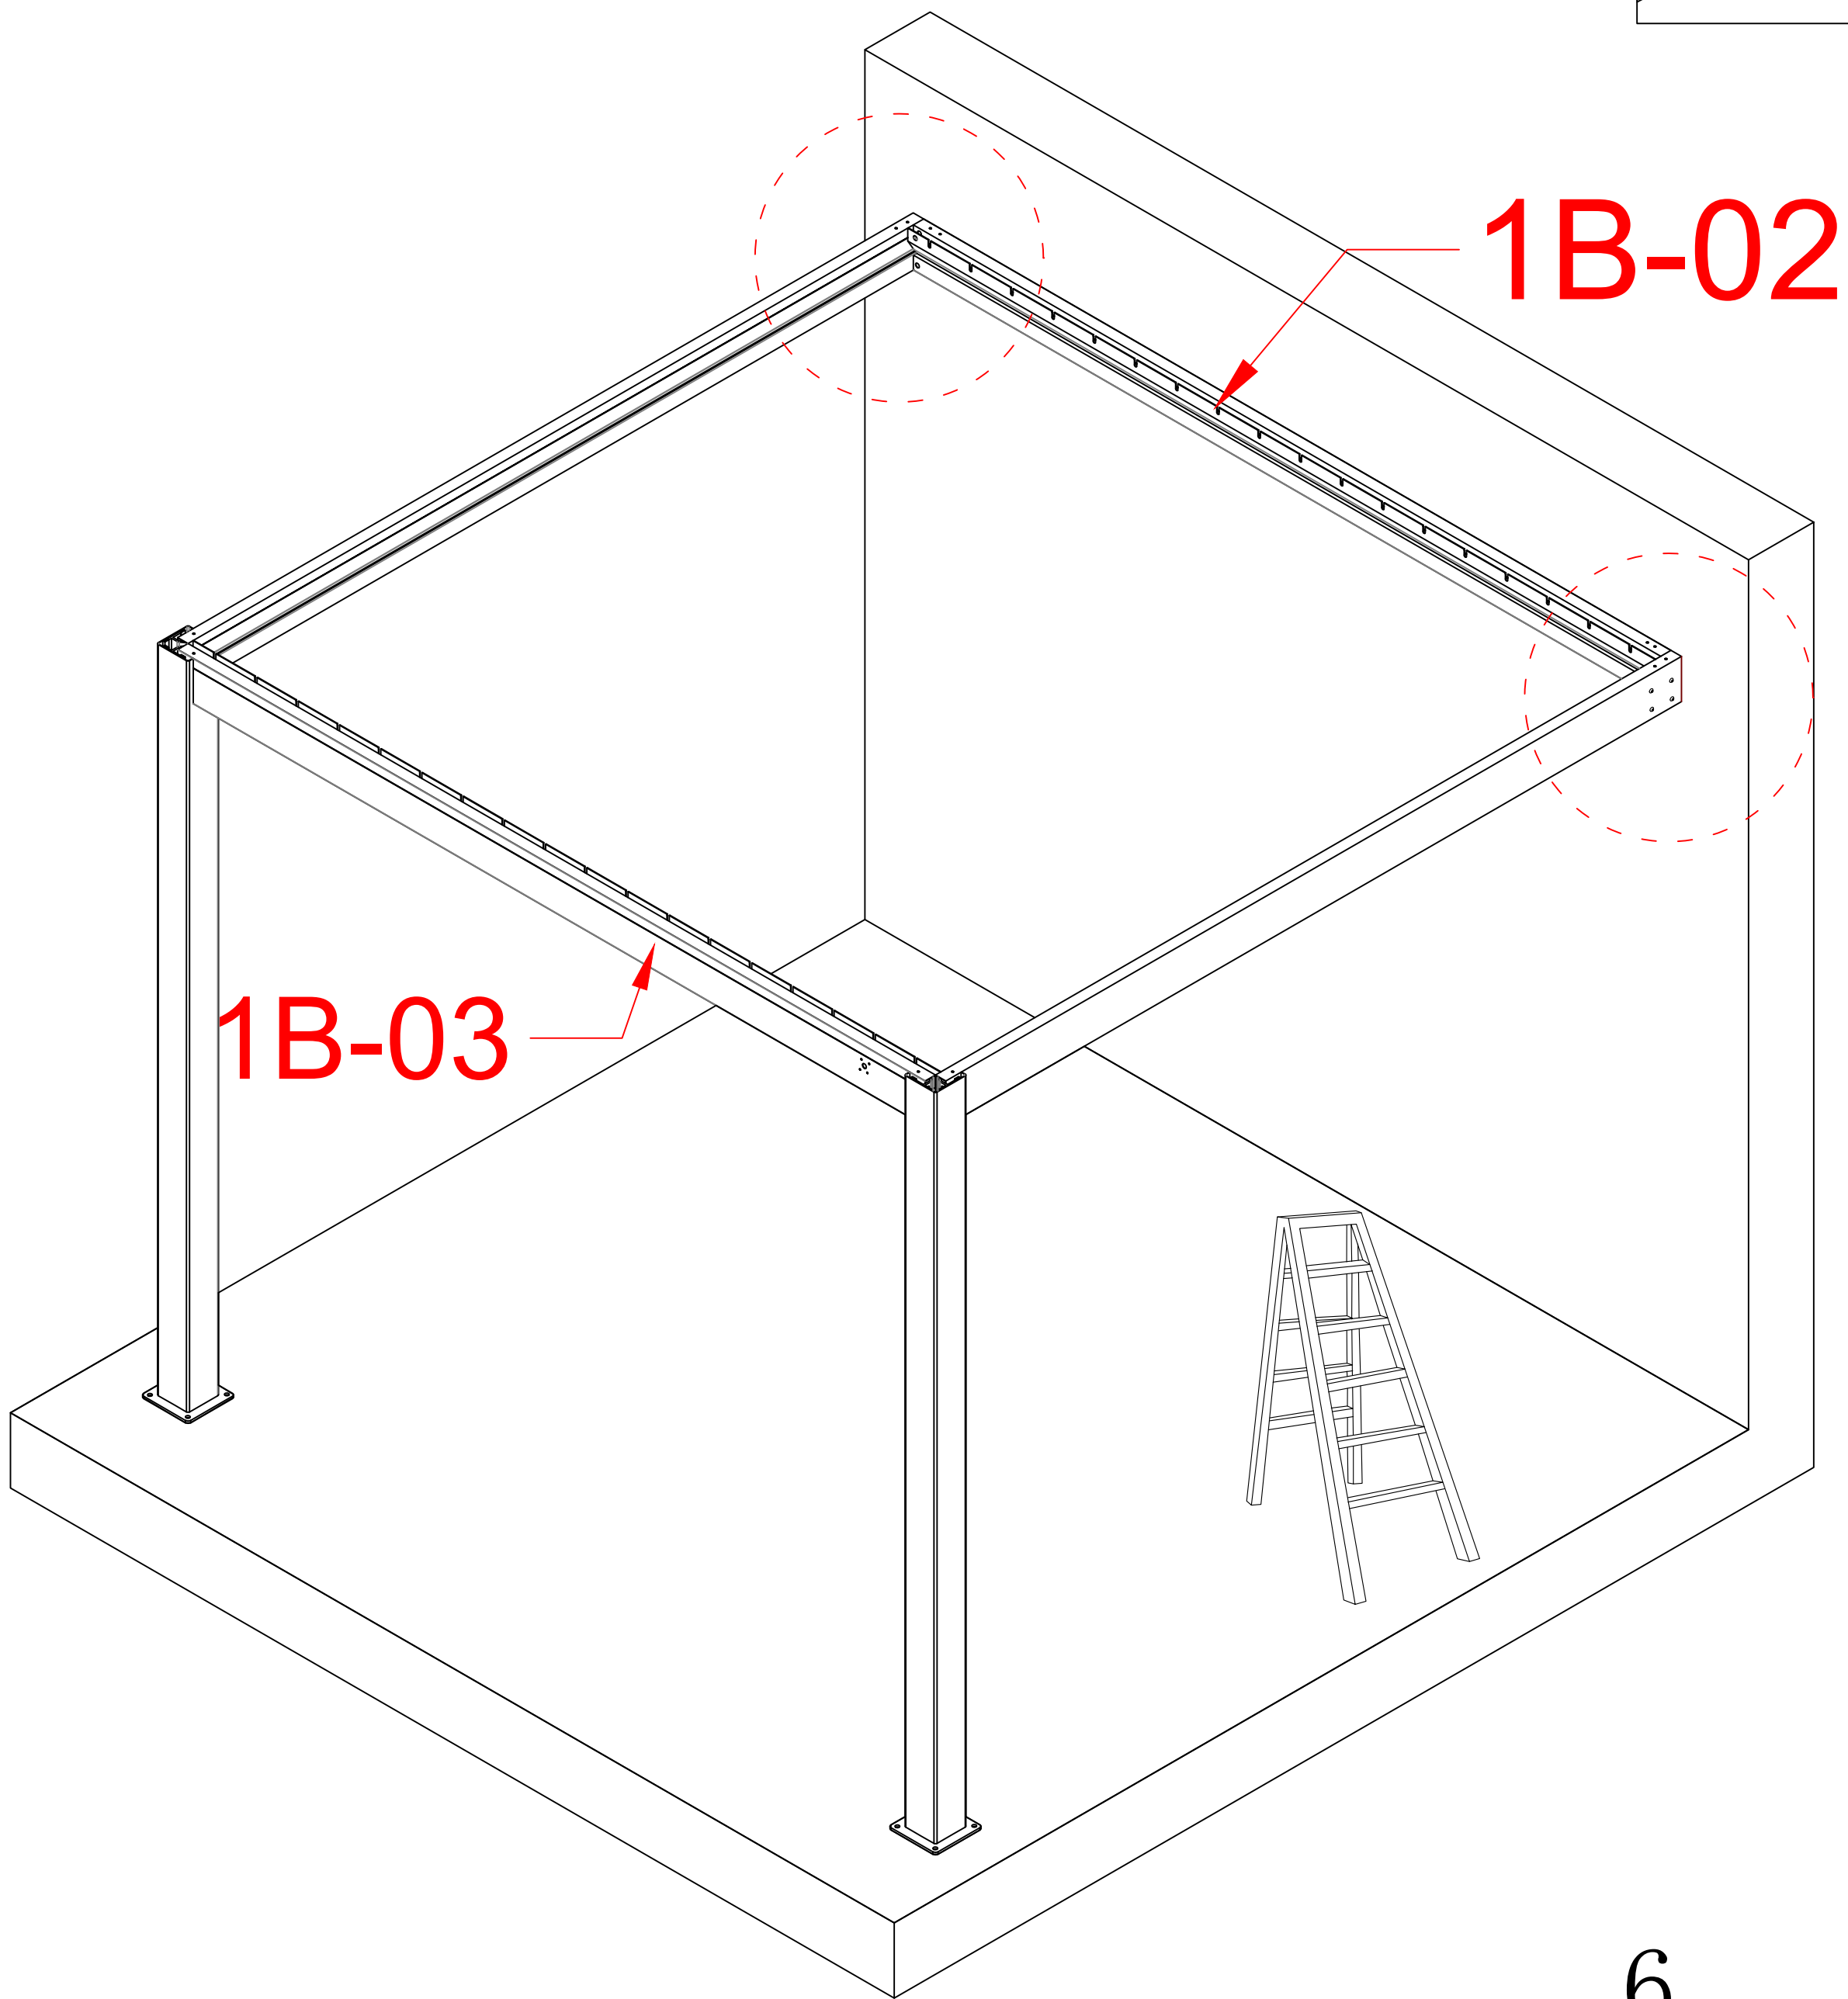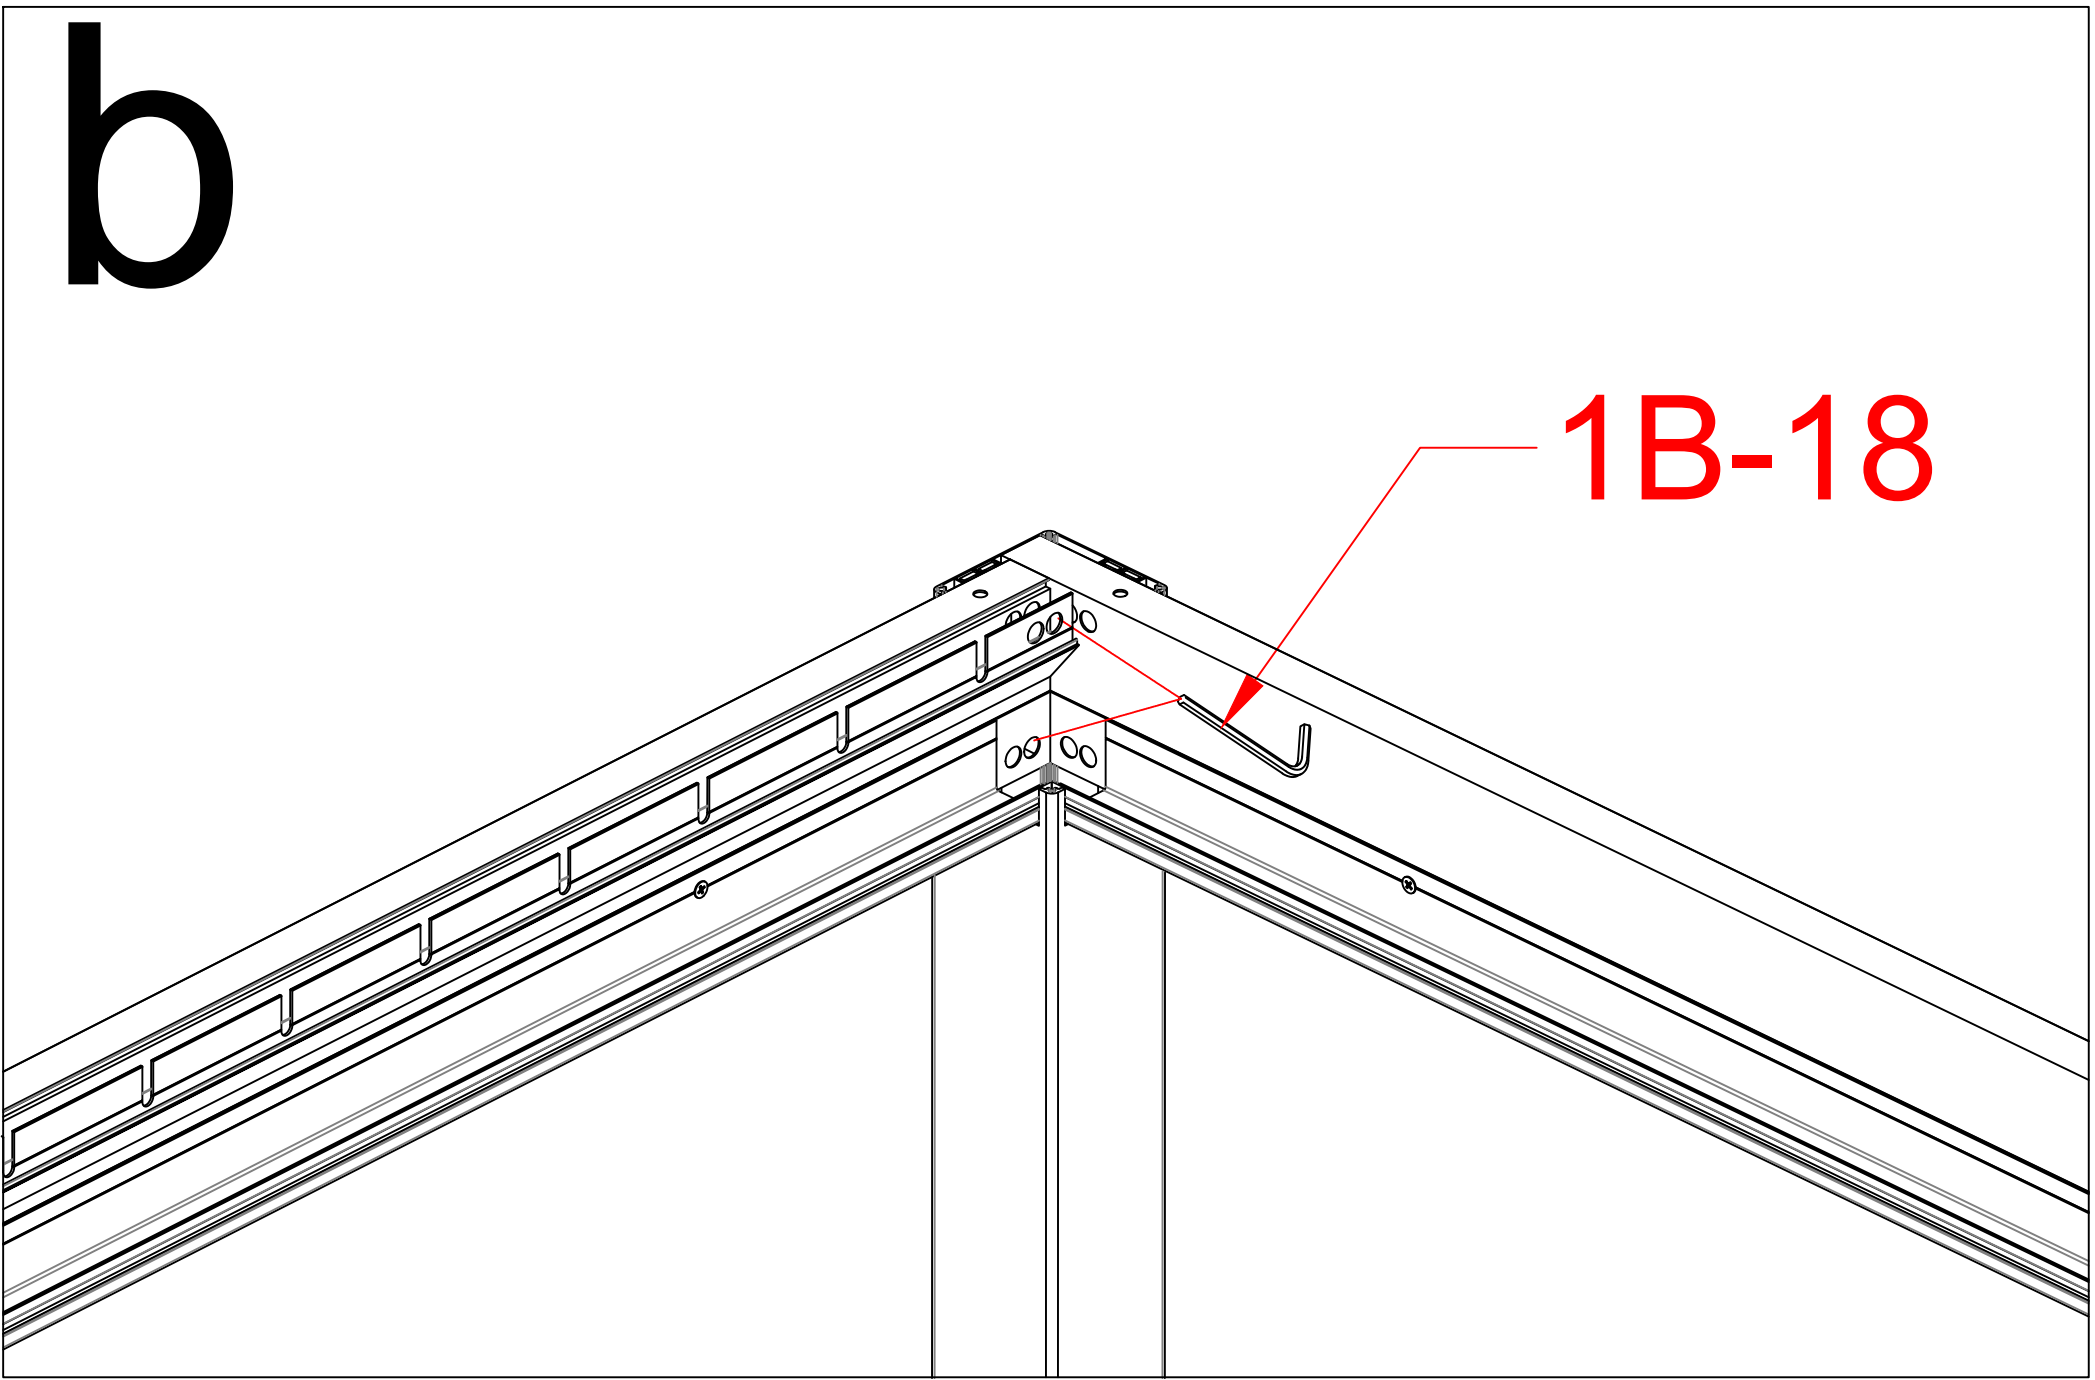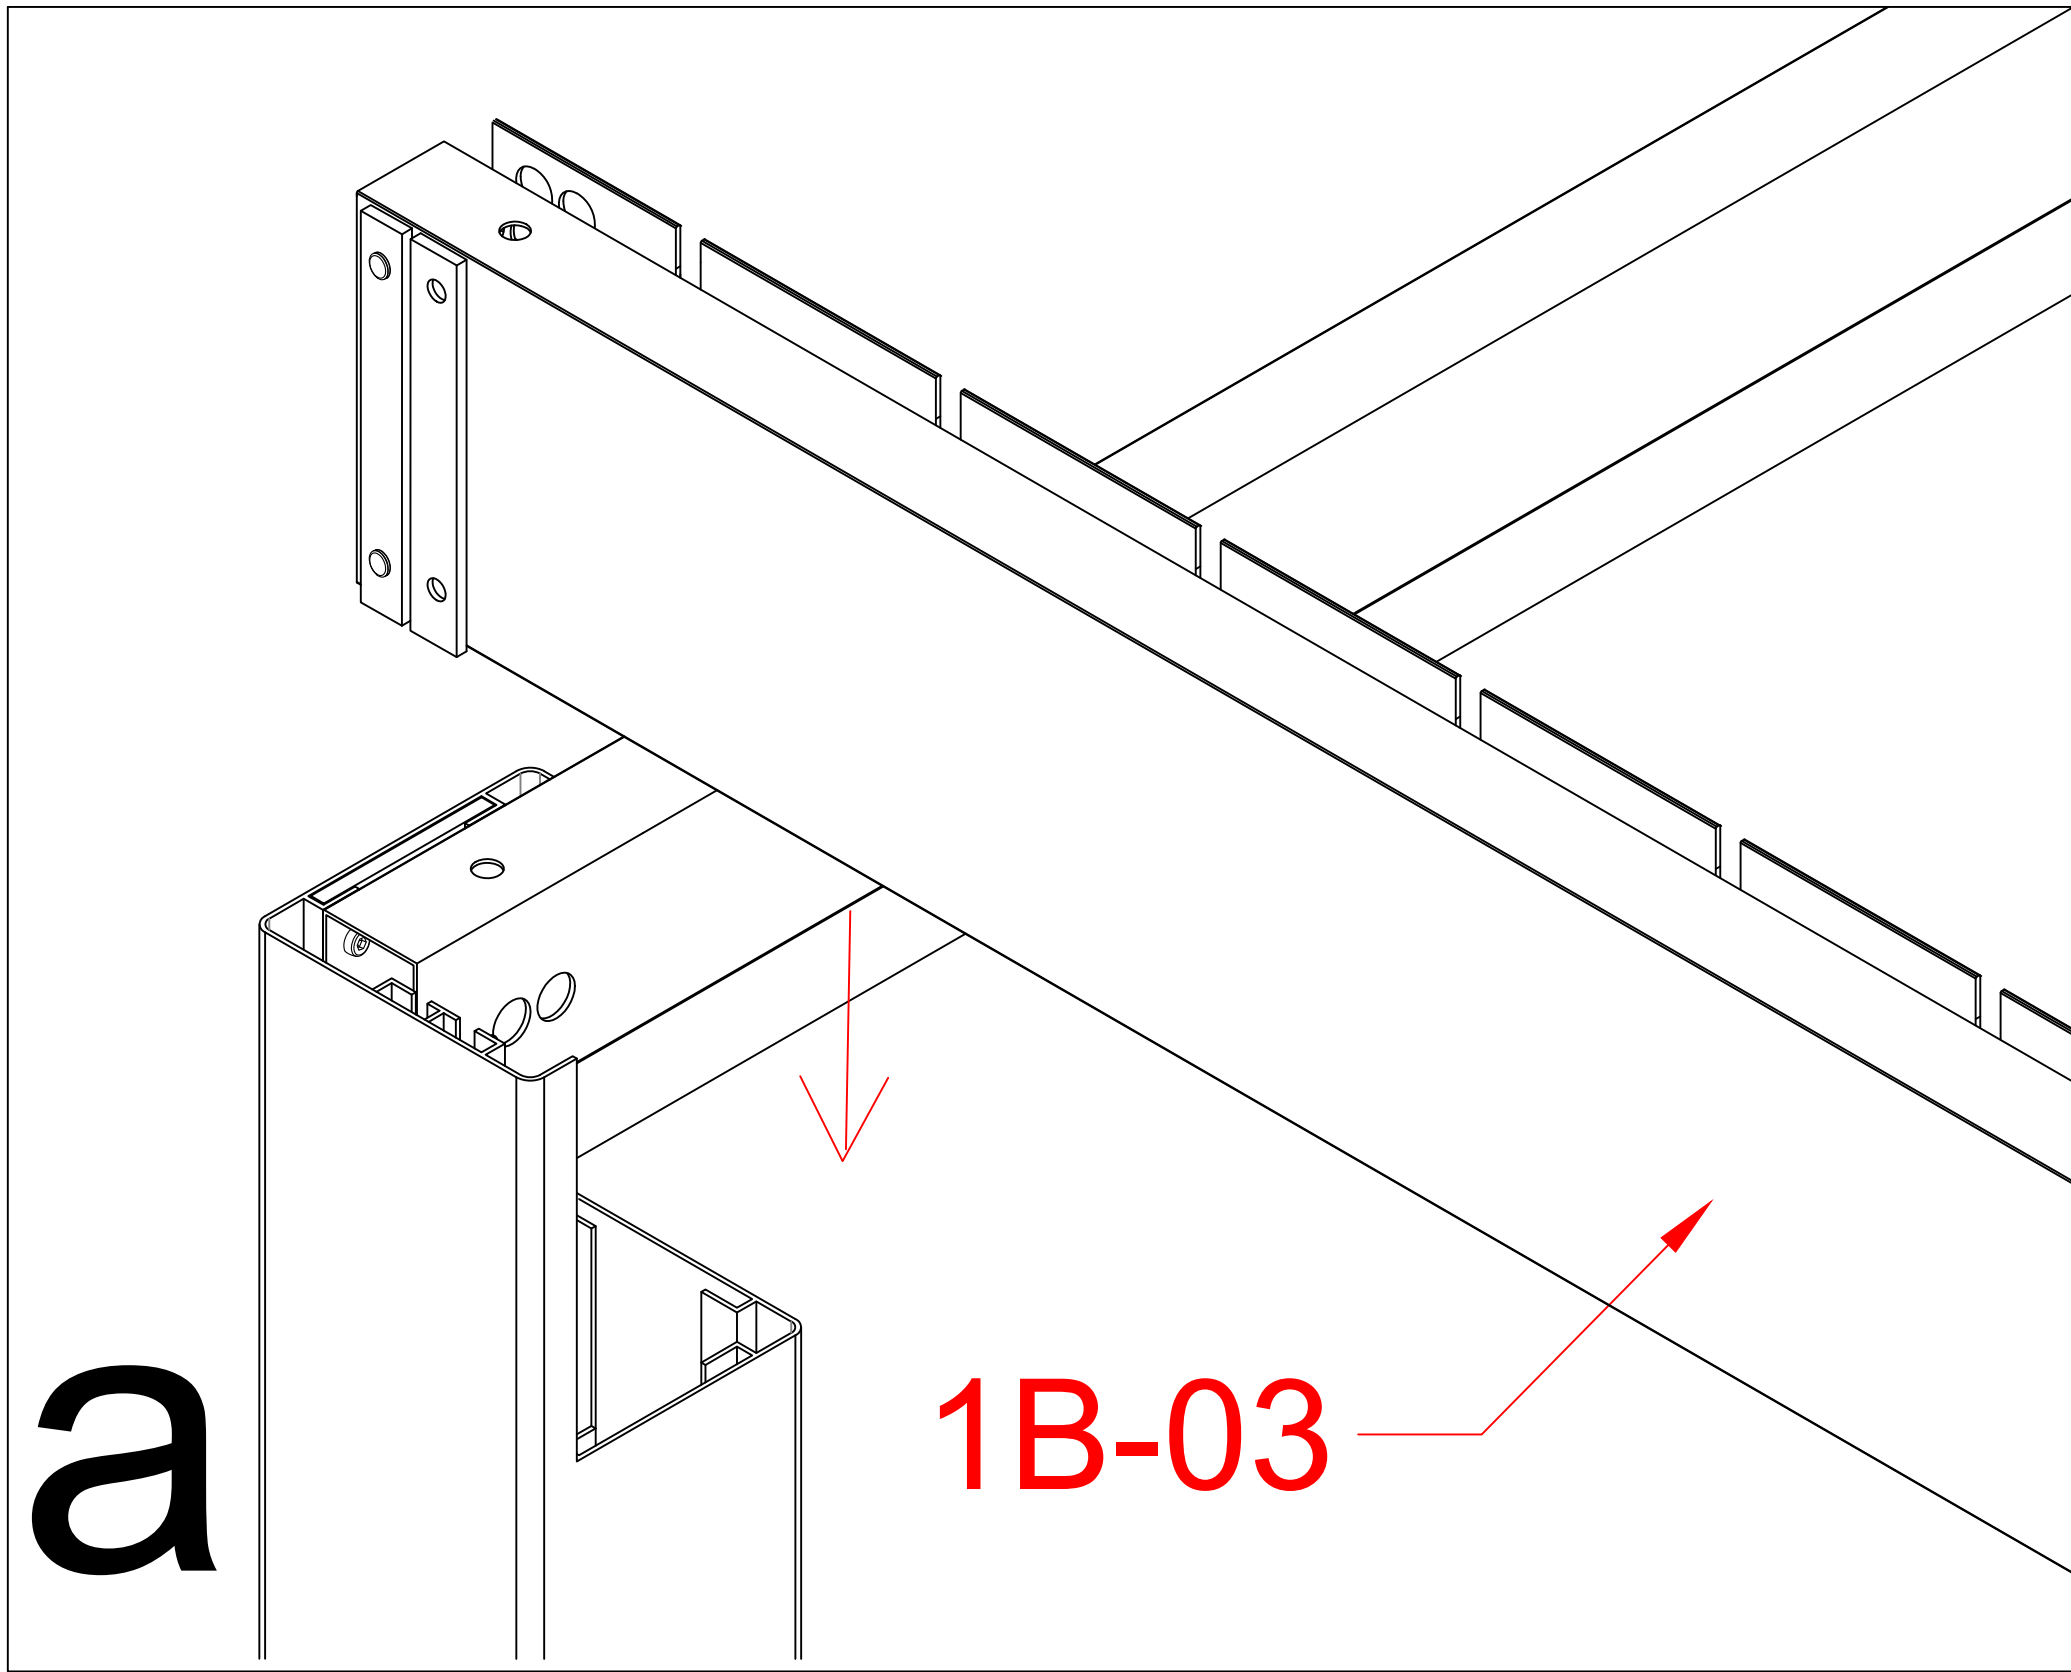


1B-03			1
-------	--	--	---



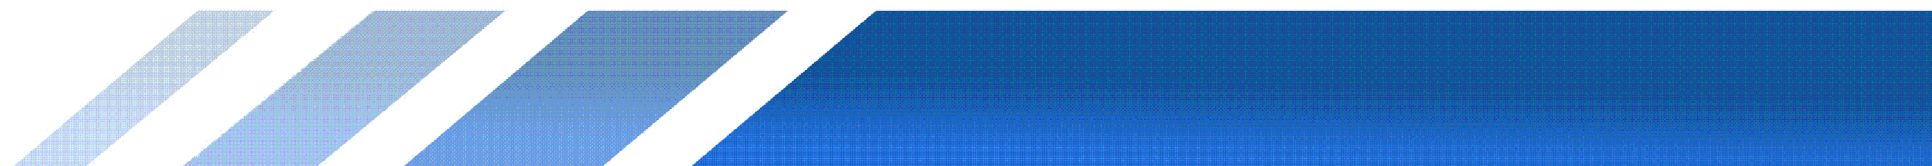


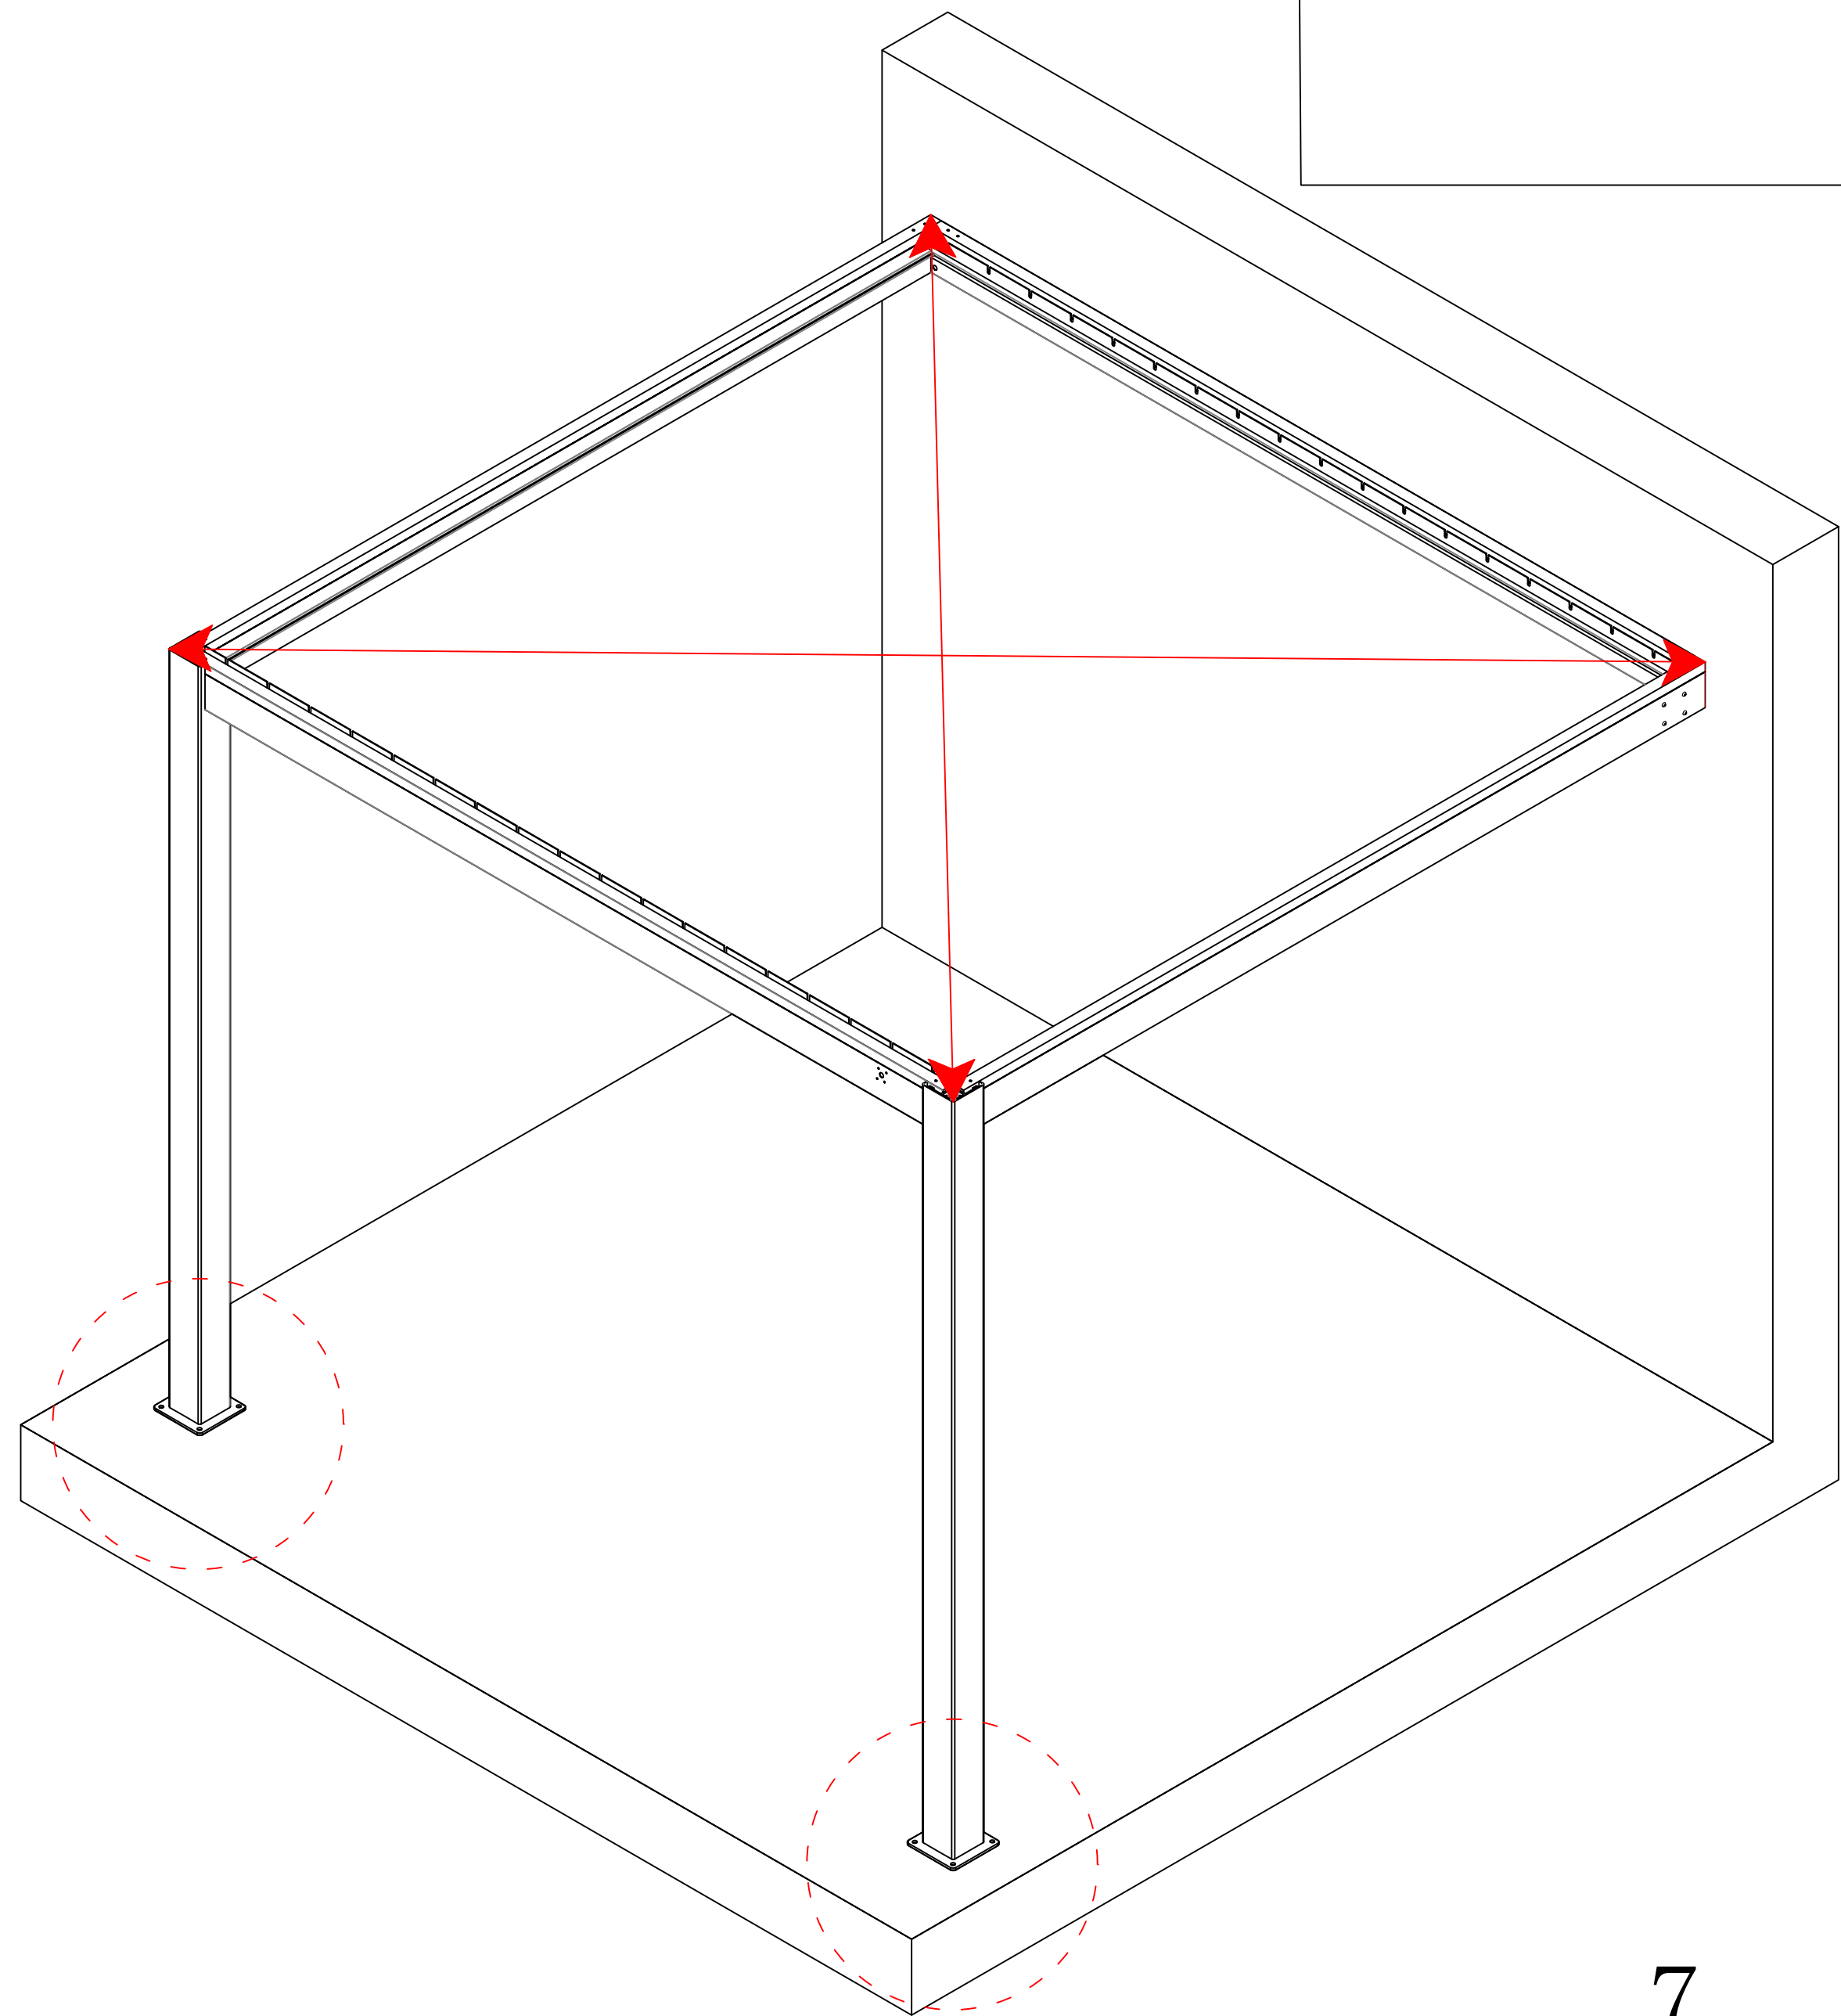
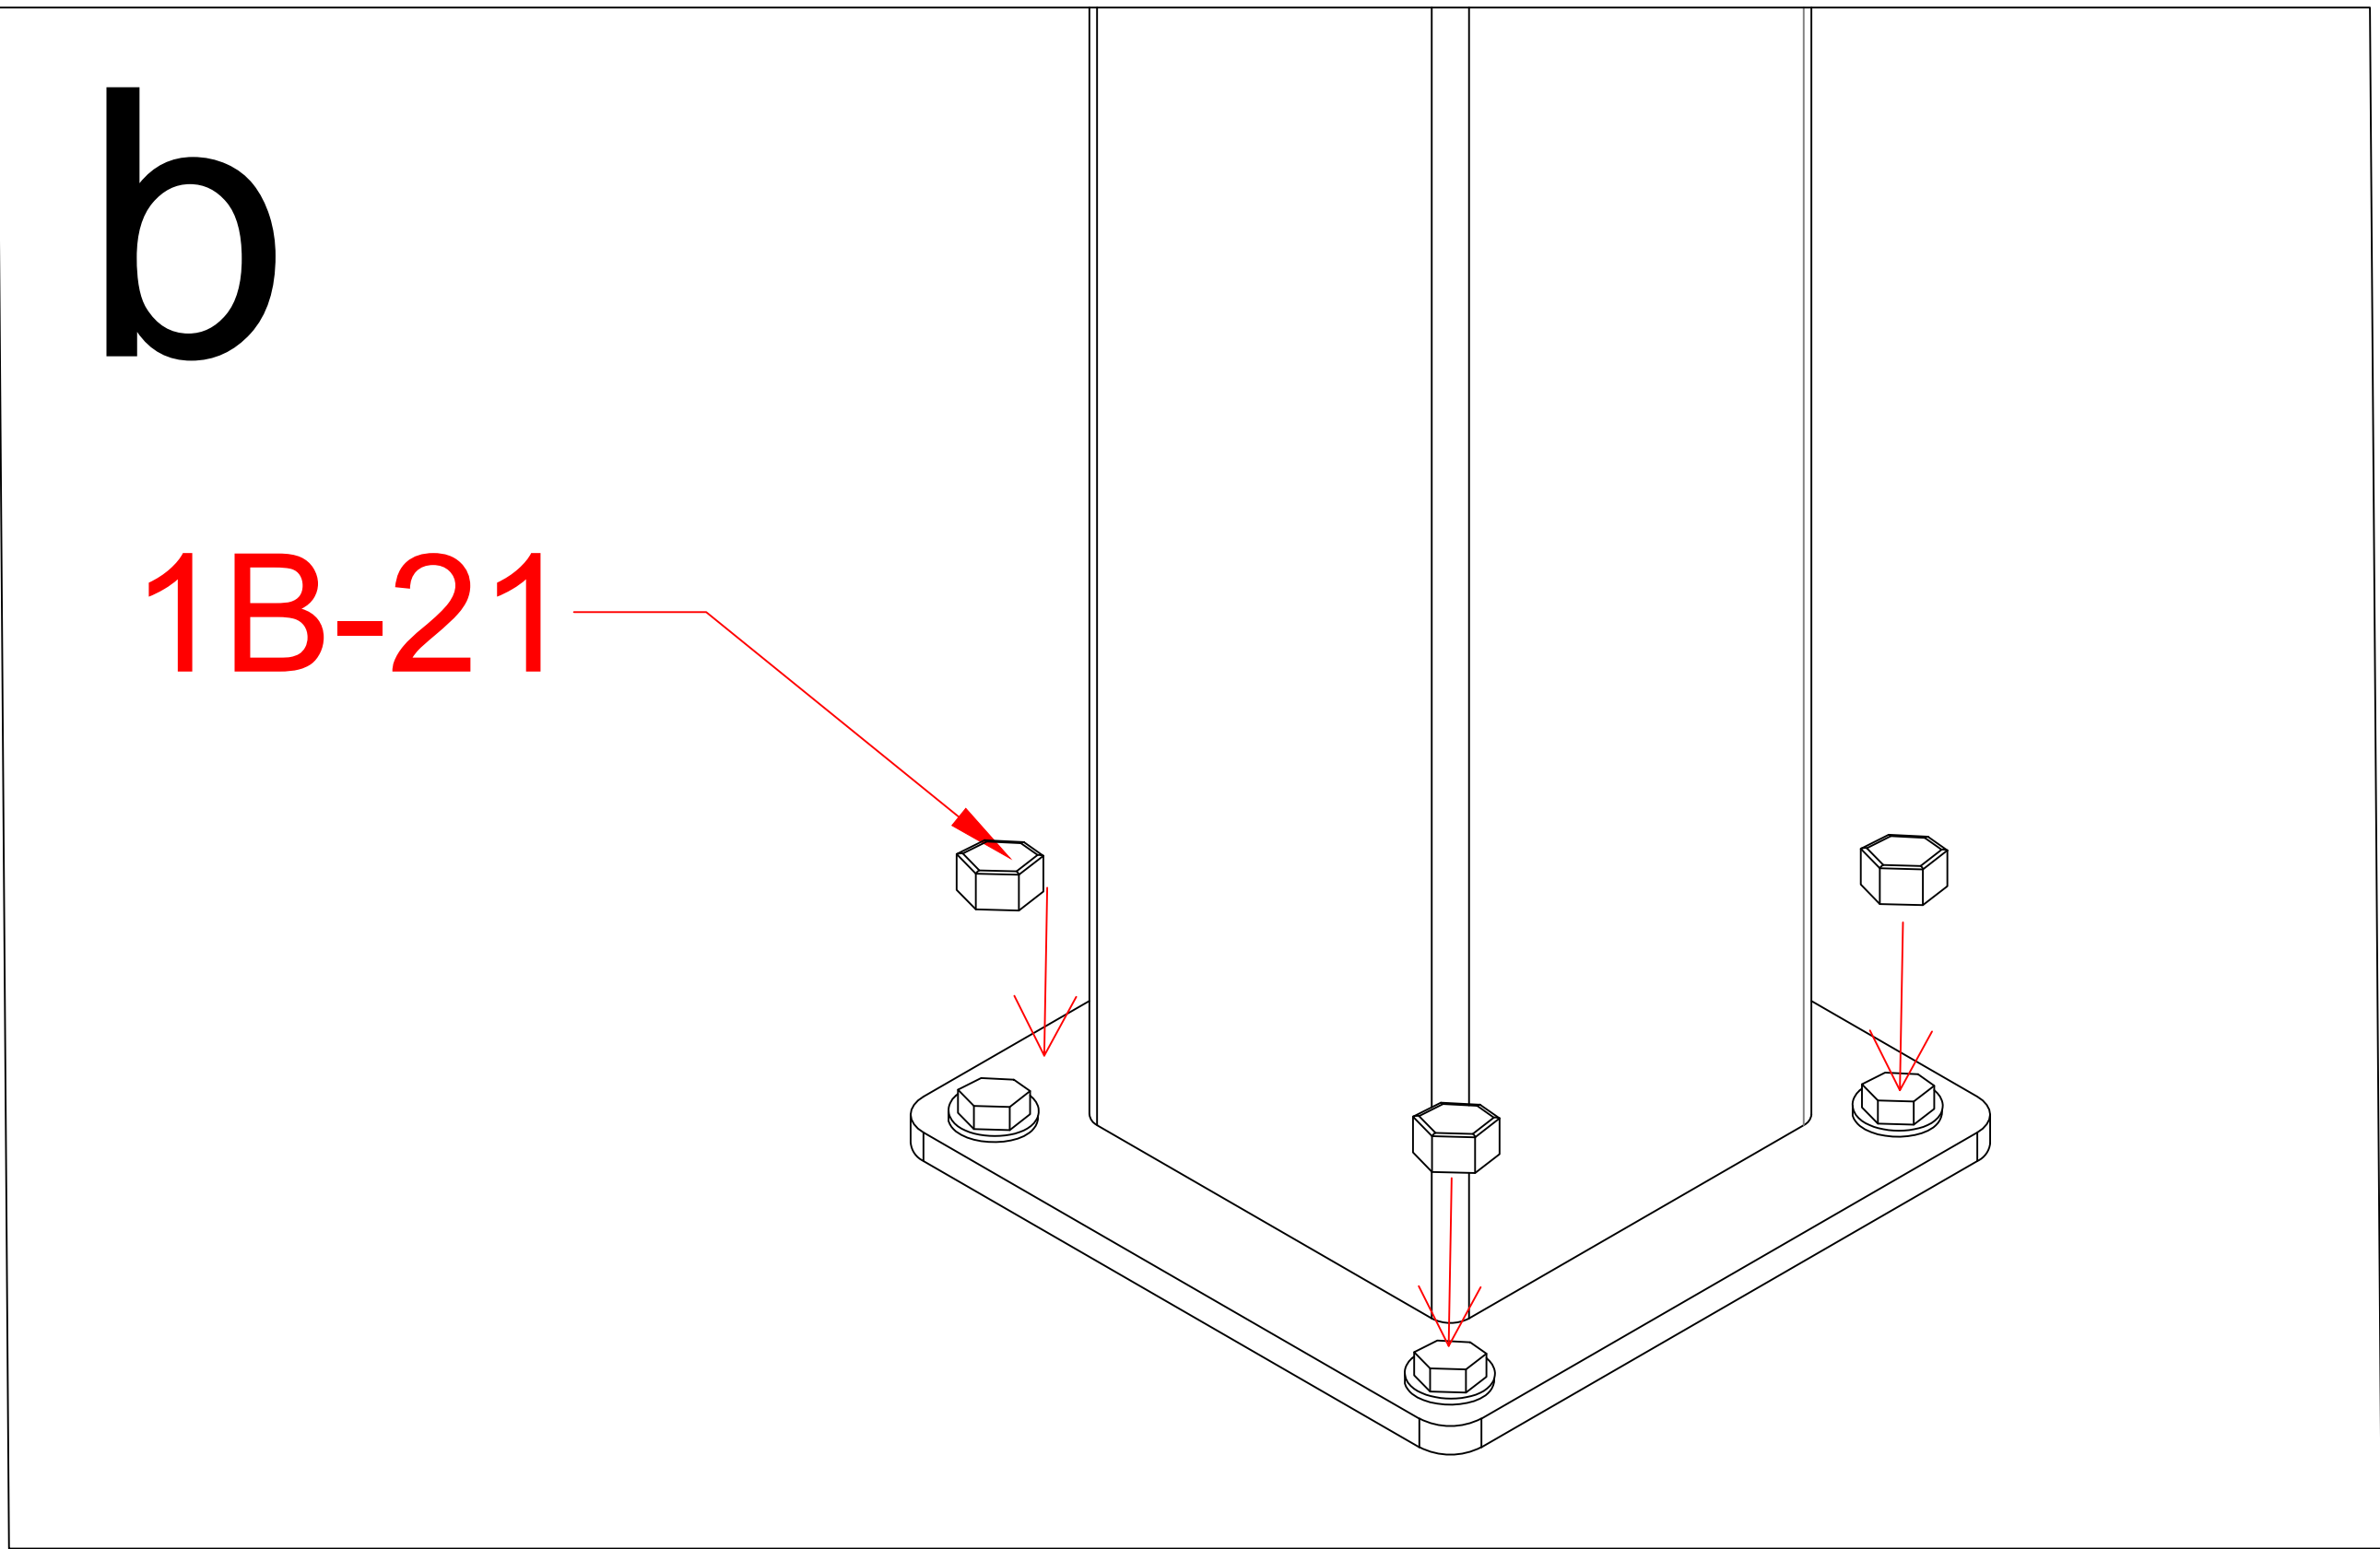
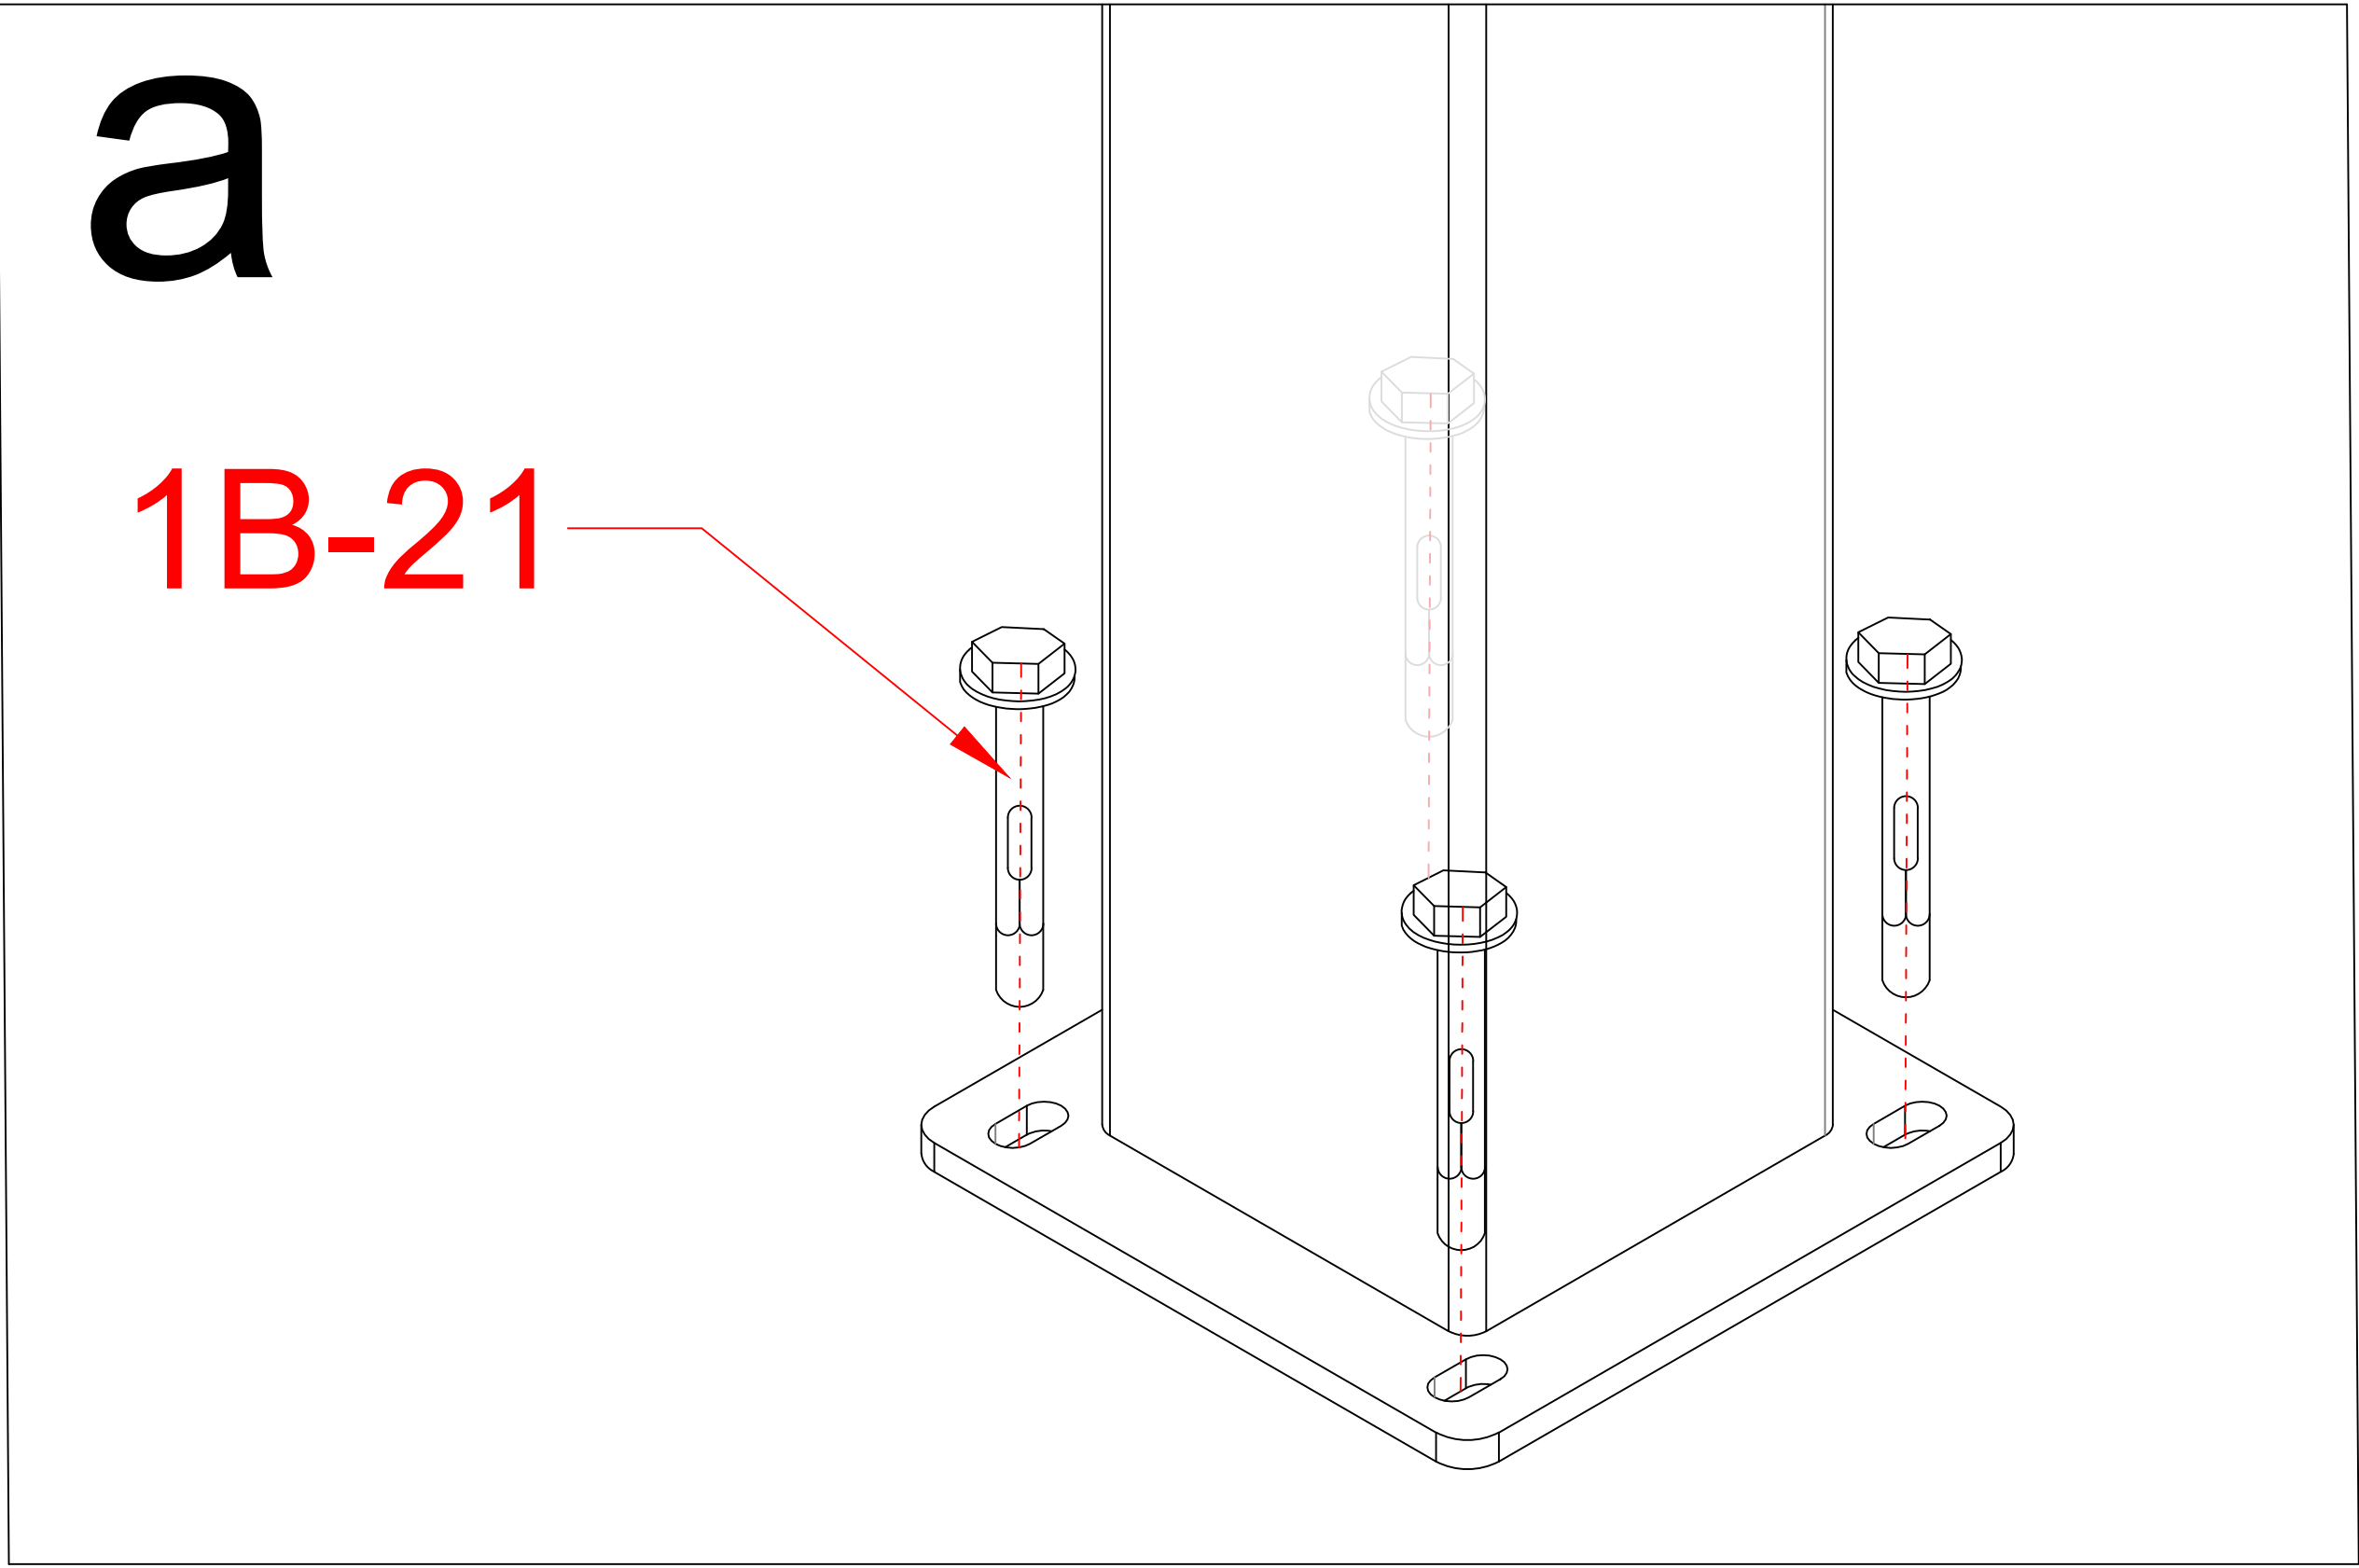



Pls measure the diagonal size and make sure the diagonal size keeps same before screw 1B-21 mounted. If not, pls adjust it to same size.





1B-21		8
-------	--	---

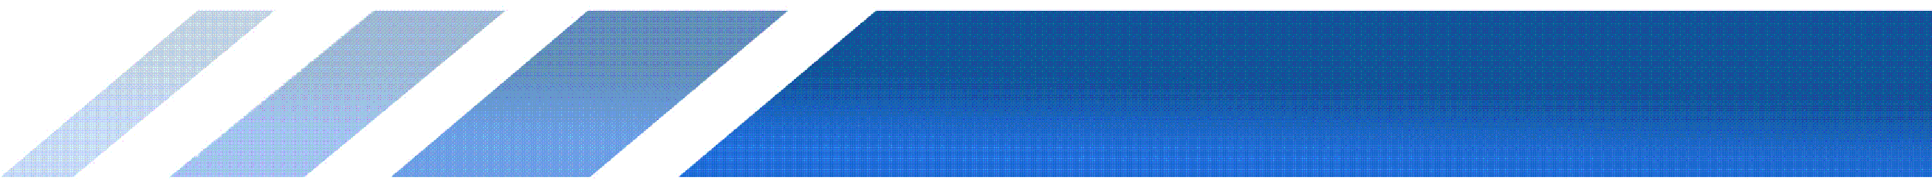


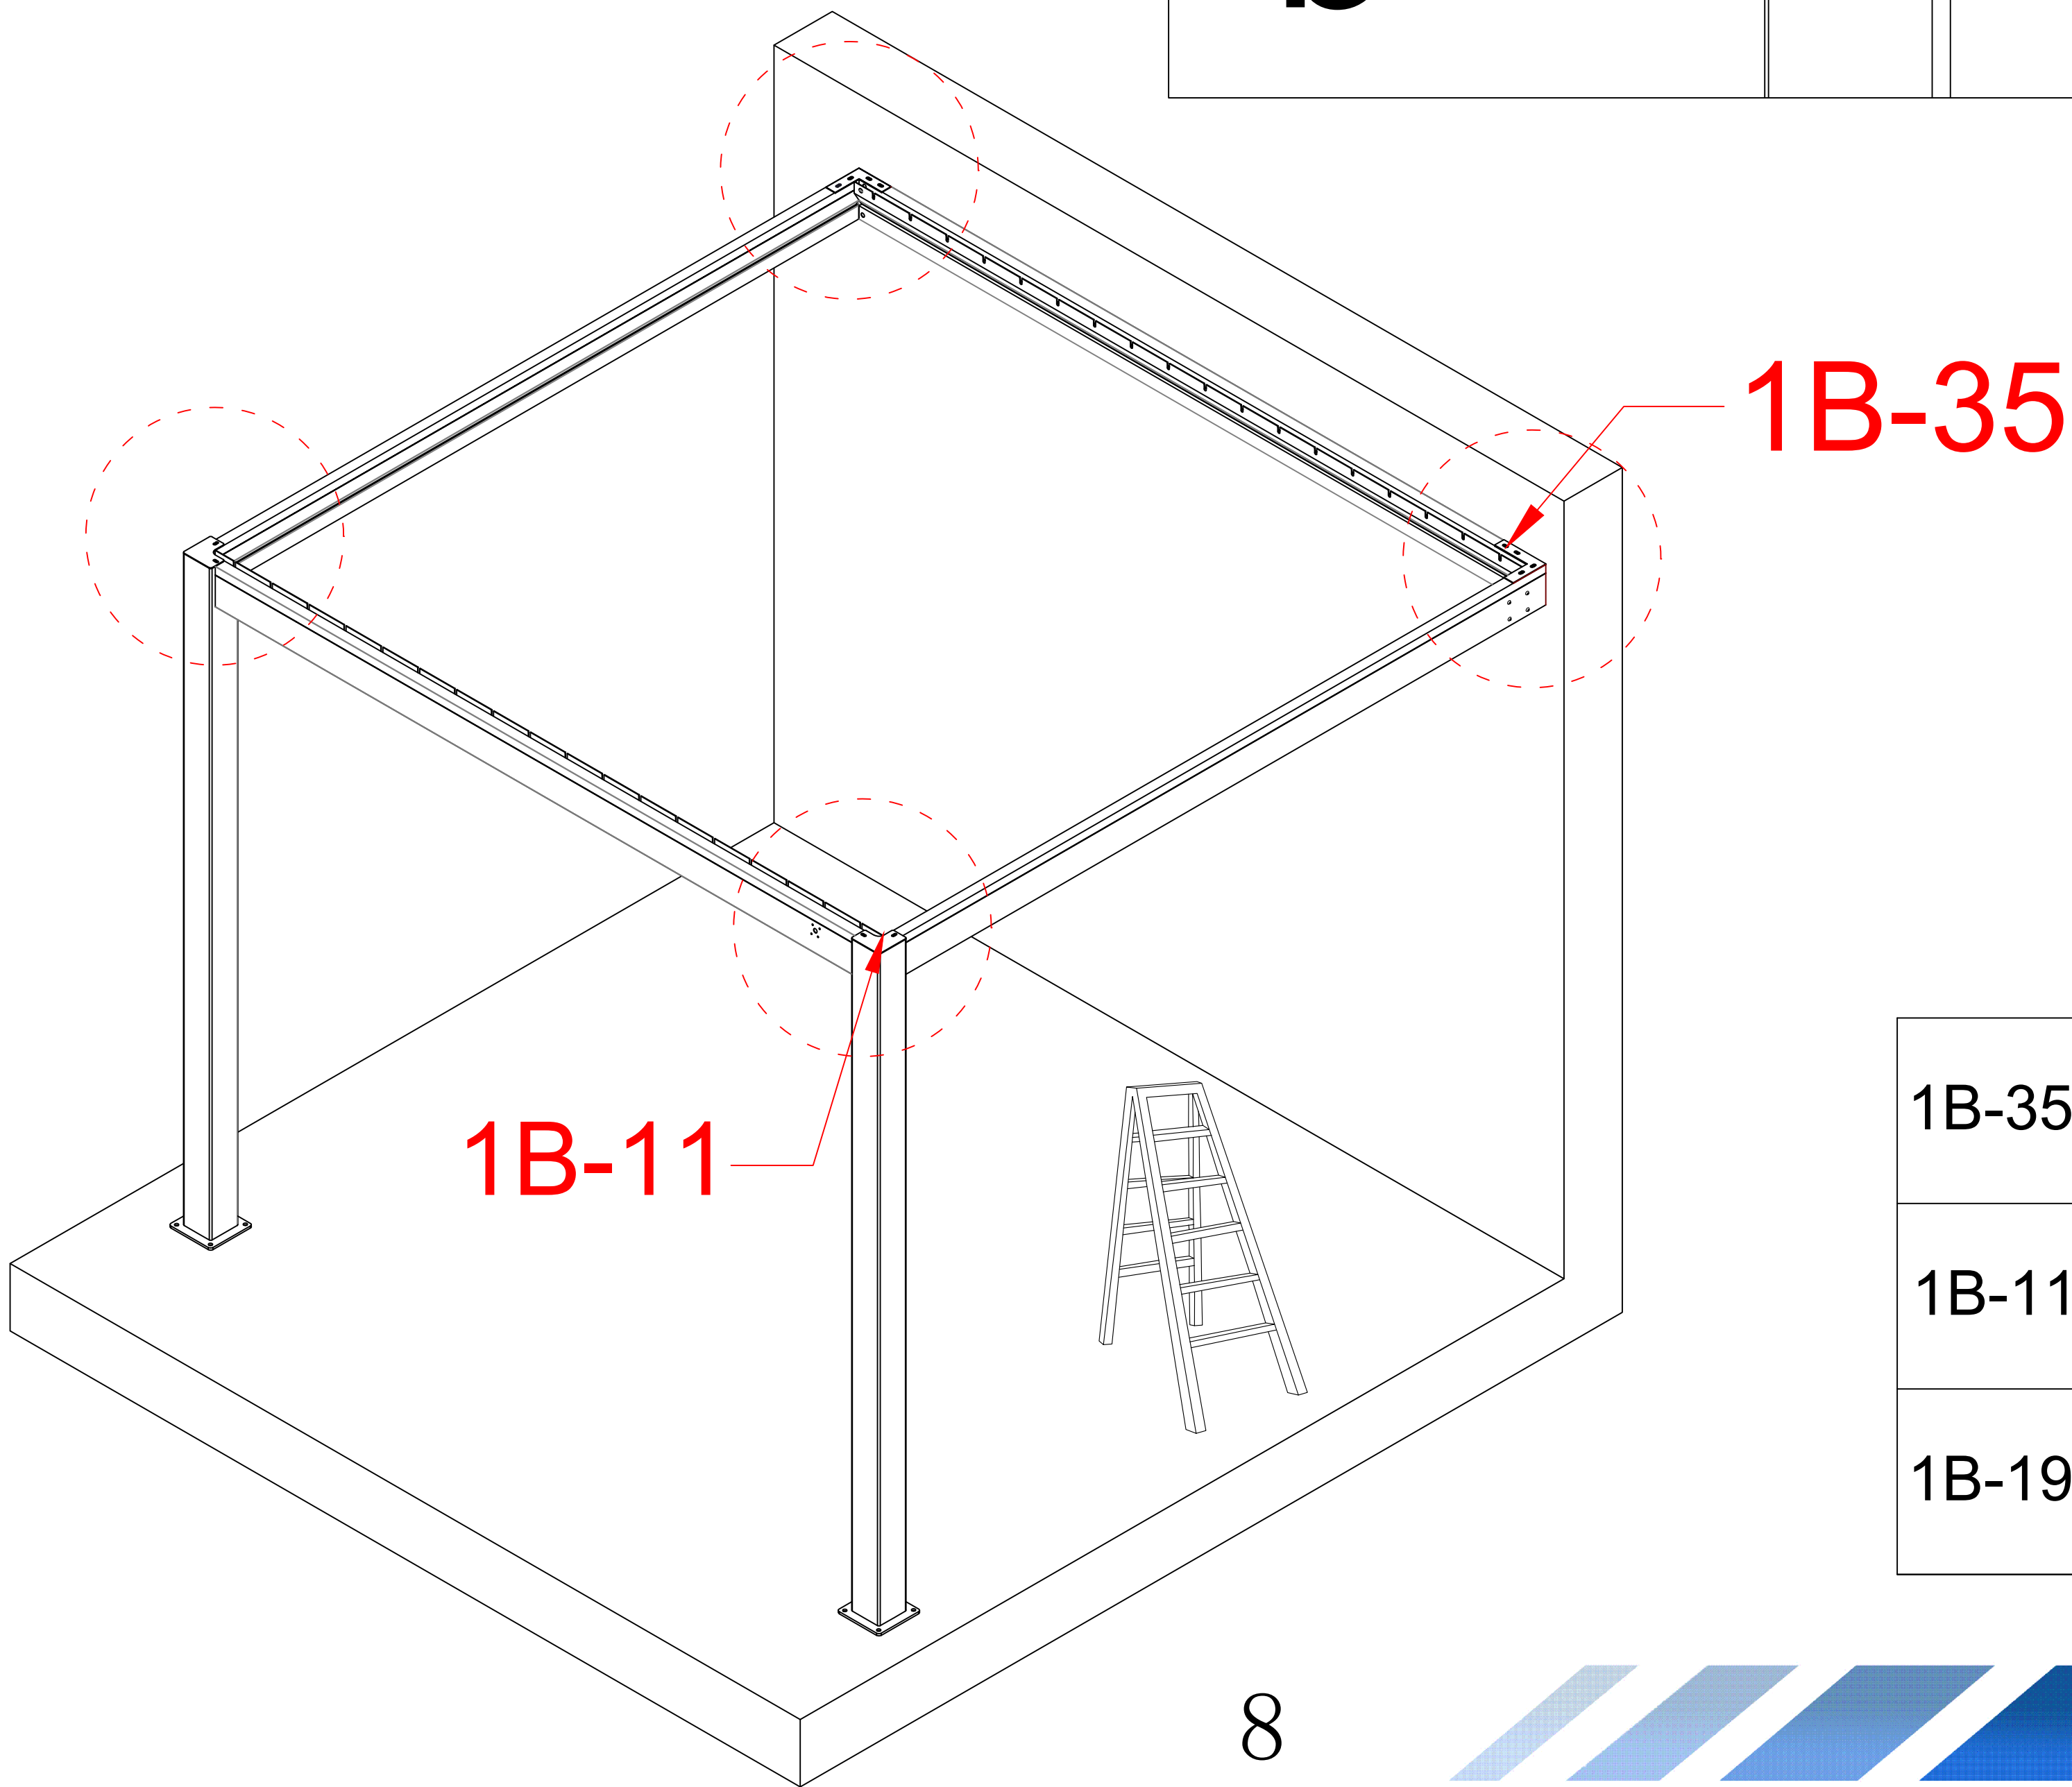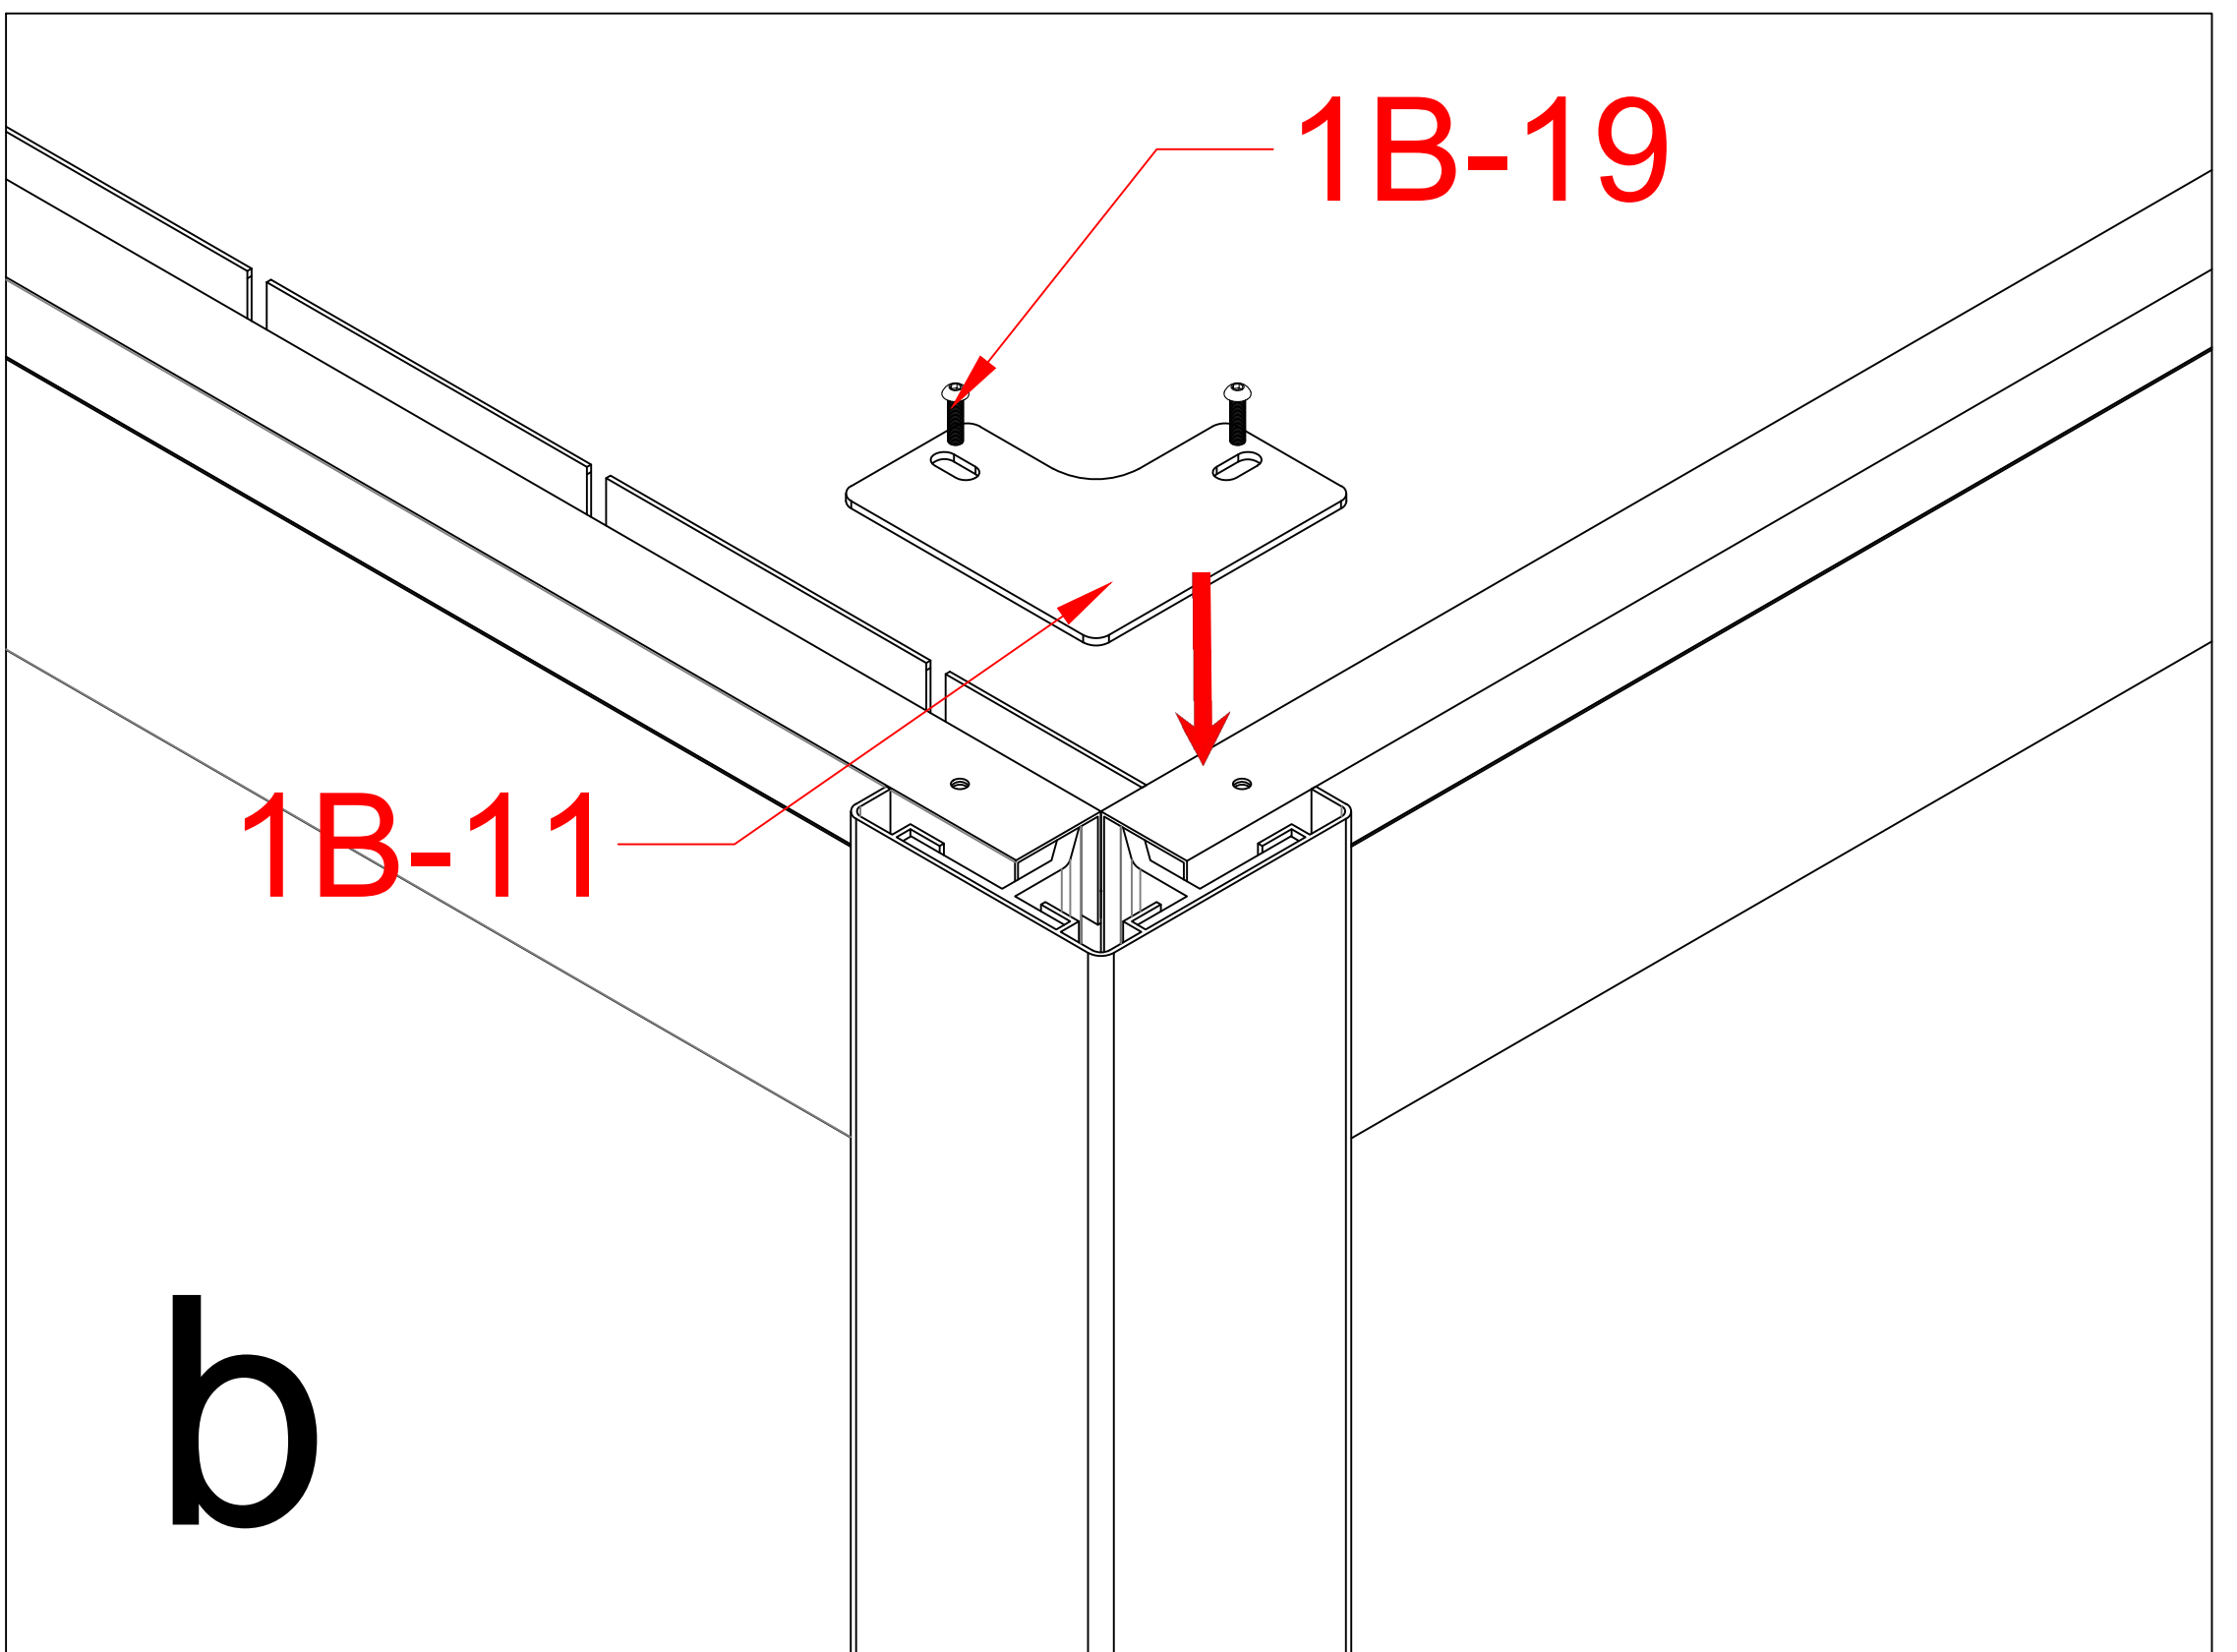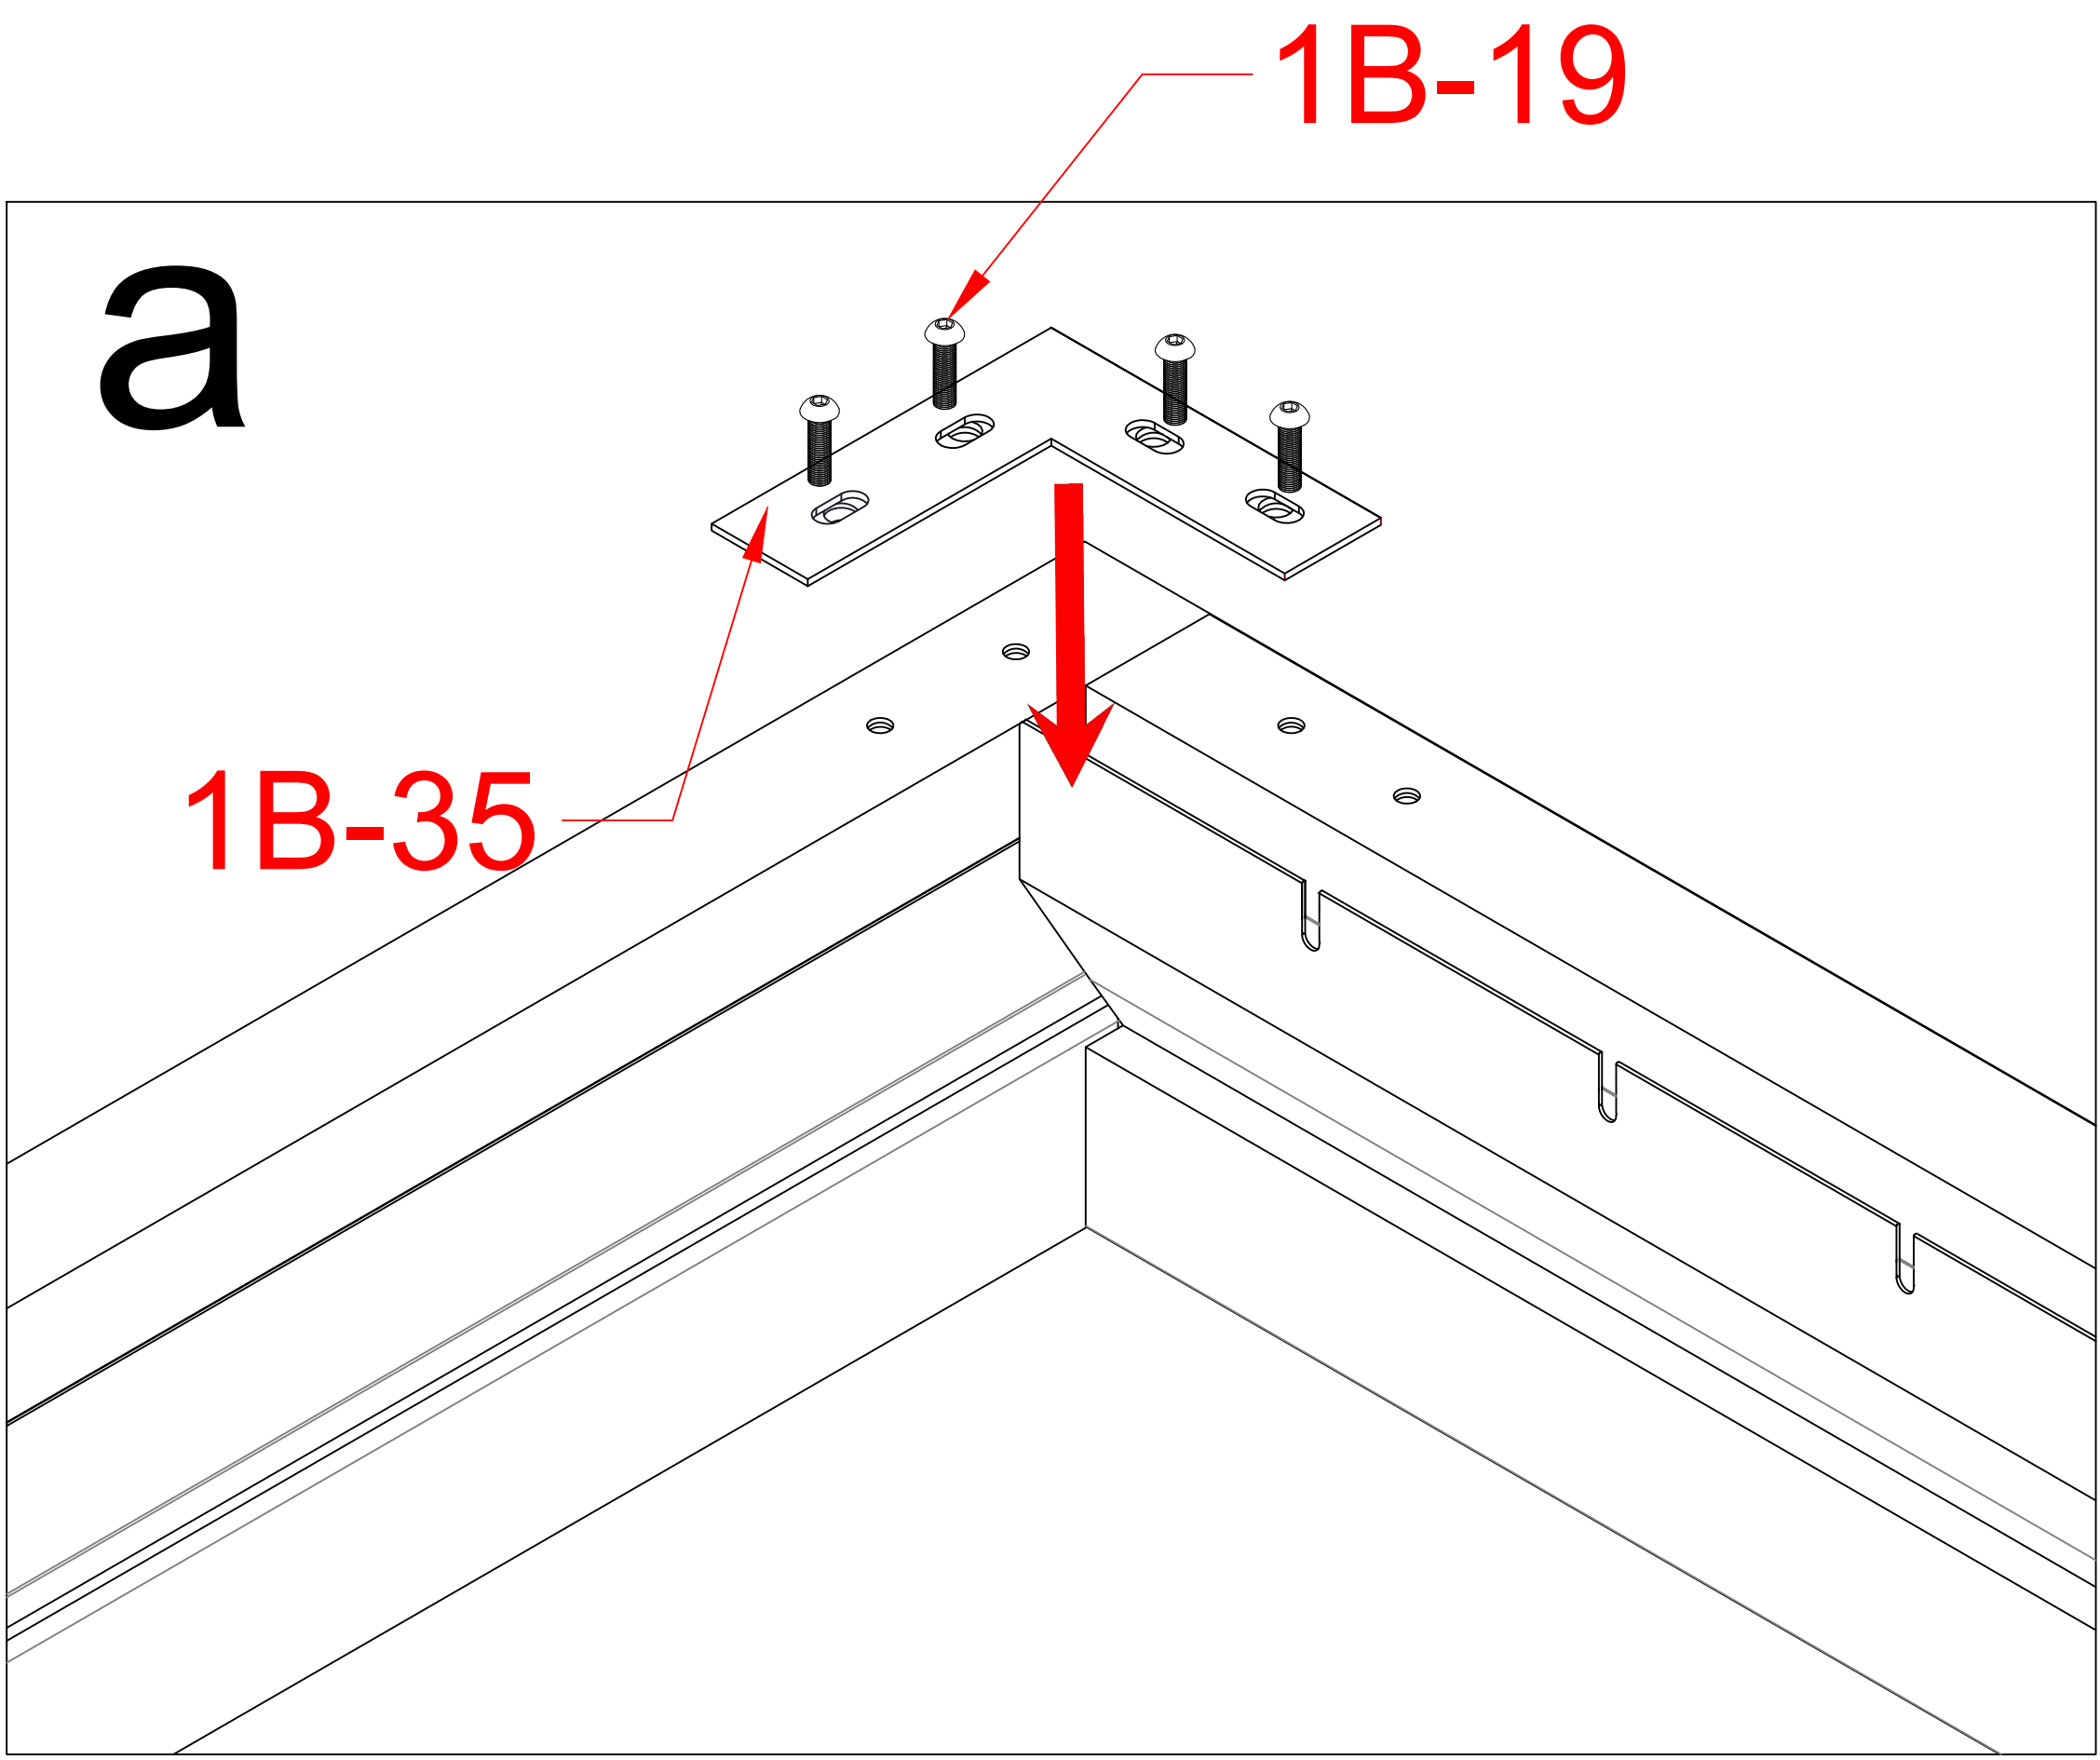


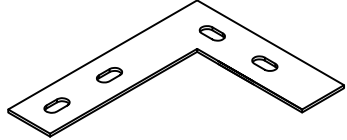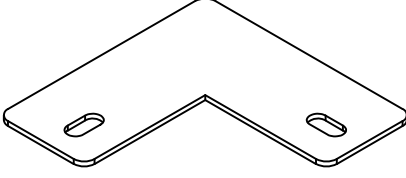
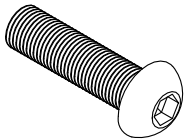
1B-35		2
1B-11		2
1B-19		12

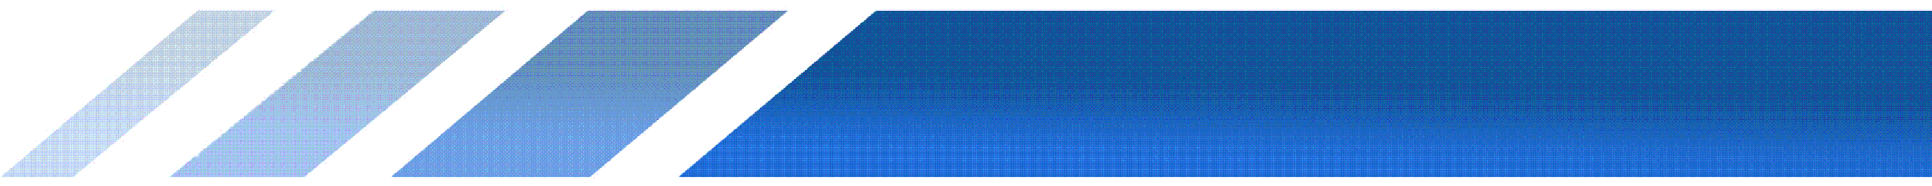

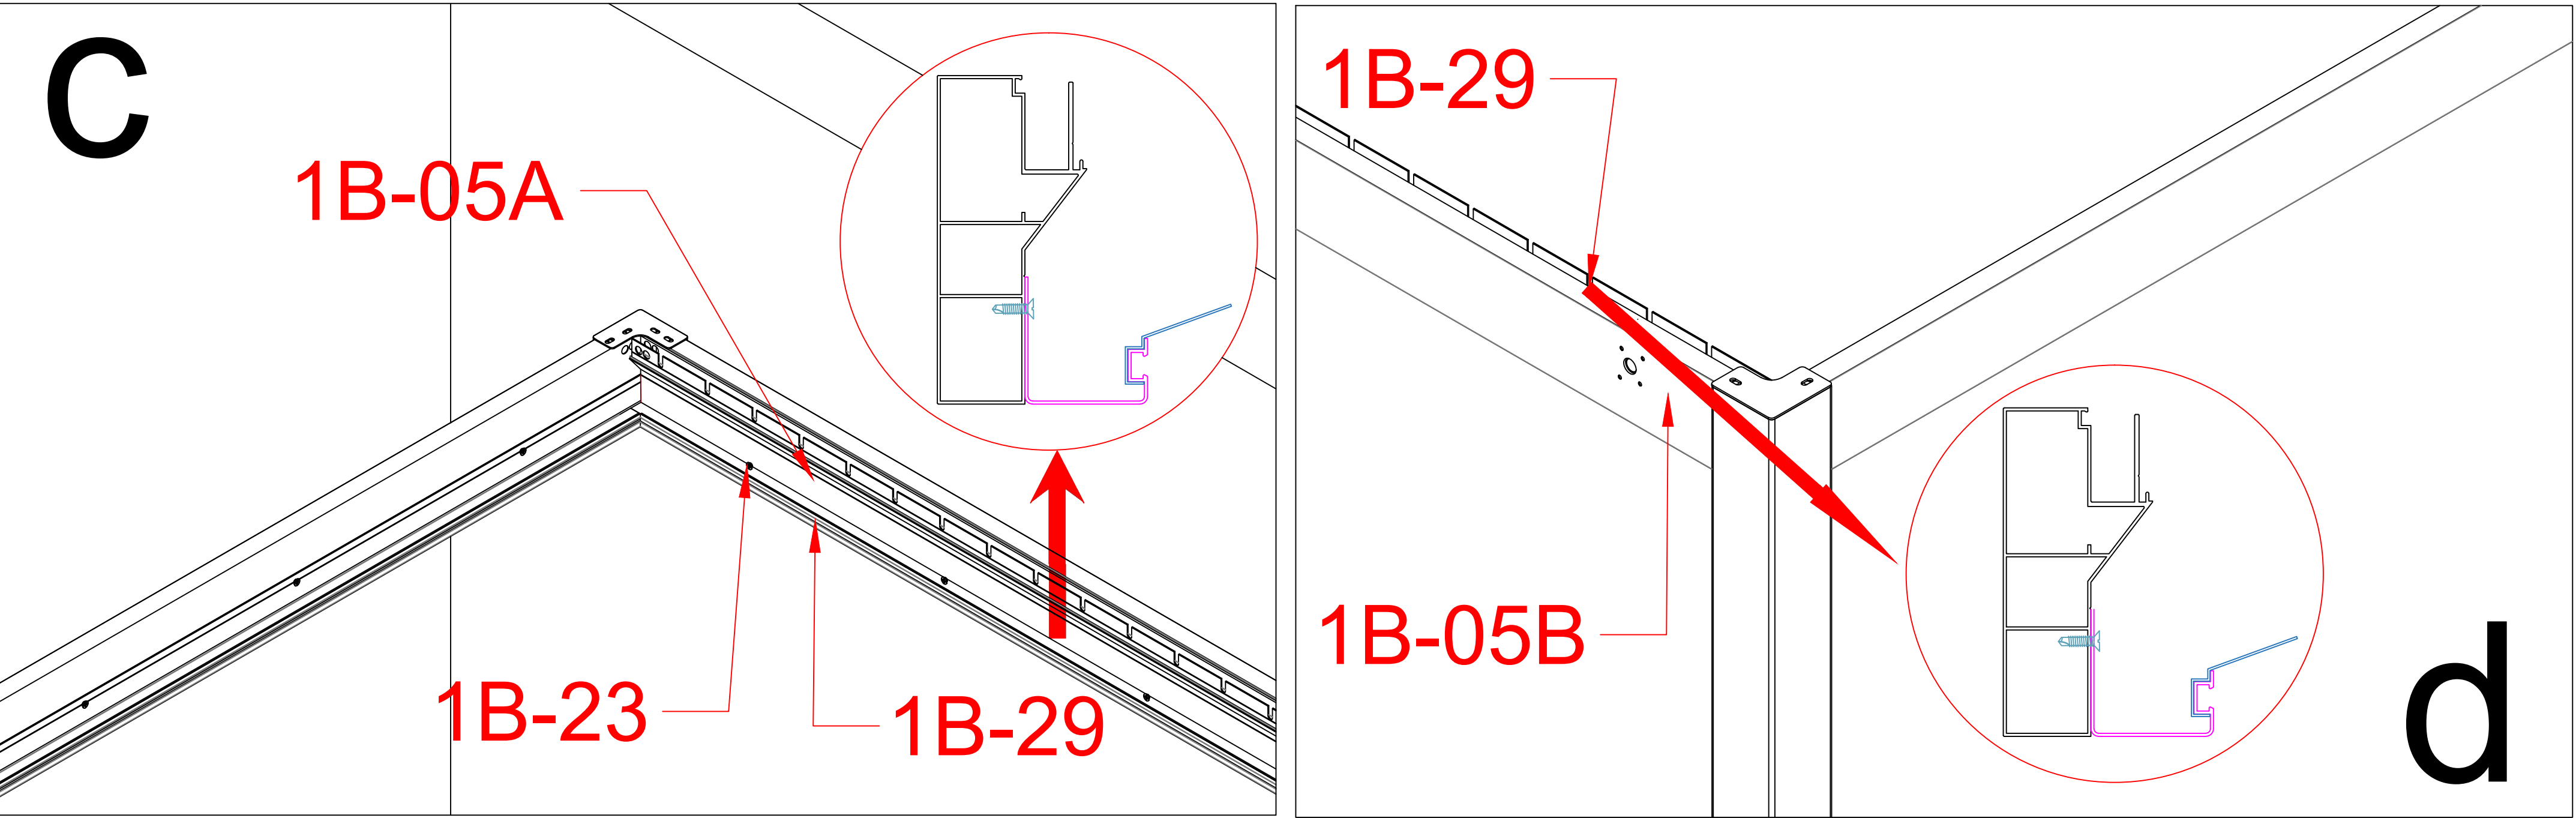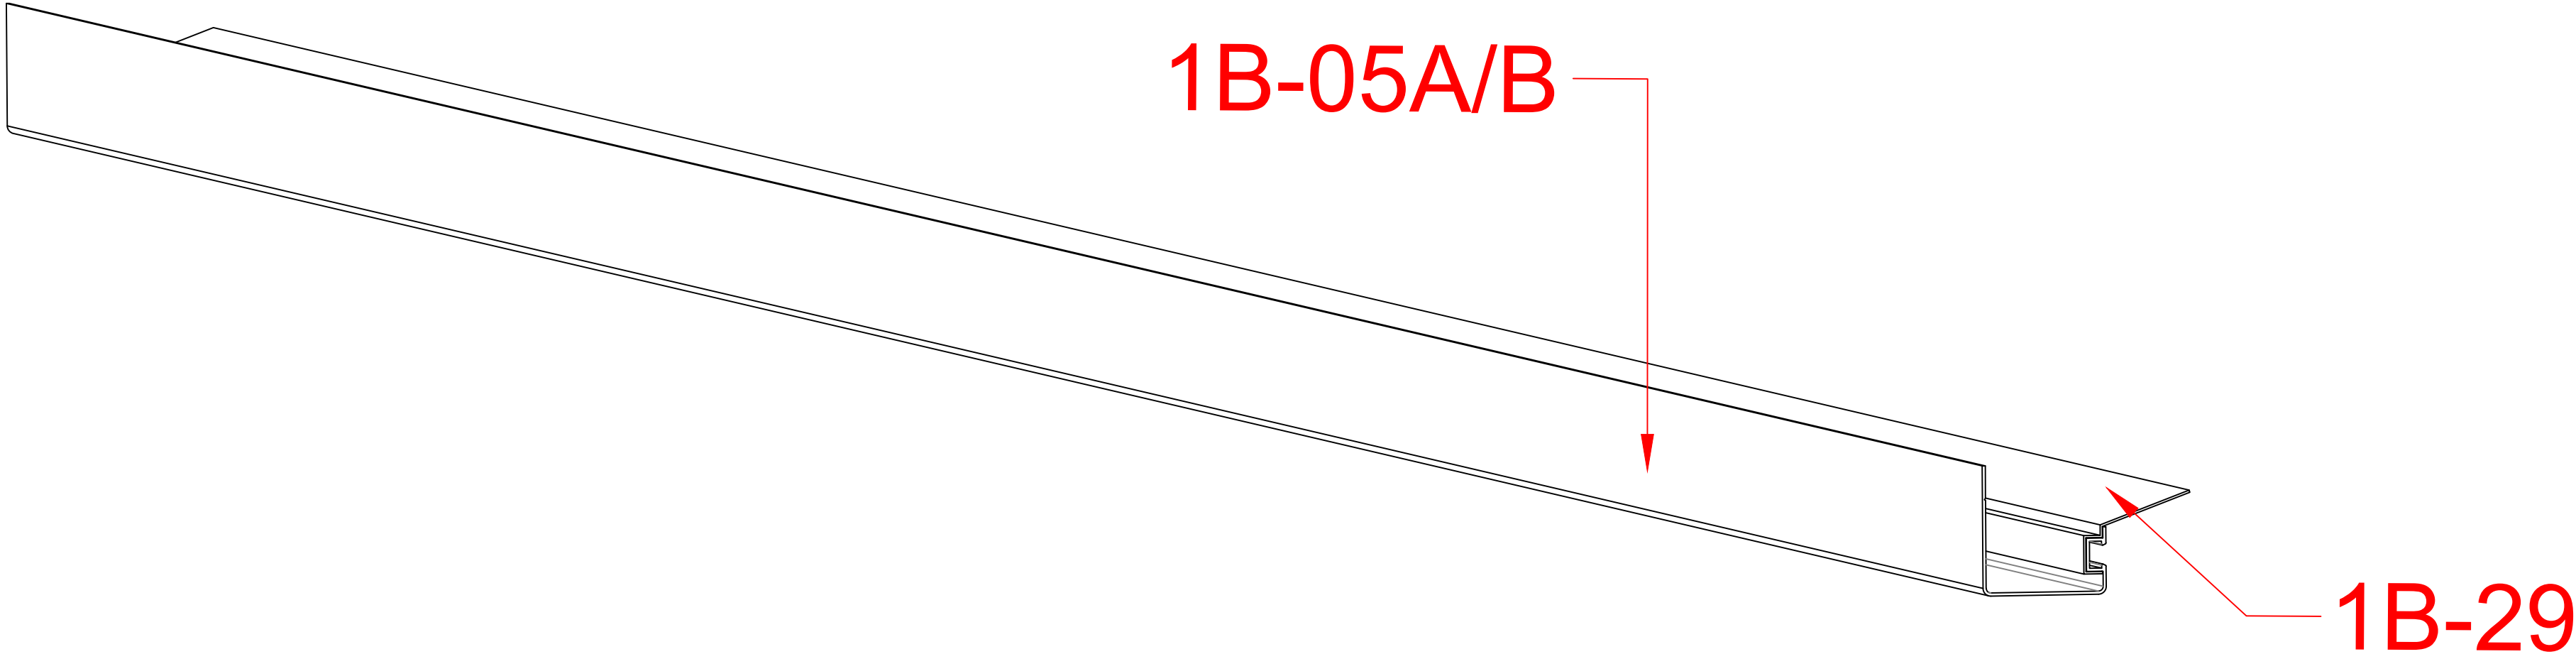
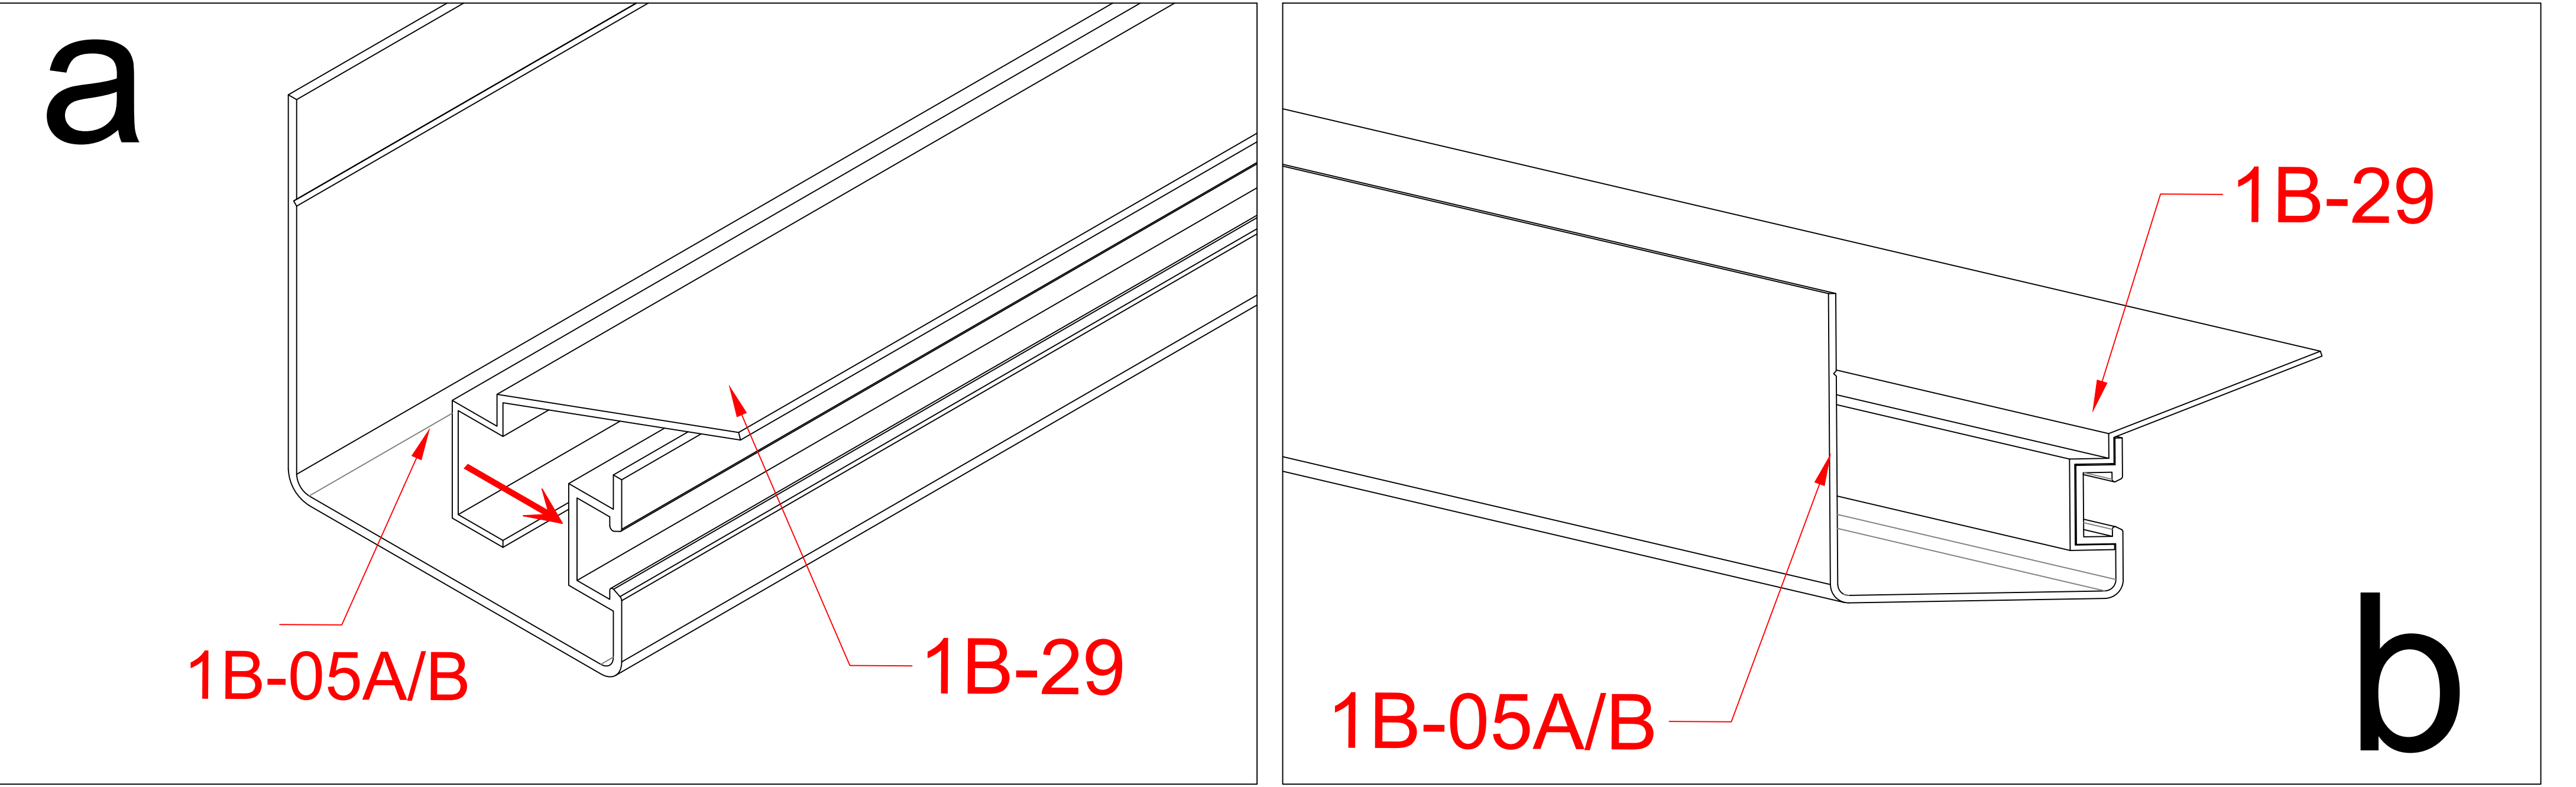
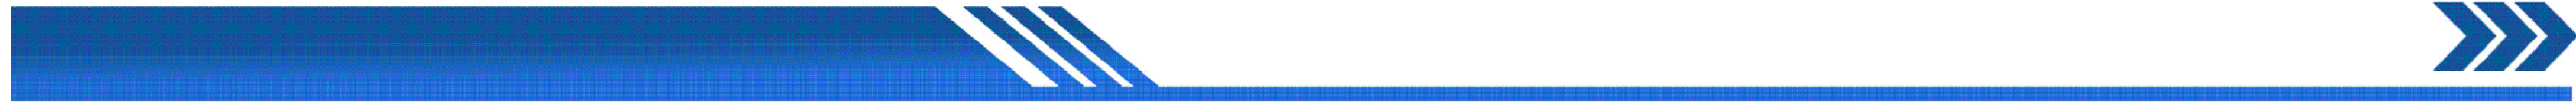





1B-23		10
1B-05A		1
1B-05B		1
1B-29		2

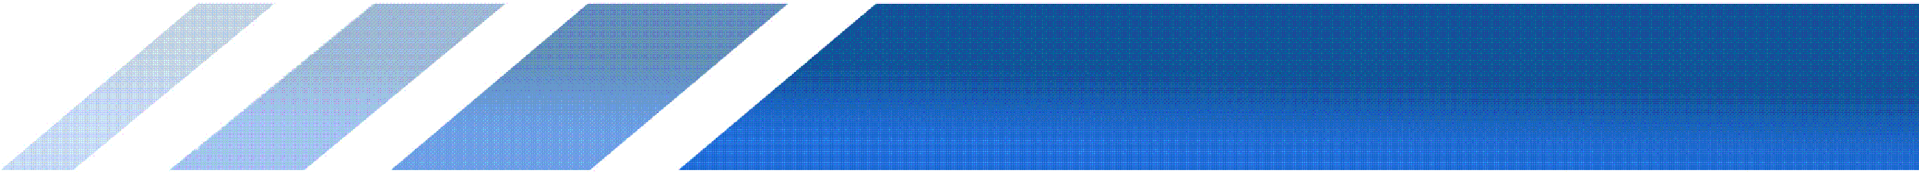




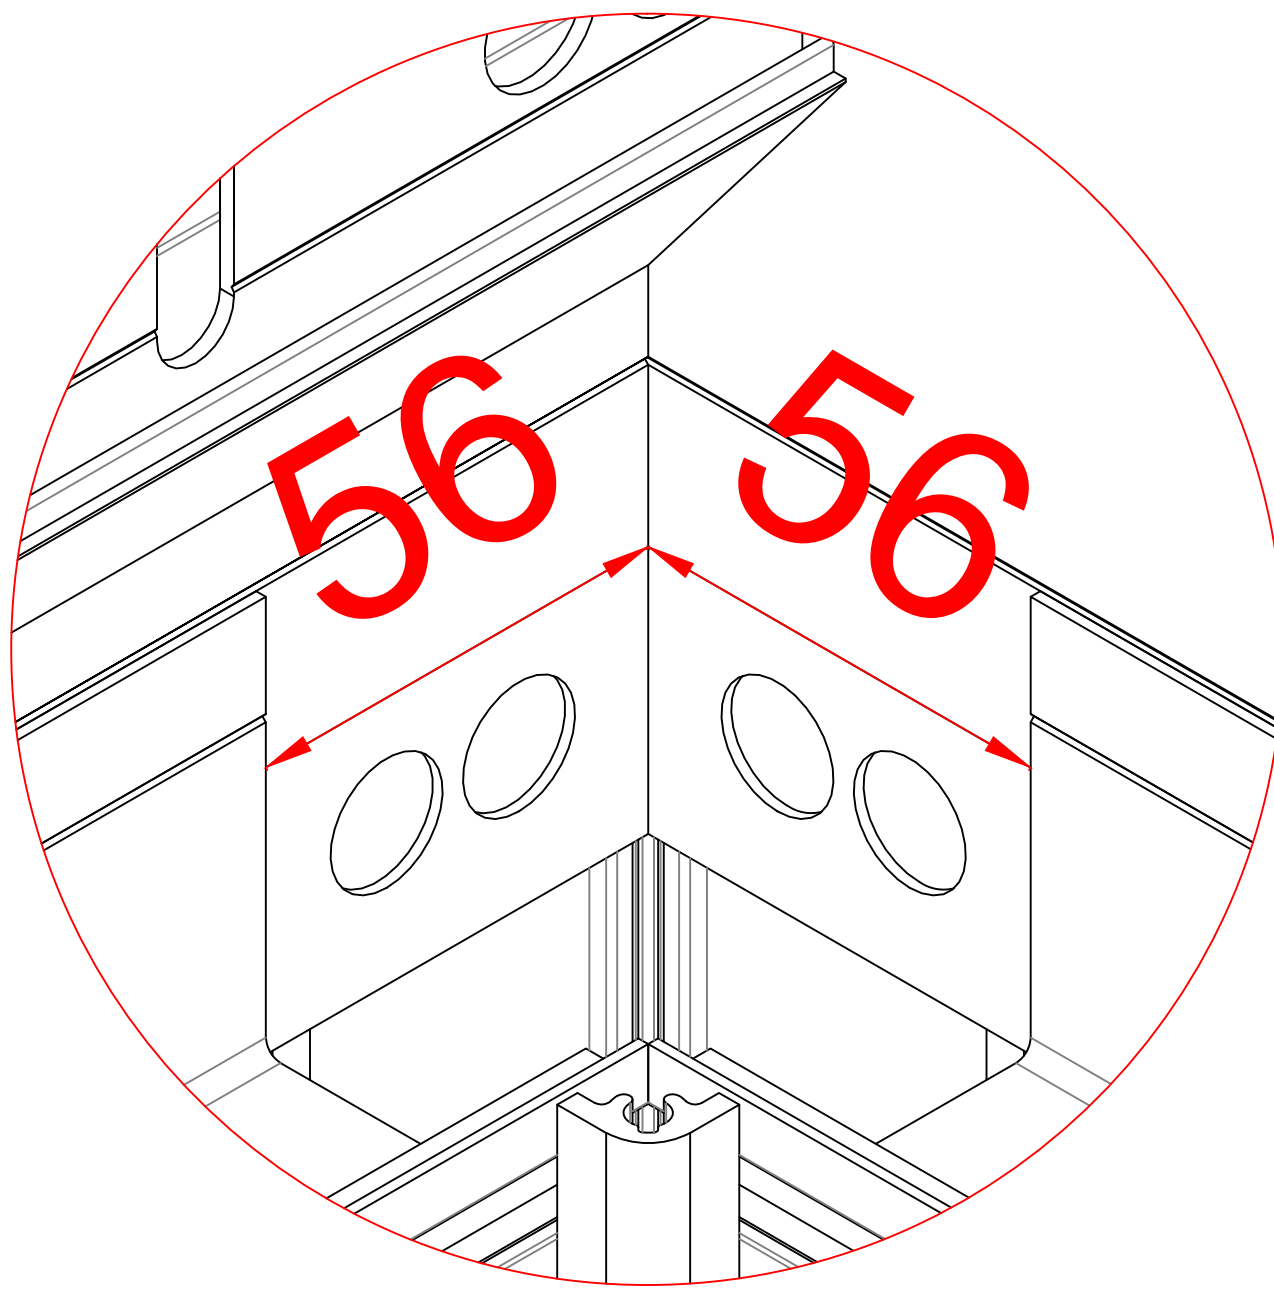
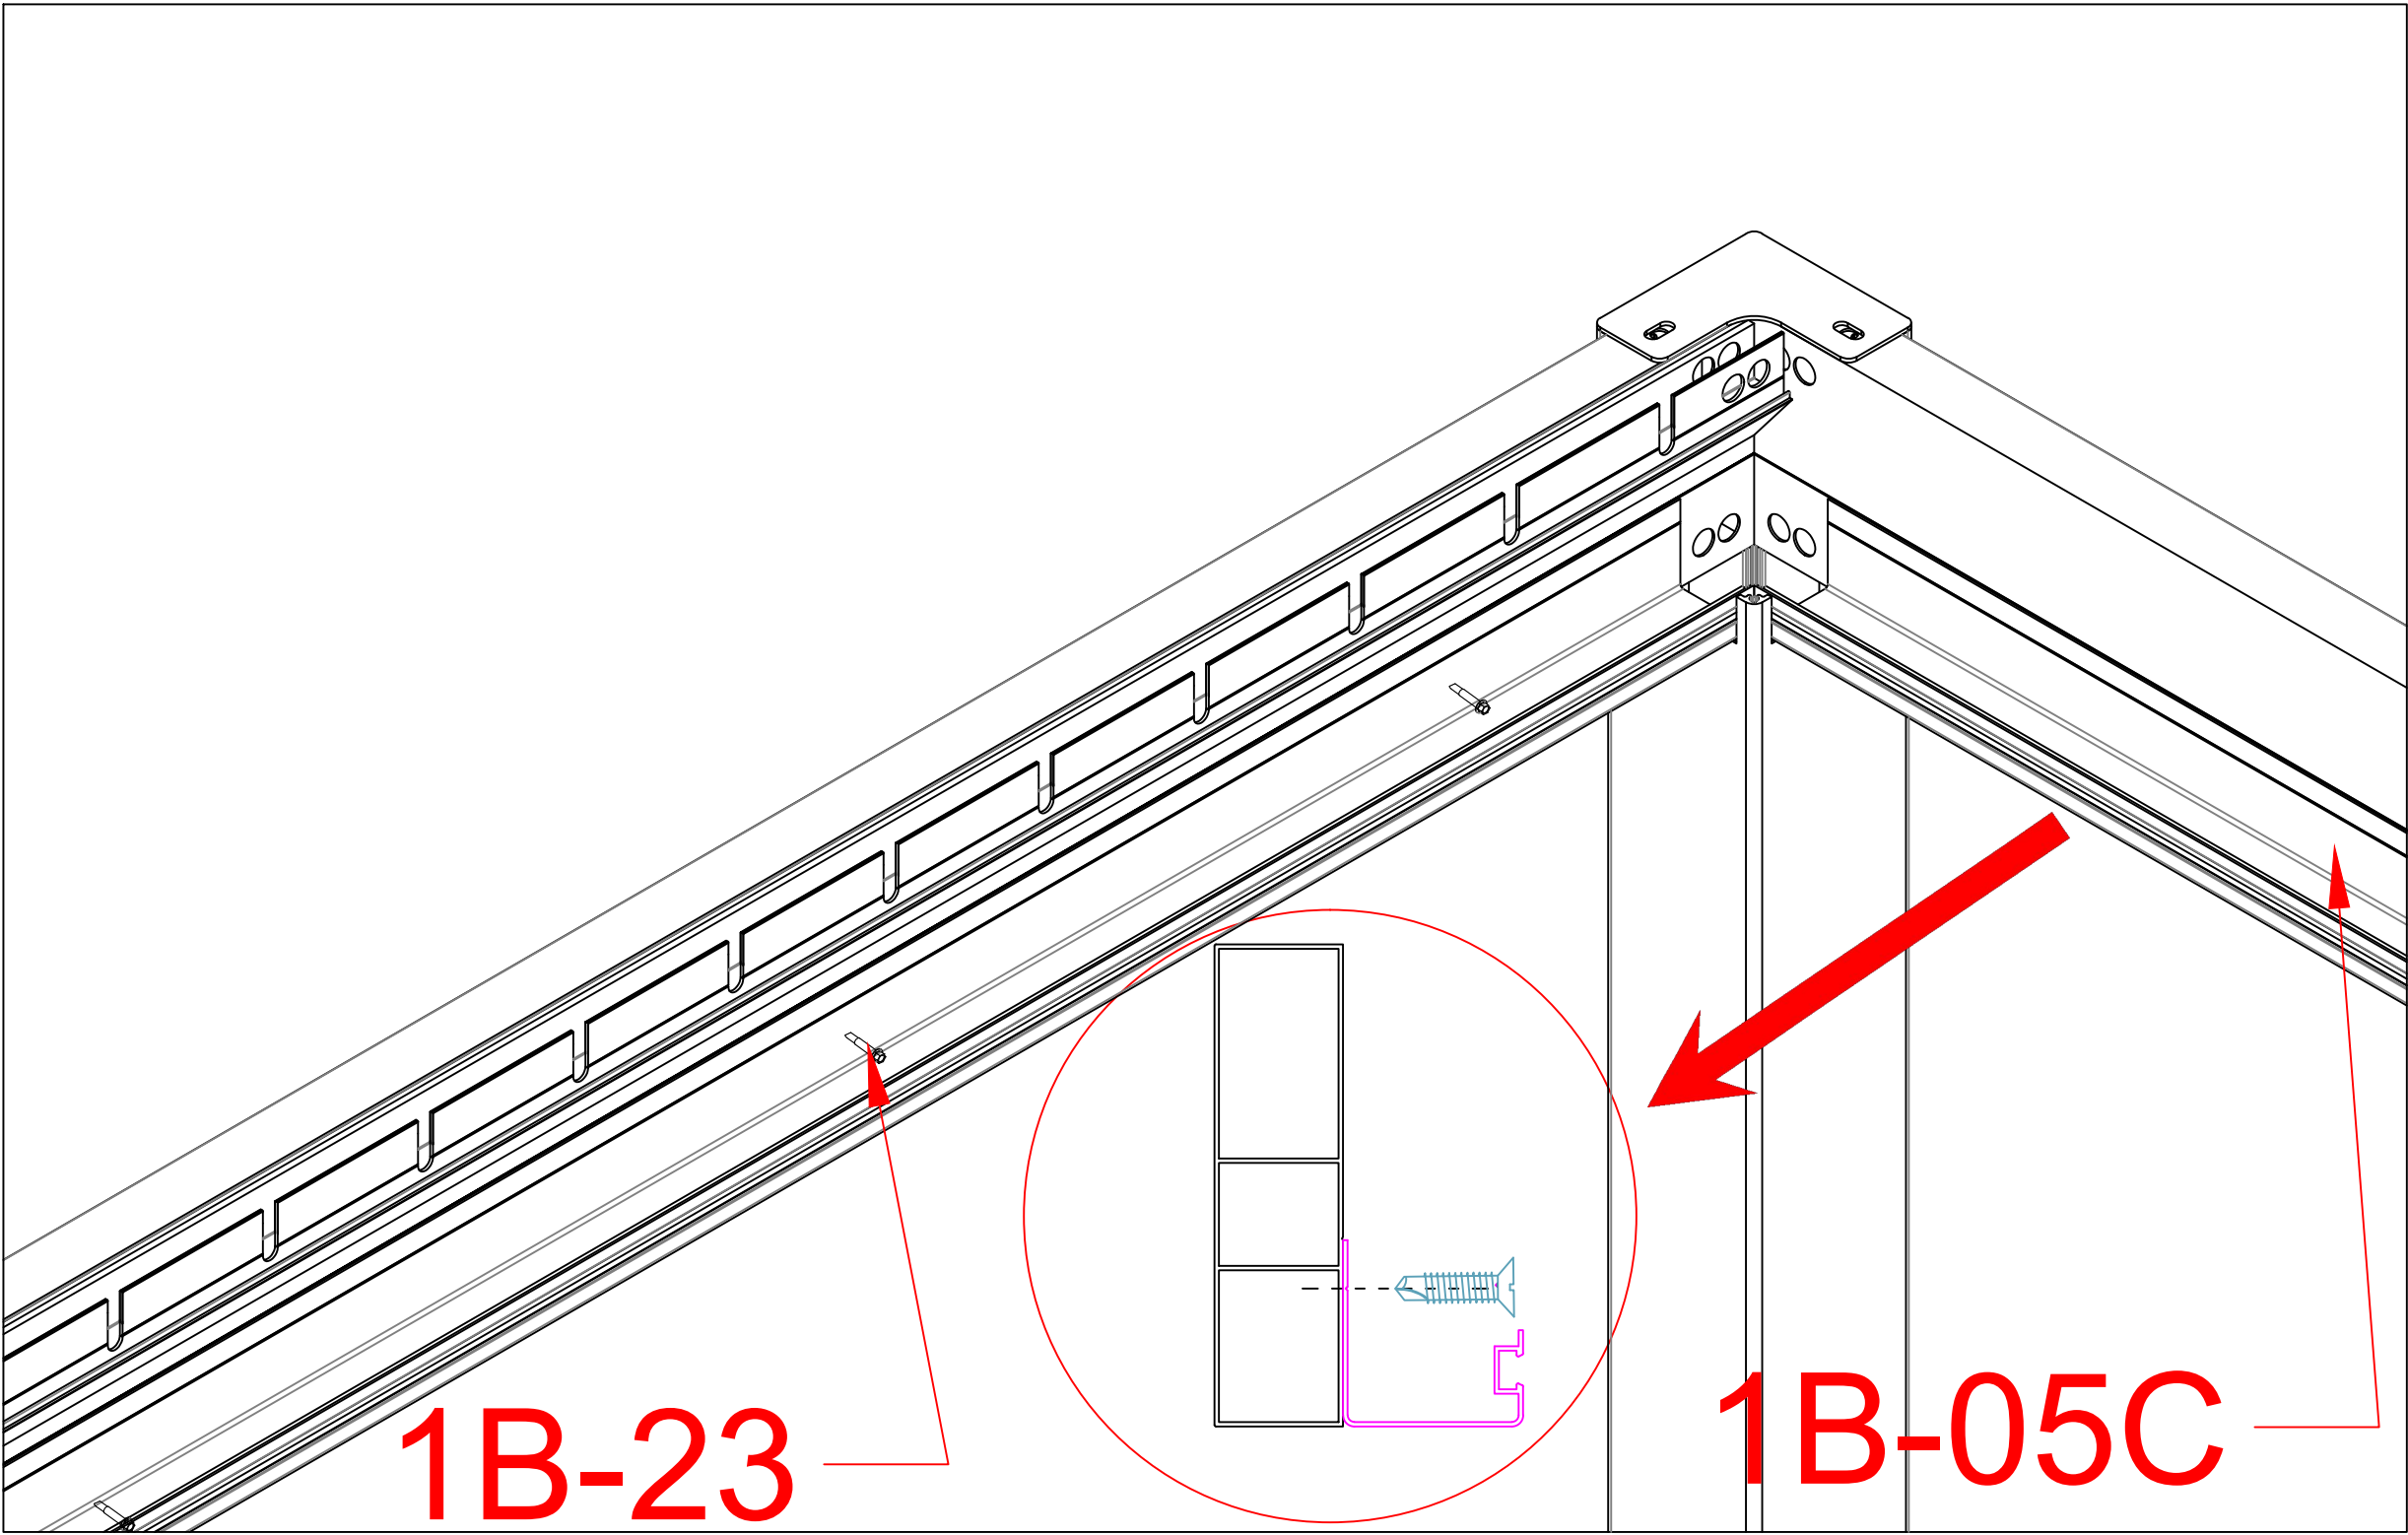


warning:
Before installation, tear off
the double-sided adhesive
protective film

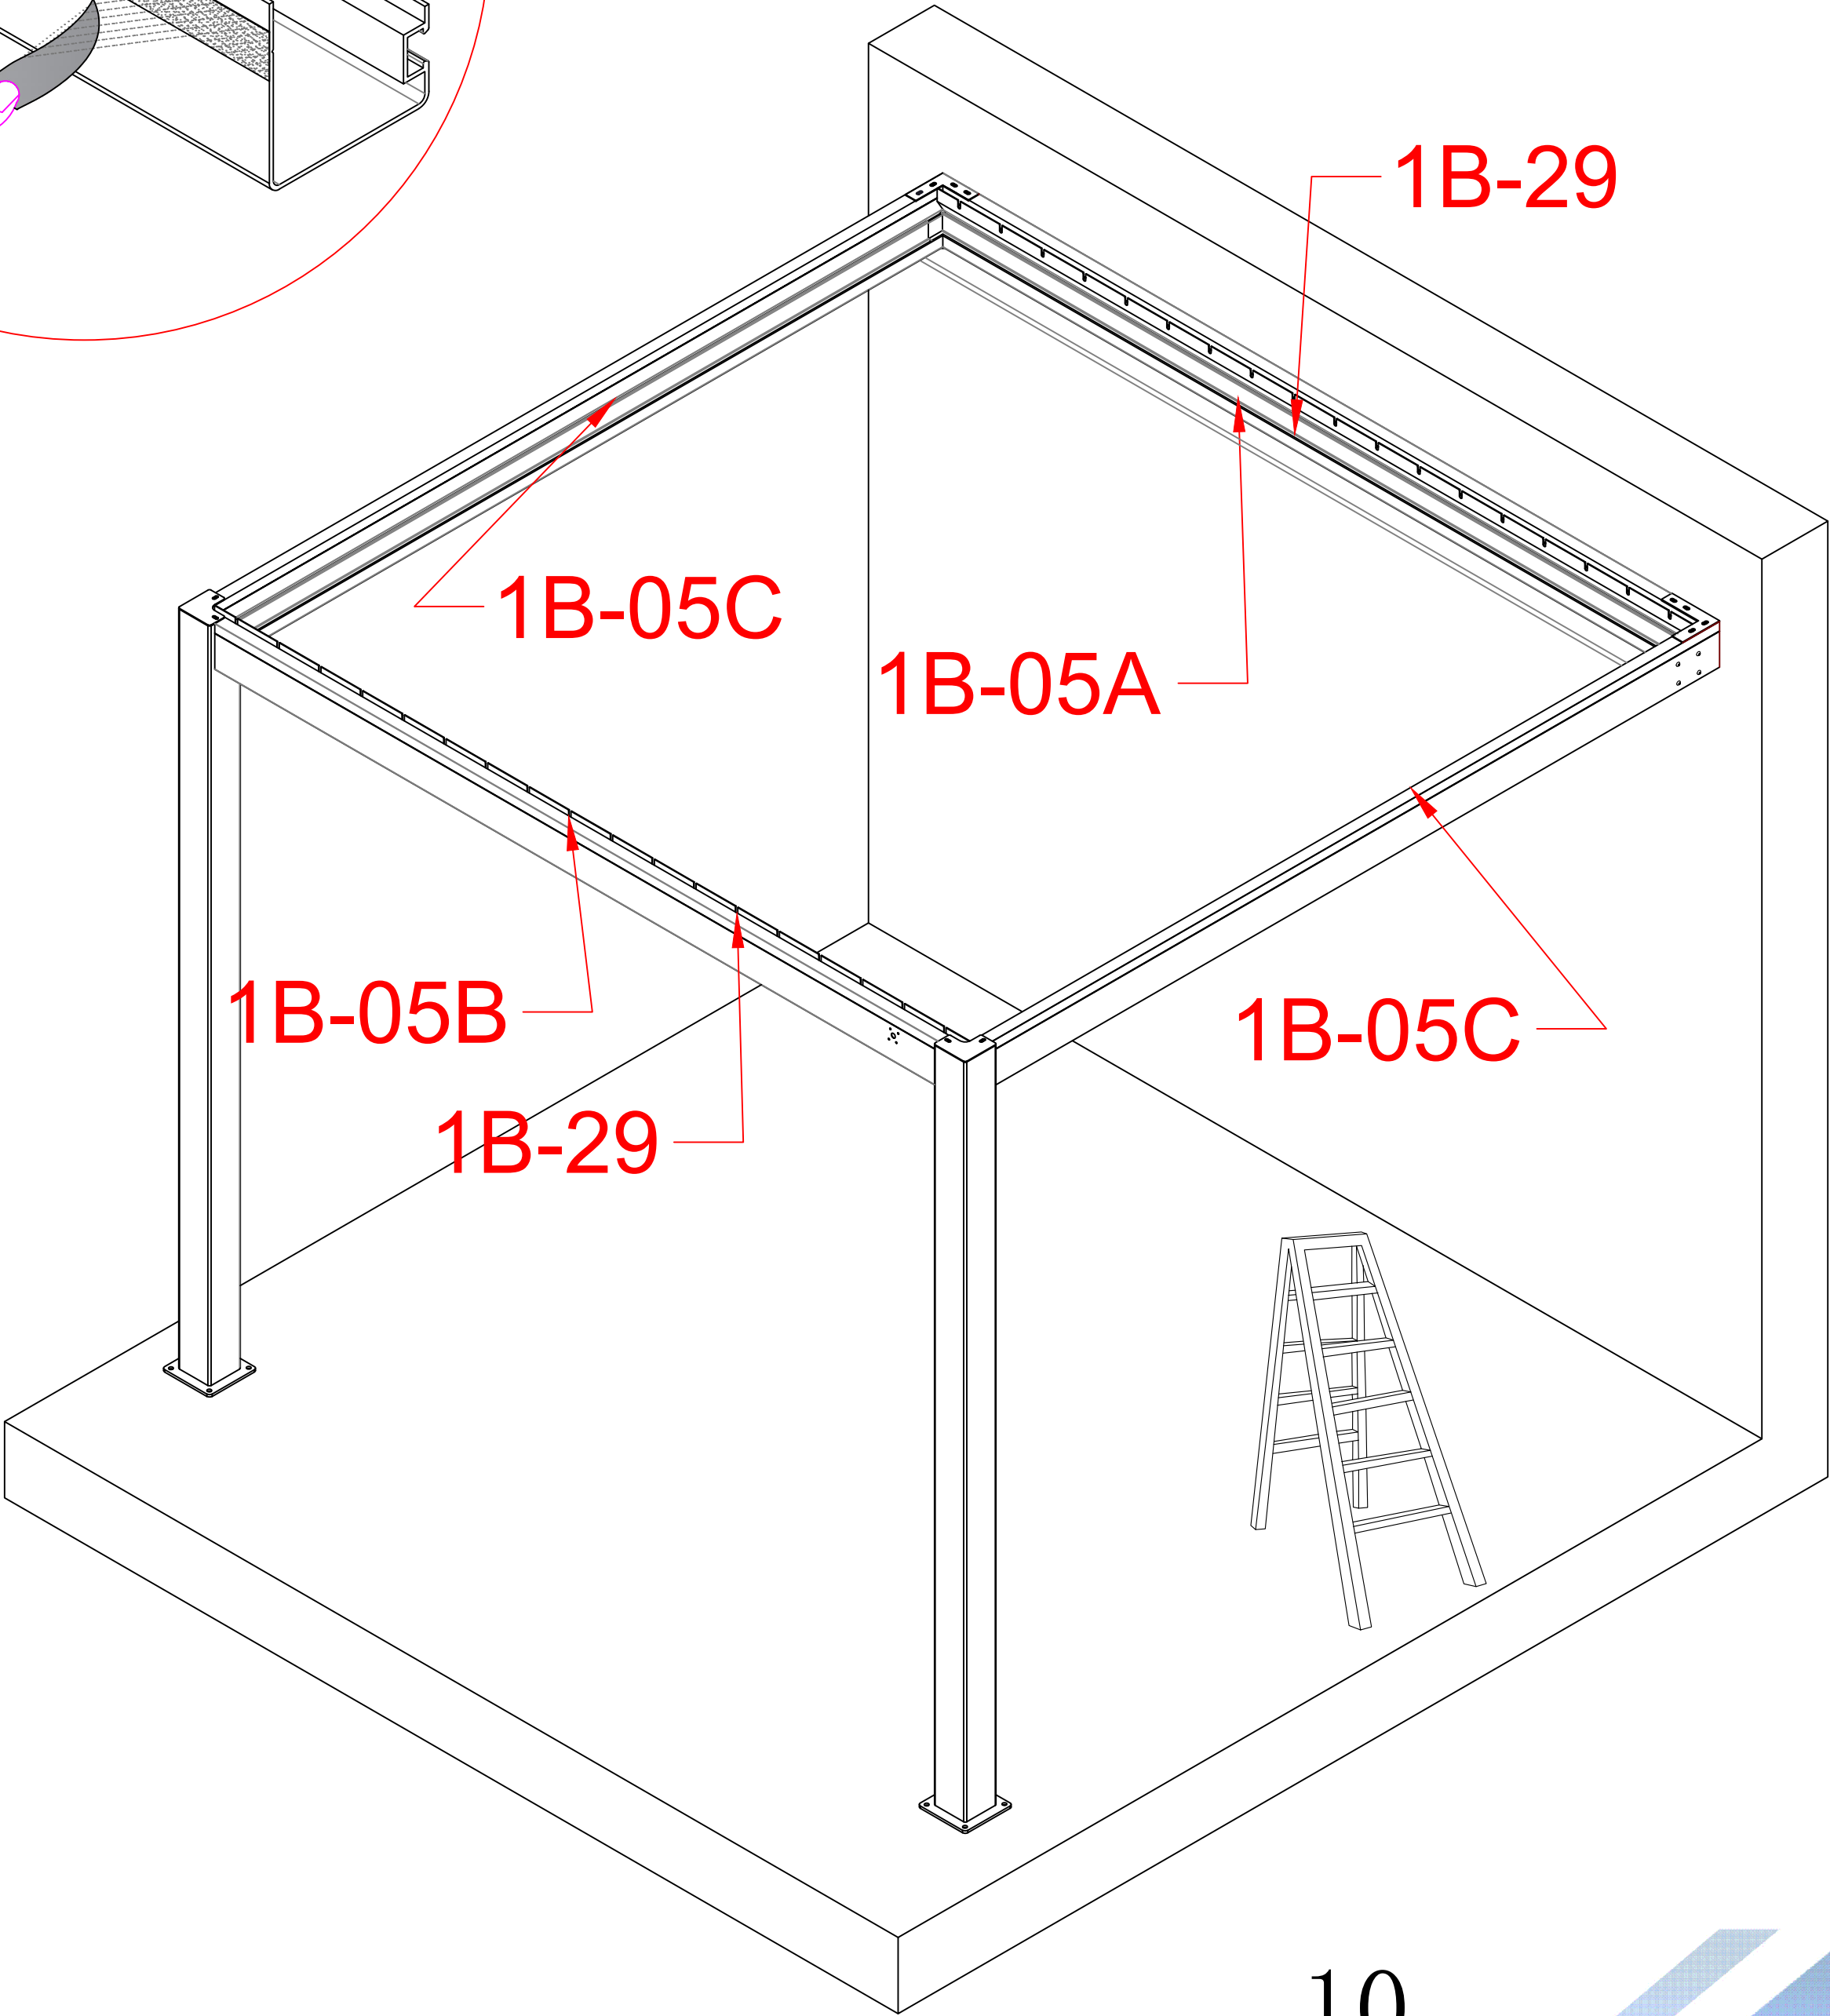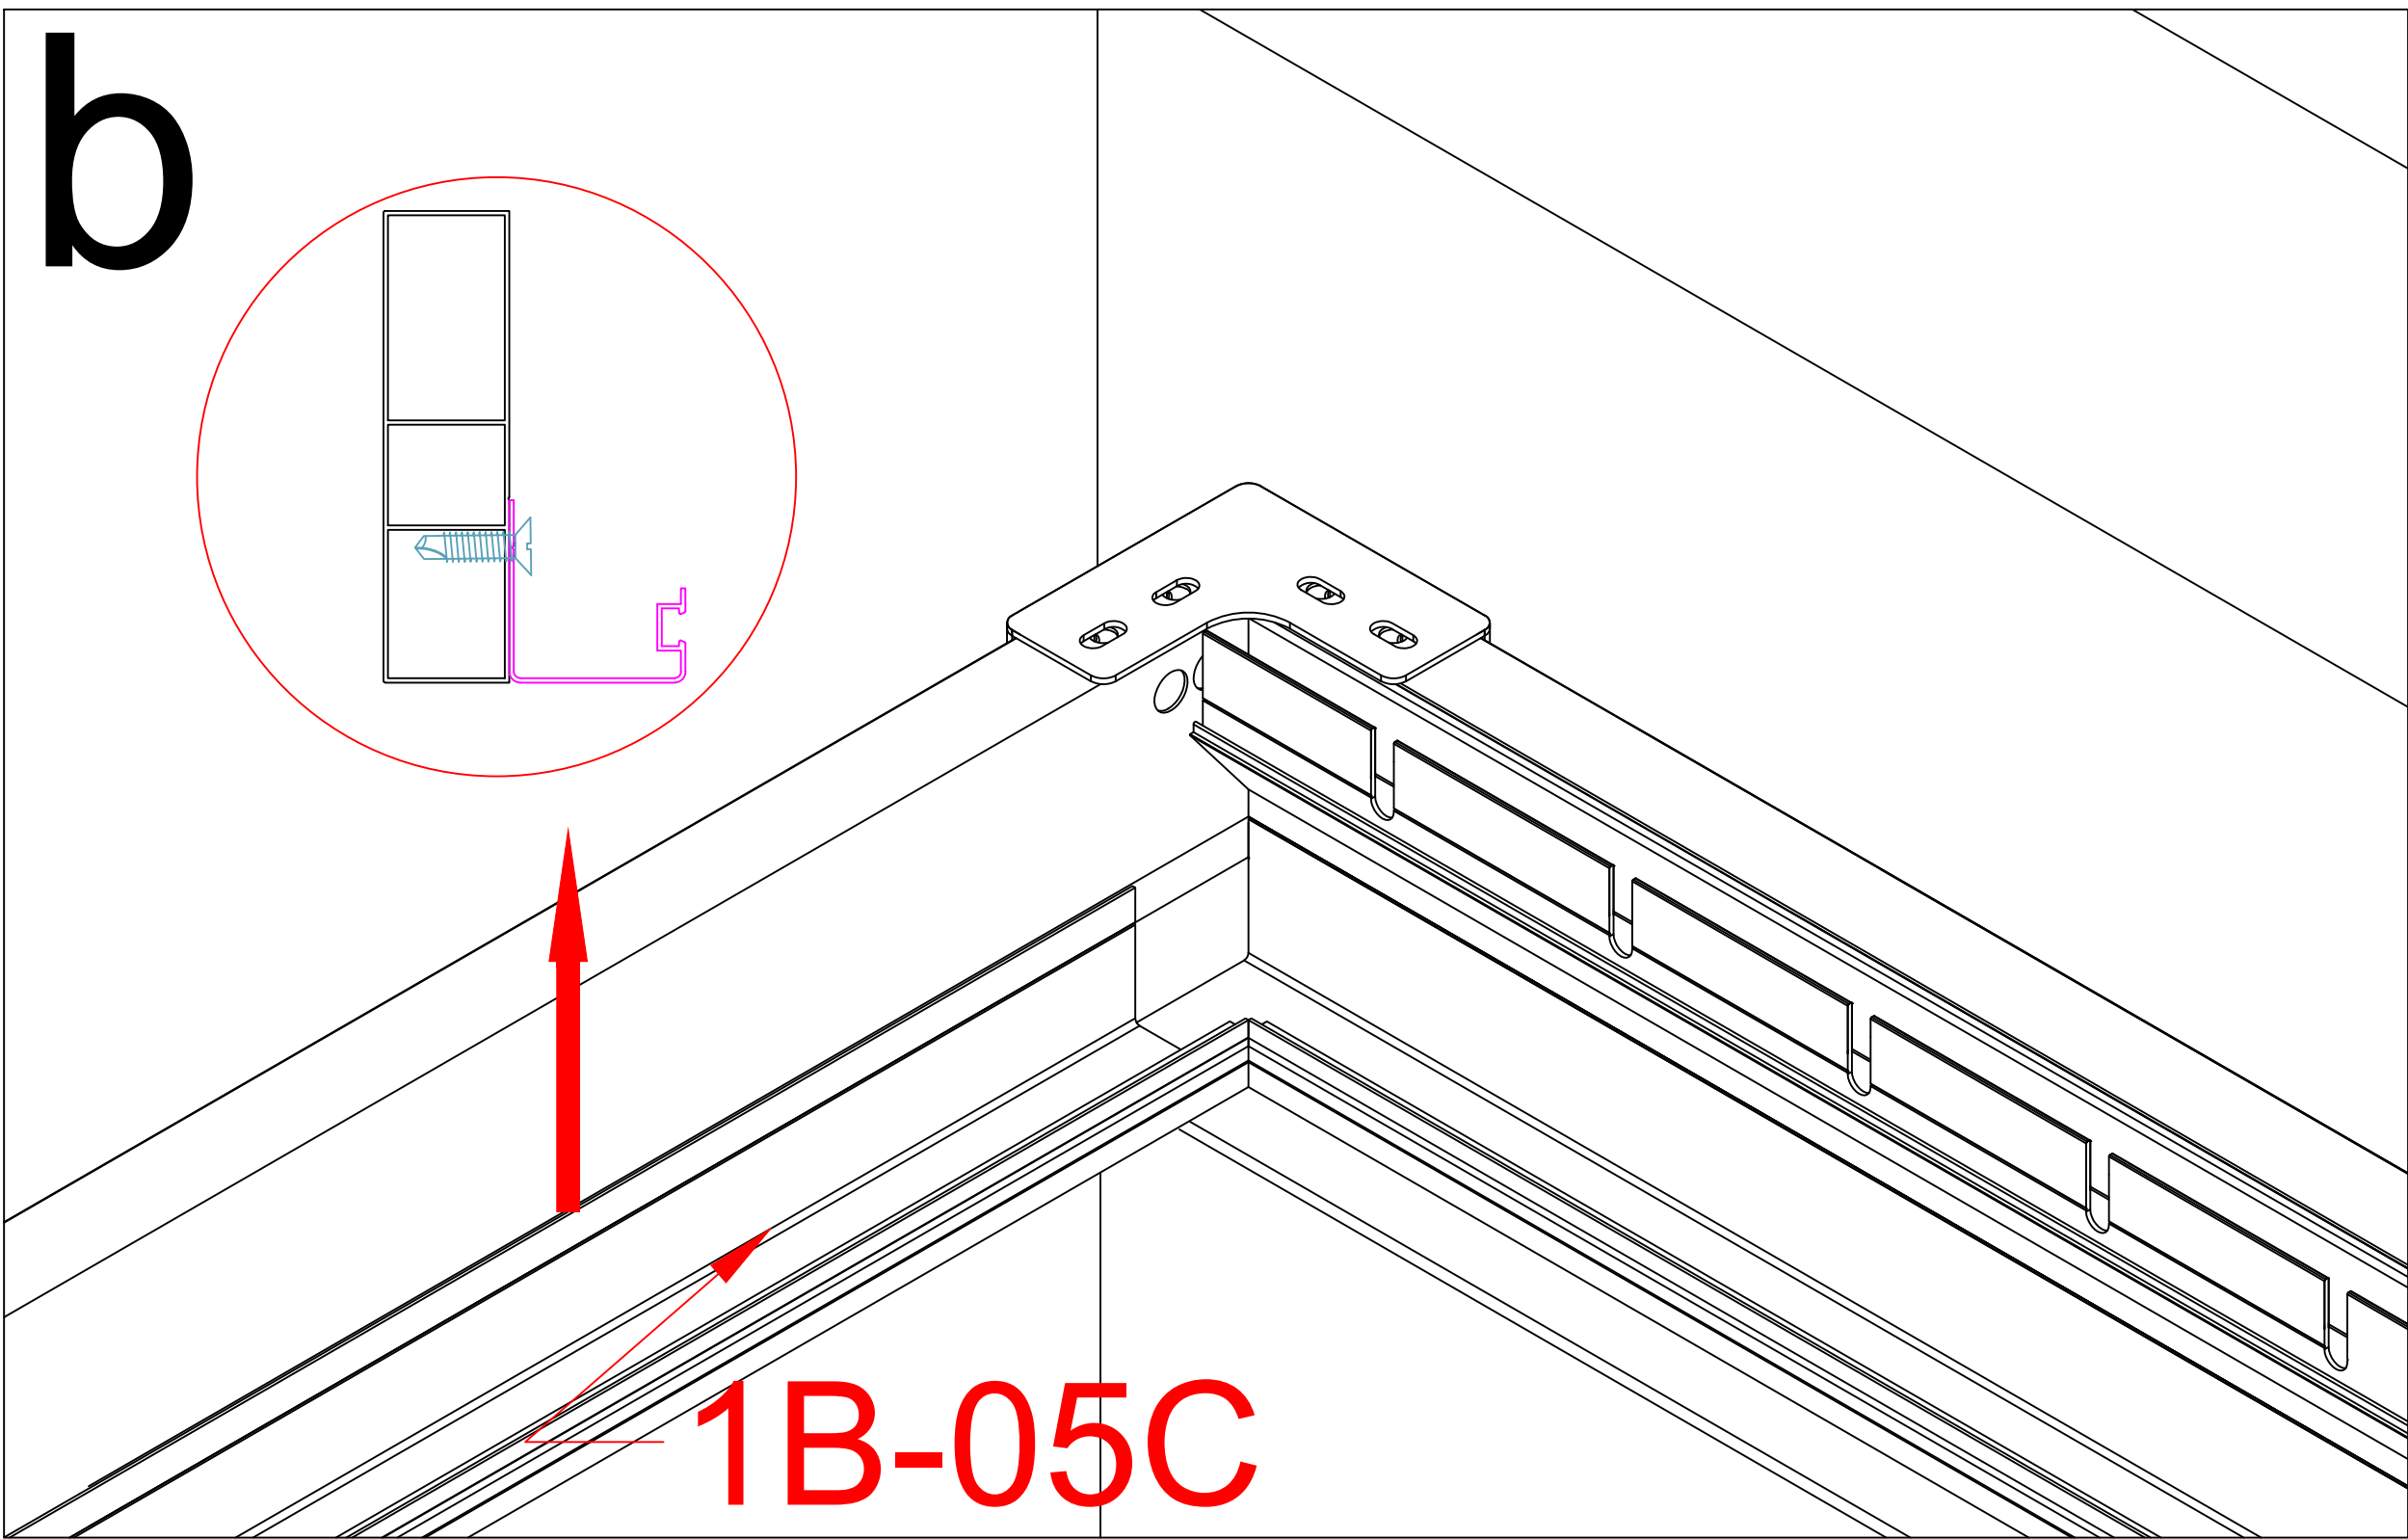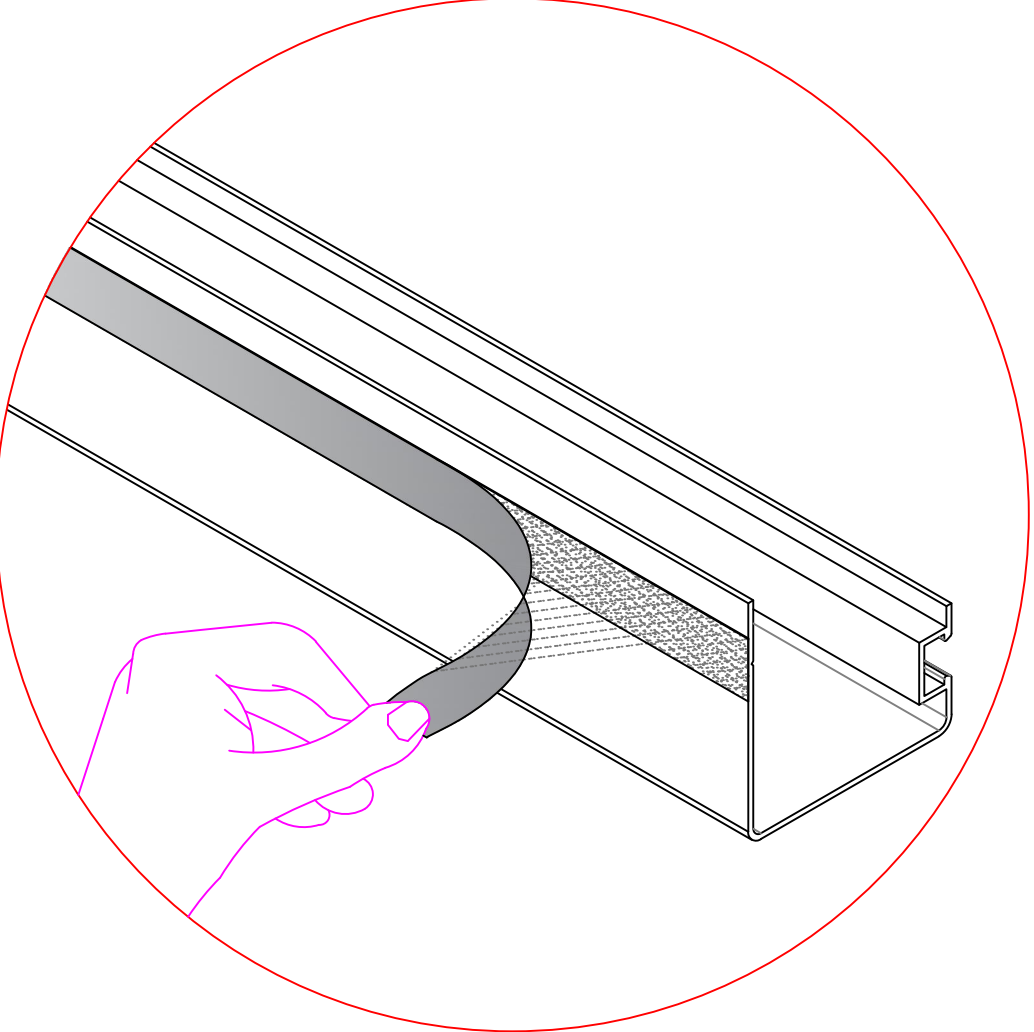


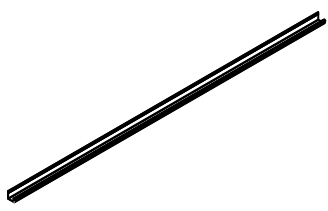

1B-05 C			2
1B-23			8

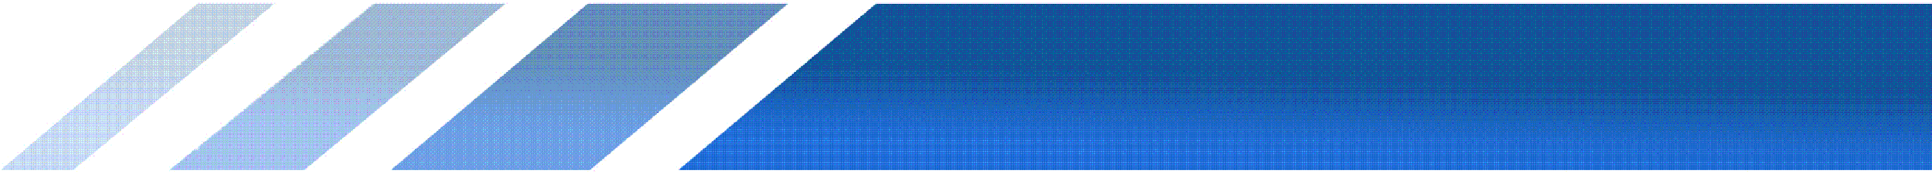

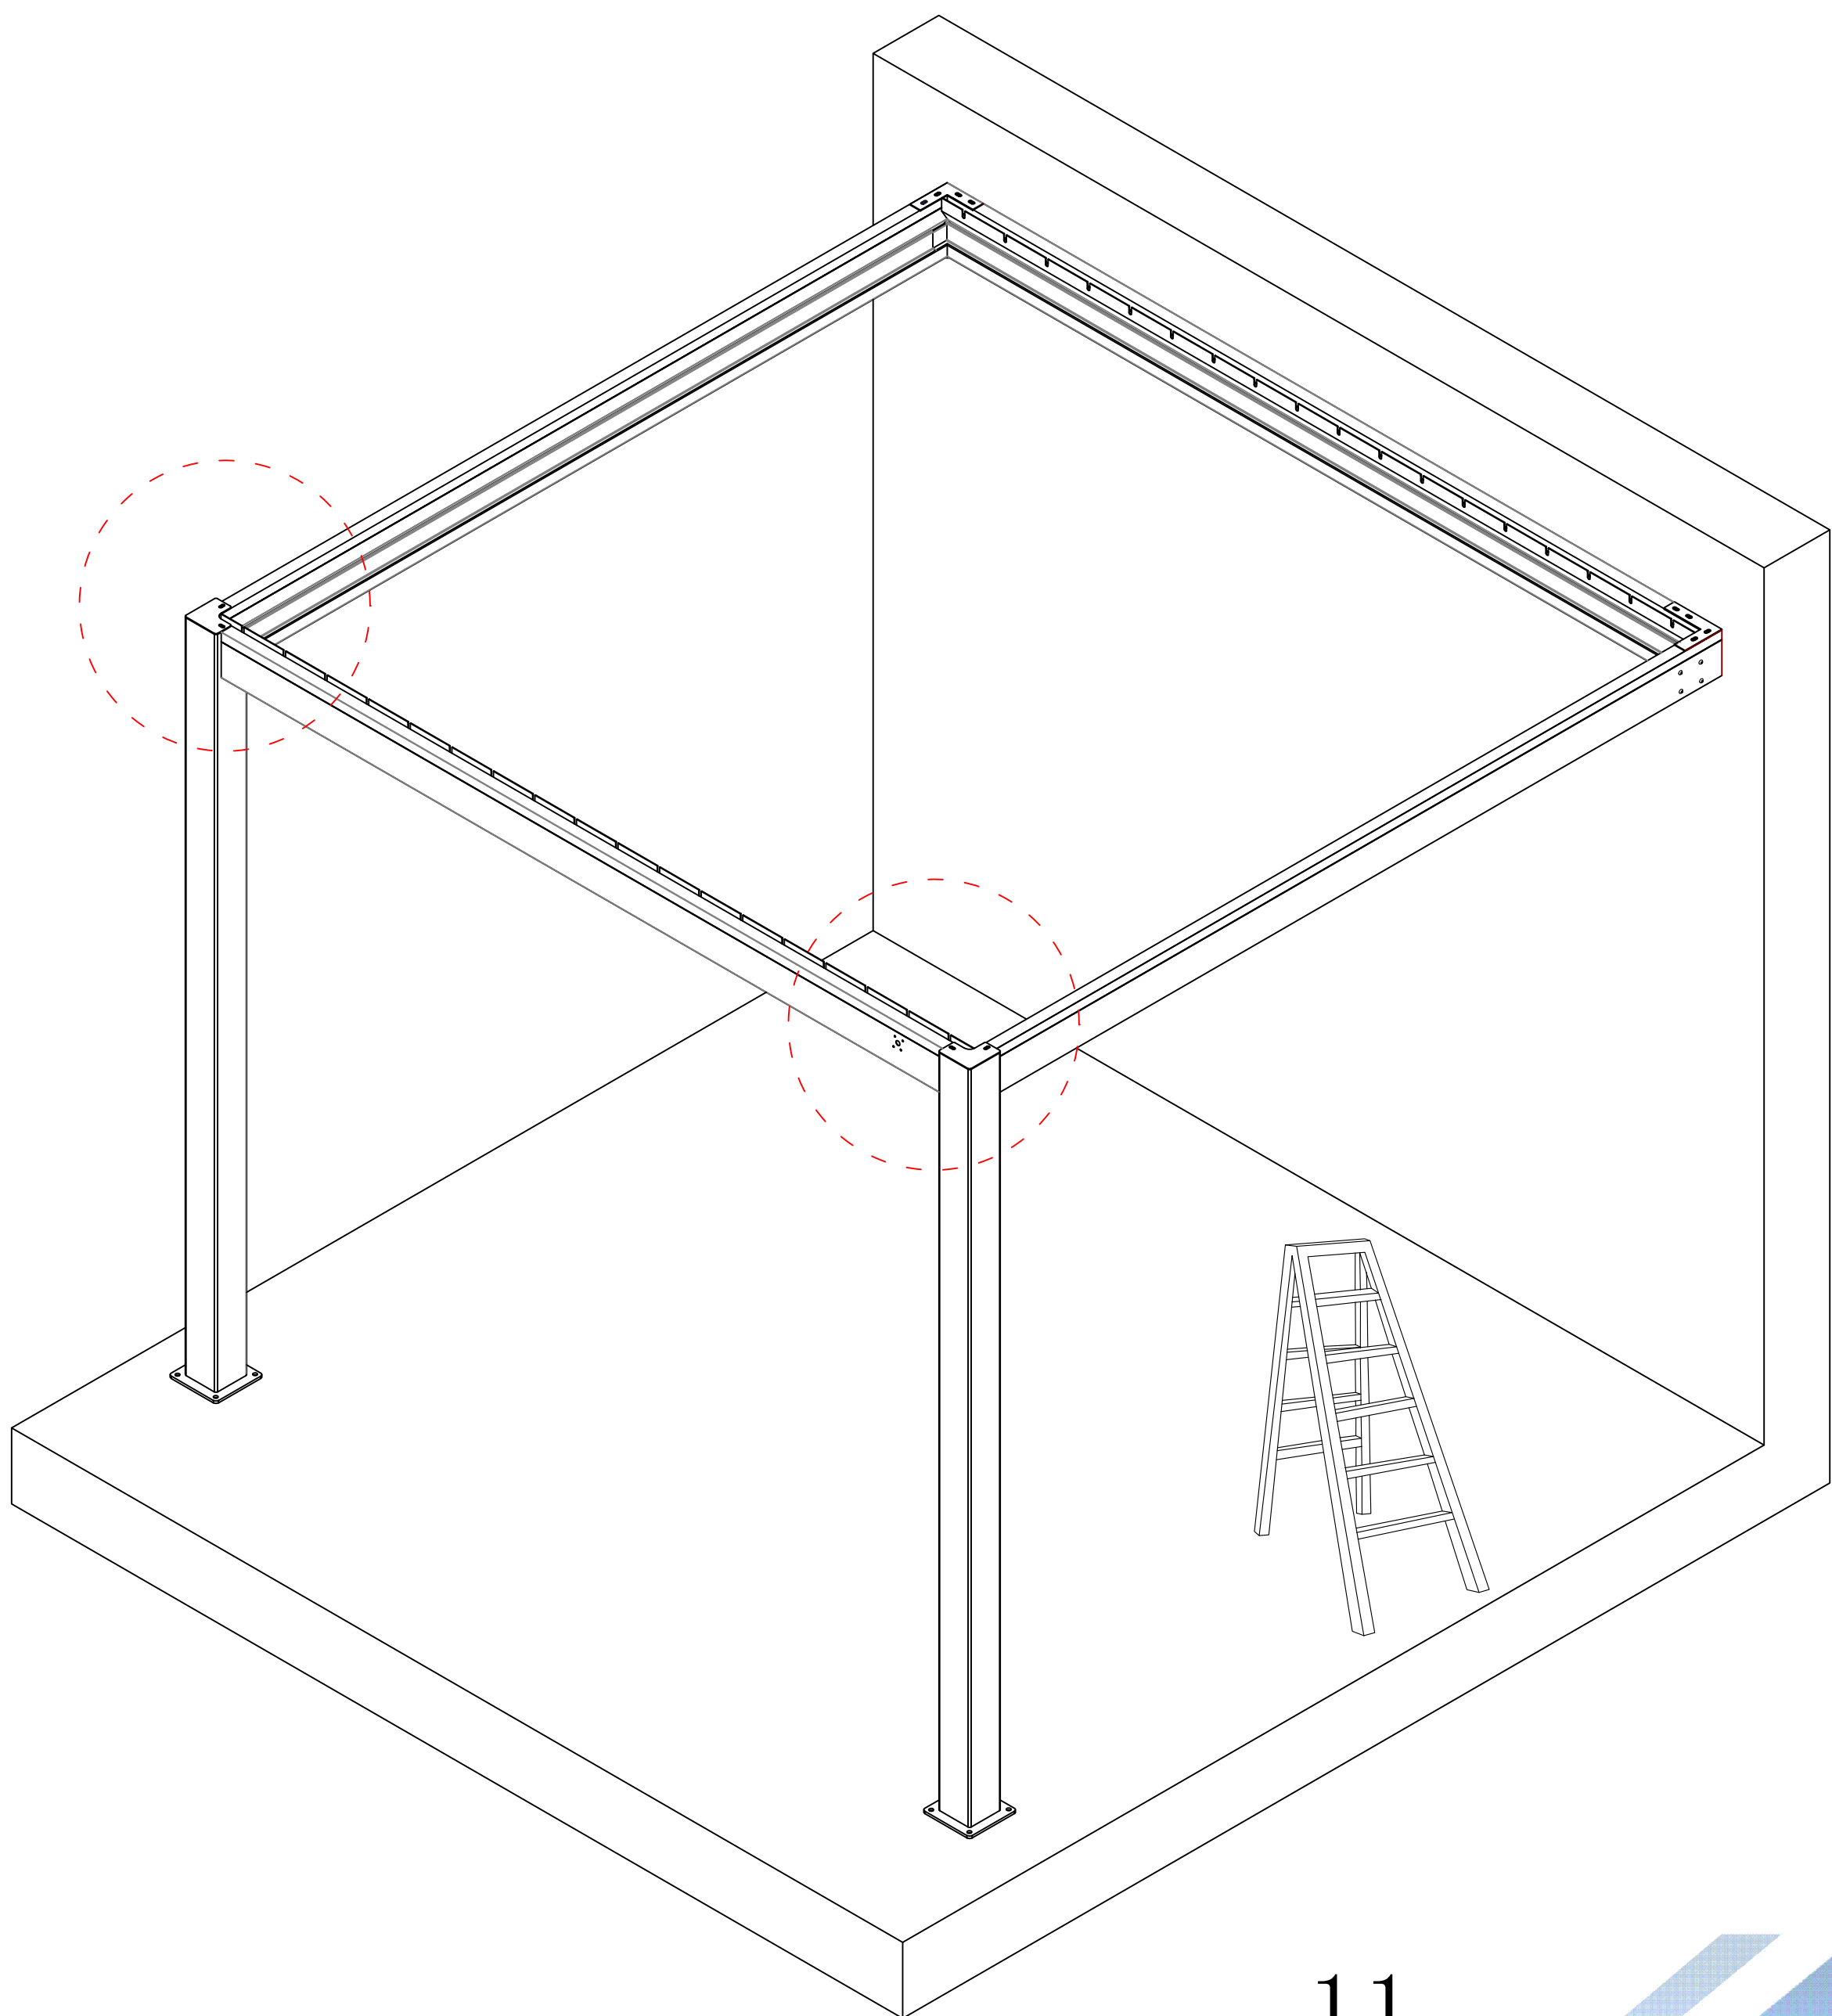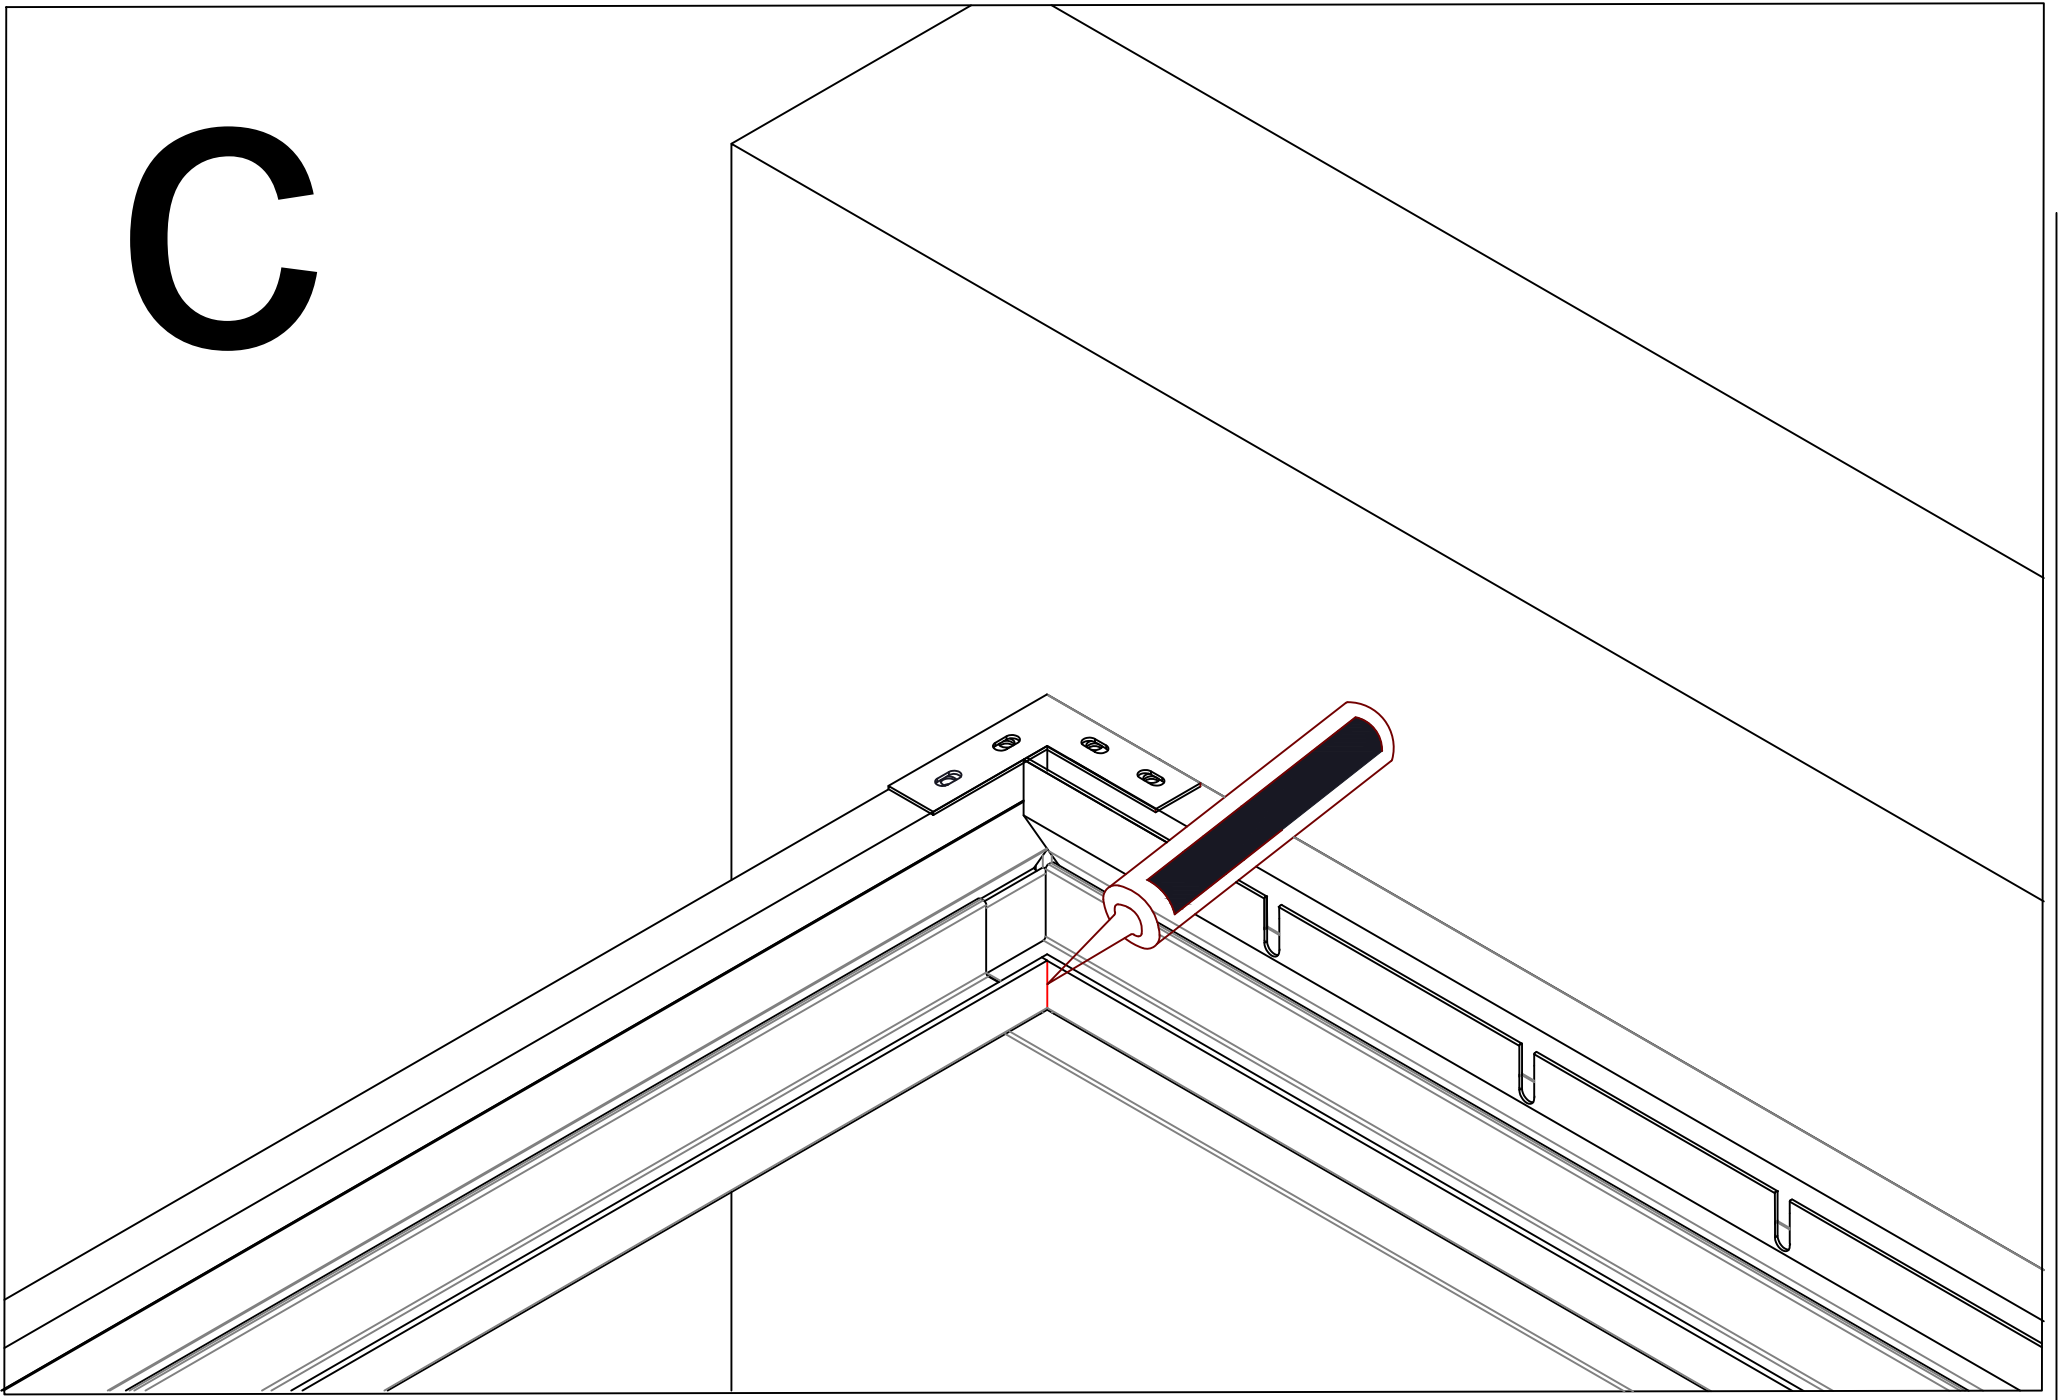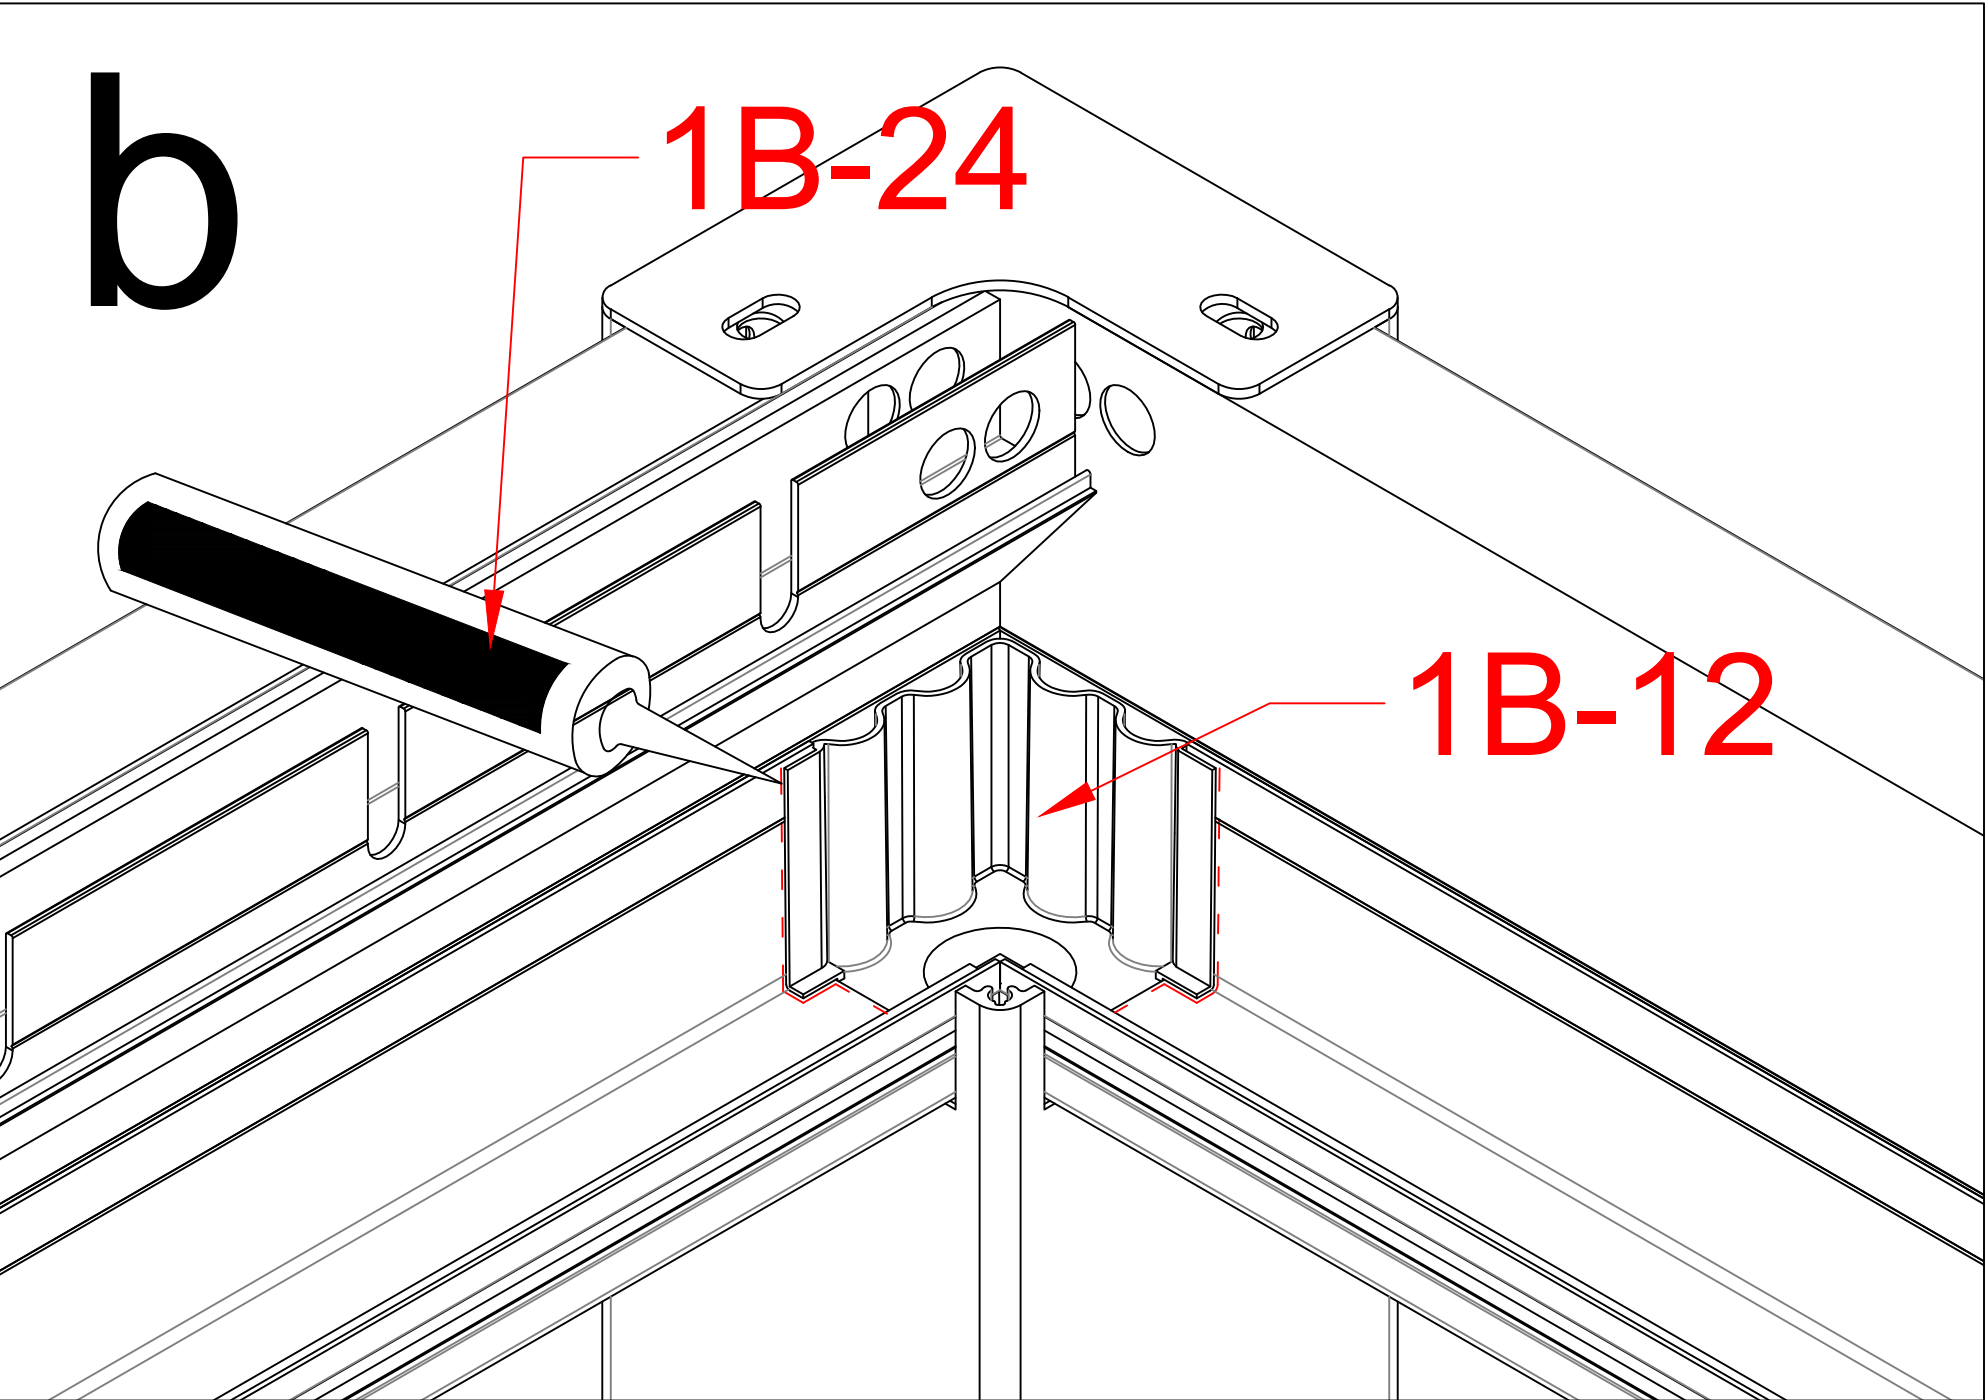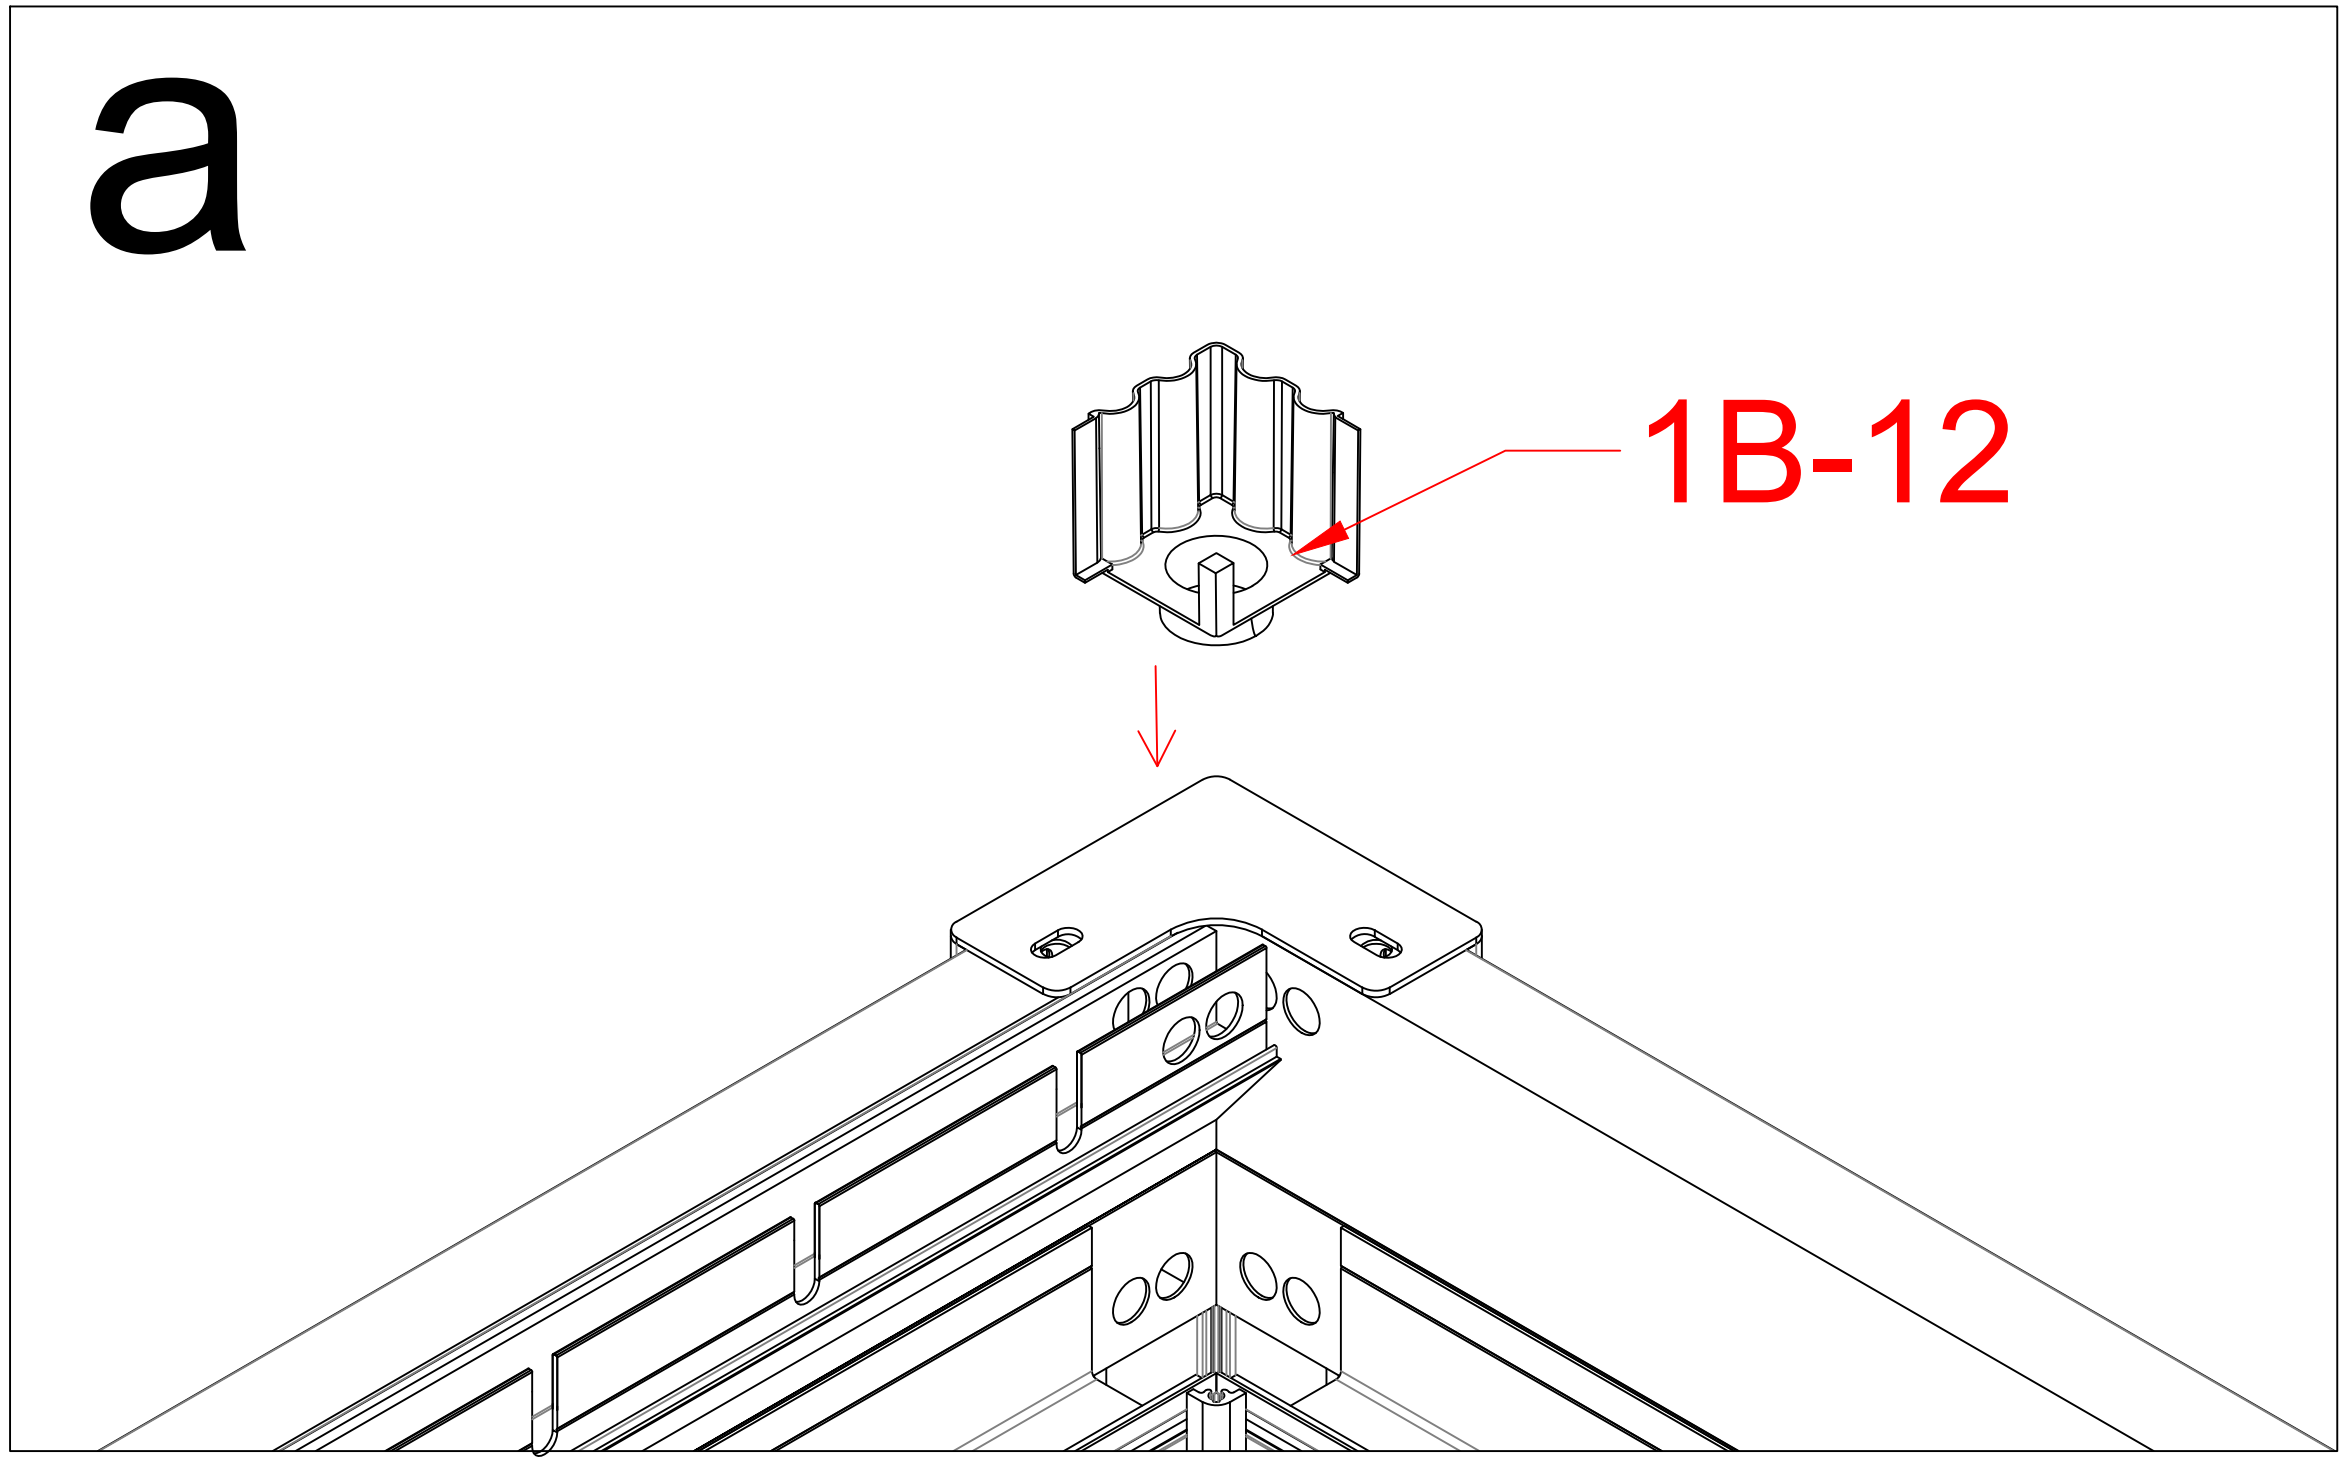





1B-24		1
1B-12		2

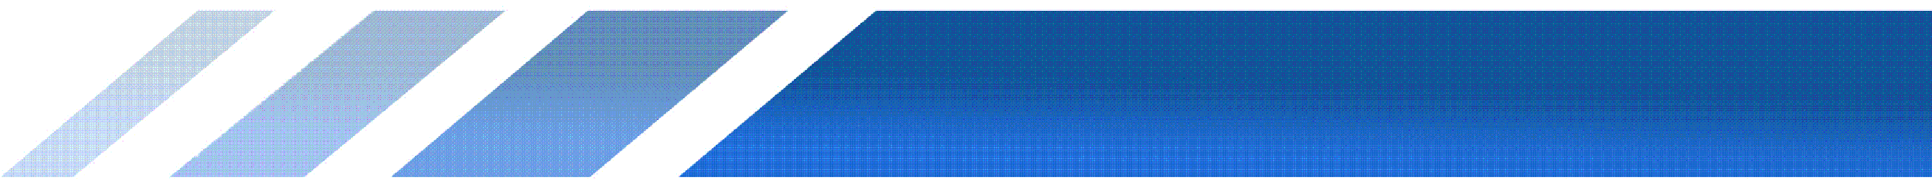





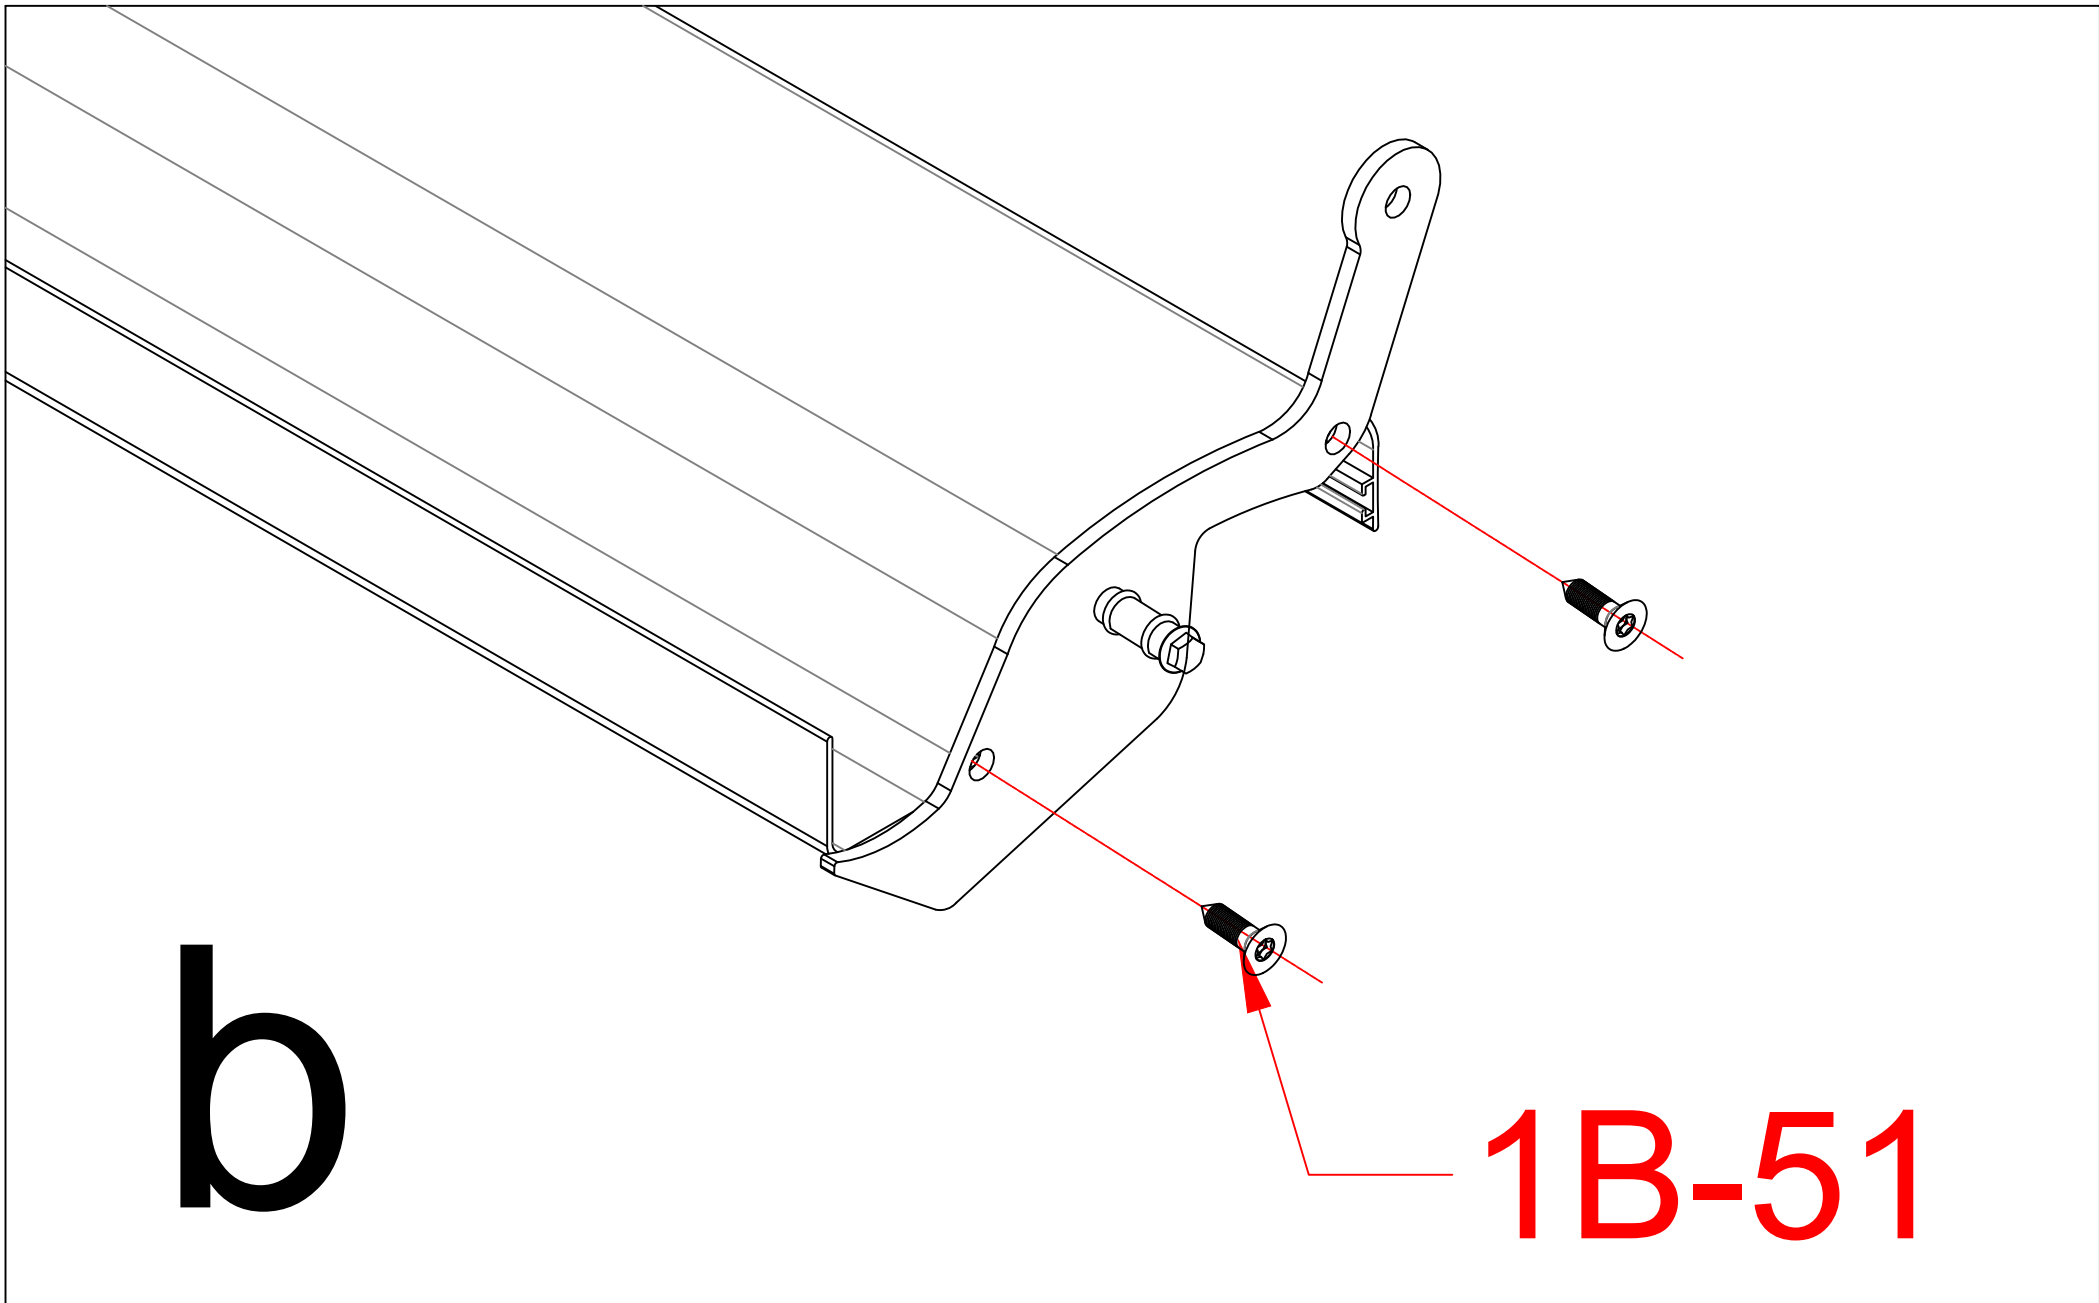
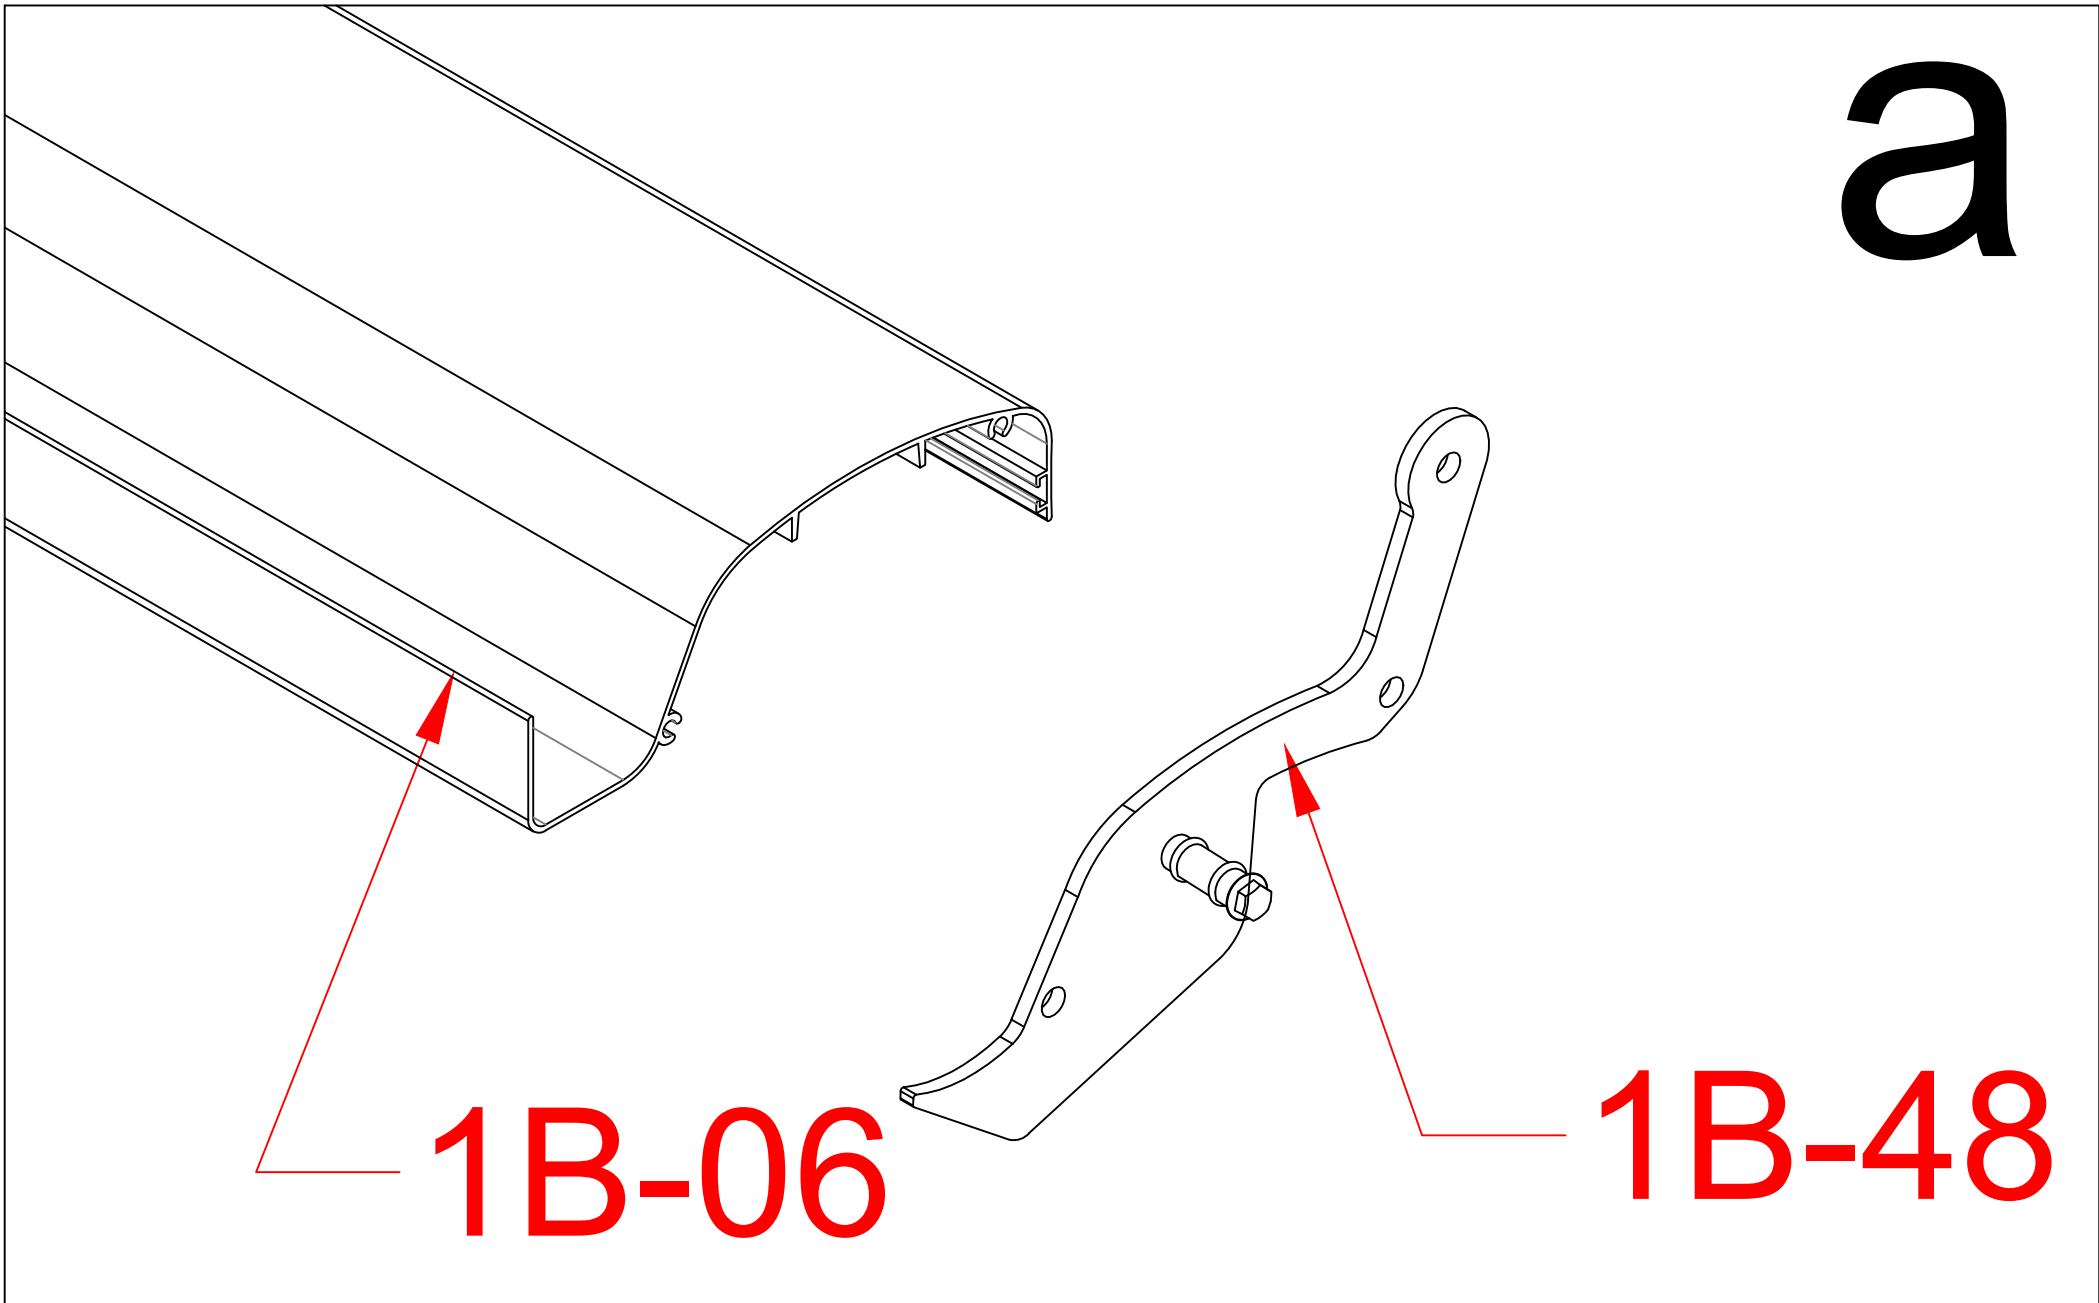





When installing the end cap for louvers, pls don't use the highest gear shift.

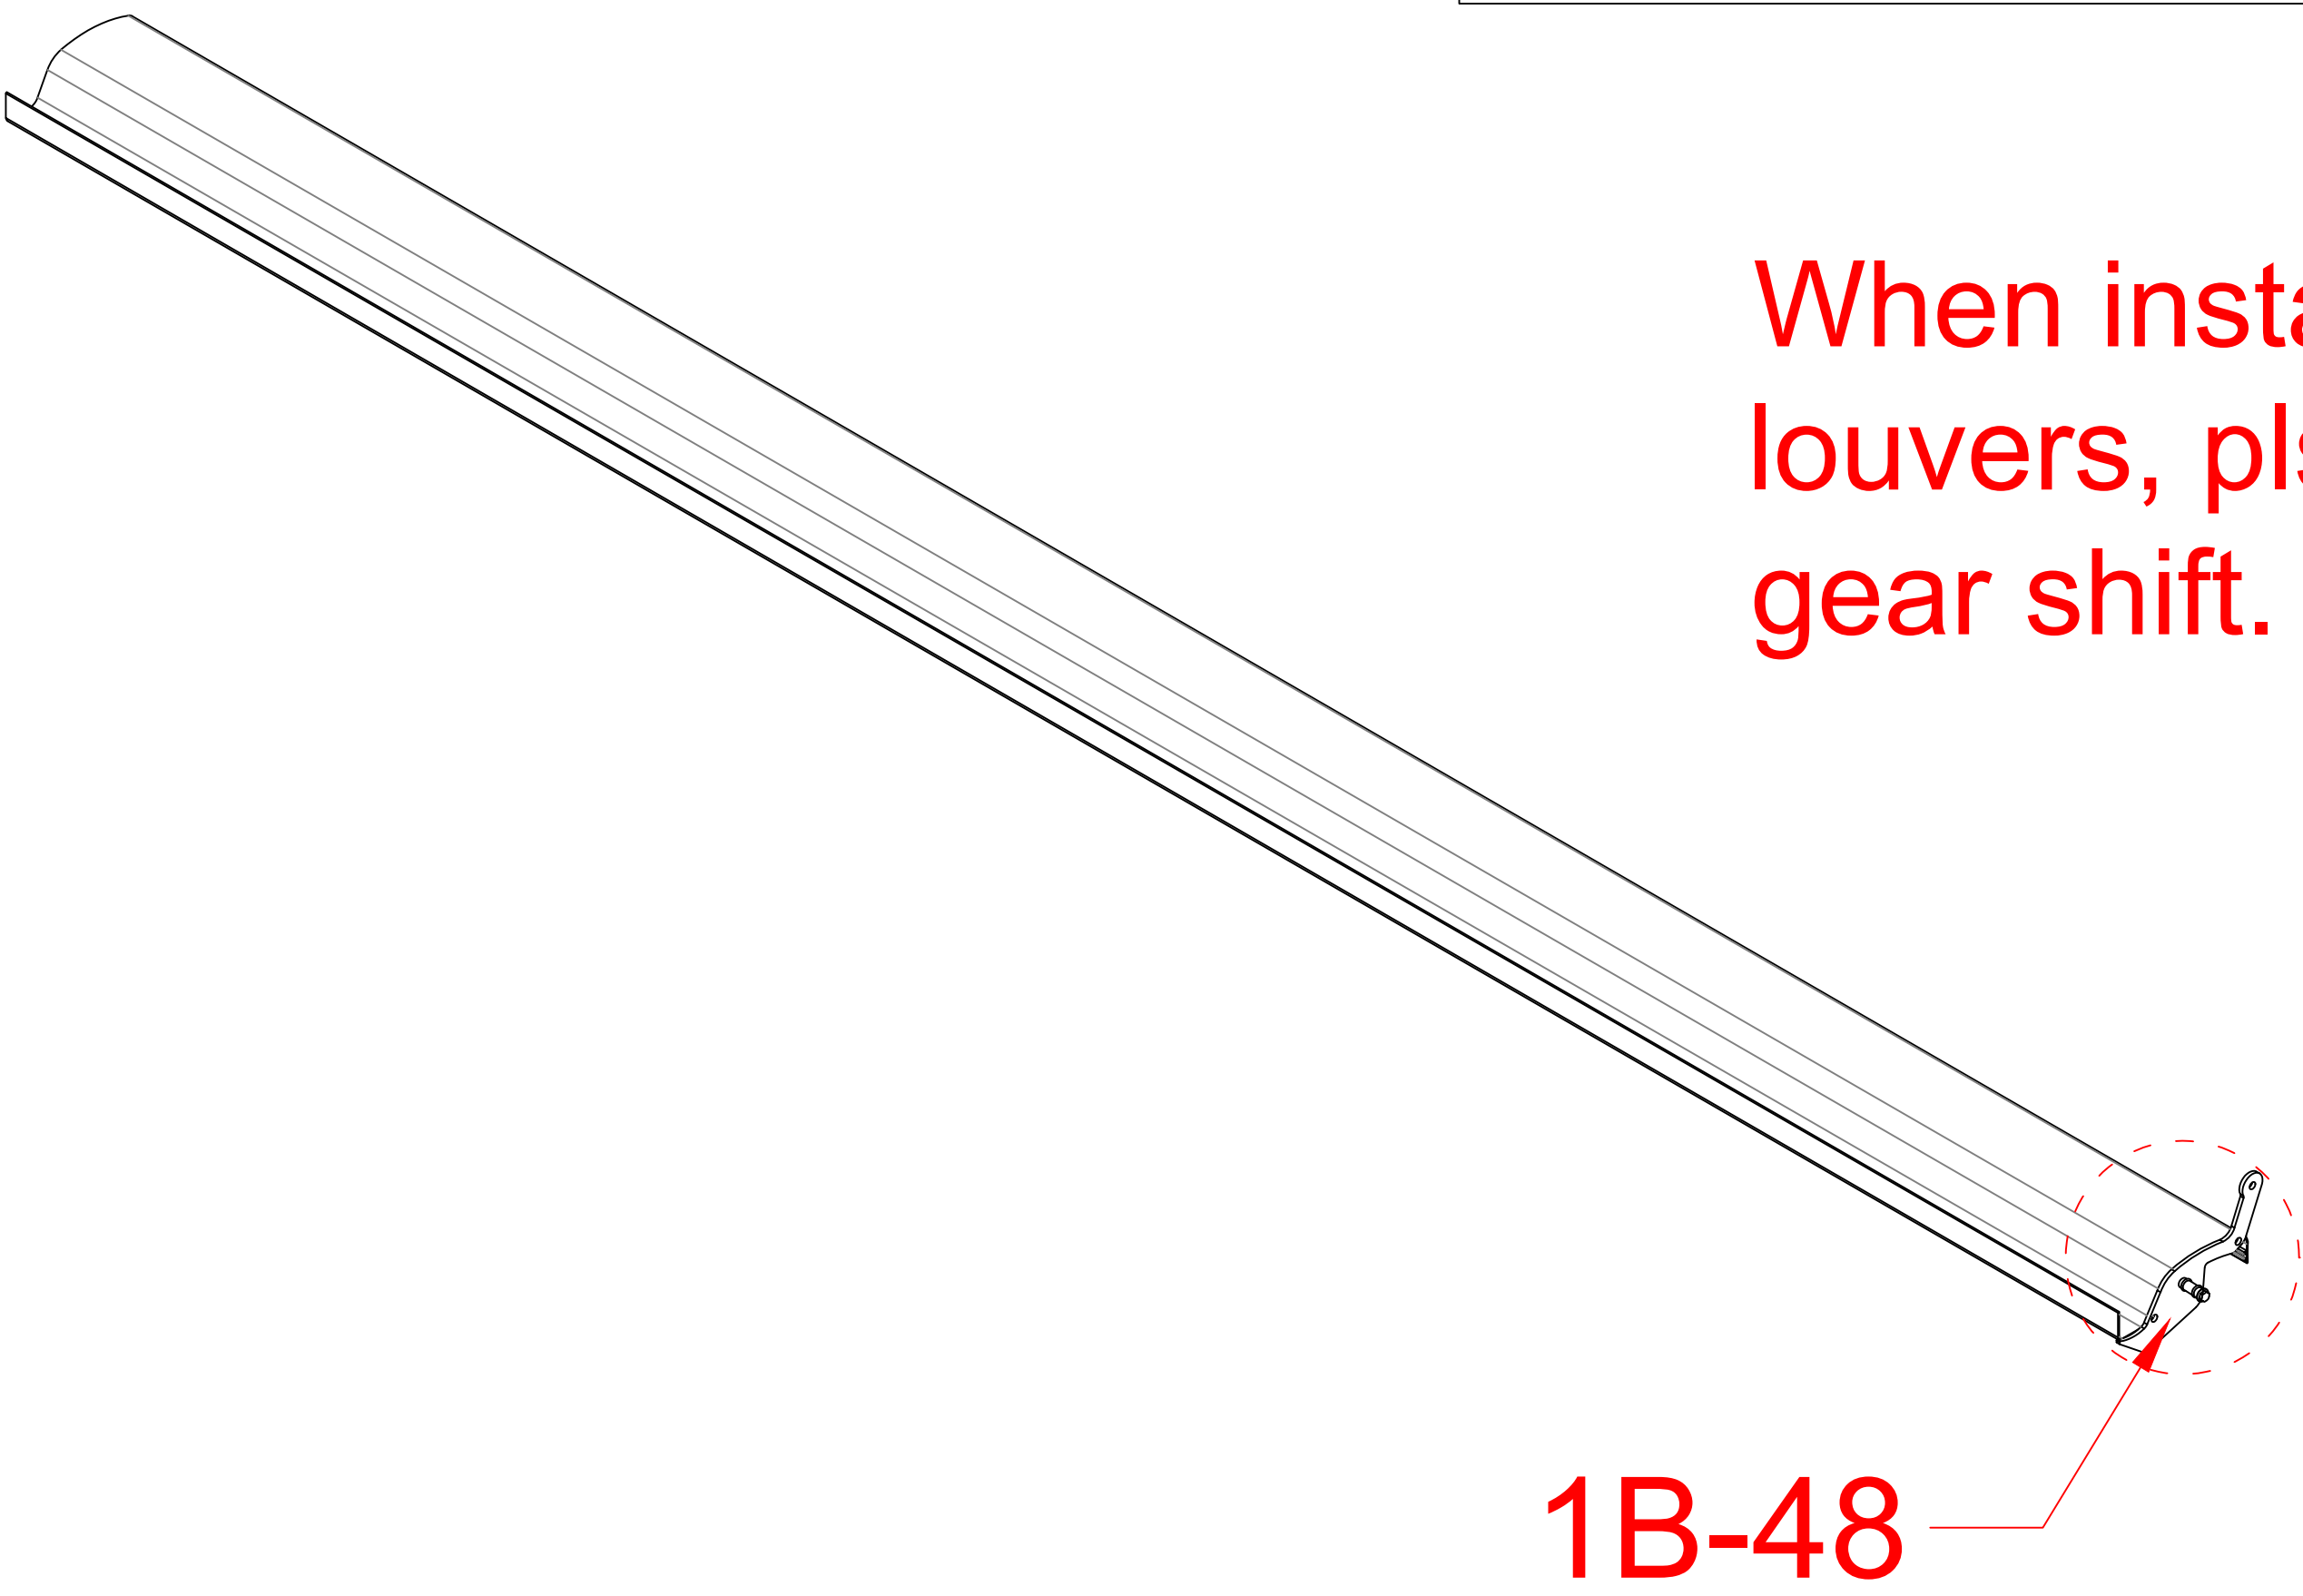





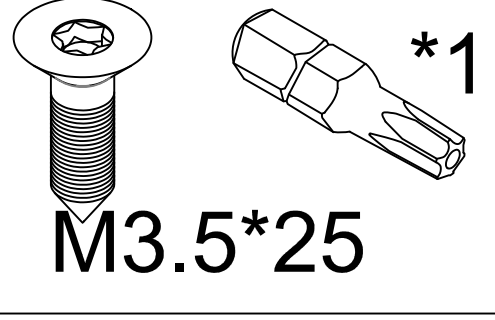
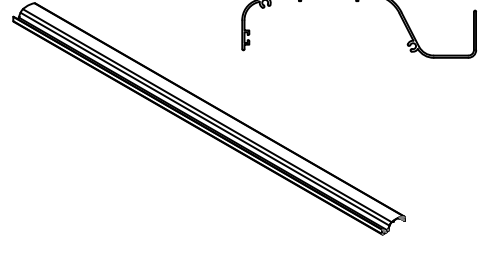
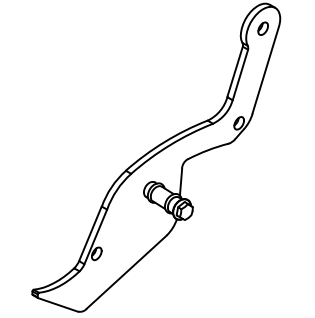
1B-51	 M3.5*25 *1	x
1B-06		x
1B-48		x

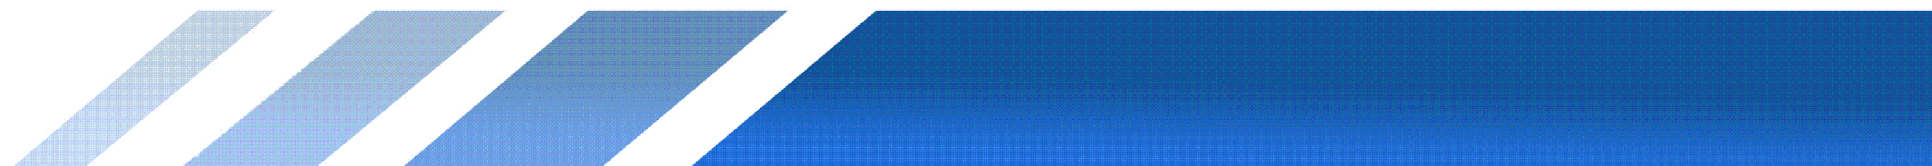

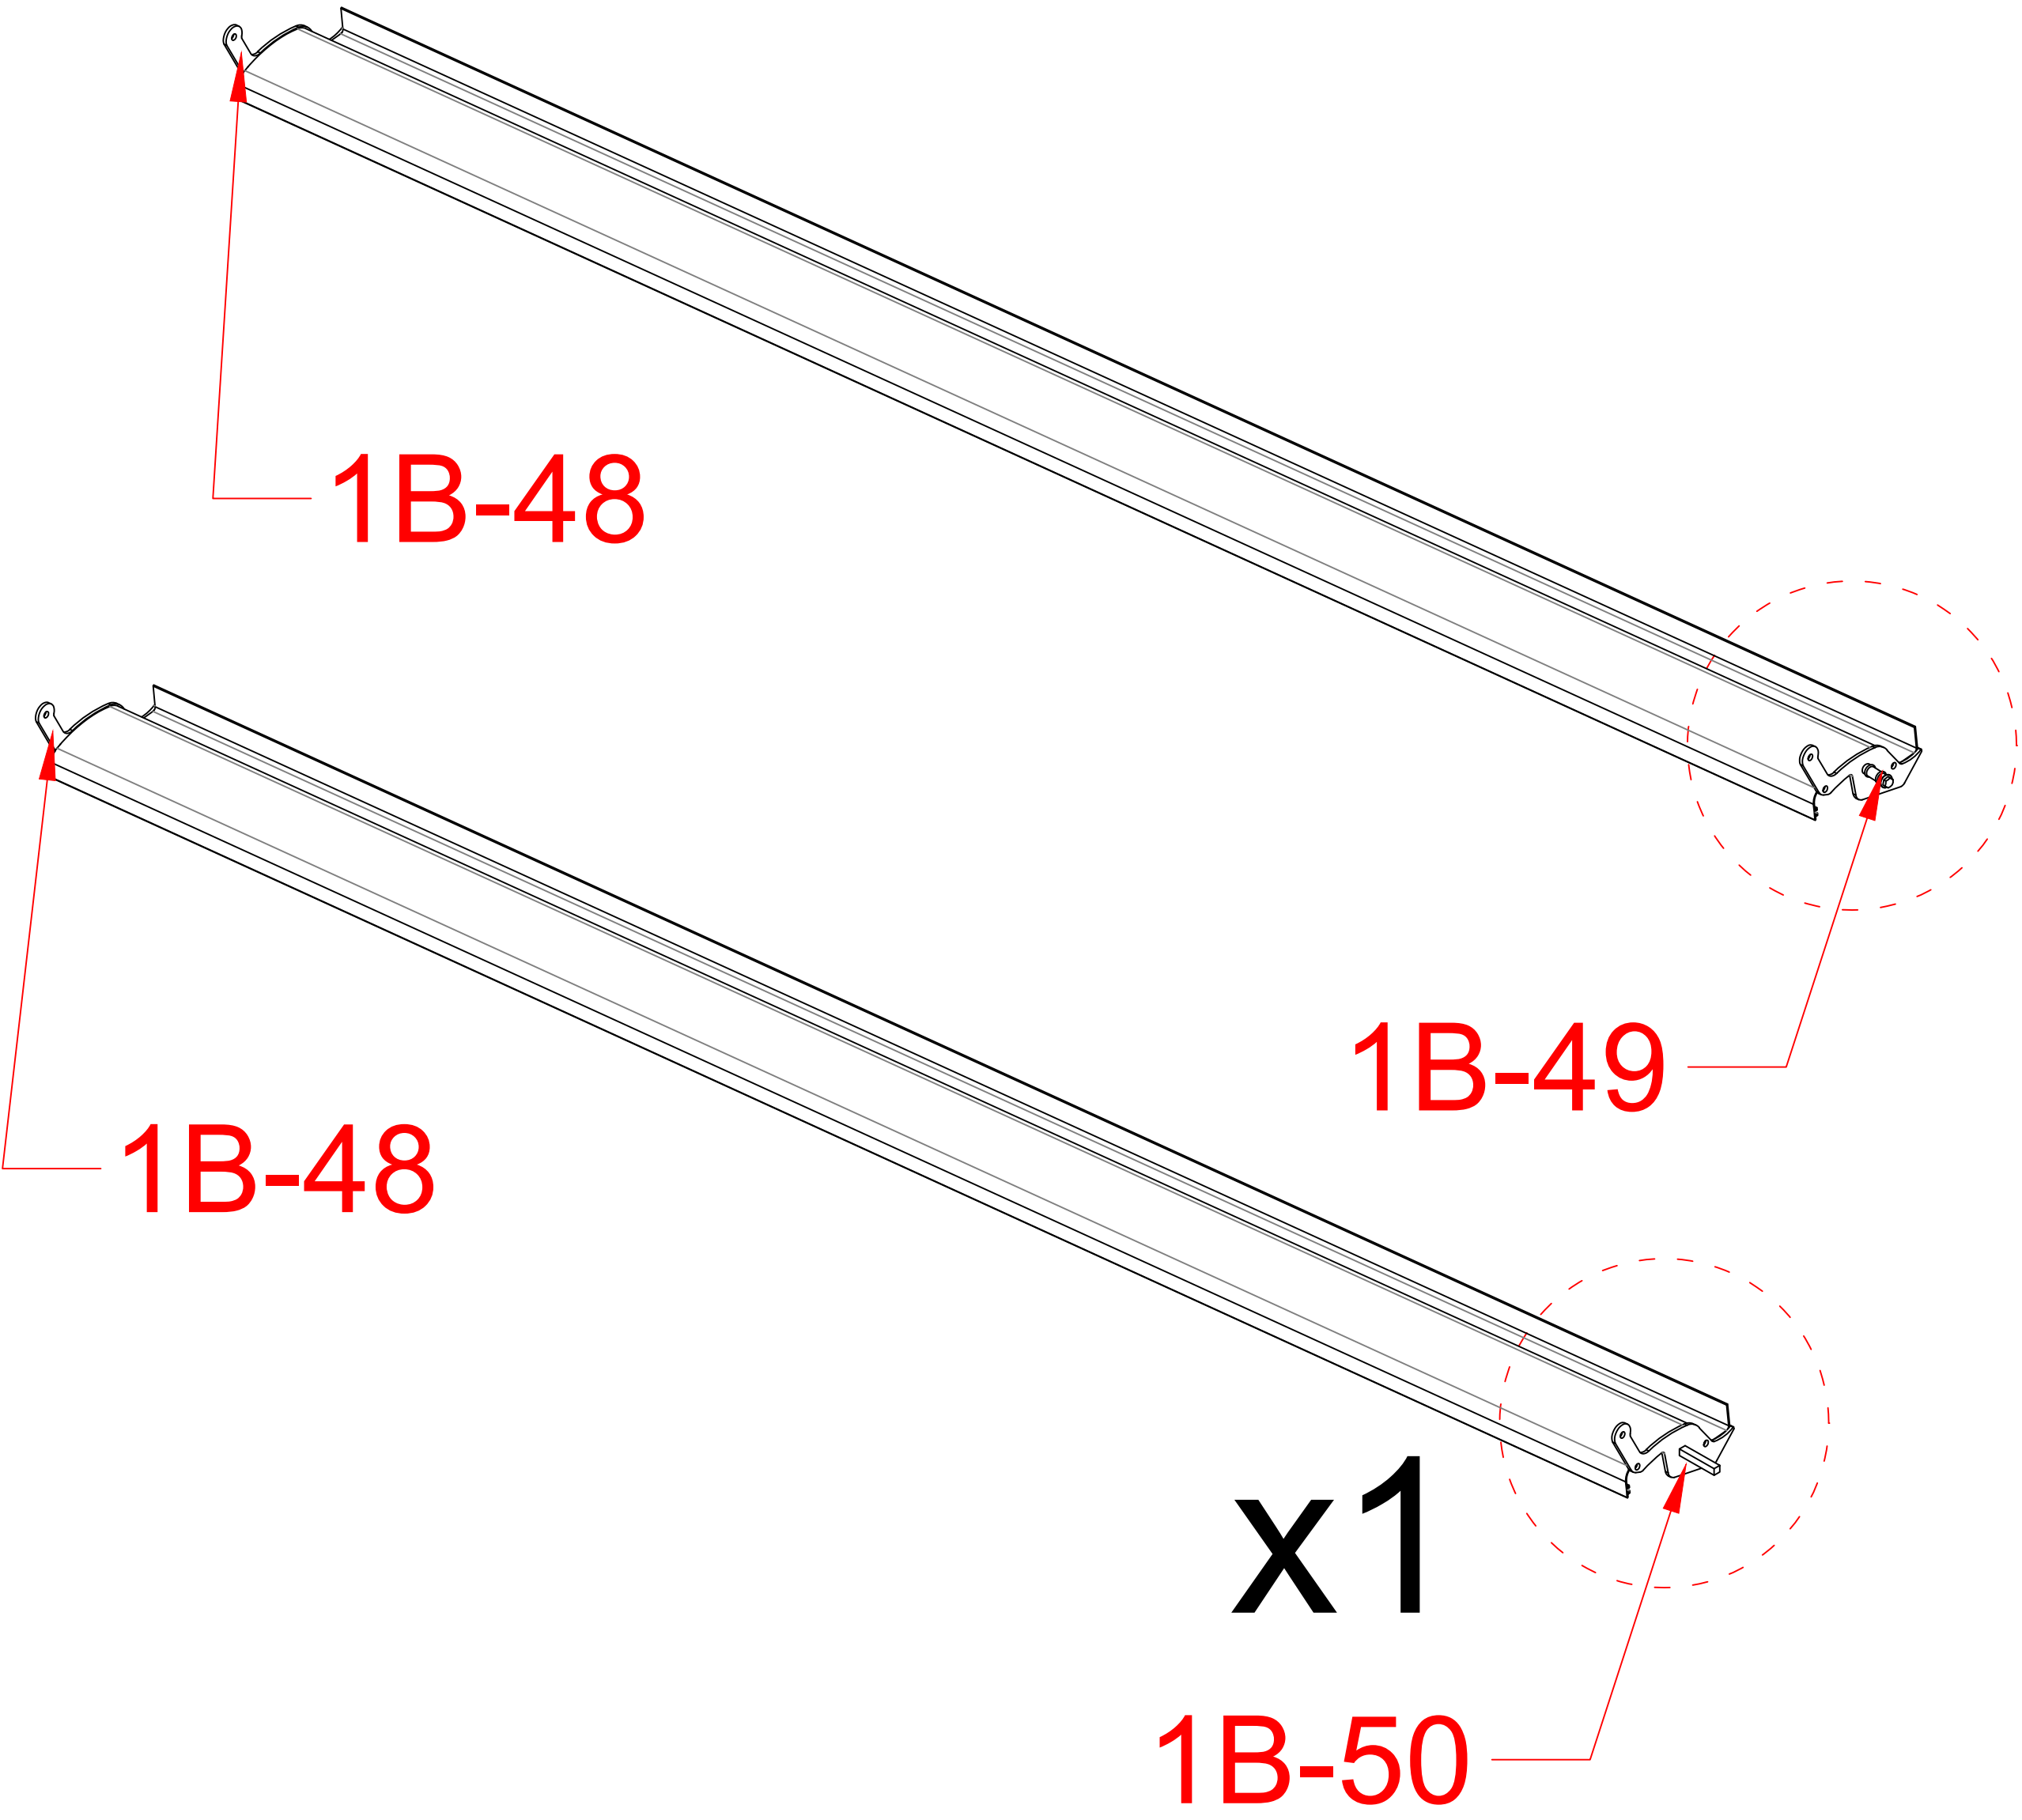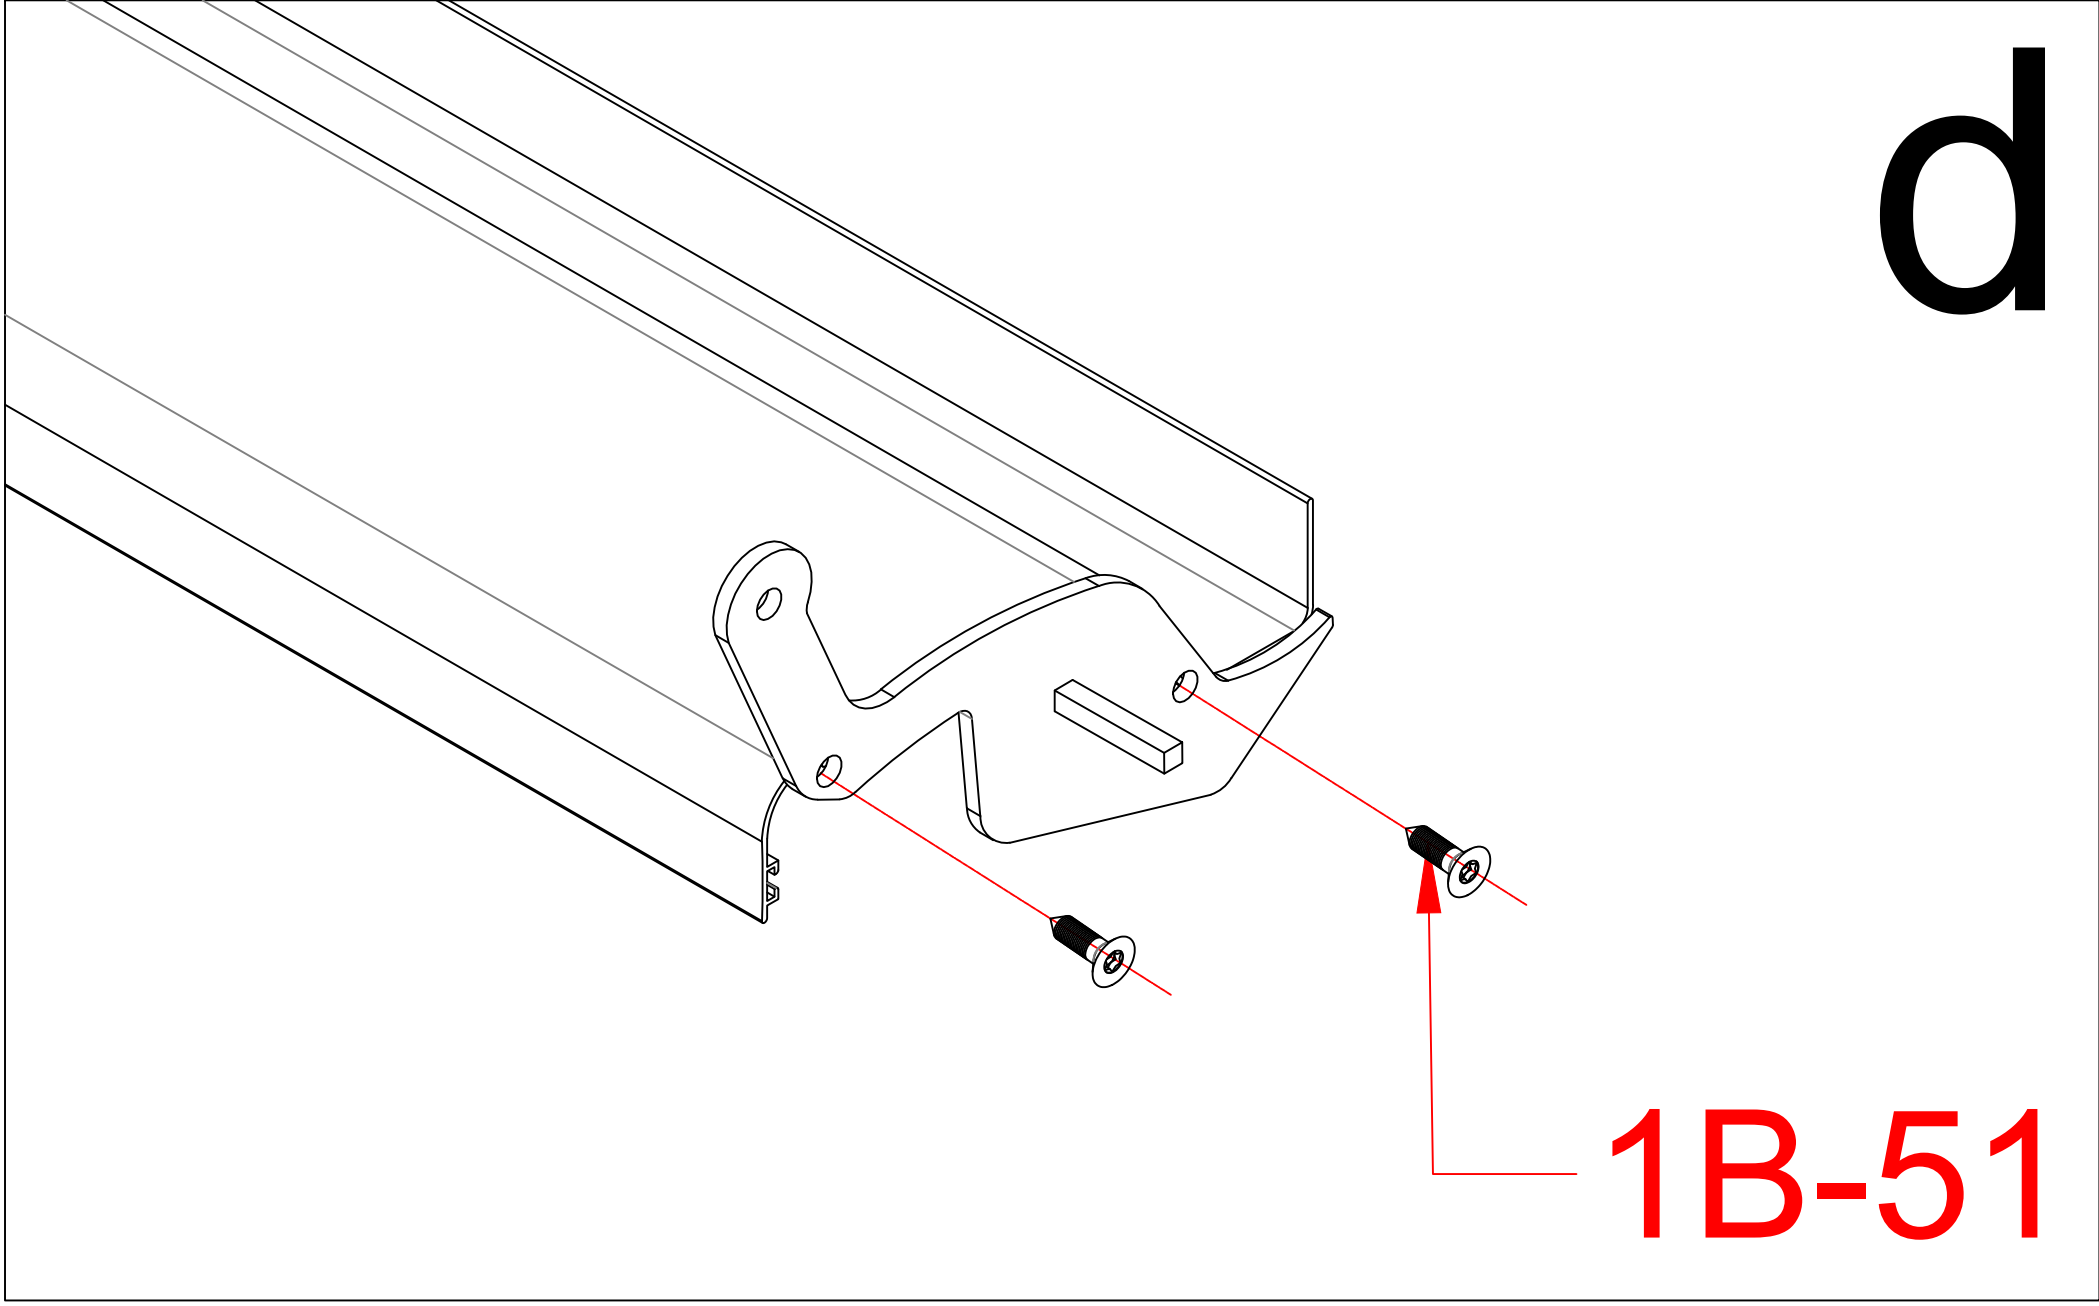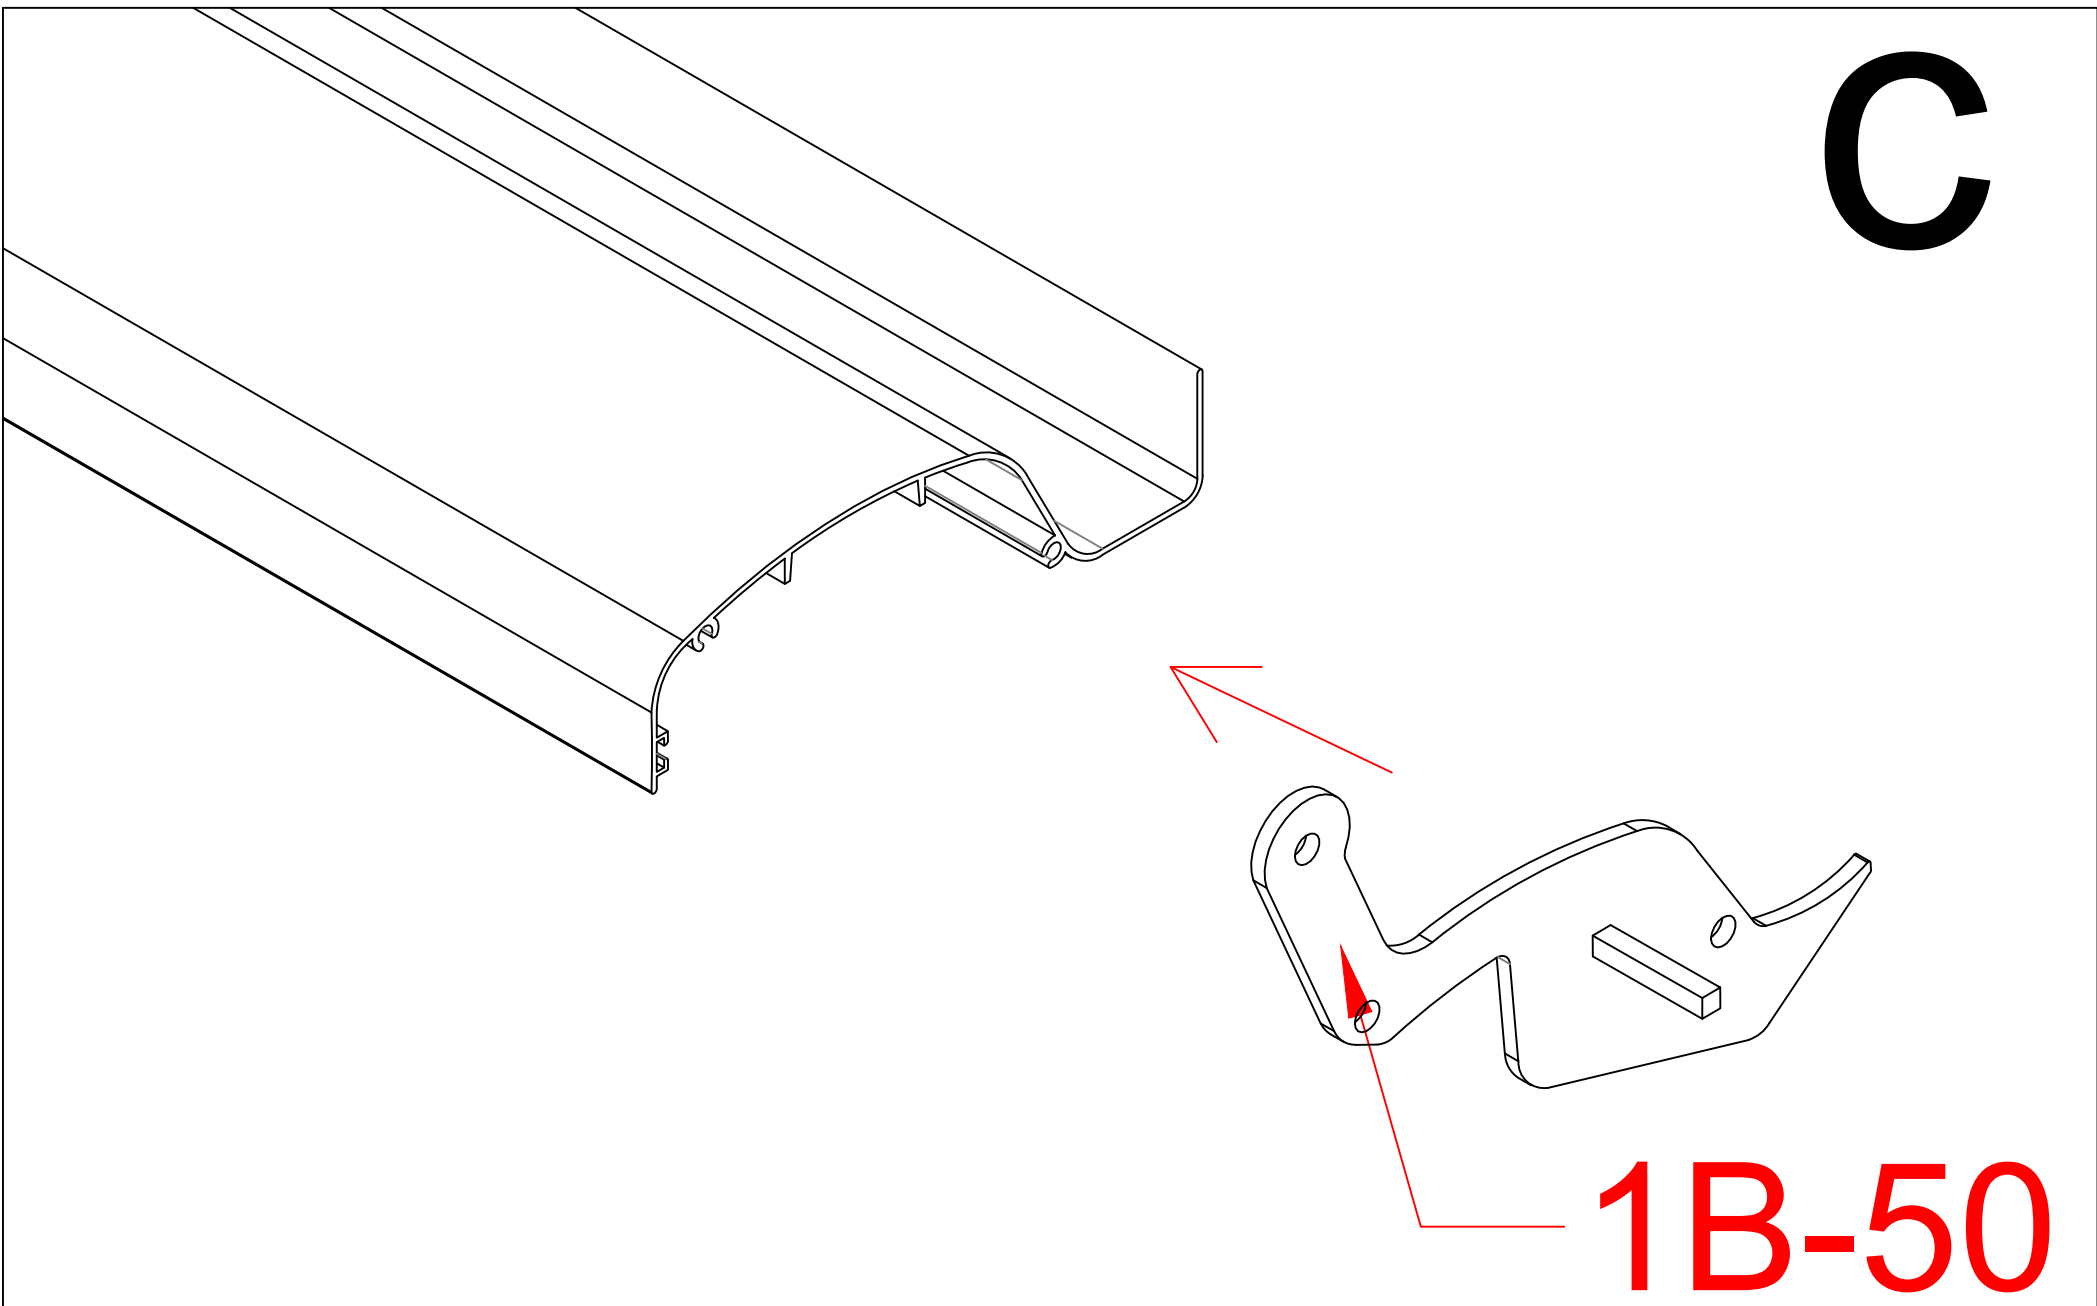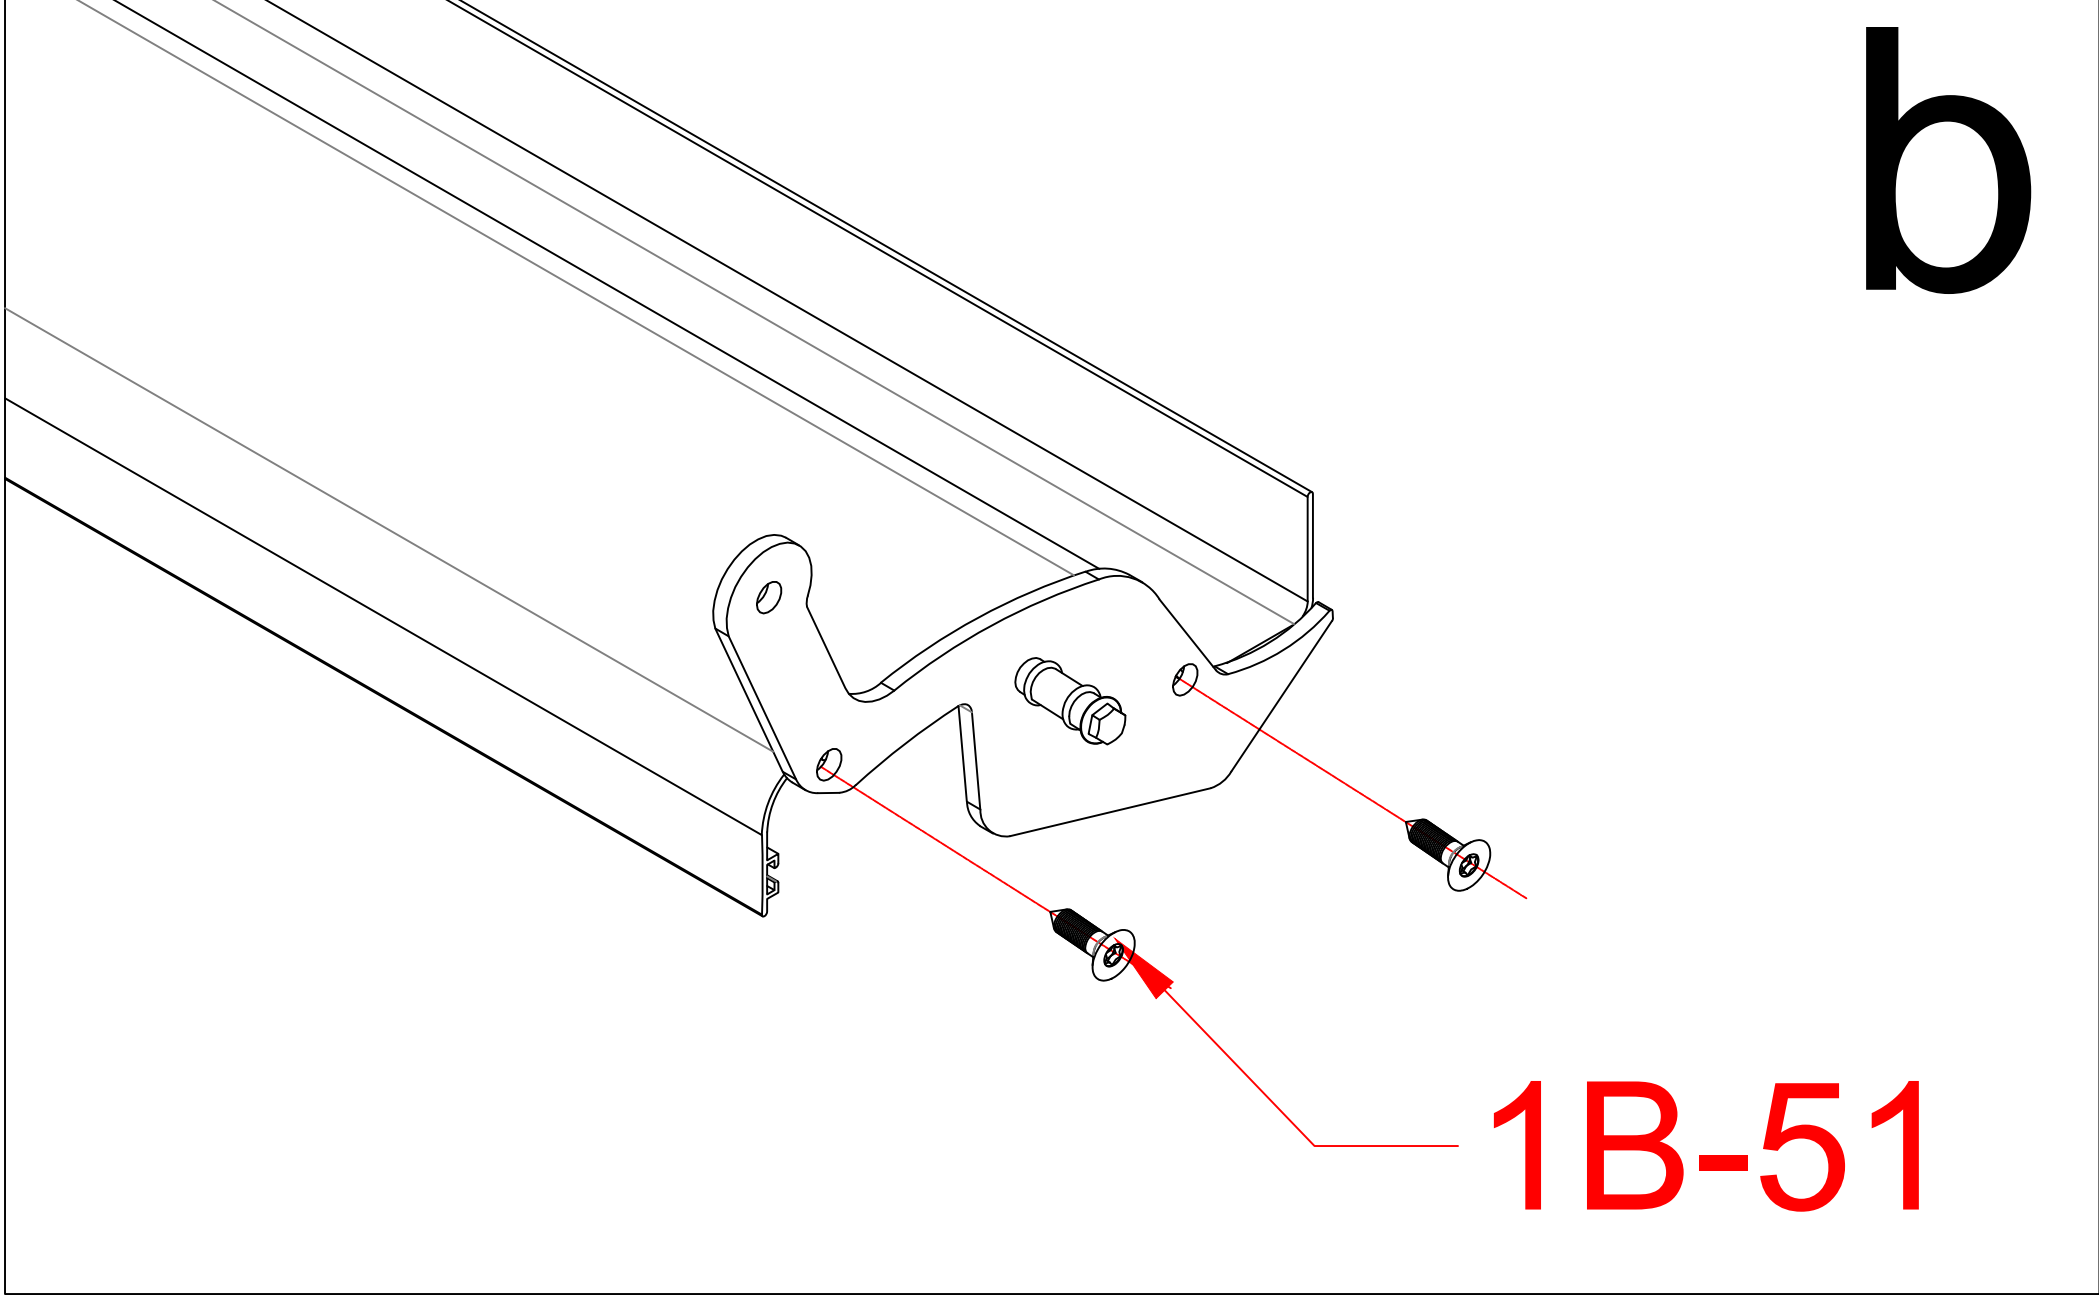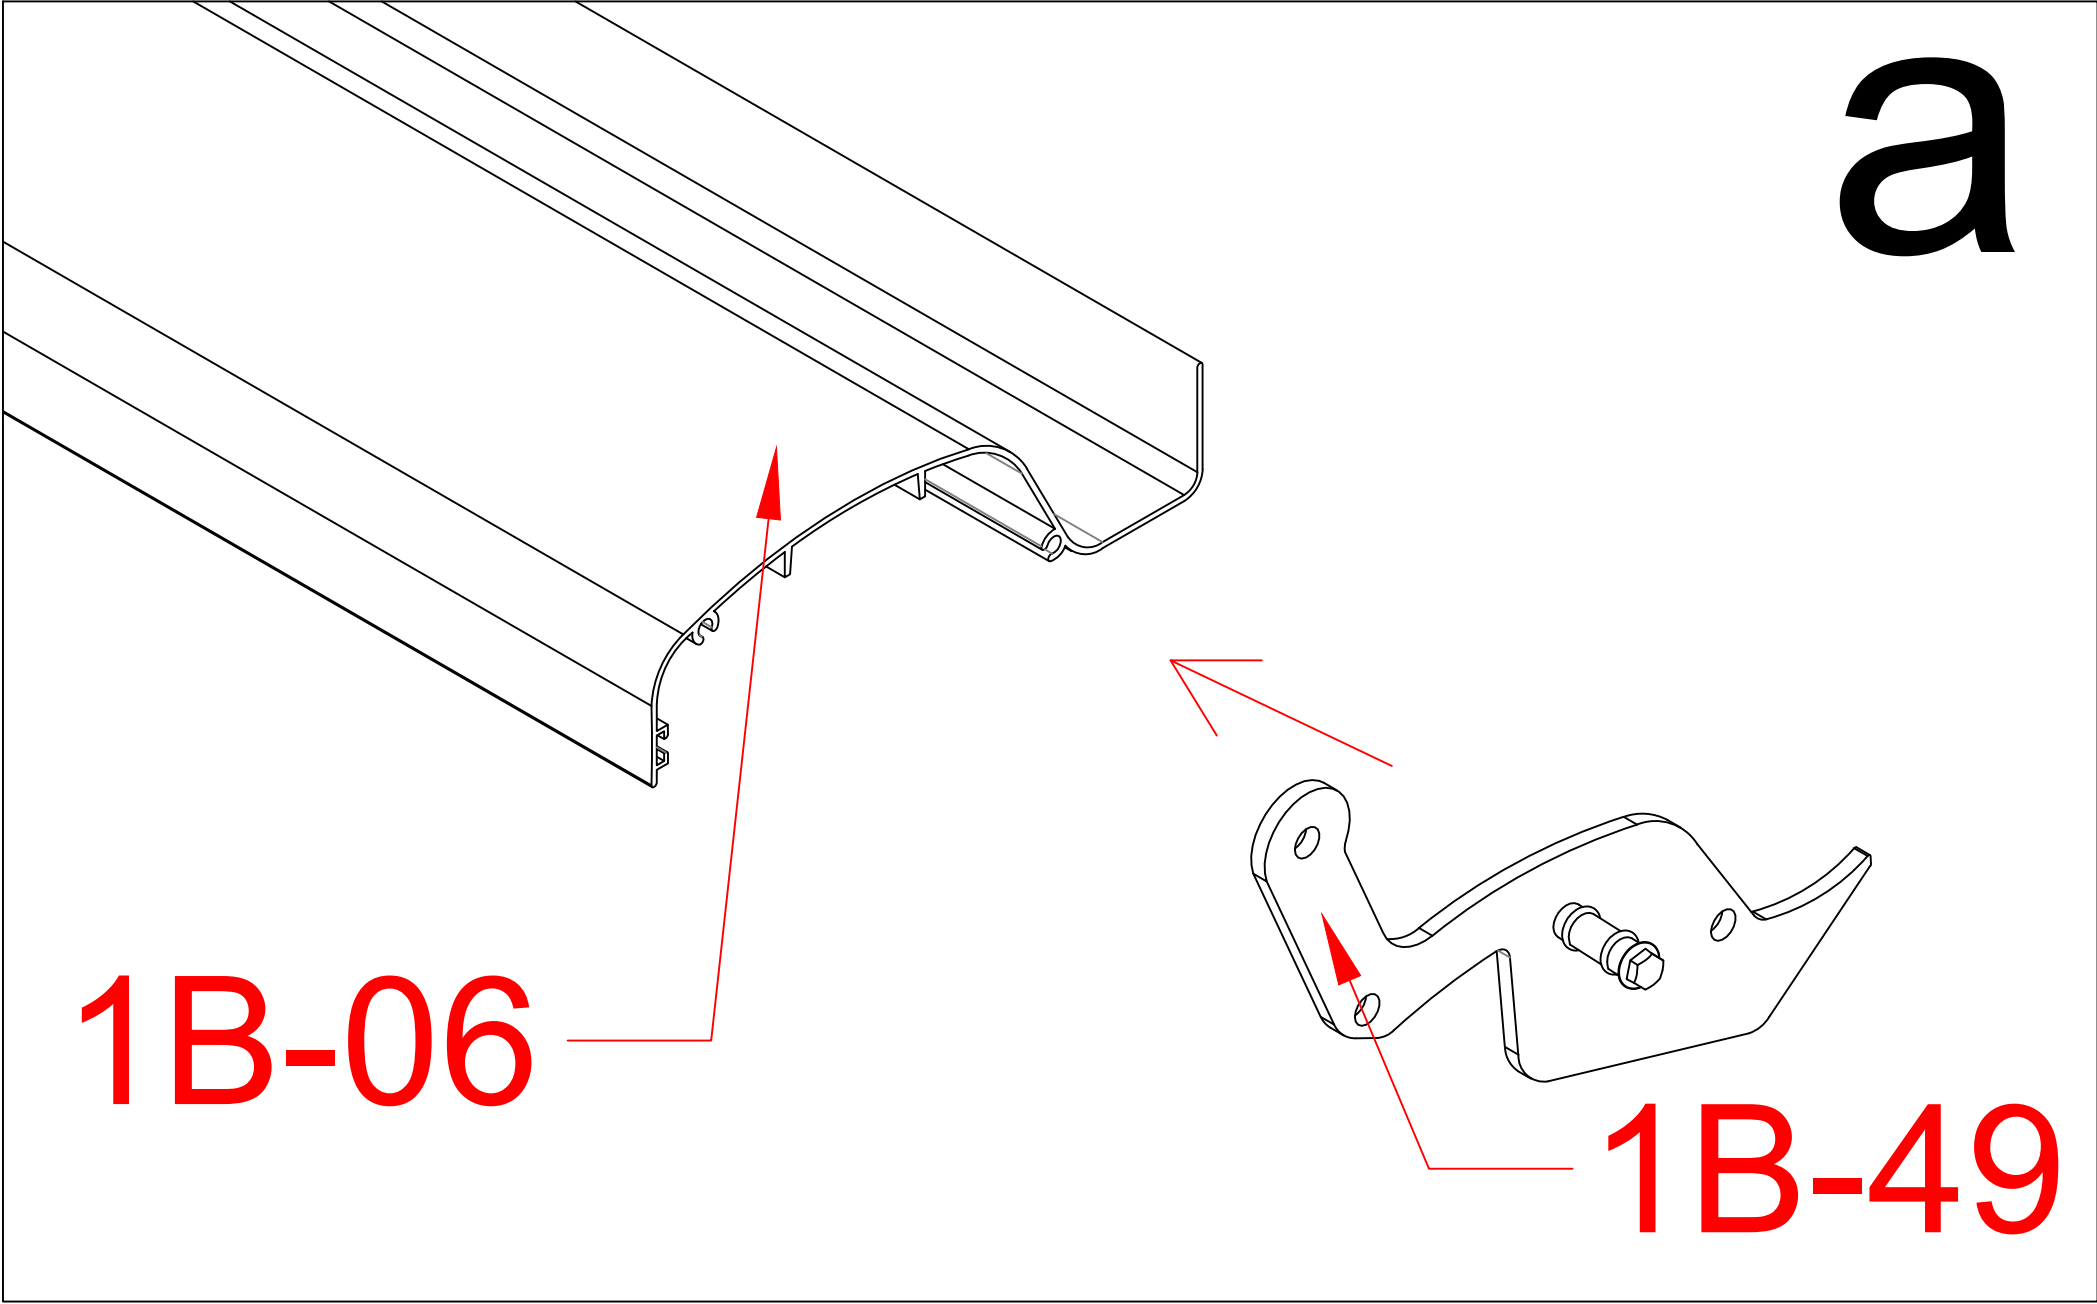


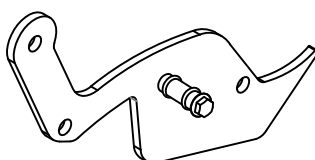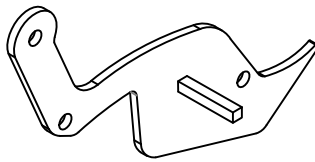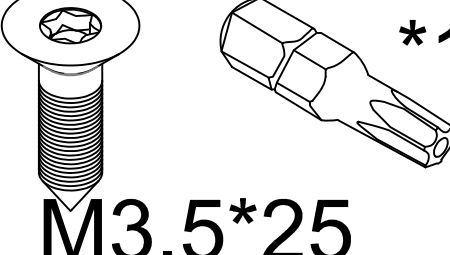1B-49		x
1B-50		1
1B-51	 M3.5*25 *1	x

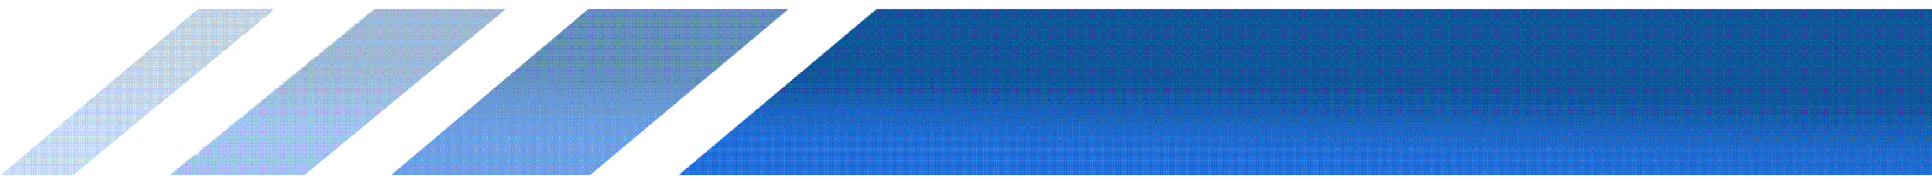

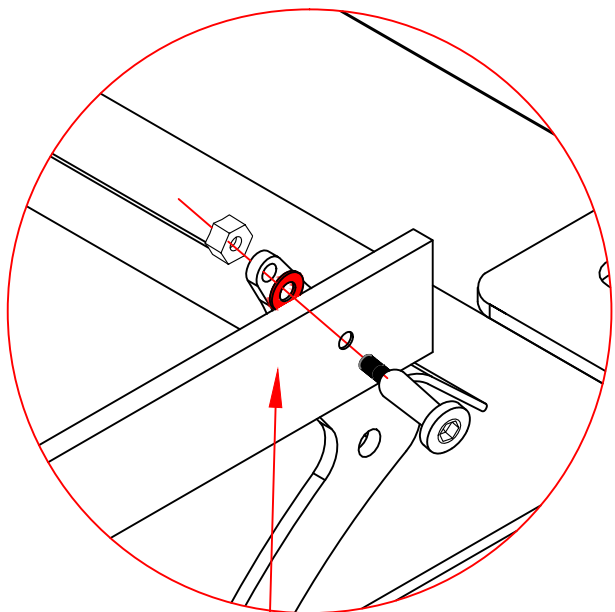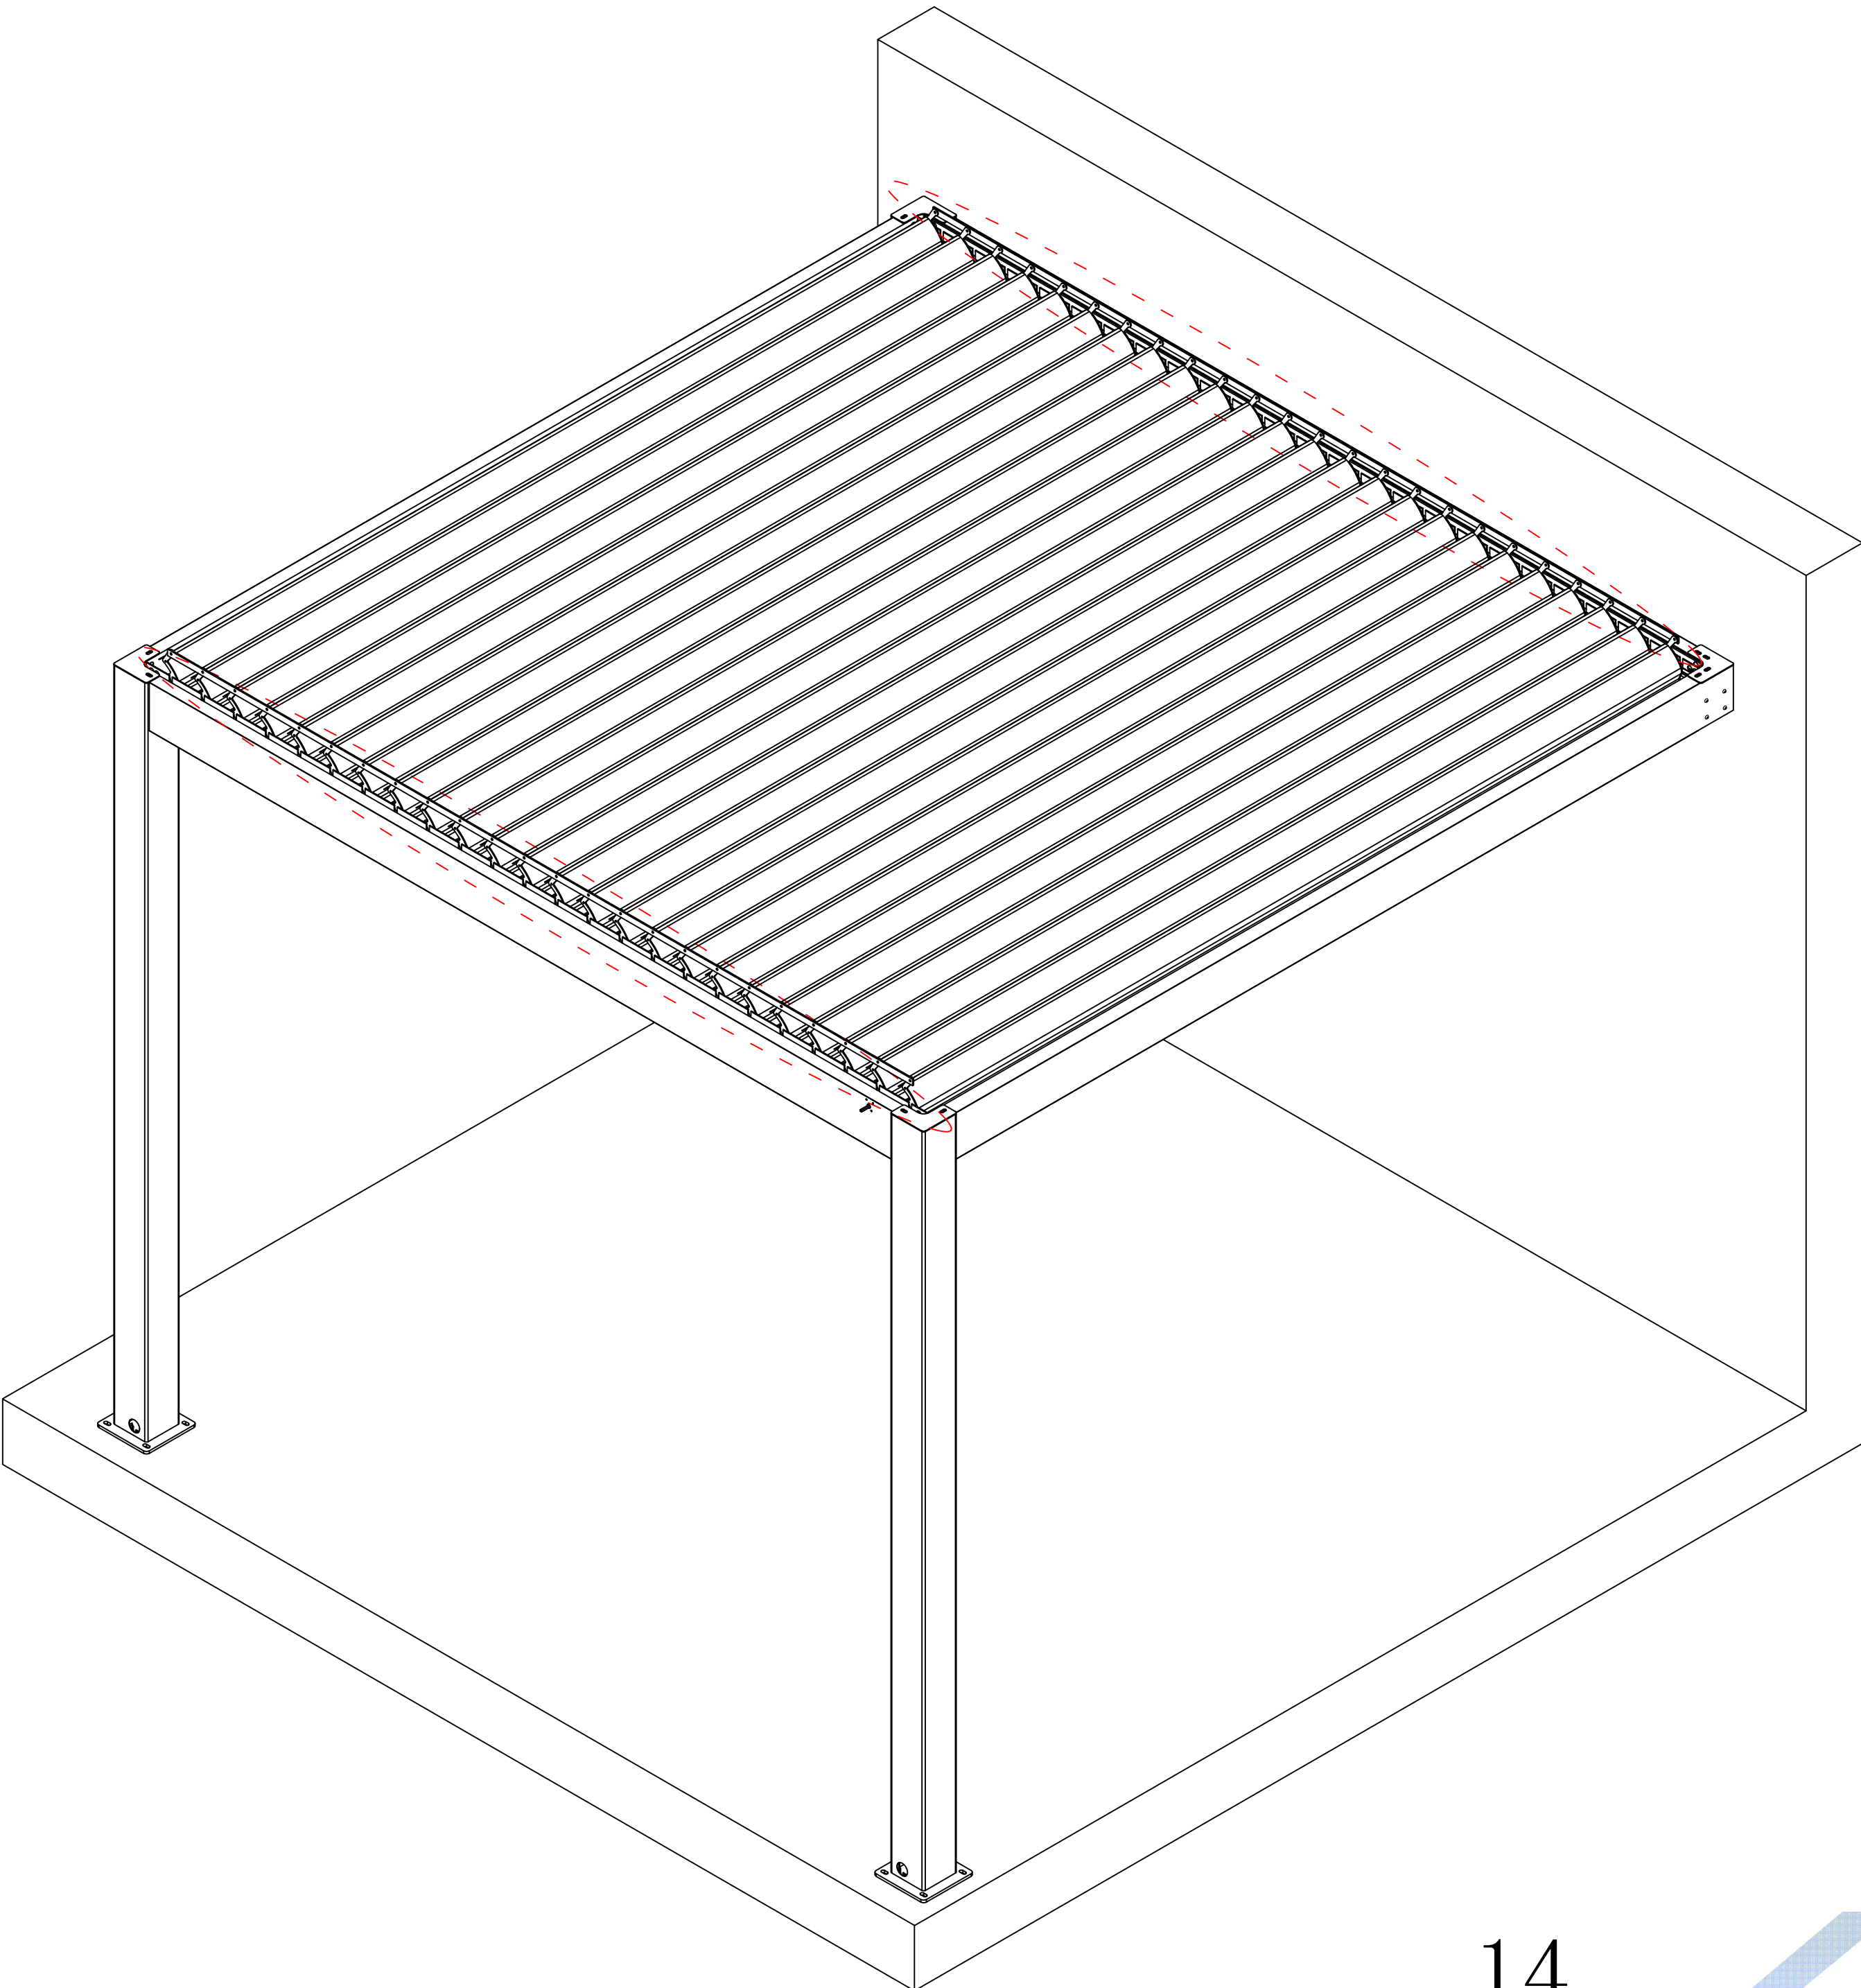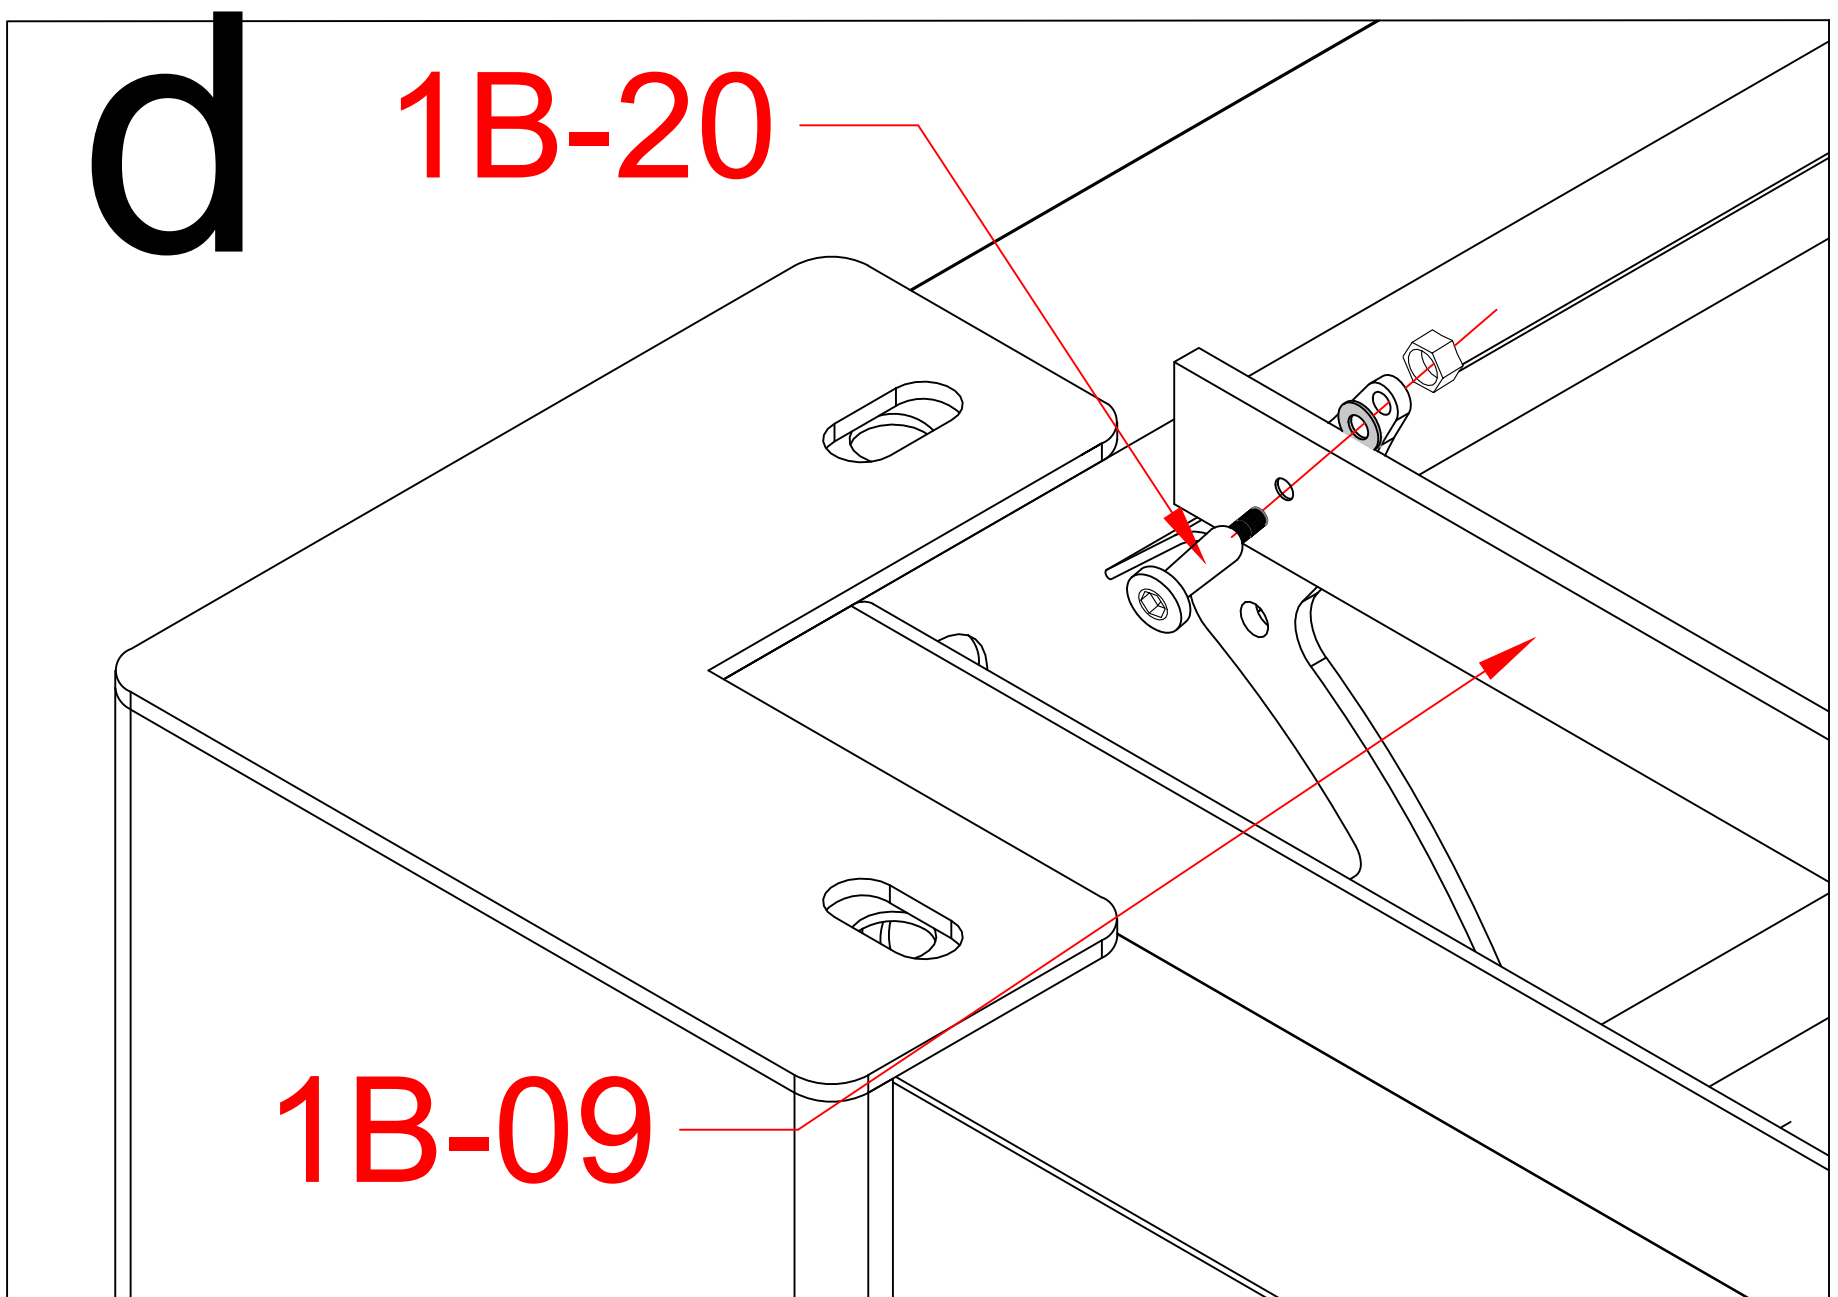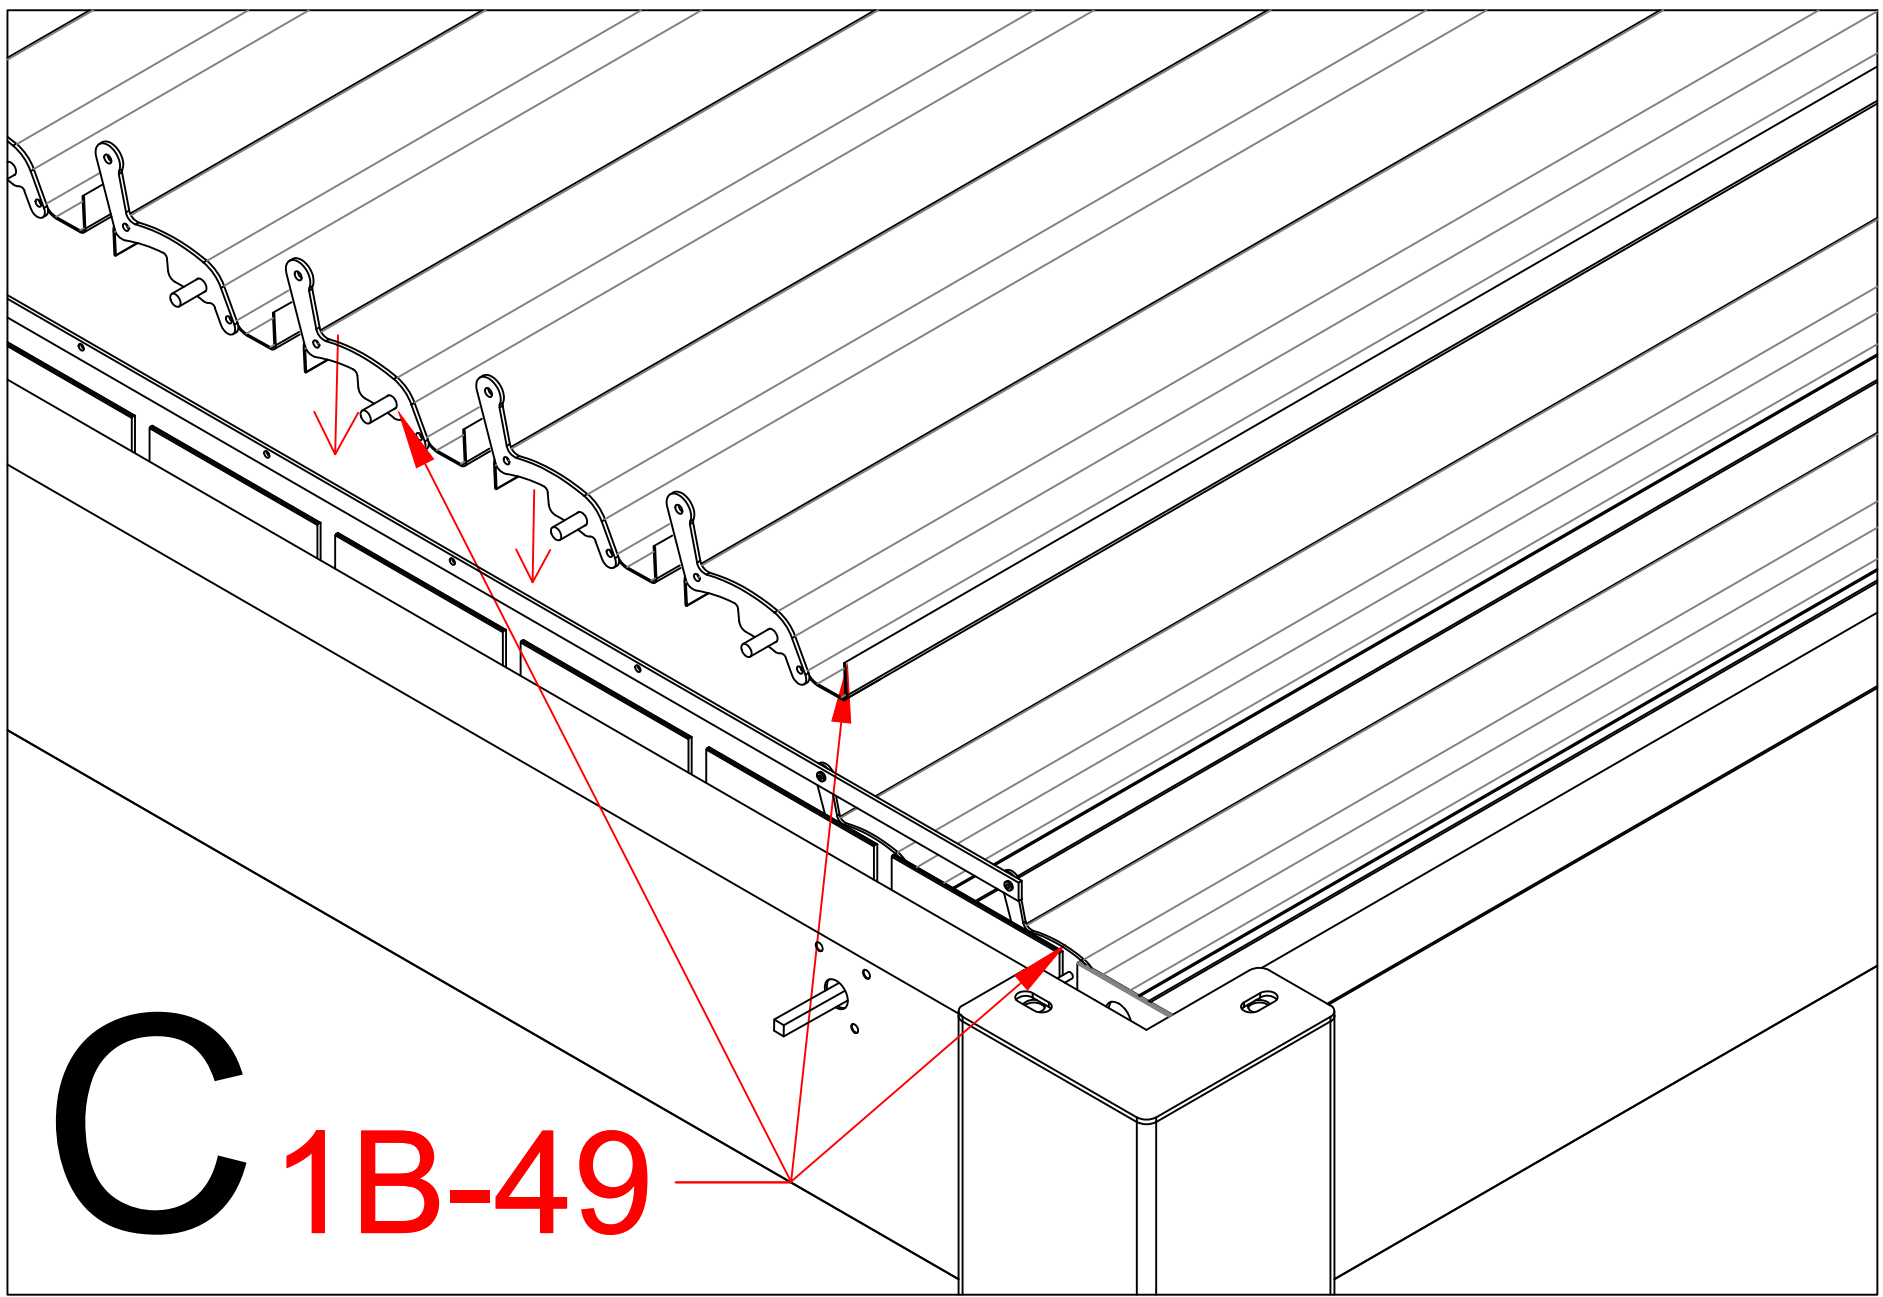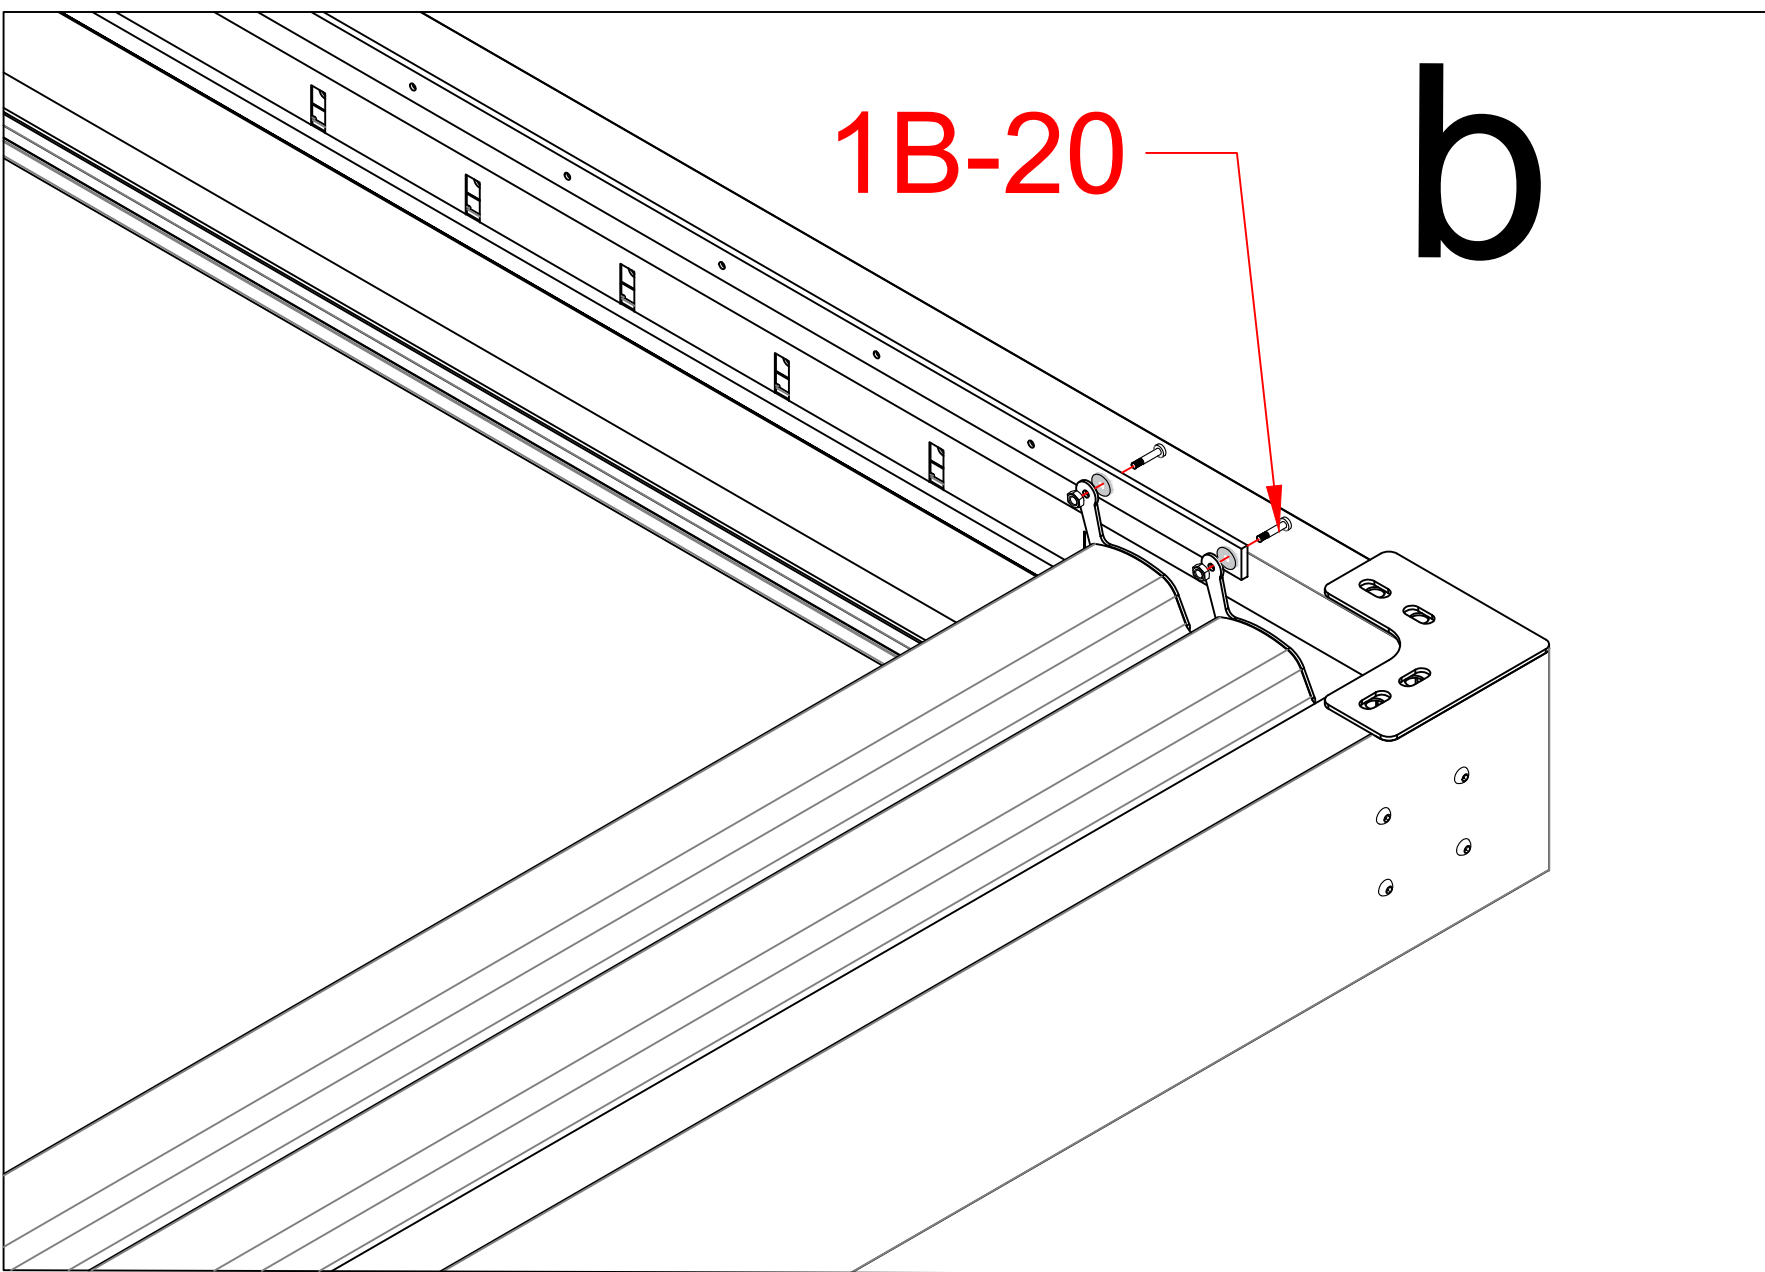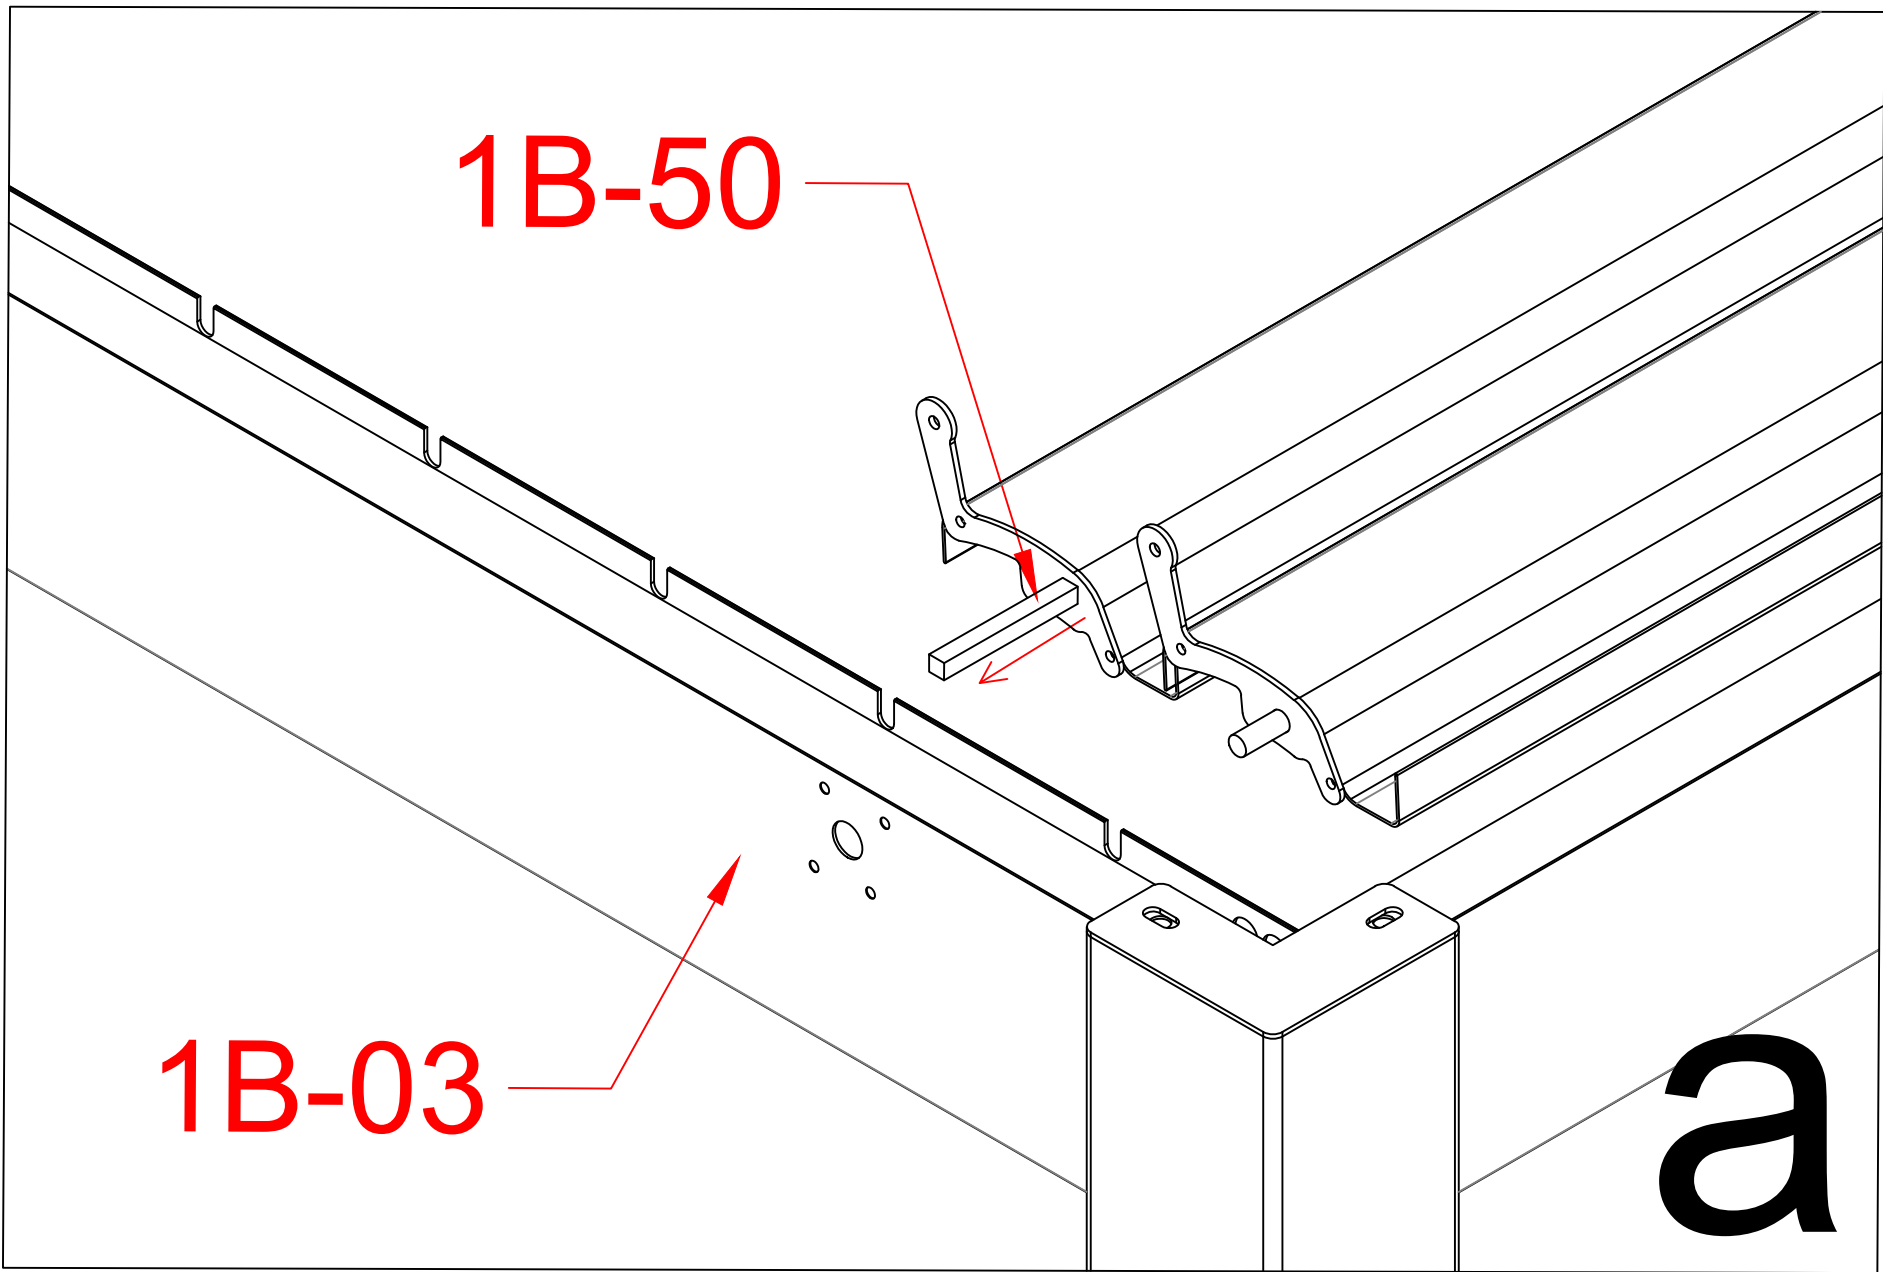



The driving bar shall be always outside of louver end caps. If inside, louvers could not be opened 100%

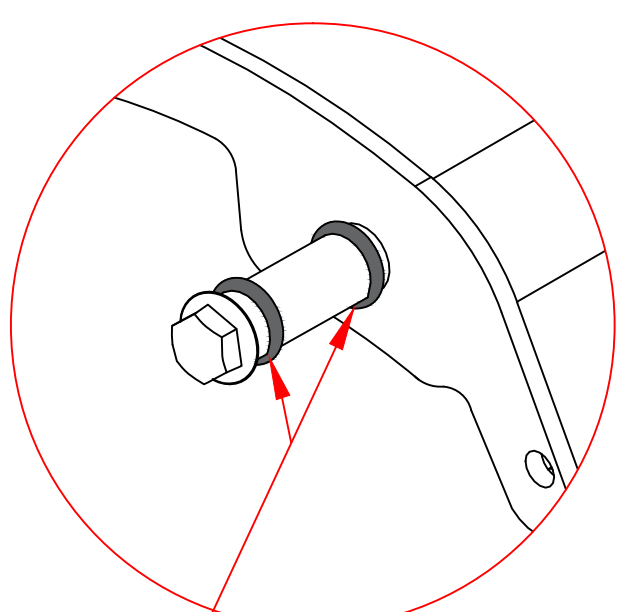





When installing louvers, first separate the two rubber gaskets and slide them to both ends of the circular shaft. Then, please ensure they are closed tightly before proceeding with the next steps of the installation.

1B-09		2
1B-20		x
1B-06		x

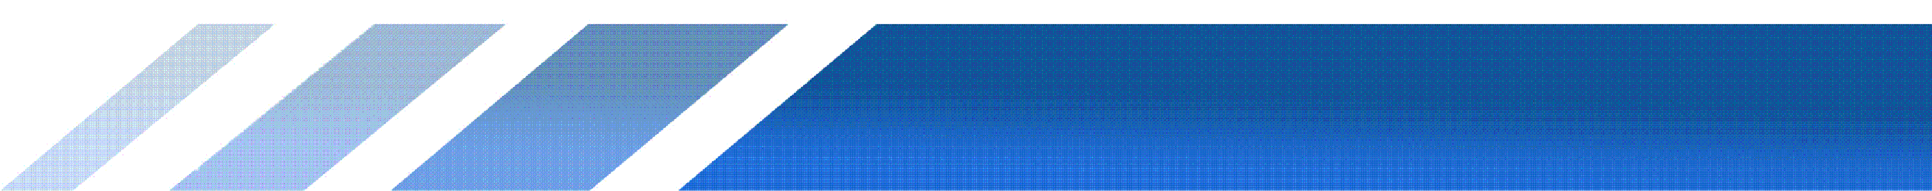





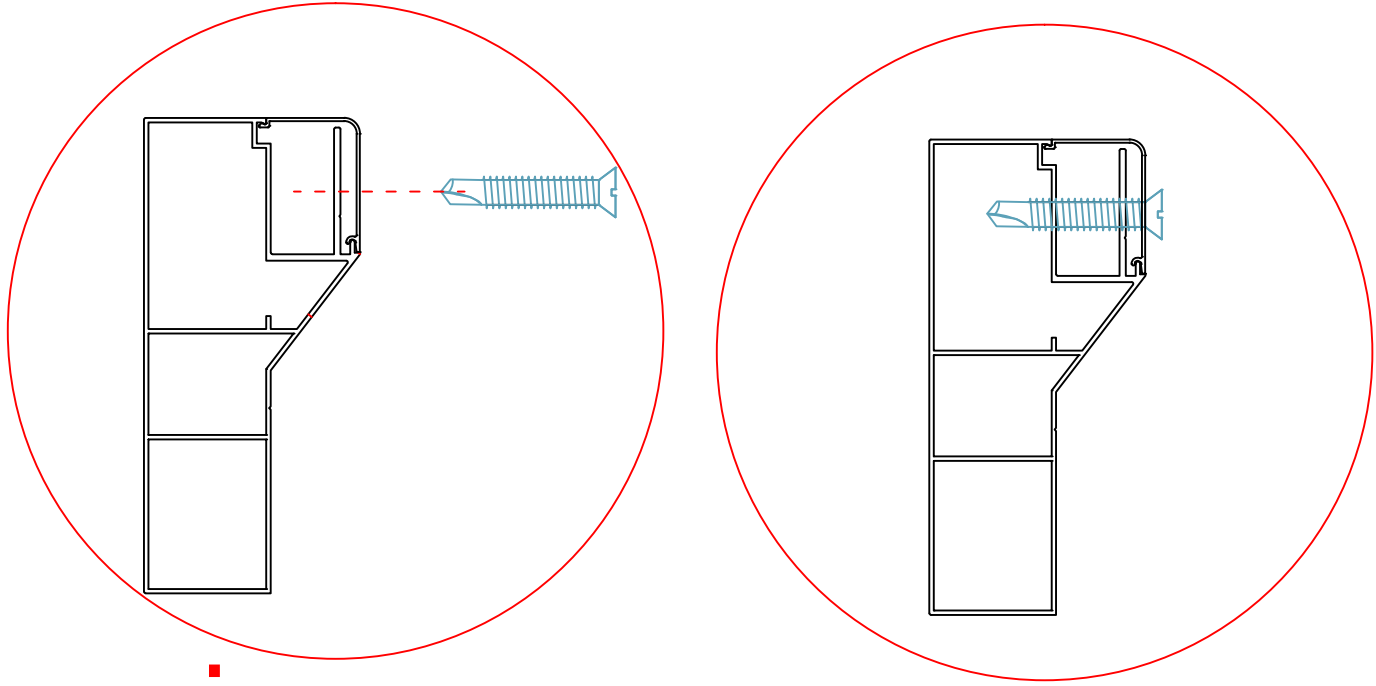




warning:
Here the screw must be
hit, do not miss

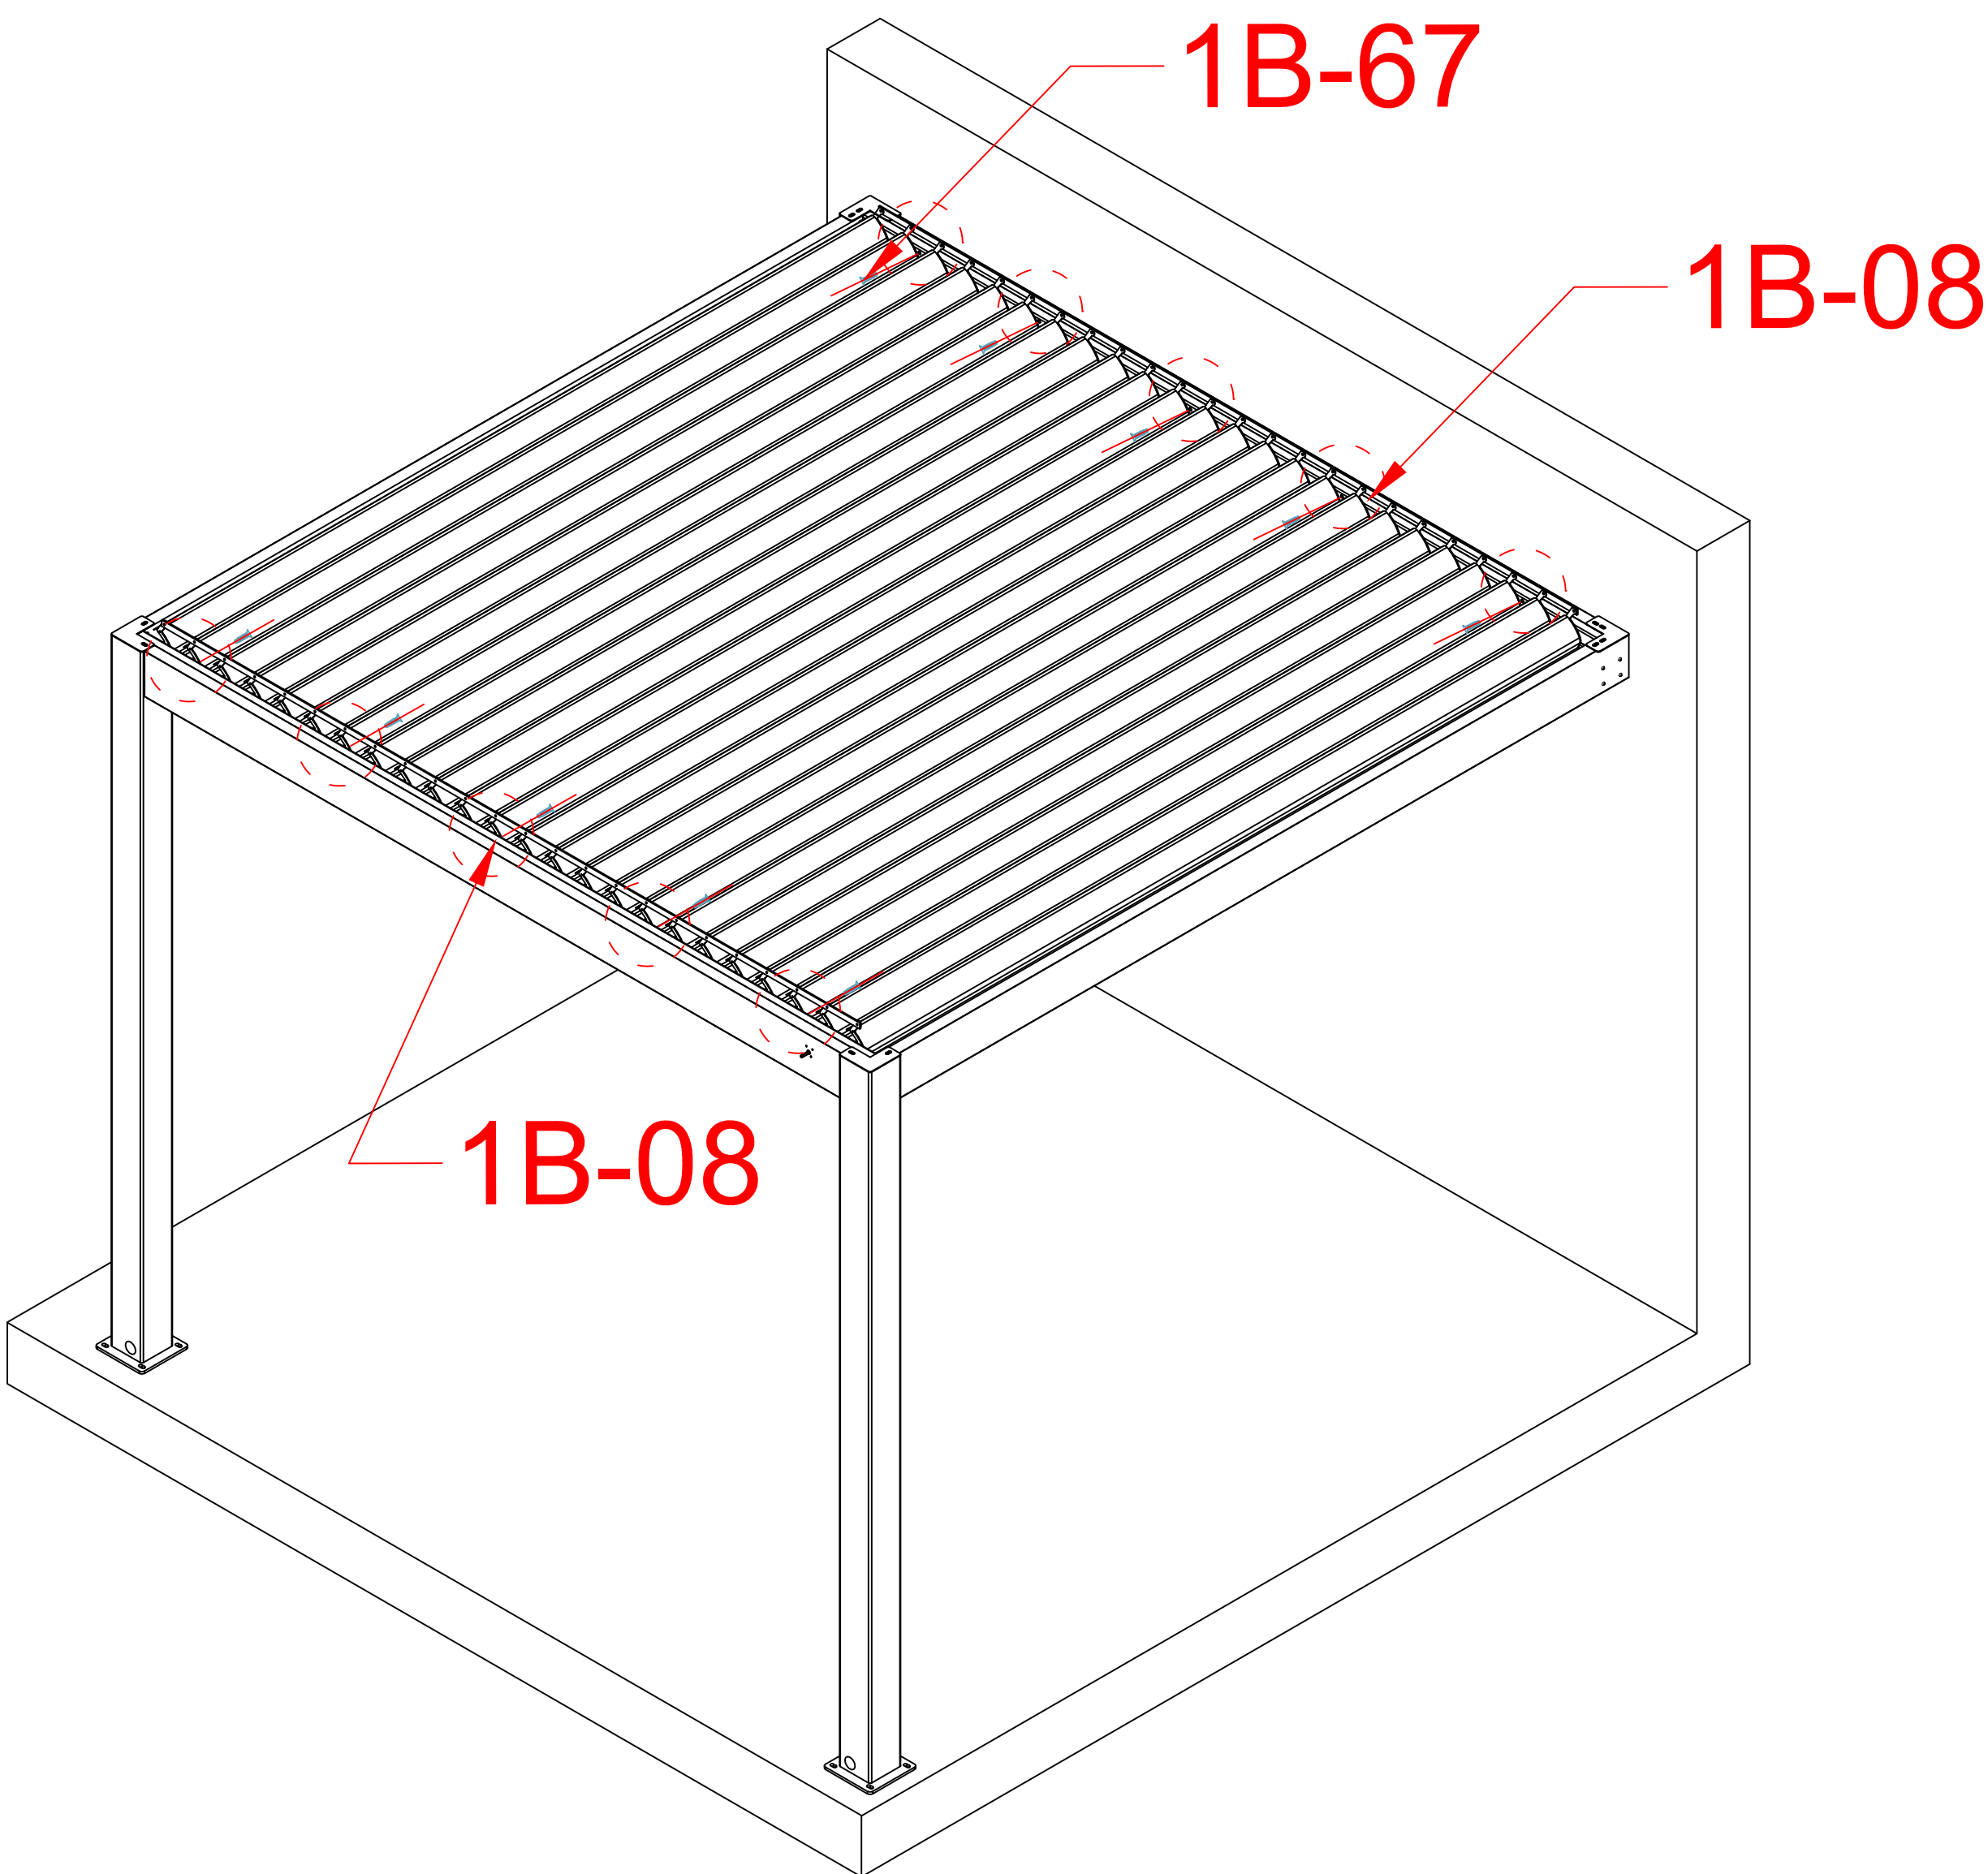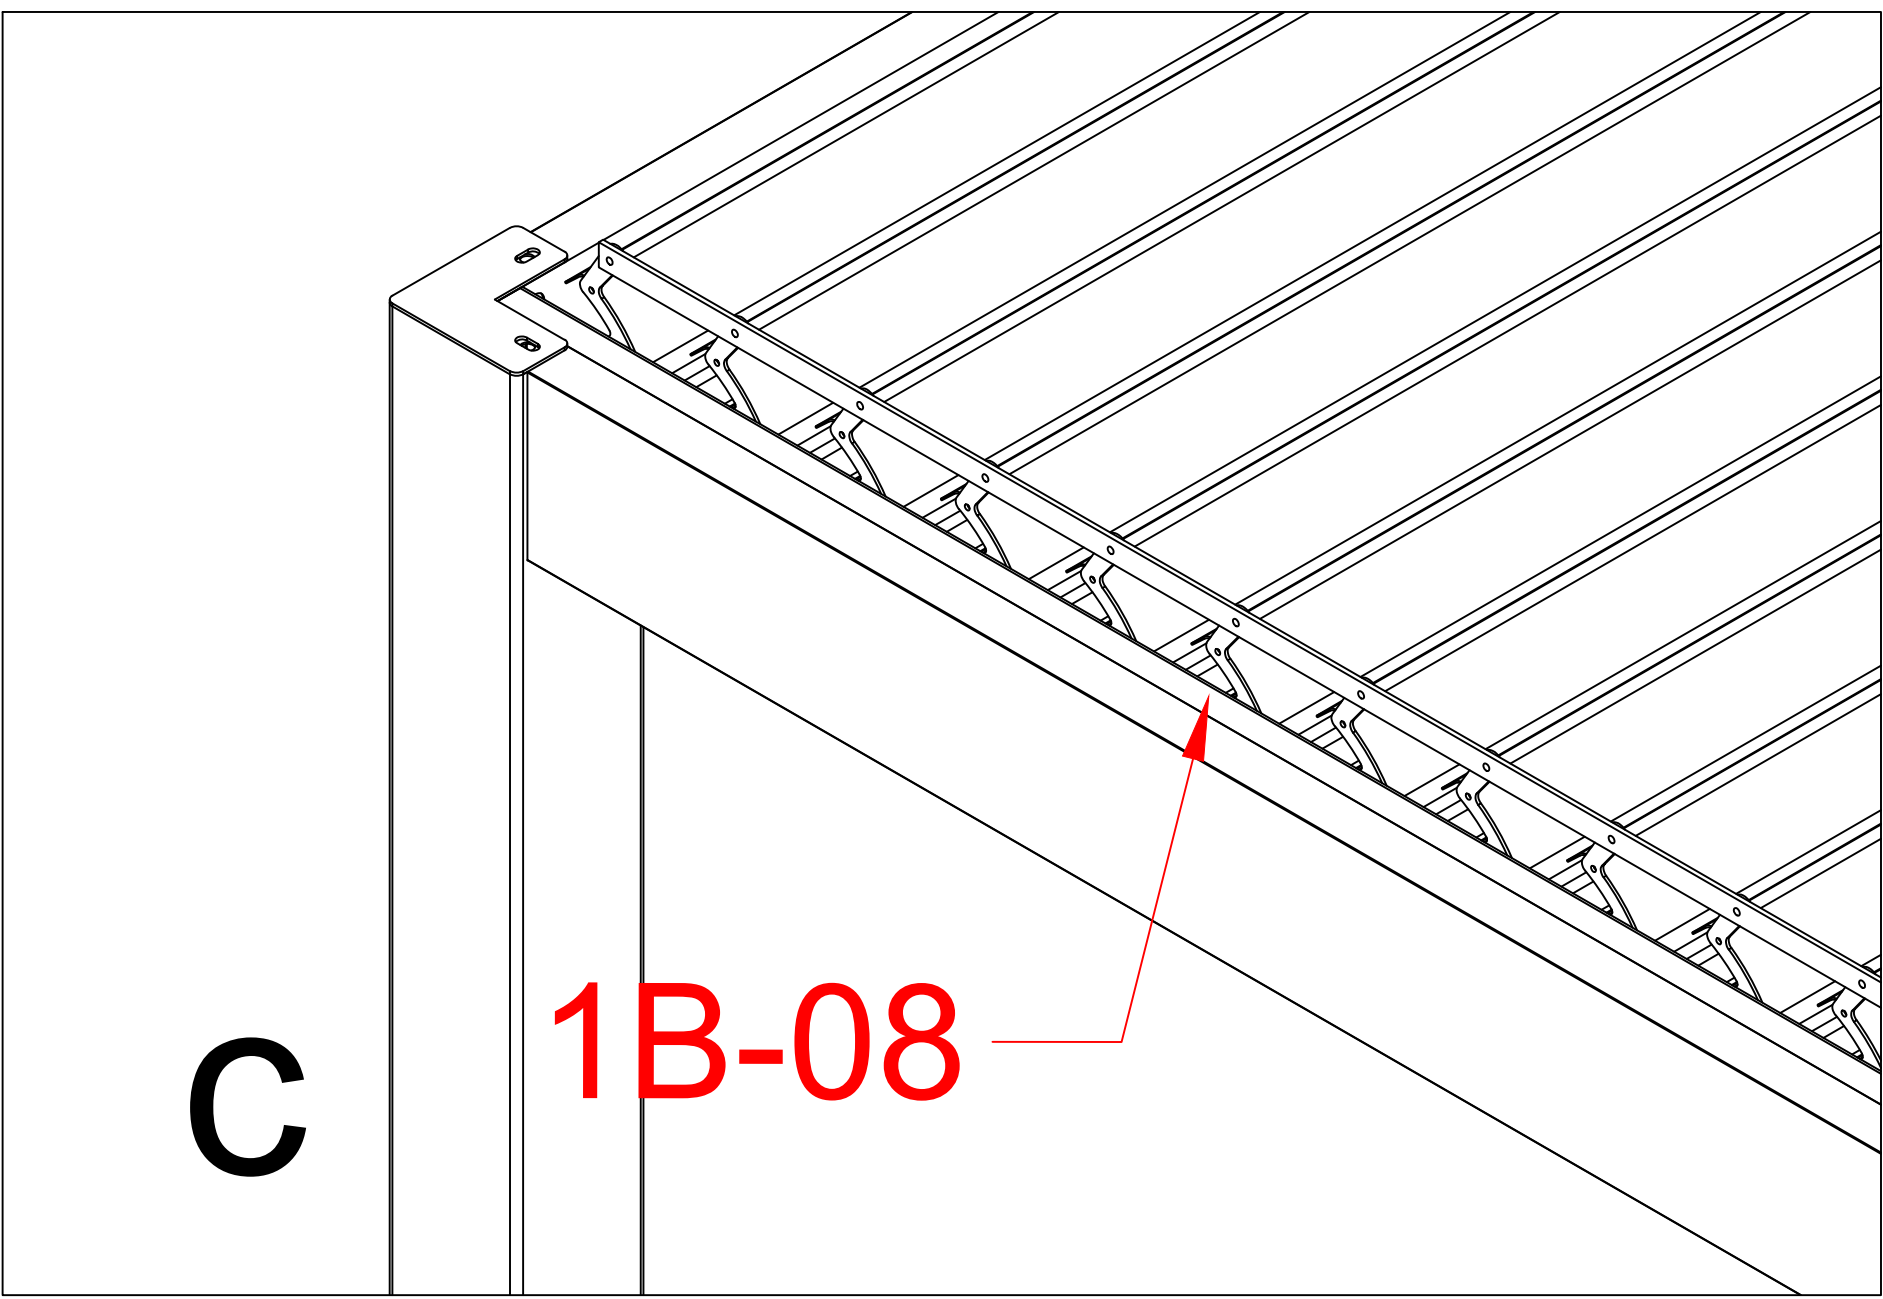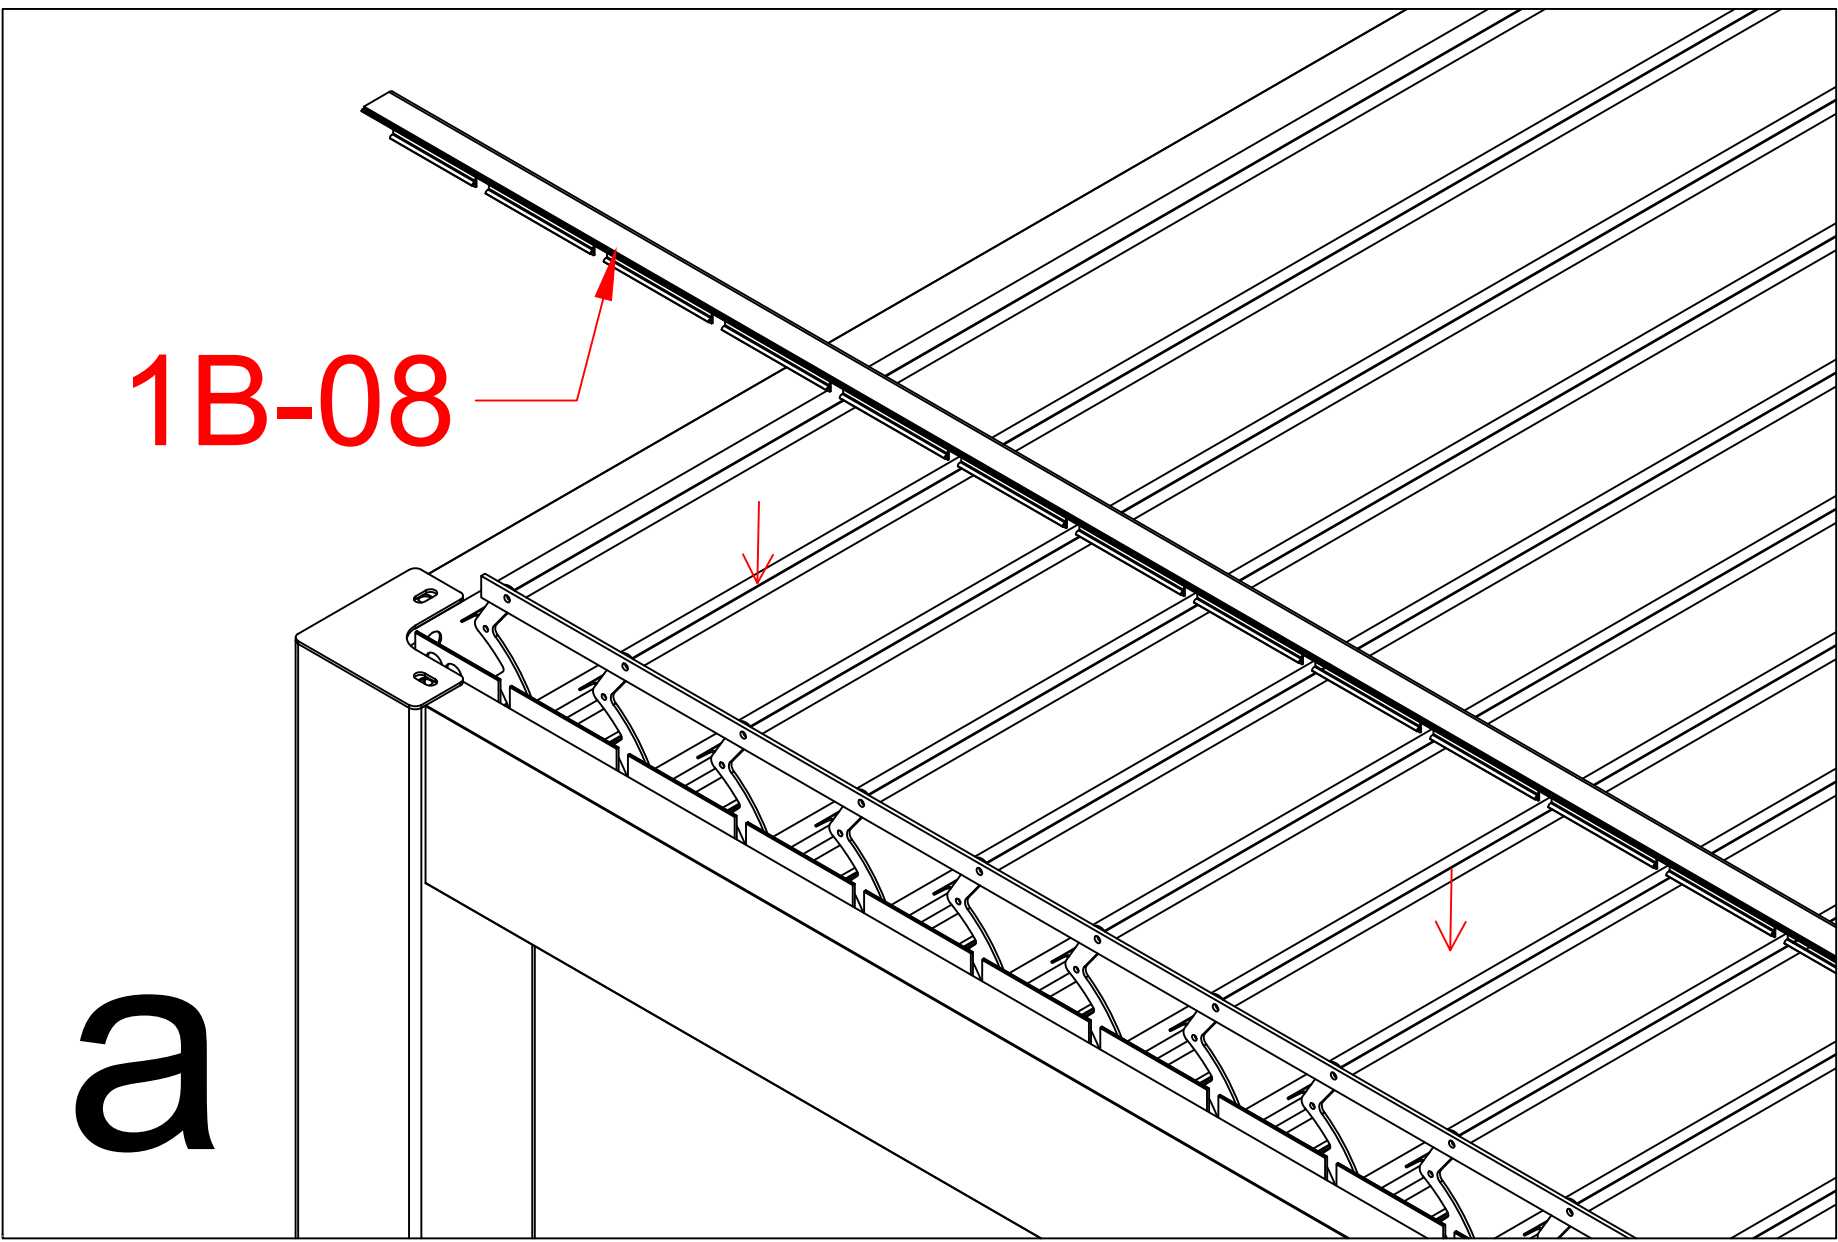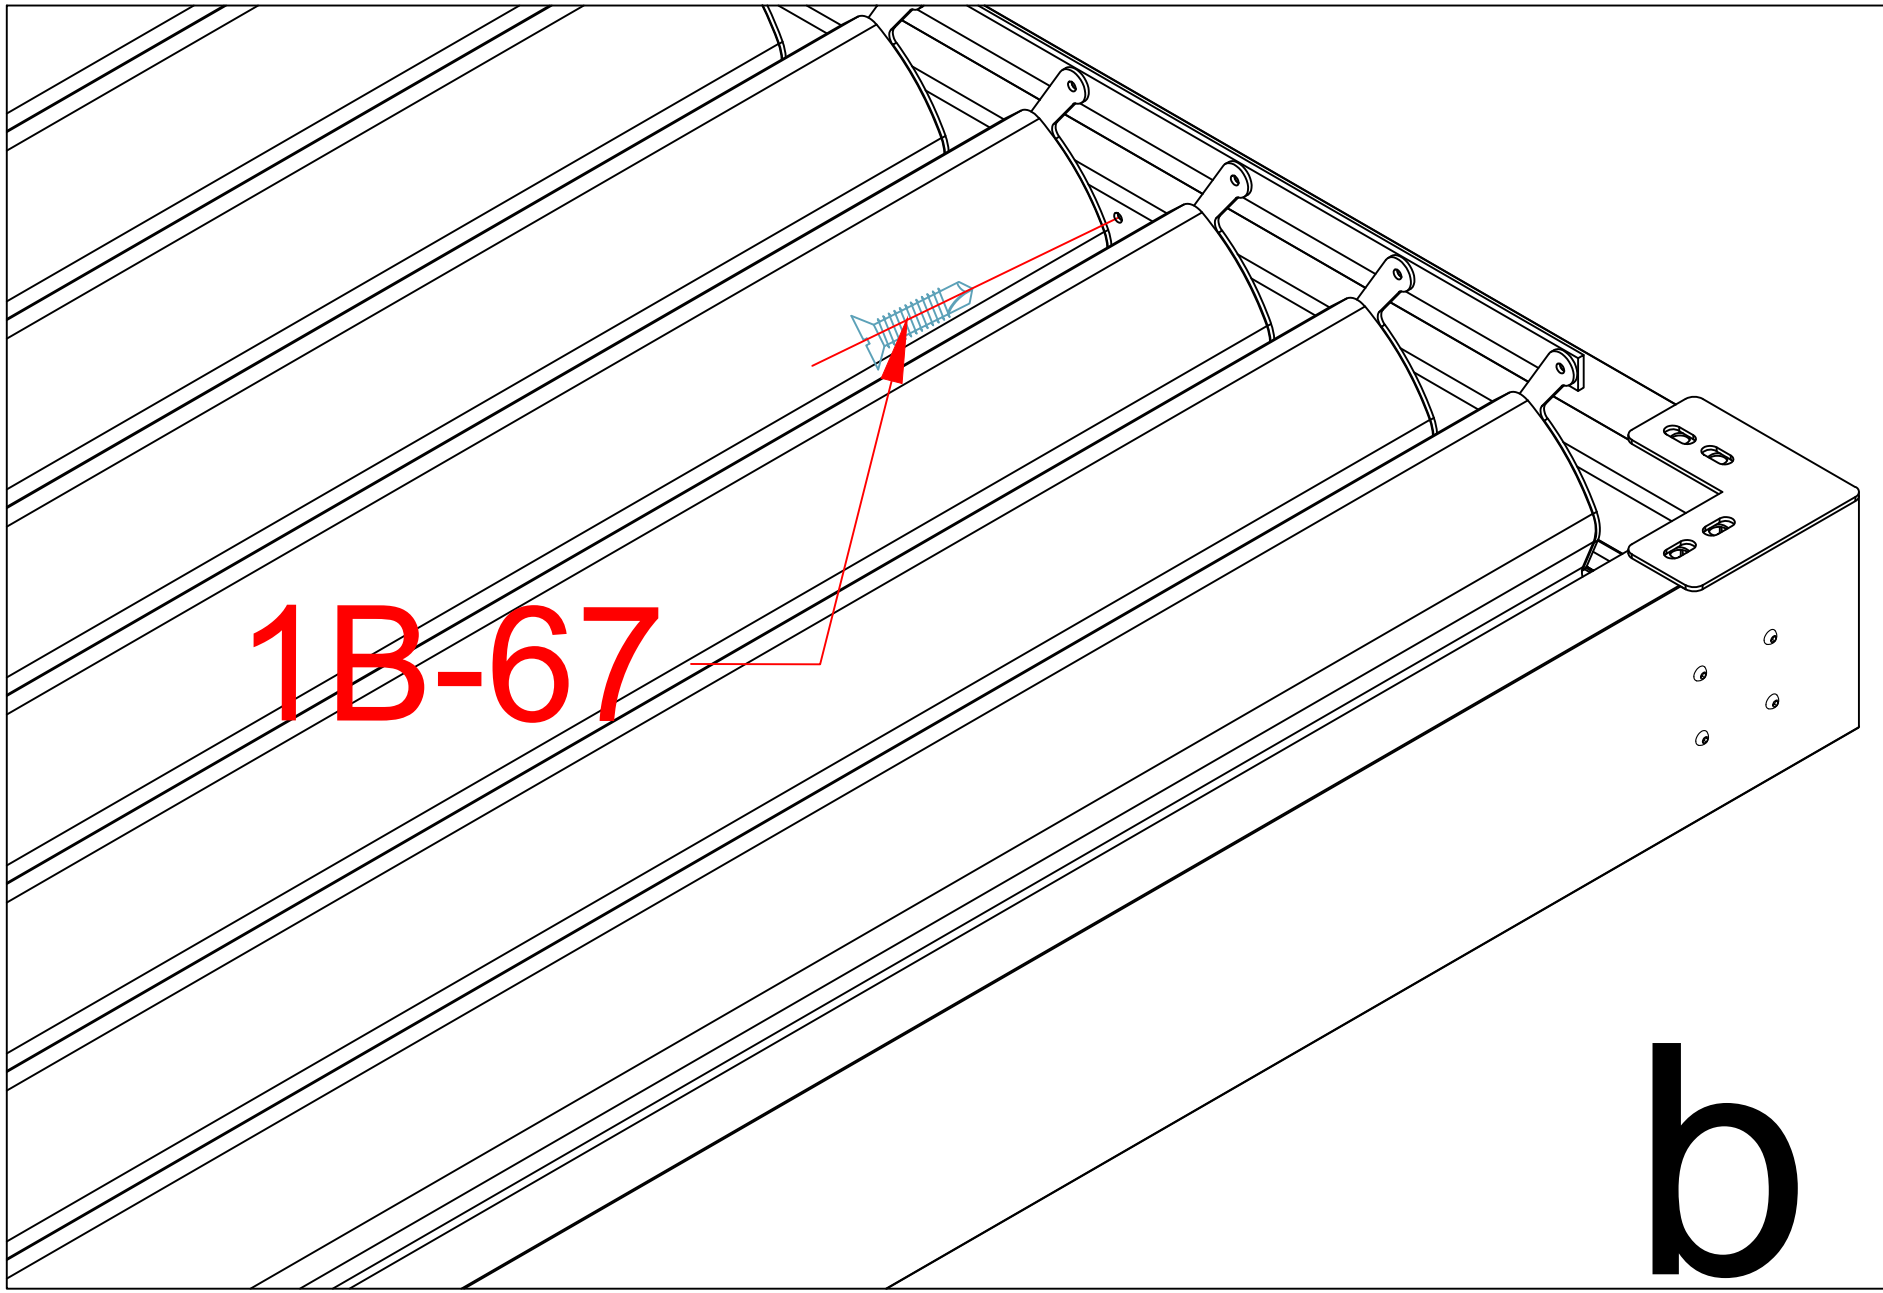






1B-67		14
1B-08		2

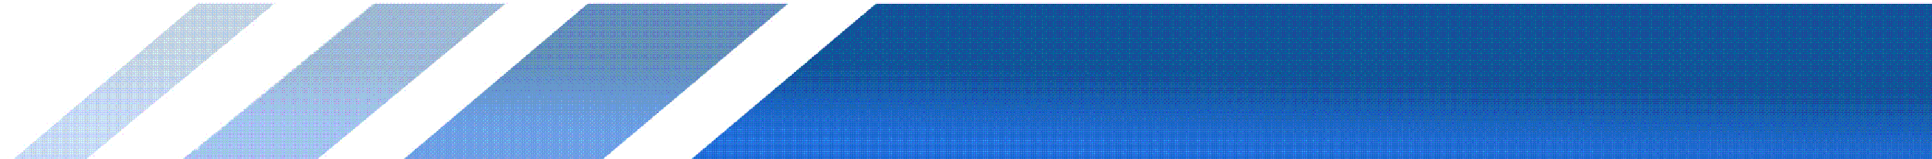

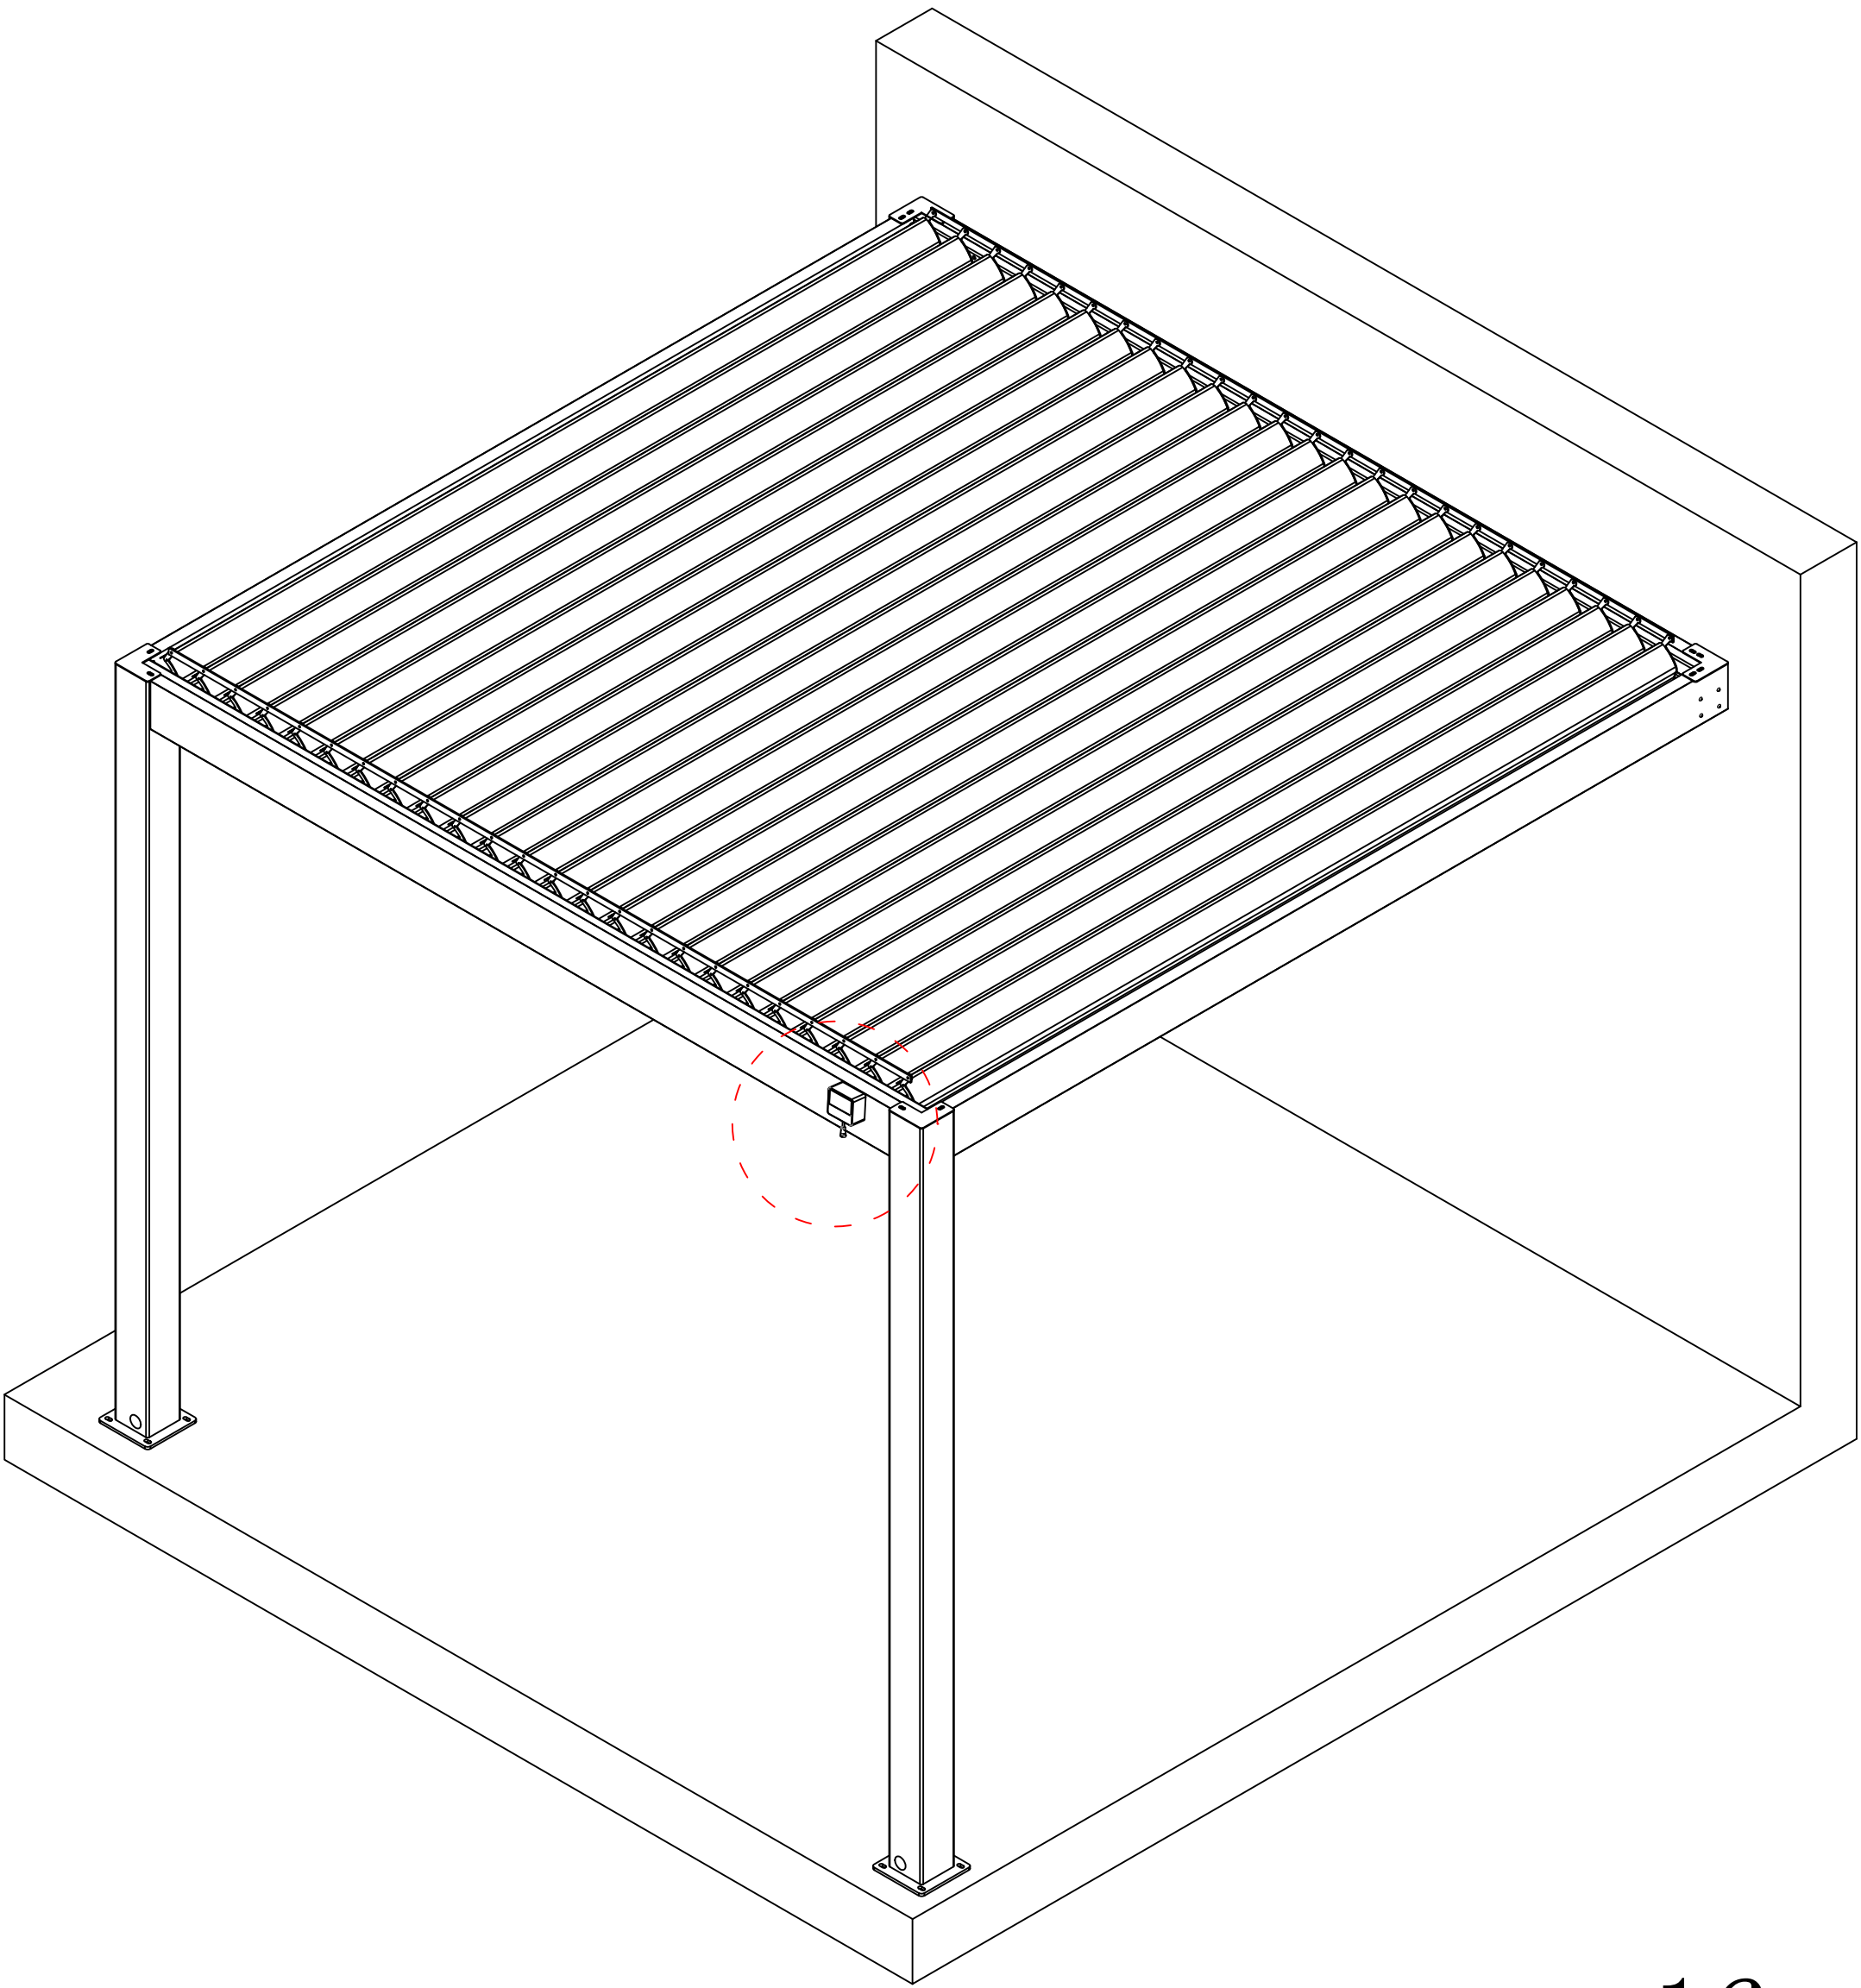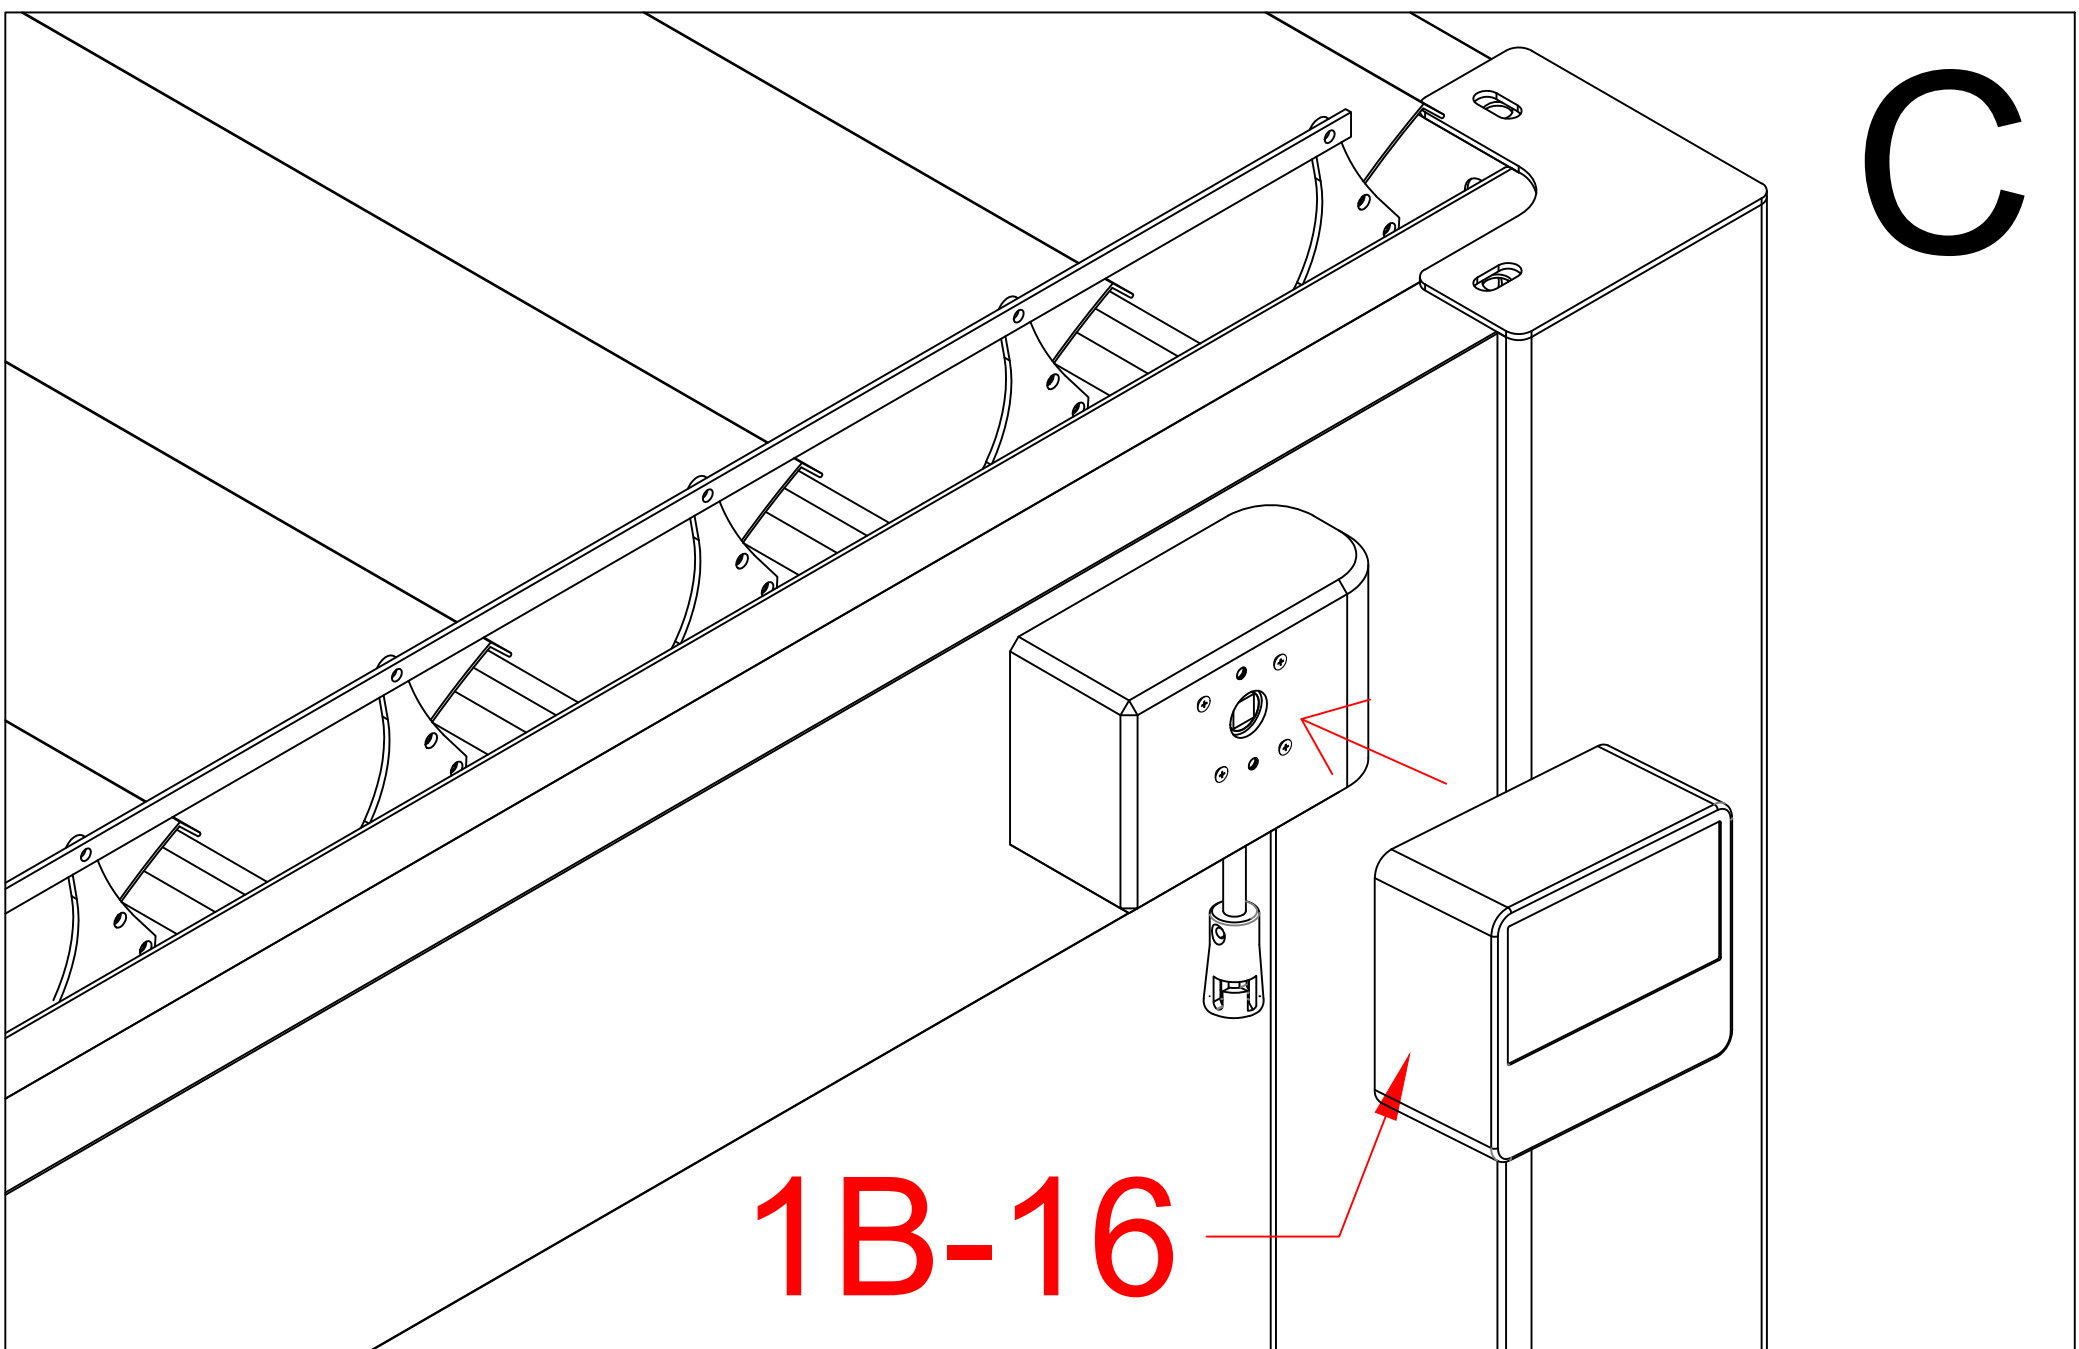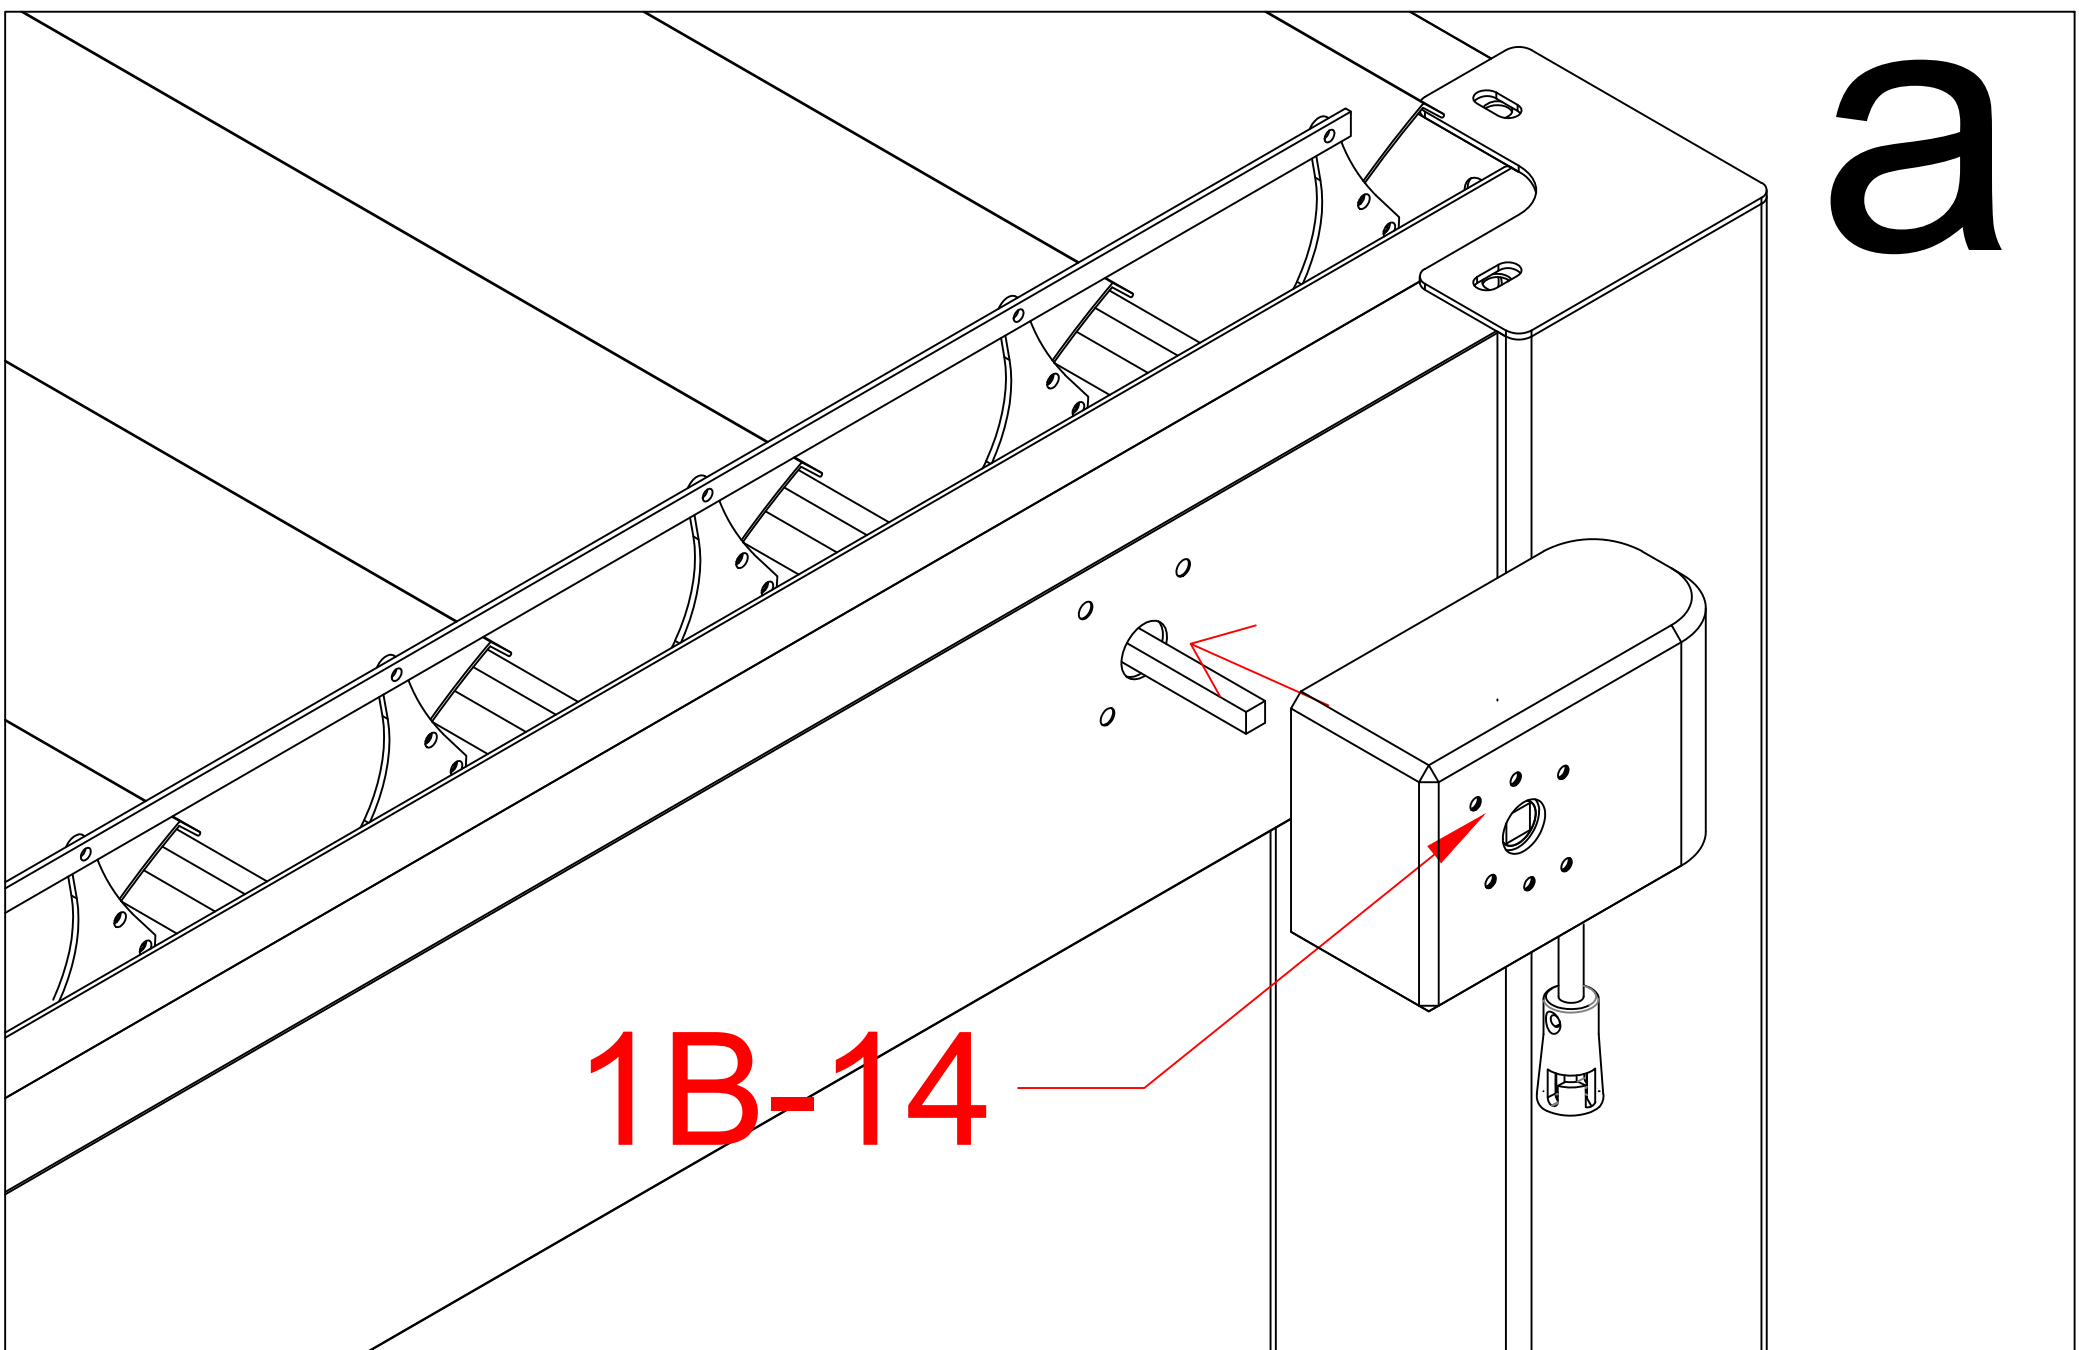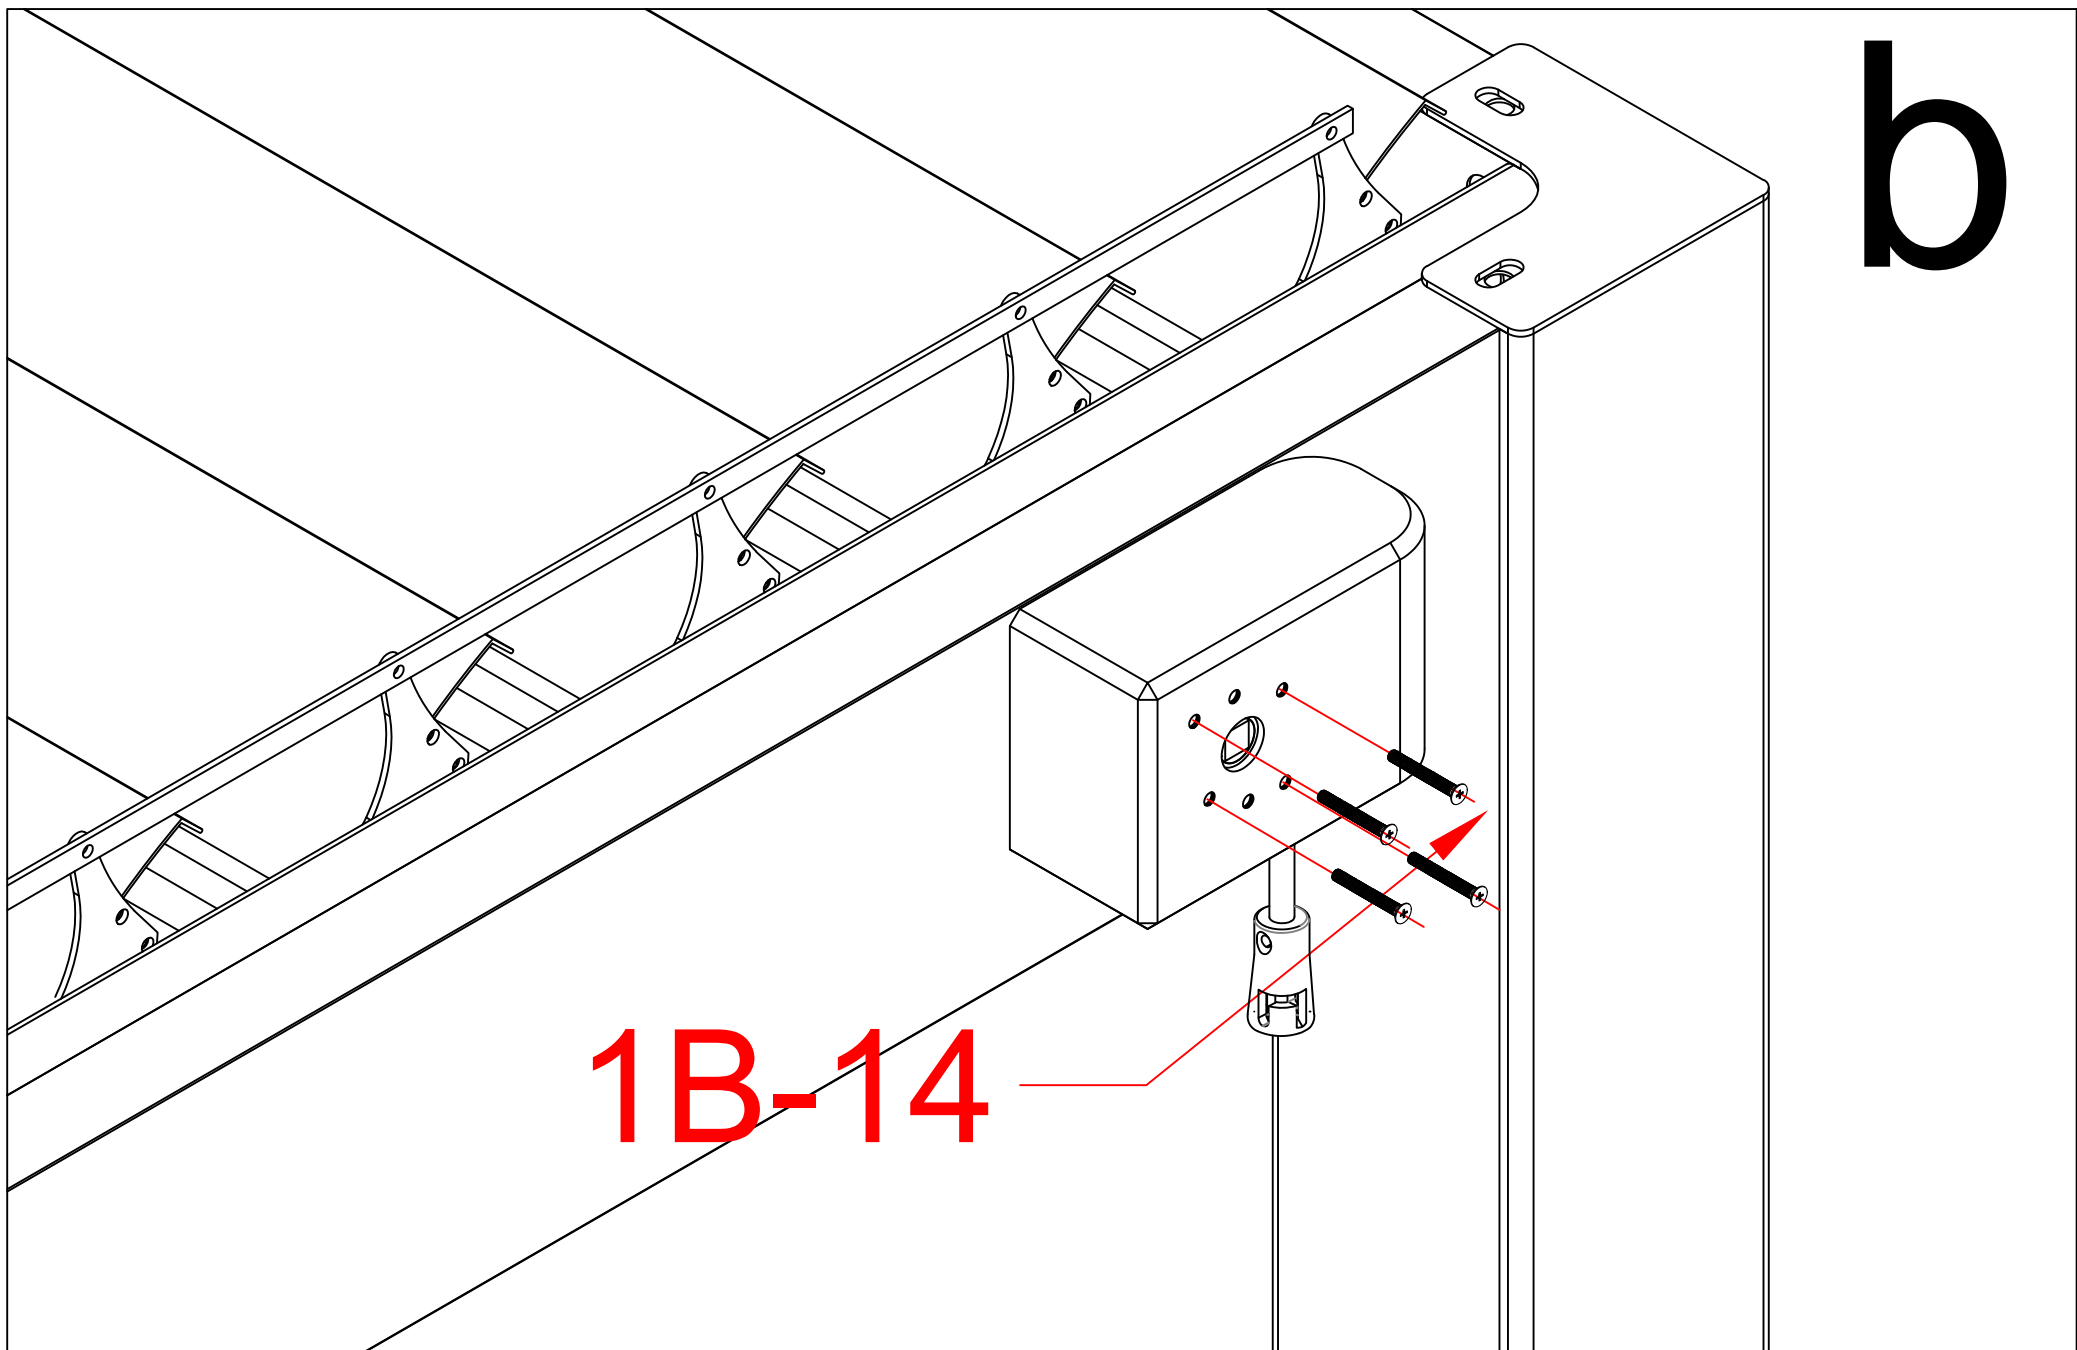


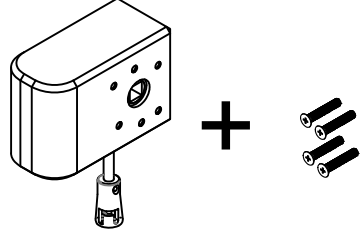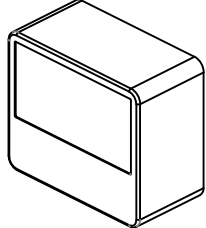
1B-14		1
1B-16		1

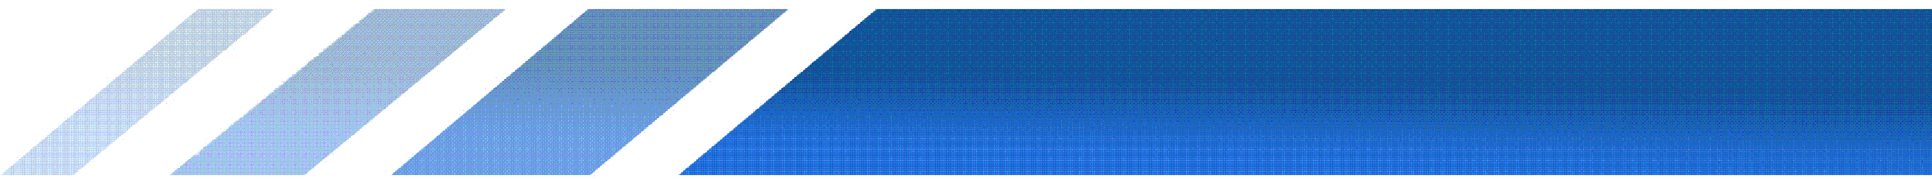

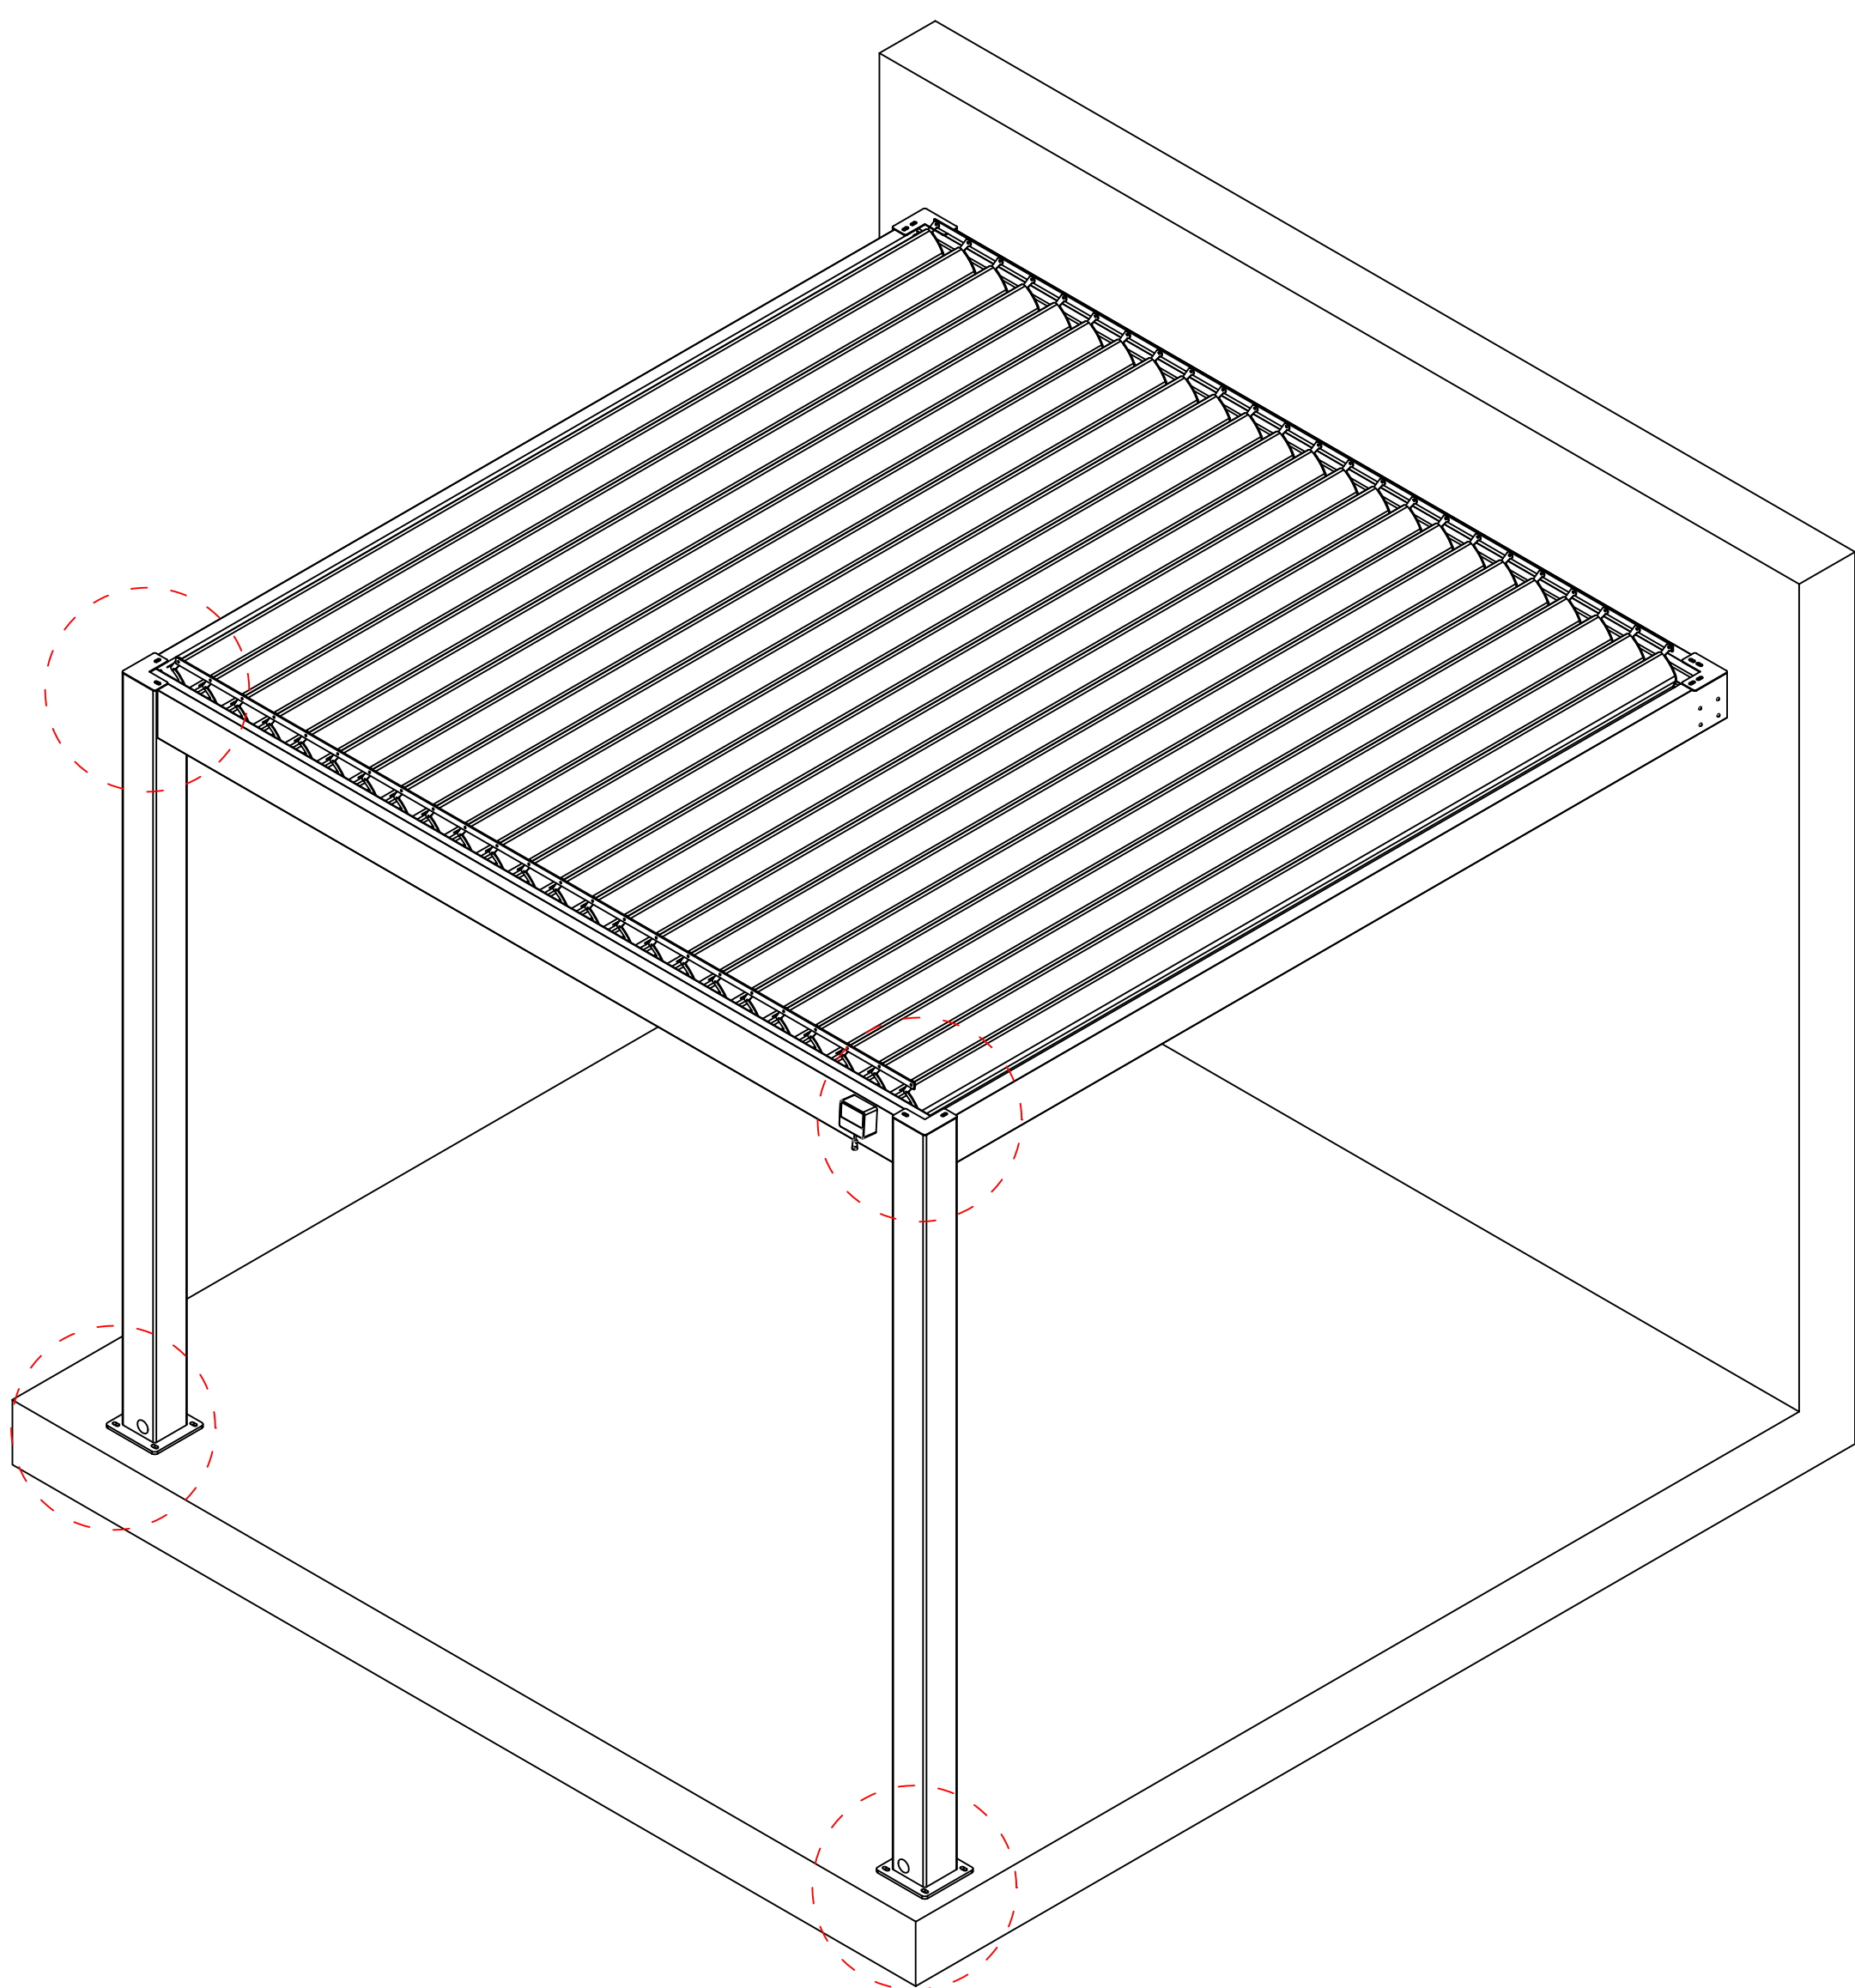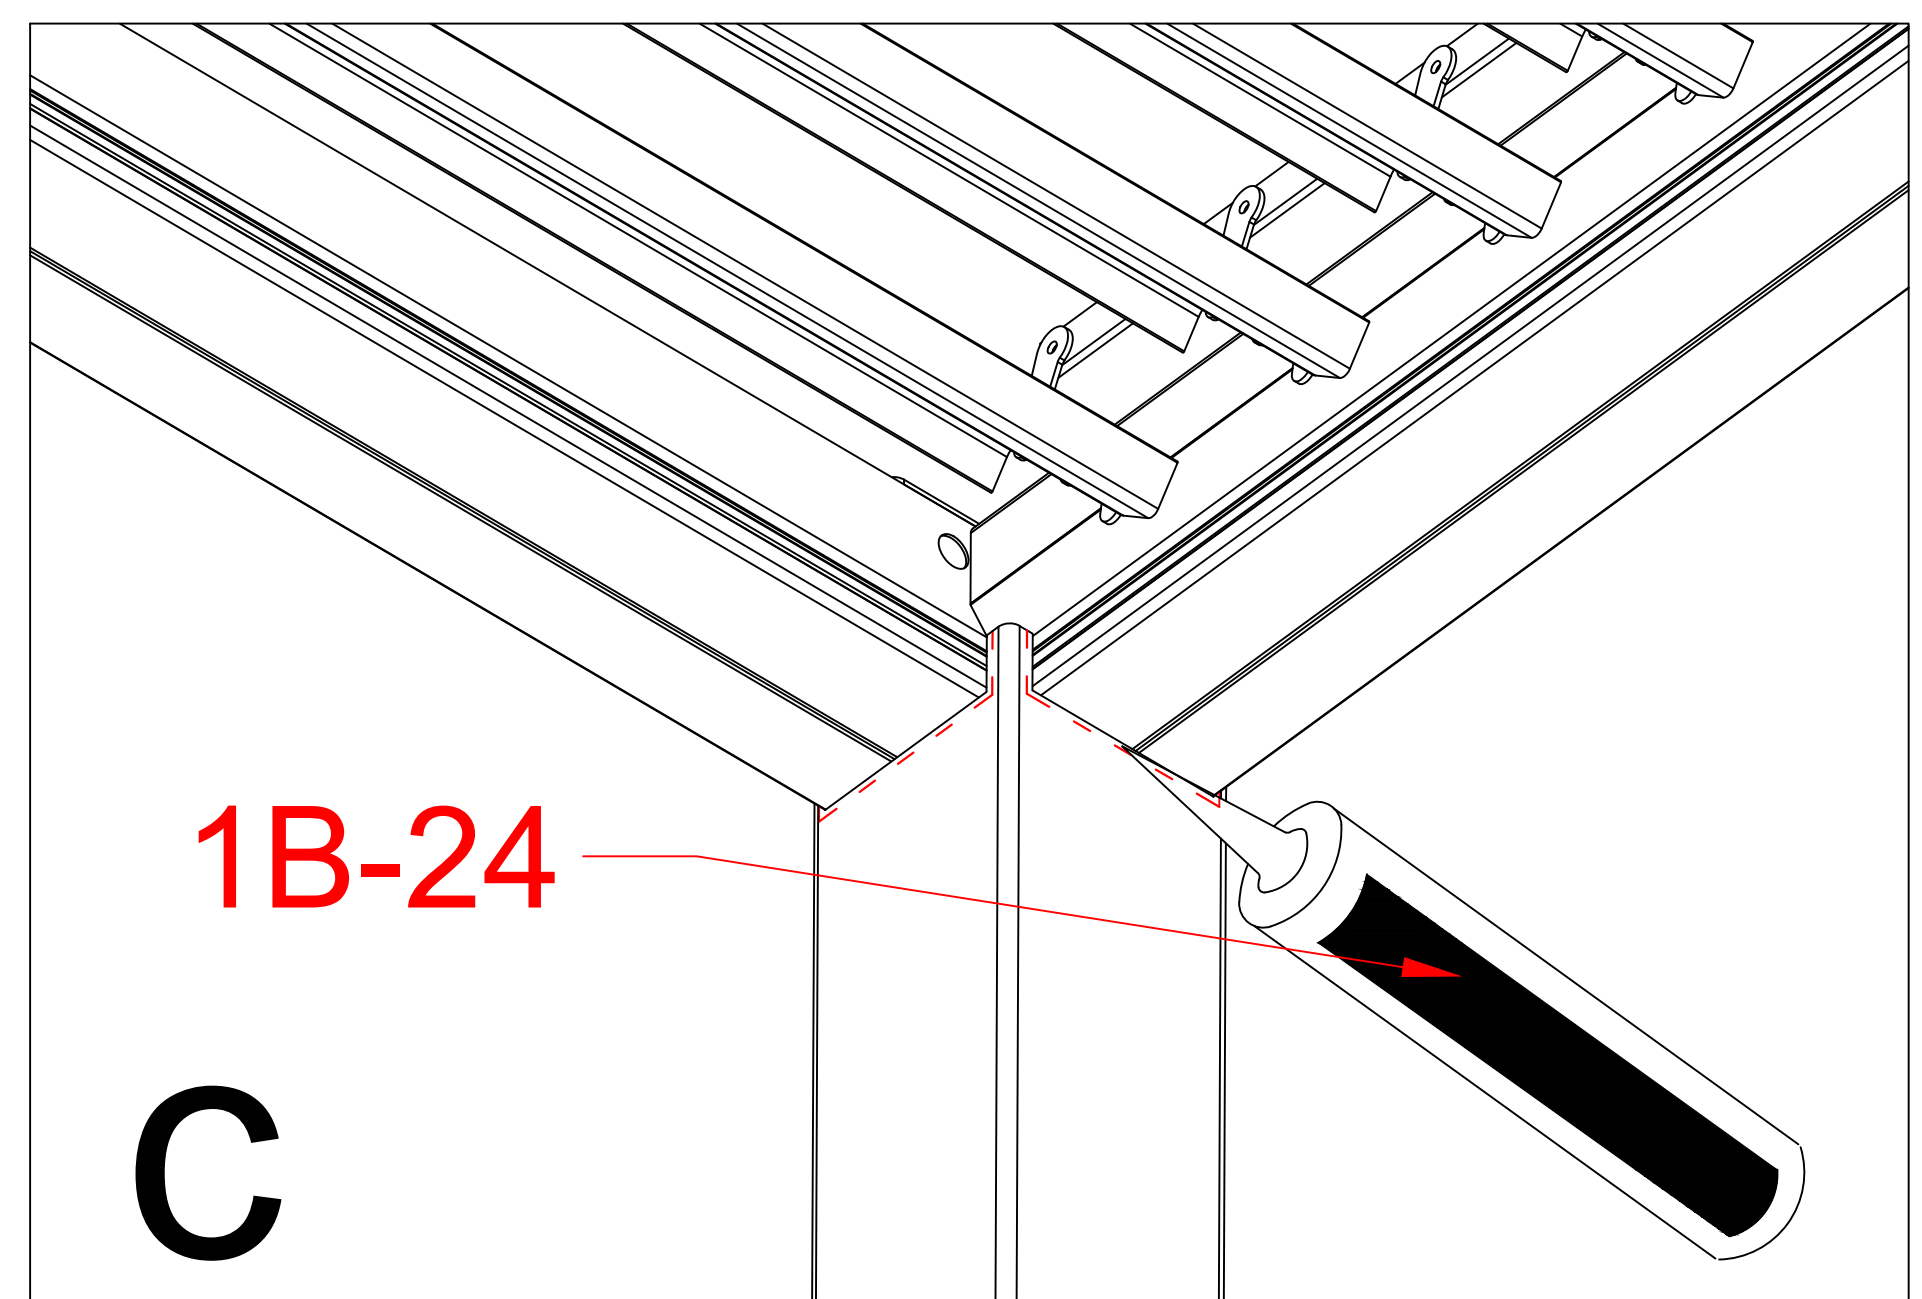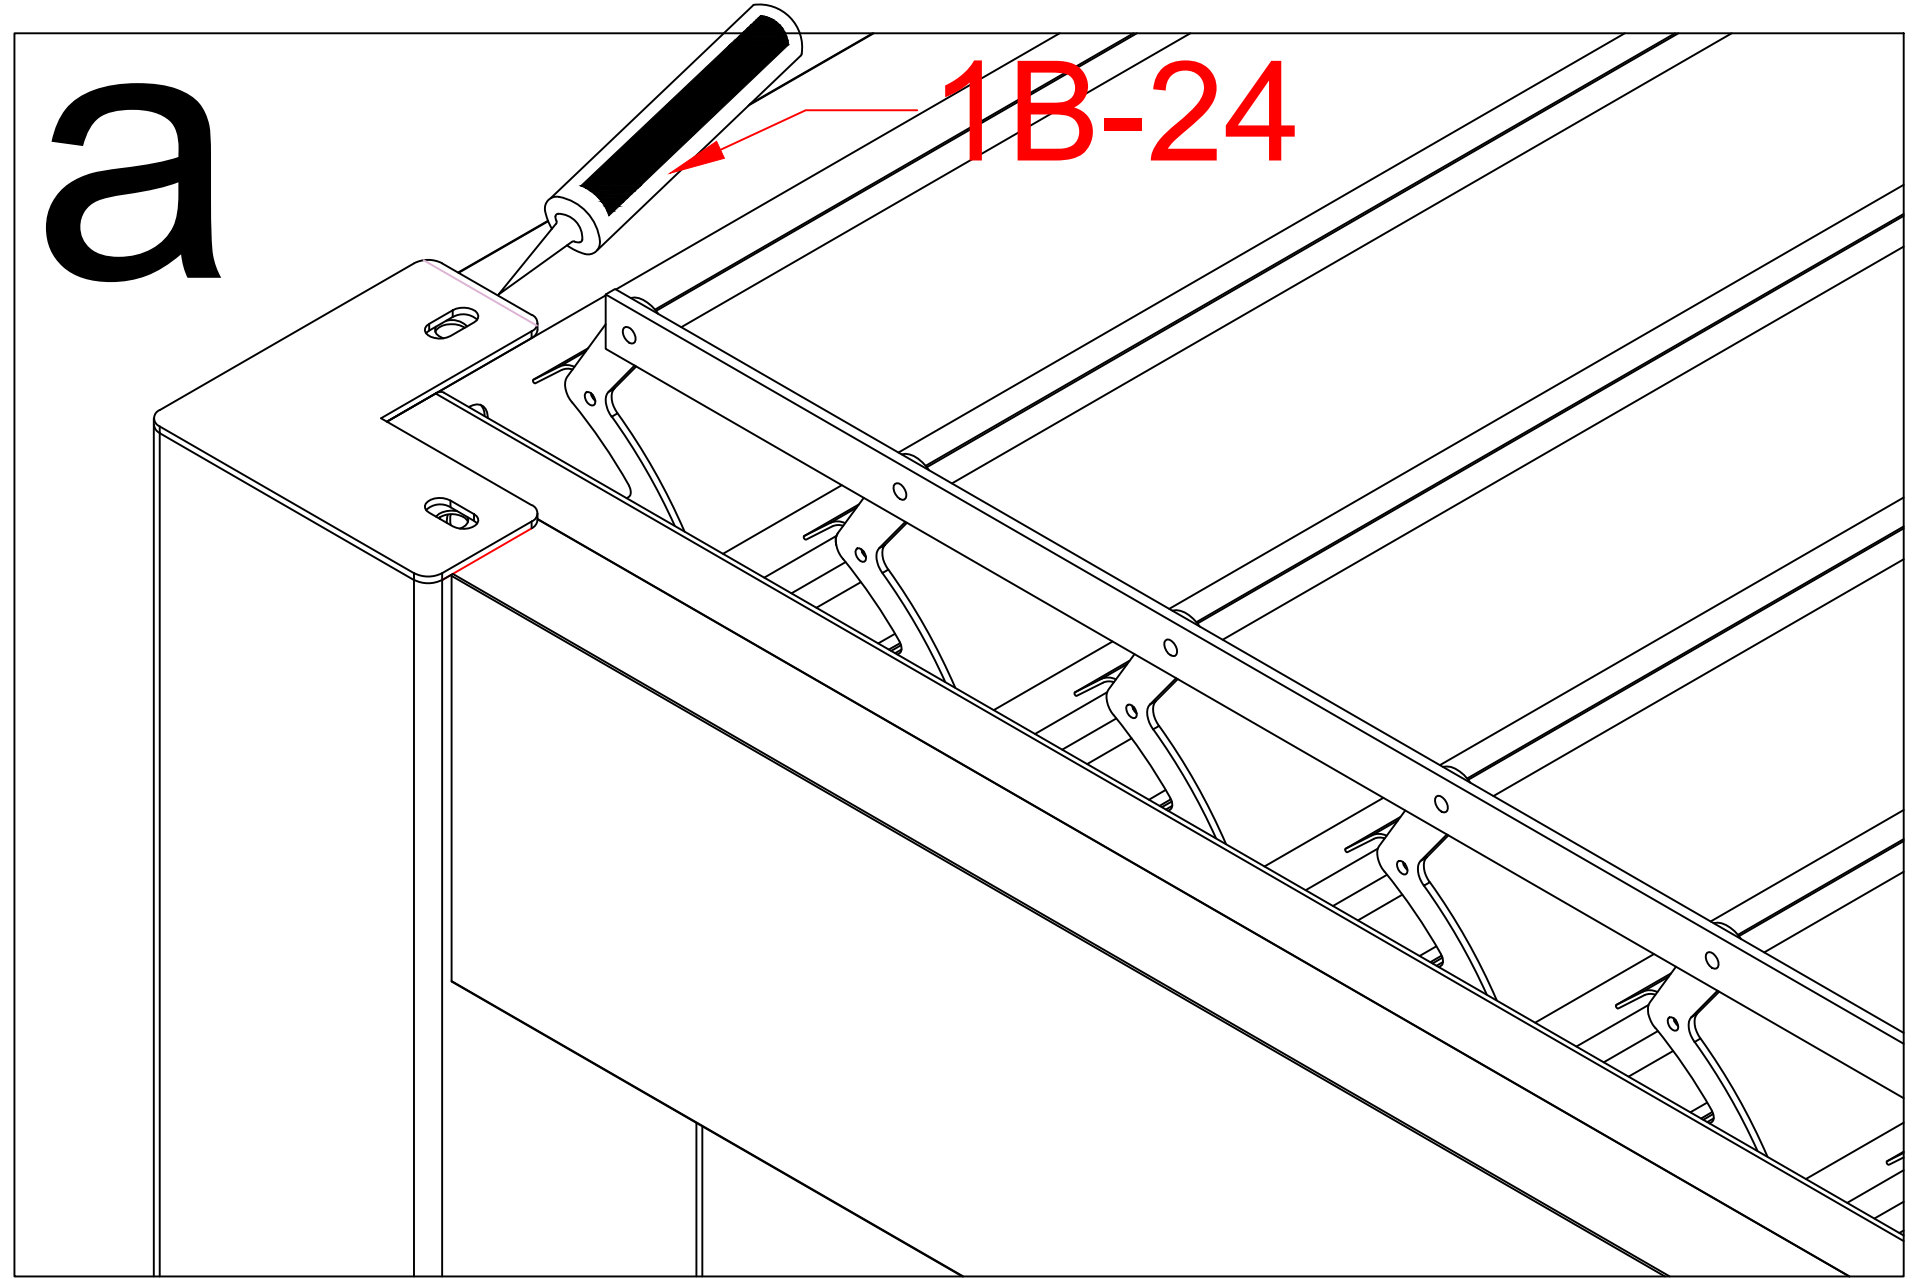
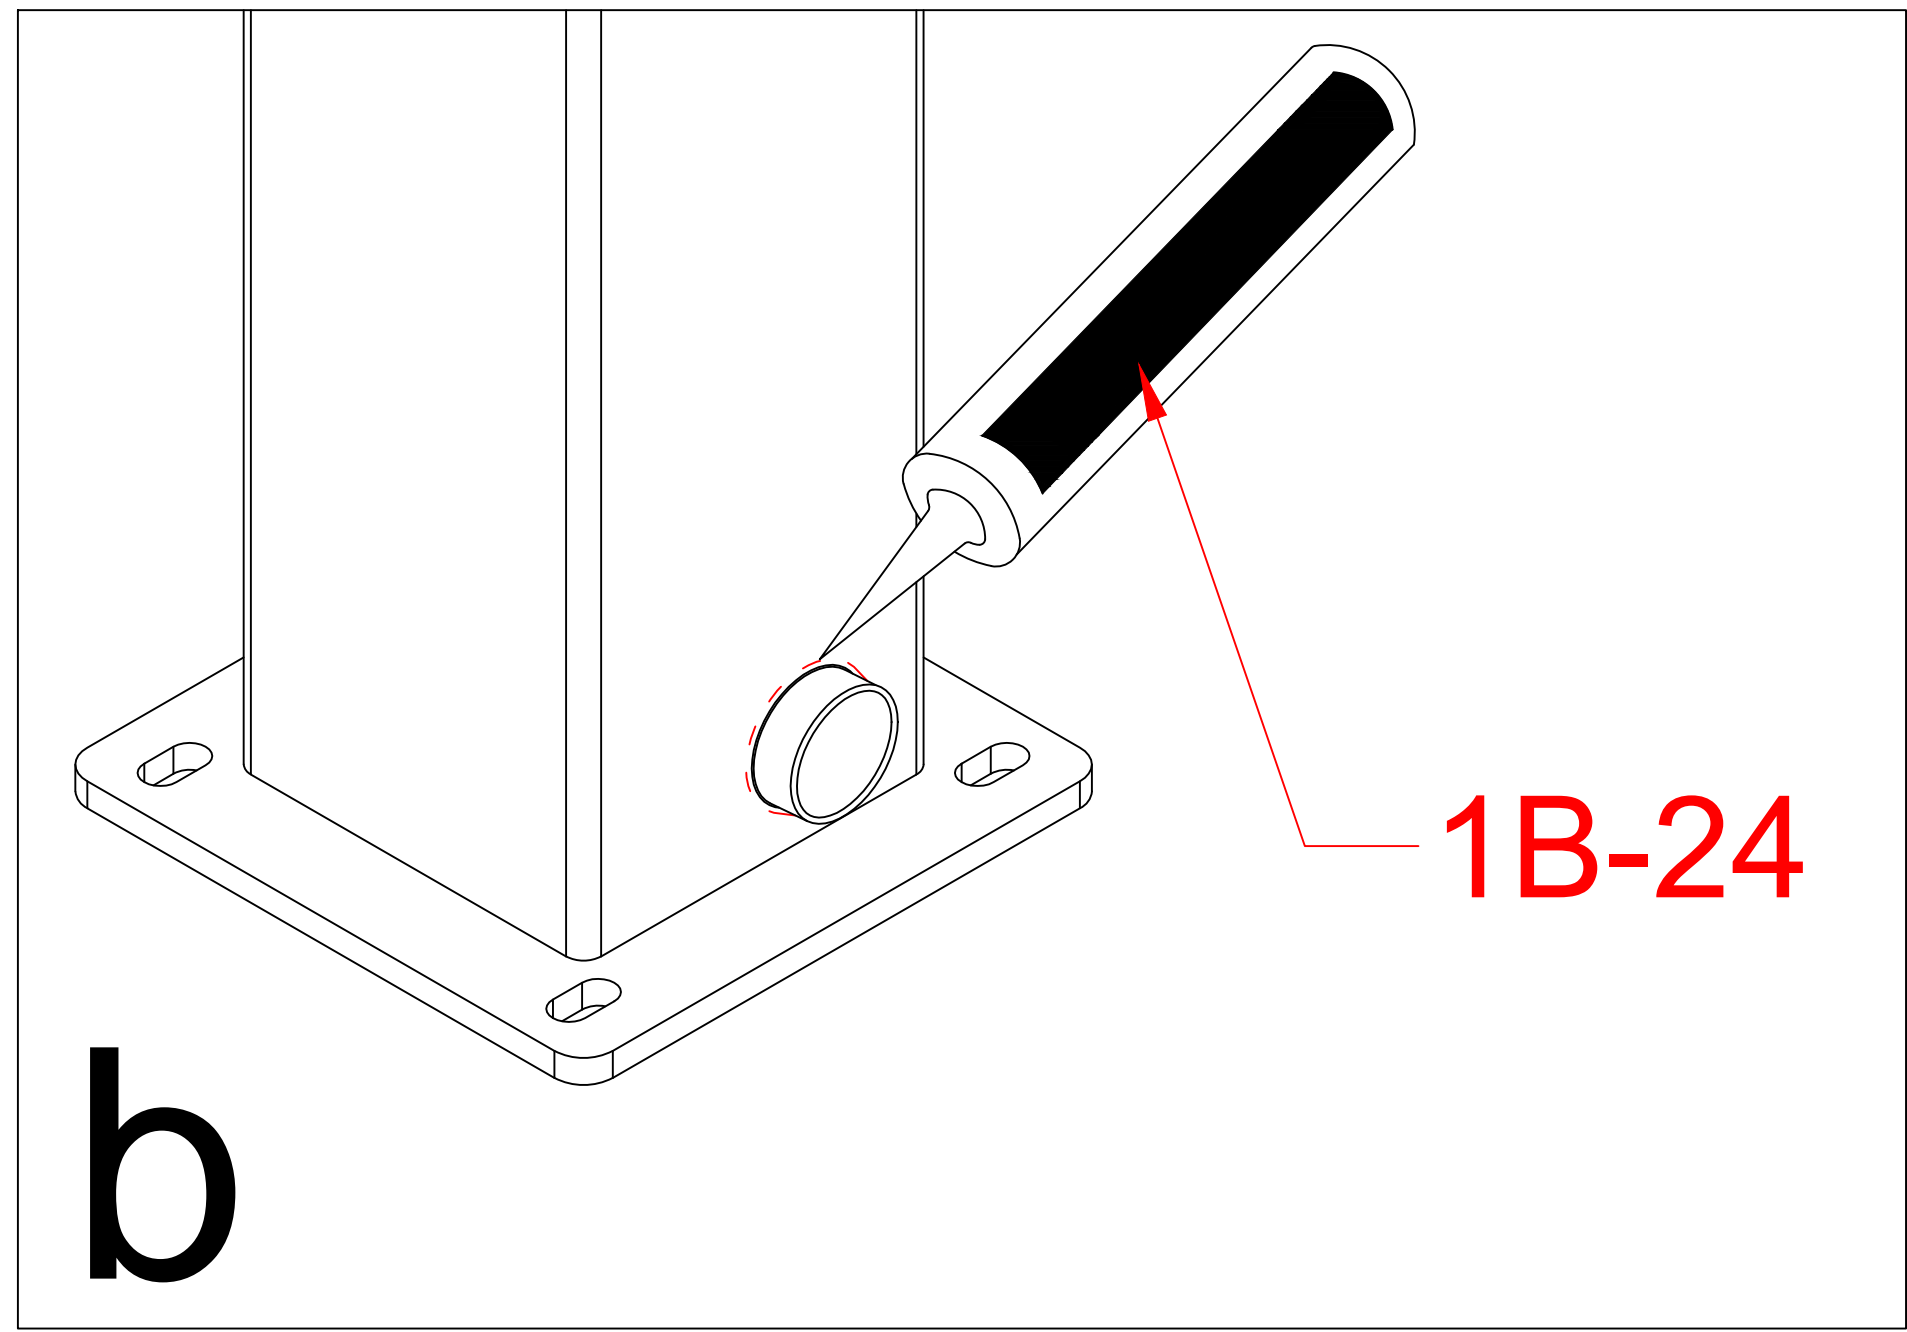


1B-24		1
-------	--	---

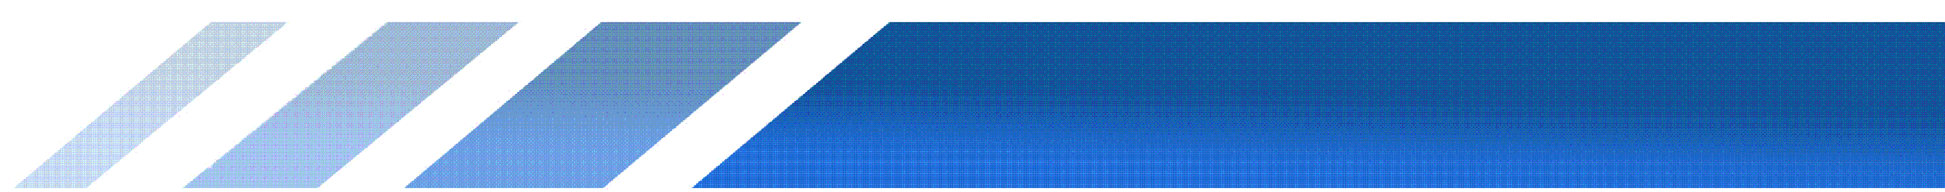

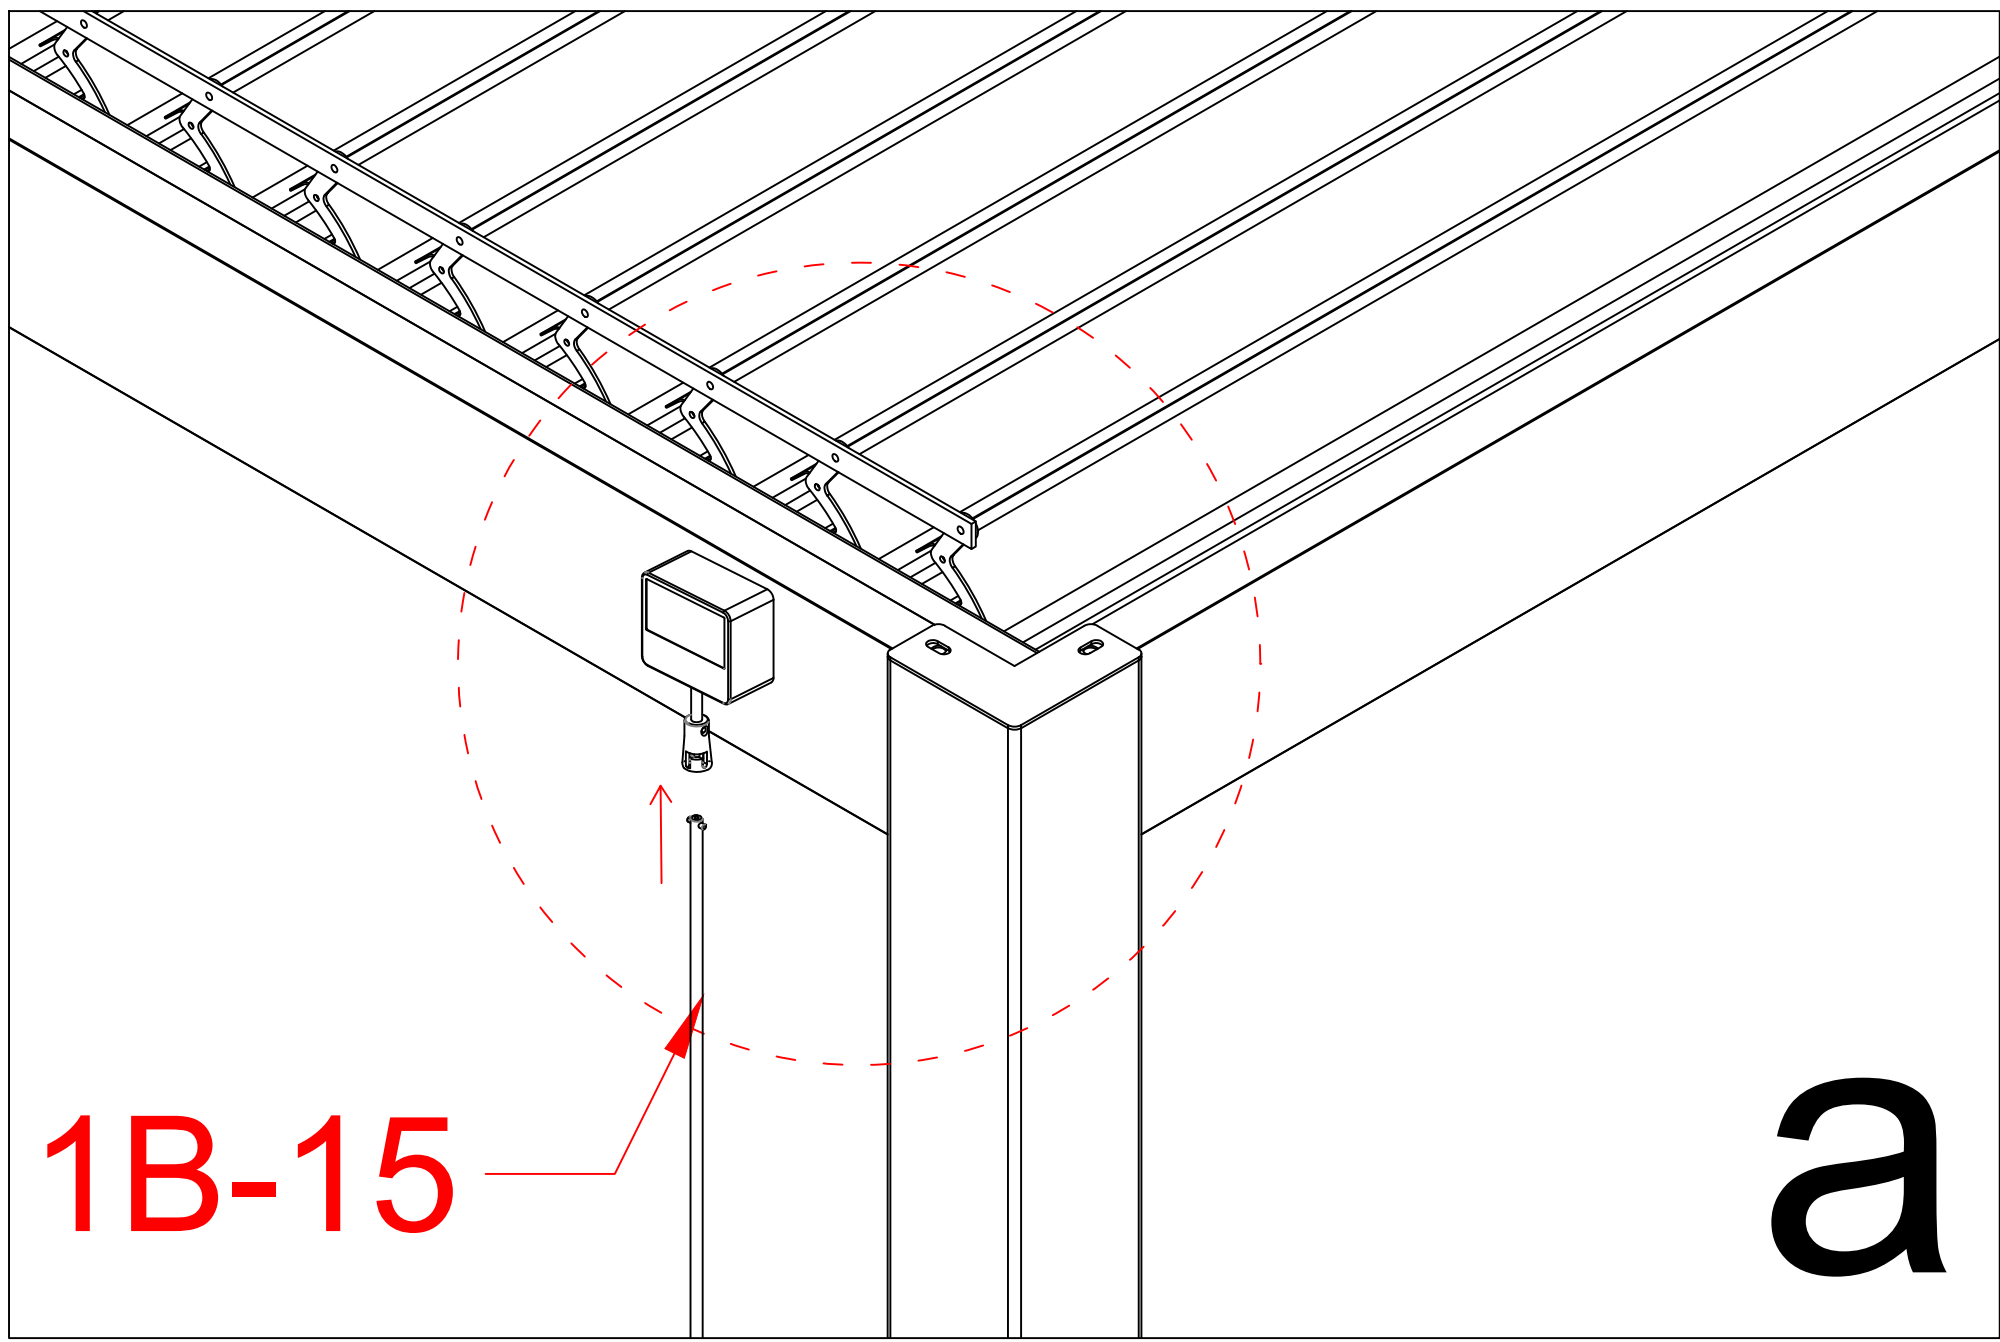

Warning :
 In Snow / Wind season or in case of
 snow / wind forecast open up your
 shutters in vertical position to avoid
 any damaging on your pergola.

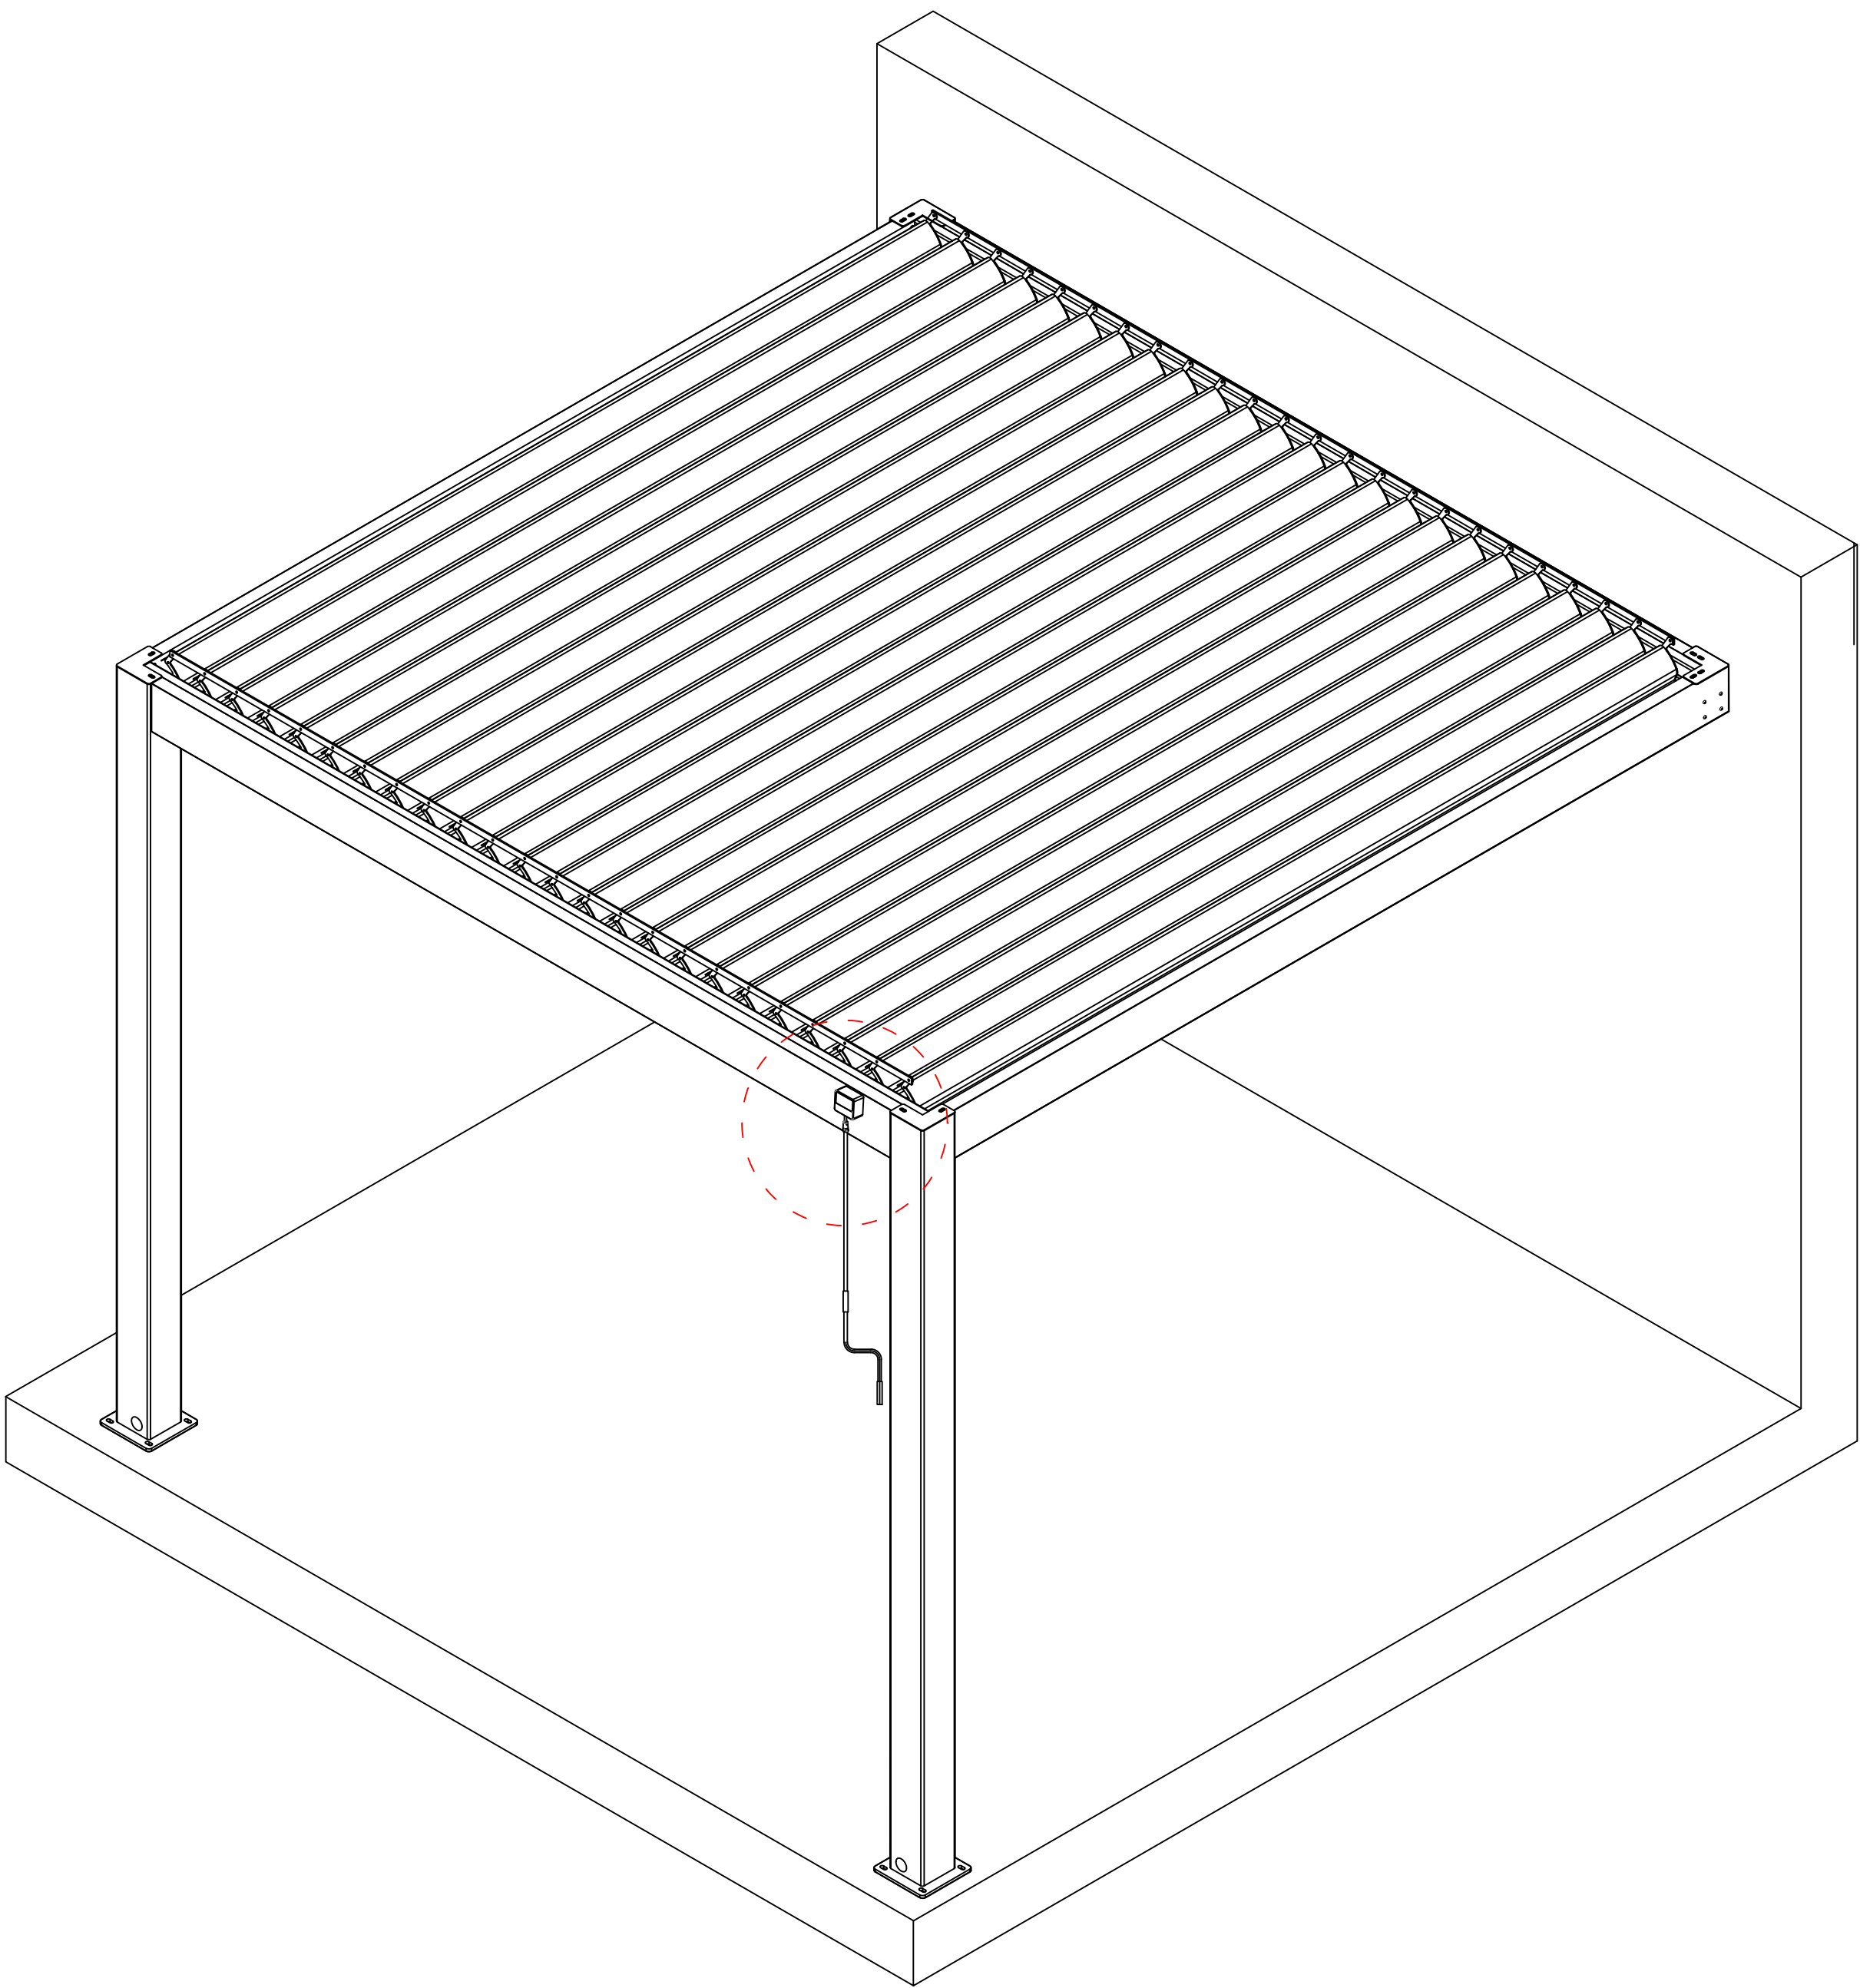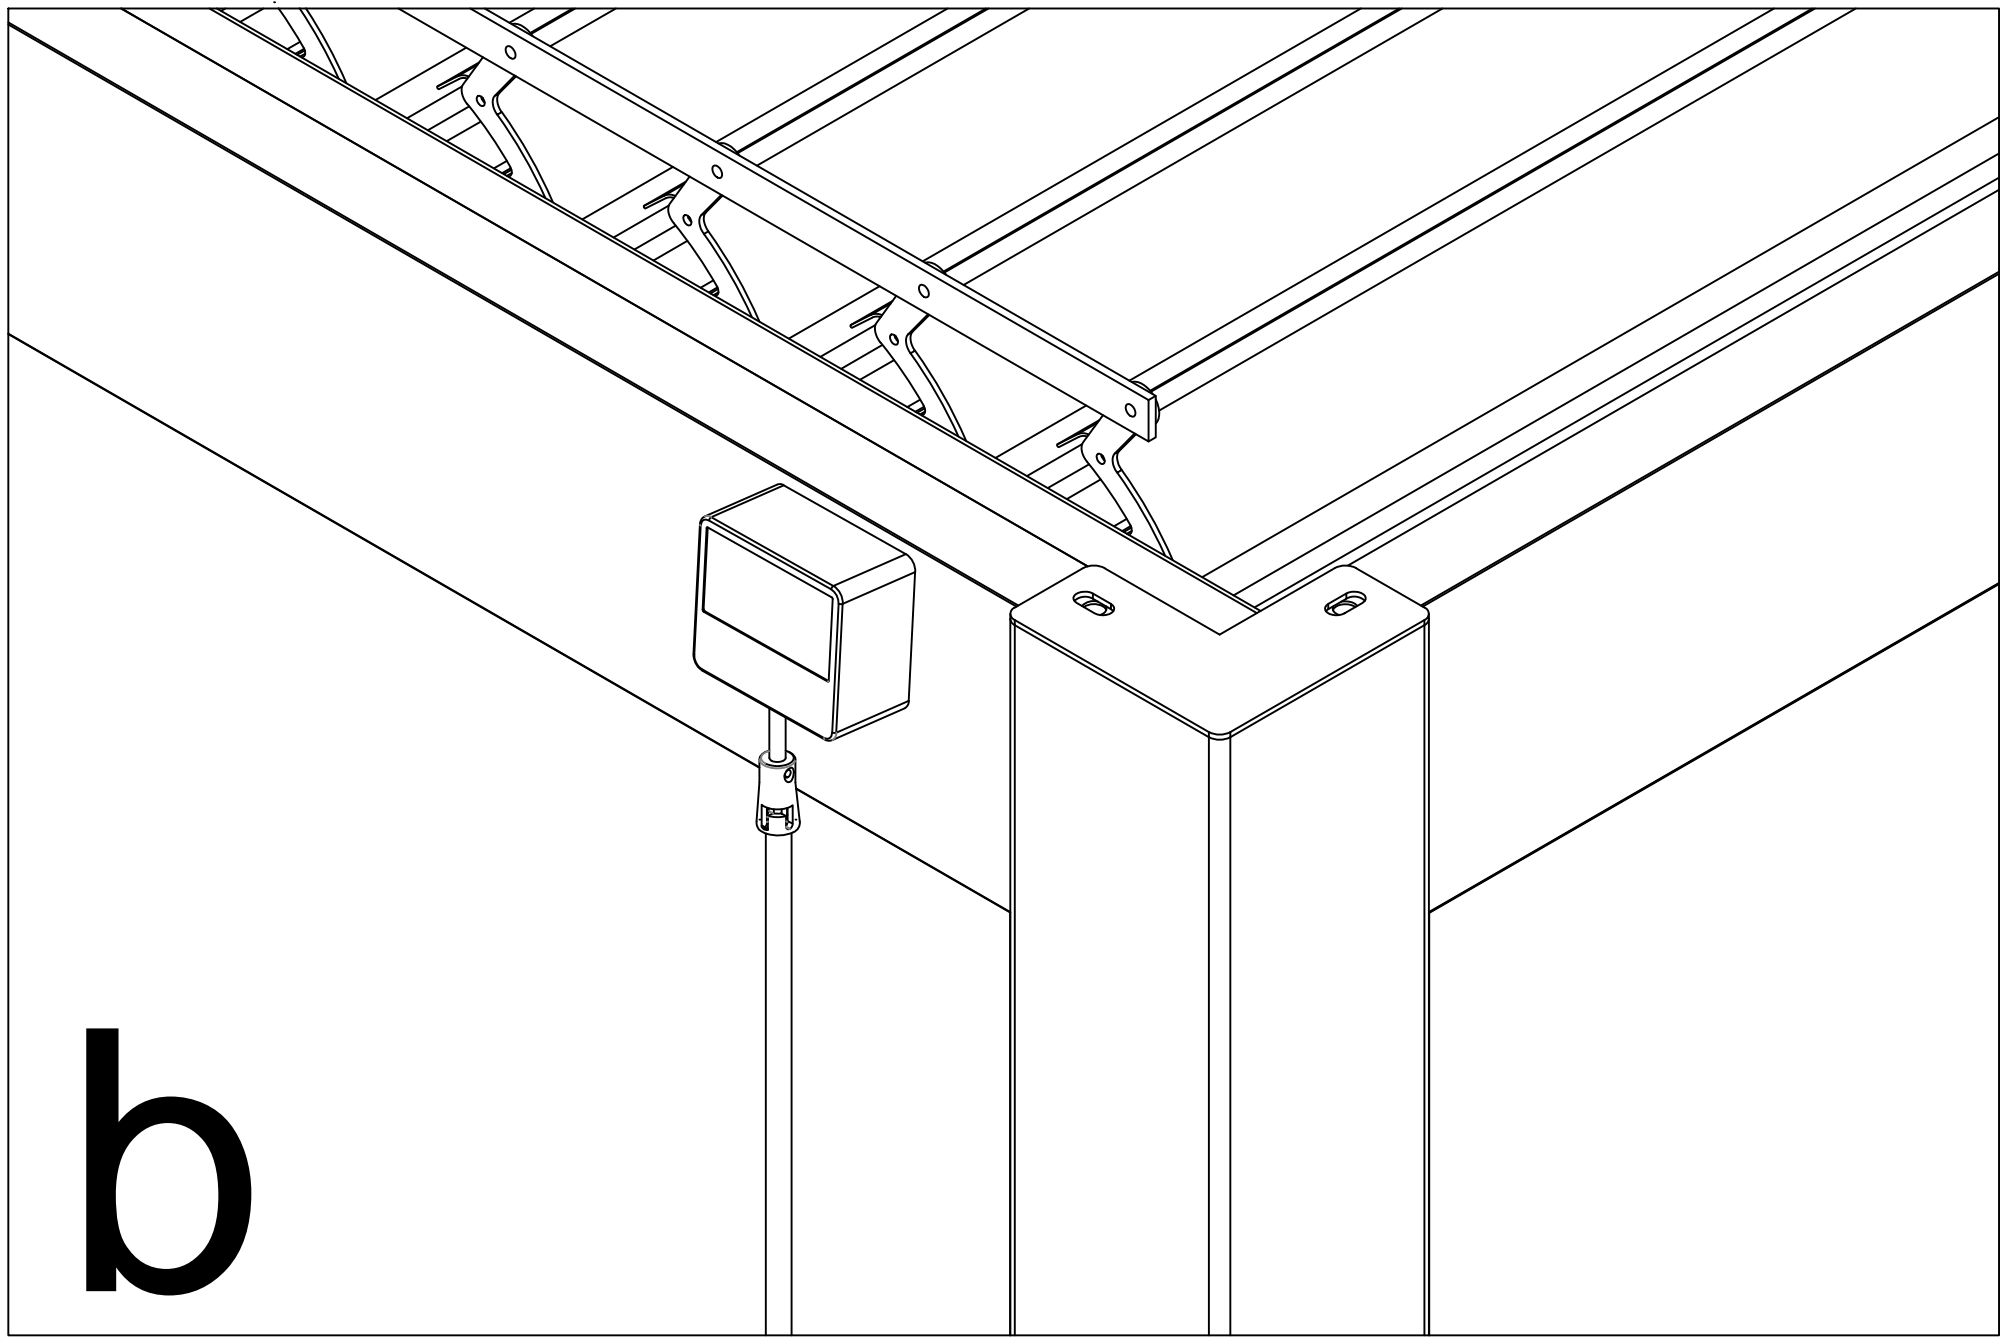

1B-15		1
-------	--	---