



MANUAL PERGOLA WALL MOUNTED 3 POSTS

3×5m






Installation and Wind Management Guidelines

1.Installation on Various Surfaces

For WPC (Wood Plastic Composite), antiseptic wood, ceramic, or stone flooring, it is essential to either concrete the post directly or construct a 50cm concrete foundation beneath the base plate to secure it firmly.

2.Wind Management

In the event of strong winds, the louvers must be opened to maintain proper air circulation and minimise wind resistance.”


















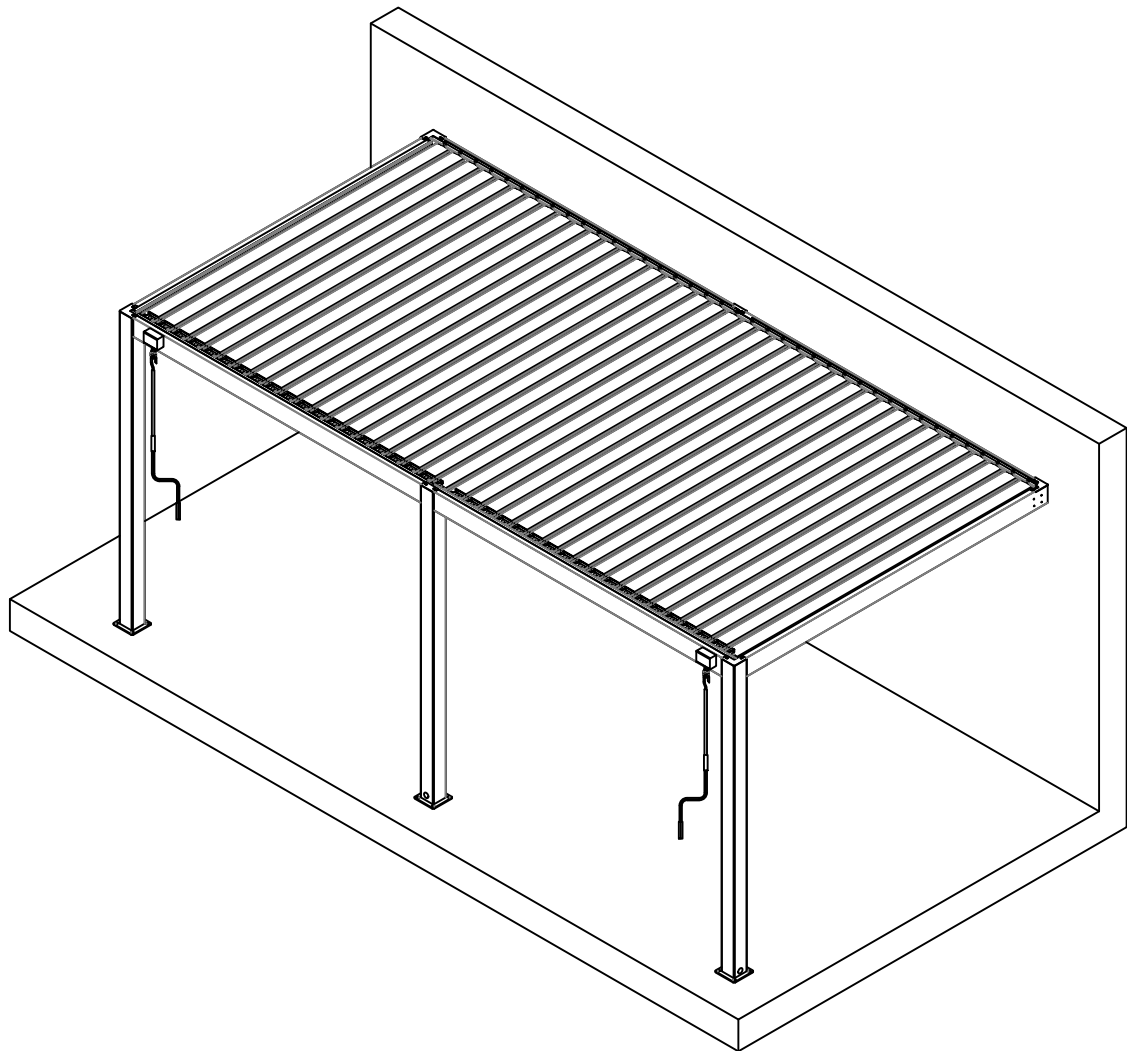




	Item	Qty	Item	Qty	Item	Qty
Carton 1/6	3B-01	2	3B-27	1	3B-11	2
	3B-12	2	3B-13/B	3	3B-14	2
	3B-15	2	3B-18	1	3B-19	16+
	3B-20	66+	3B-21	12+	3B-22	18+
	3B-23	20+	3B-24	1	3B-26	2
	3B-32	2	3B-33	2	3B-35	2
	3B-36	10+	3B-16	2	3B-38	8
	3B-40	2	3B-41	2	3B-42	8
	3B-39	16+	3B-45	8	3B-46	8
	3B-48	33+	3B-49	31+	3B-50	2
	3B-51	264+	3B-63	4	3B-67	20+
Carton 2/6	3B-02	1	3B-02-2	1	3B-03	1
	3B-03-2	1	3B-05	2	3B-34	2
	3B-05-1 /-2	4	3B-08A	1	3B-08B	1
	3B-08C	1	3B-08D	1	3B-09	4
Carton 3/6	3B-06	9				
Carton 4/6	3B-06	9				
Carton 5/6	3B-06	9				
Carton 6/6	3B-06	6	3B-04	2		










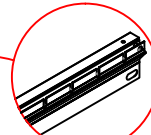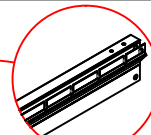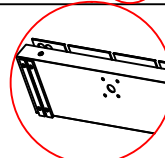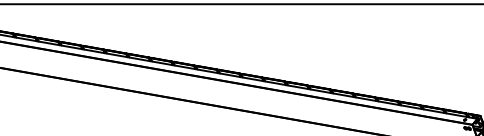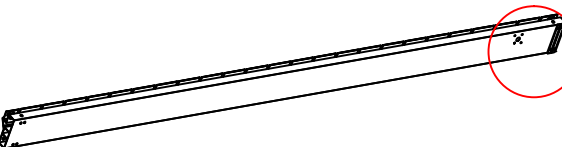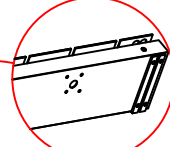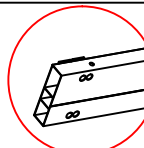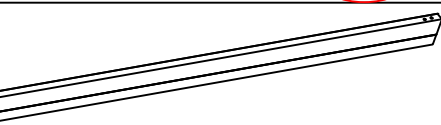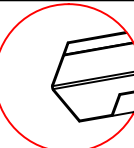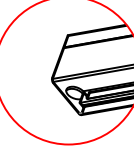

Item	Drawings	Qty
3B-01	 	2
3B-02	   	1
3B-02-2	   	1
3B-03	   	1
3B-03-2	  	1
3B-04	   	2
3B-05	 	2
3B-05-1	  	2
3B-05-2	  	2
3B-06	 	33



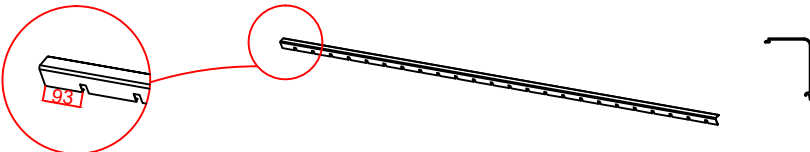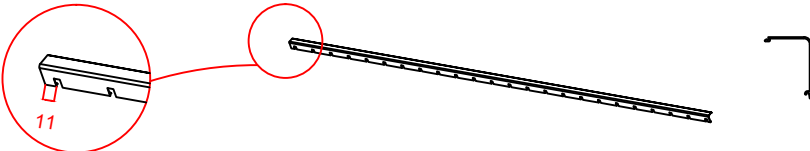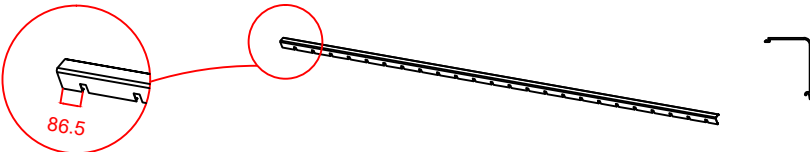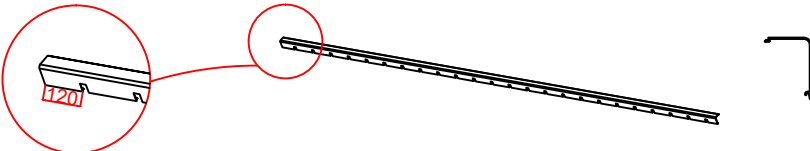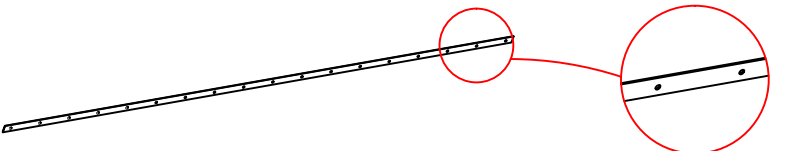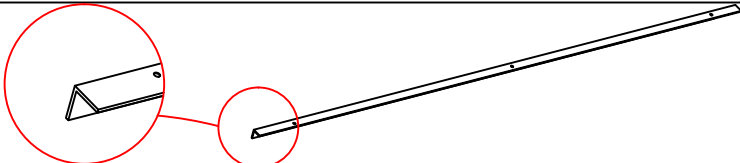

Item	Drawings	Qty
3B-08A		1
3B-08B		1
3B-08C		1
3B-08D		1
3B-09		4
3B-27		1
3B-34		2









Item	Drawings	Qty
3B-11		2
3B-12		2
3B-13		2
3B-13B		1
3B-14		2
3B-15		2
3B-18		1
3B-19	 M8*20	16+
3B-20		66+
3B-21	 M10*80	12+
3B-22		18+
3B-23	 M4.2*19	20+
3B-24		1
3B-26		2
3B-32		2
3B-33		2


Item	Drawings	Qty
3B-35		2
3B-36		10+
3B-16		2
3B-38	 M5.5*25	8
3B-40		2
3B-41		2
3B-42	 M10*20	8
3B-39	 M8*60	16+
3B-45	 M8*12	8
3B-46	 Φ12-M8*12	8
3B-48		33+
3B-49		31+
3B-50		2
3B-51	 M4.2*25	264+
3B-63		4
3B-67	 M4.2*50	20+





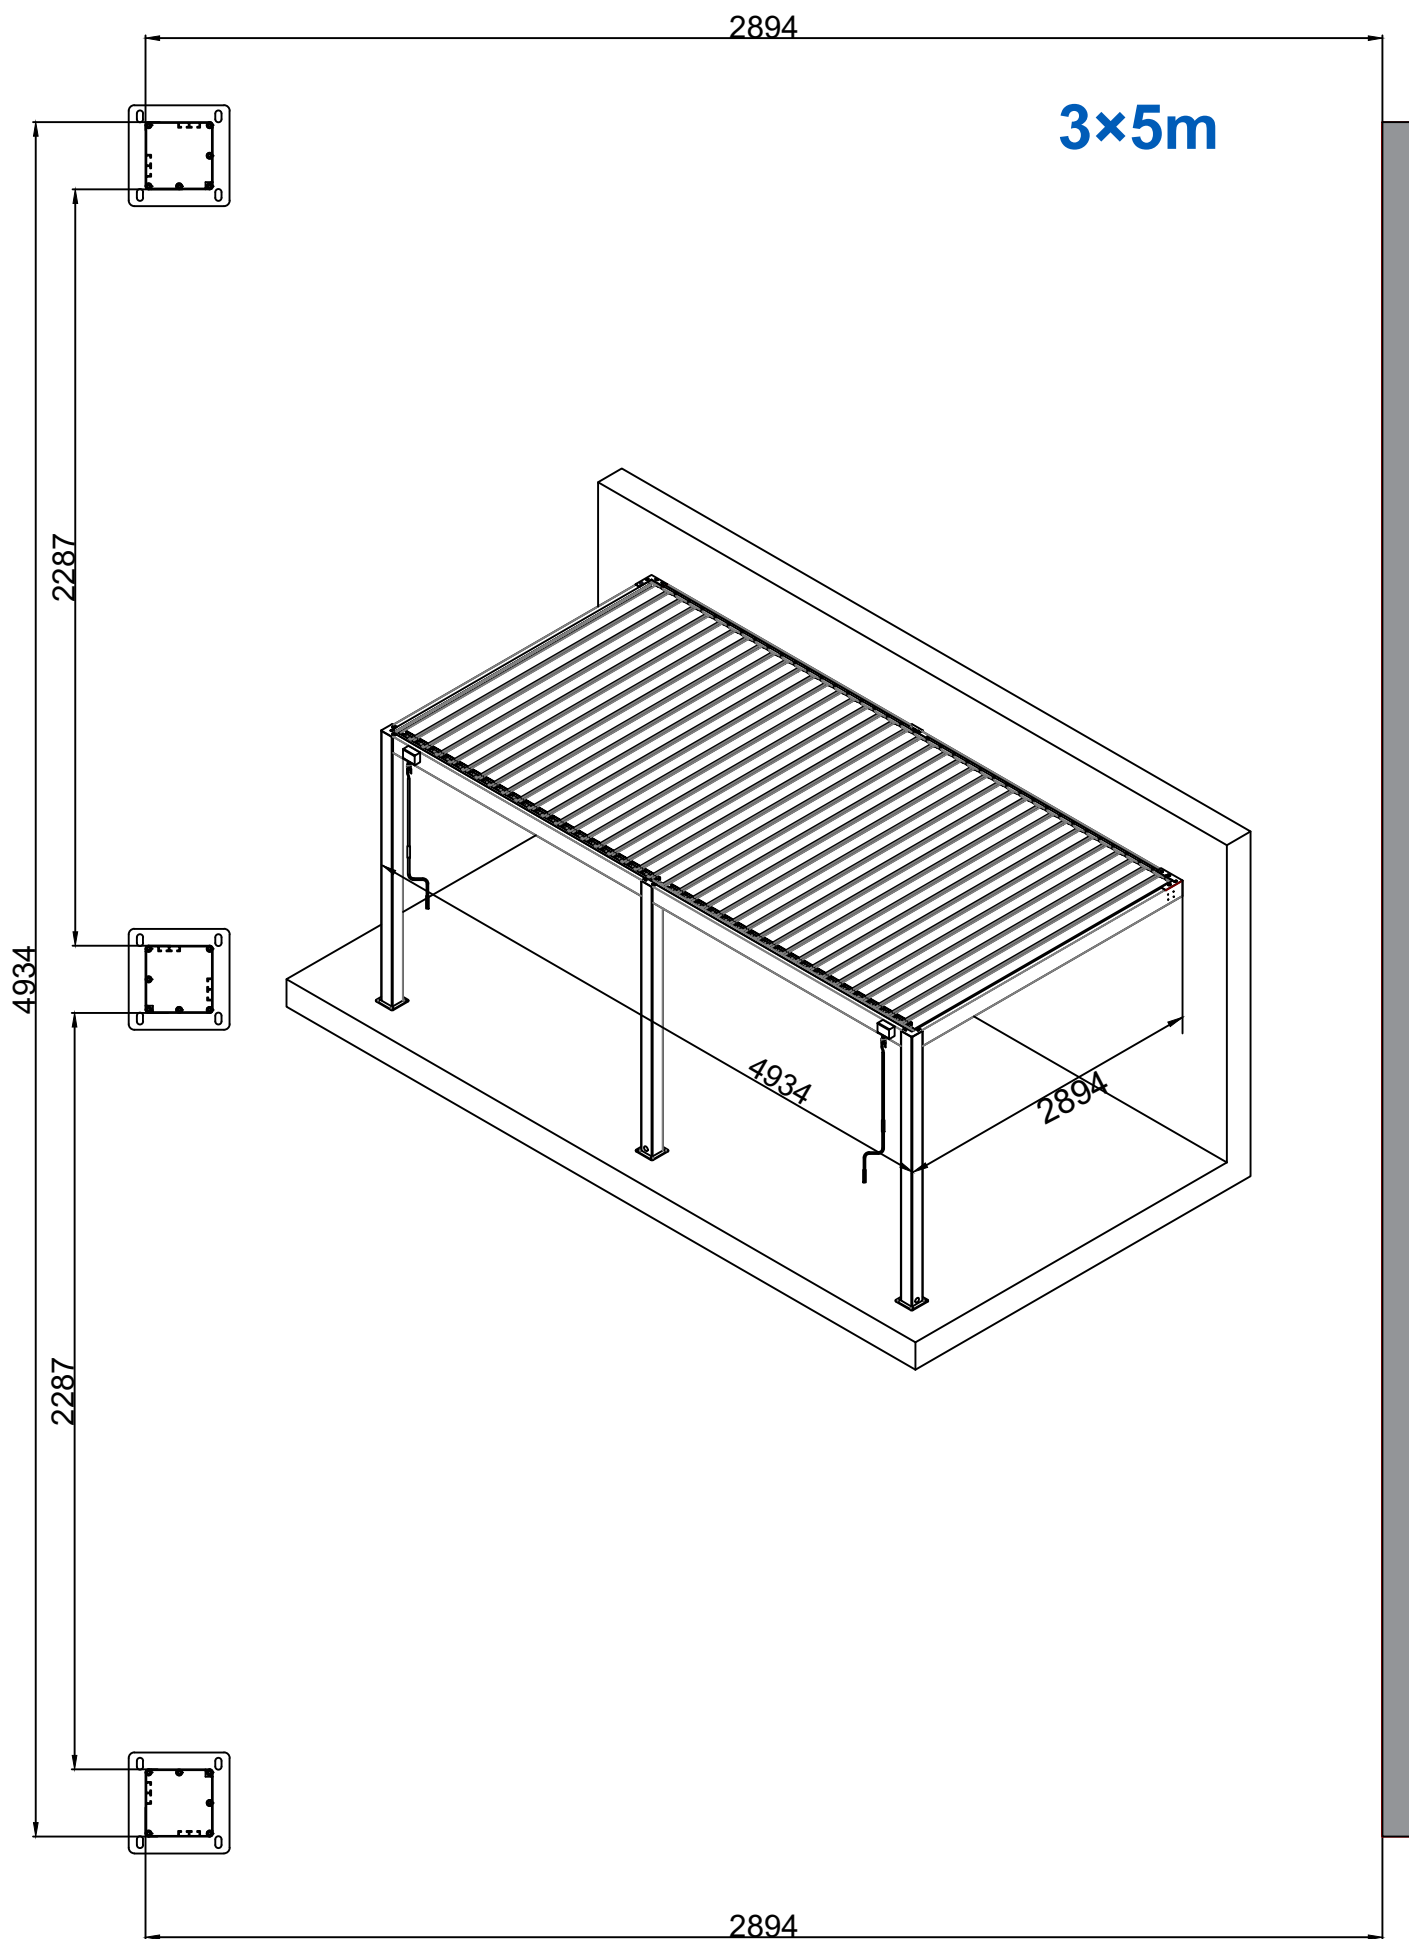


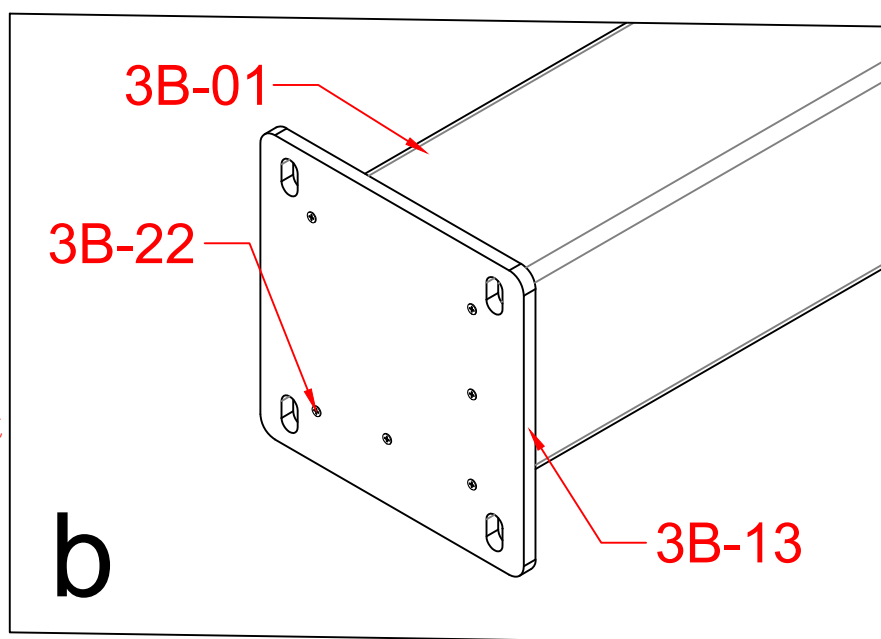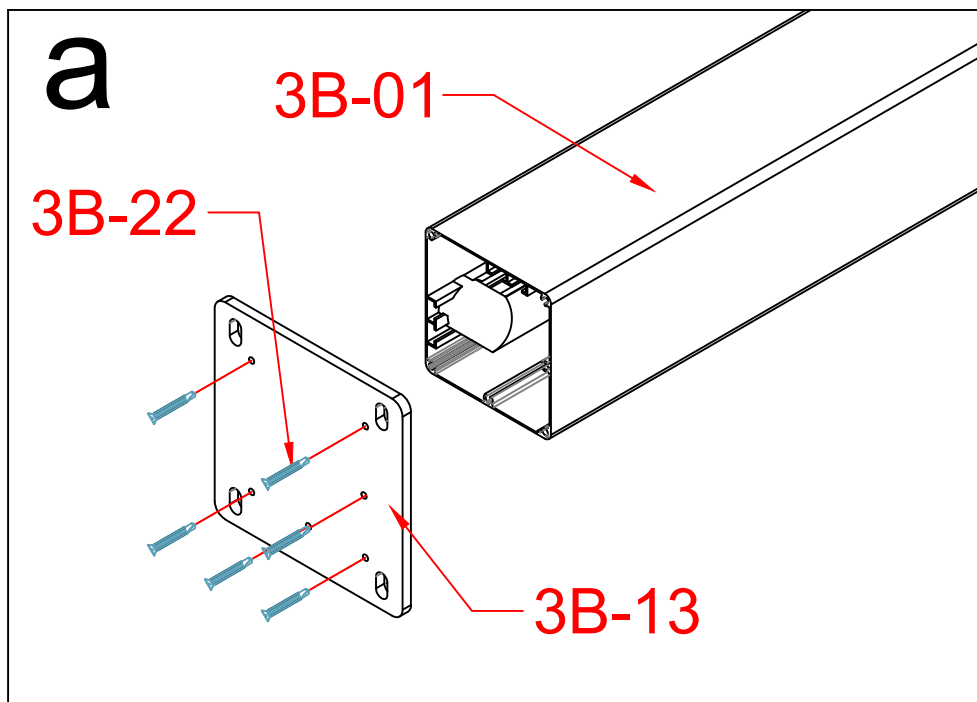


Pls note, if you need to install motorized blind, pls put the cable into post before mounting 3B-13 base plate with post.



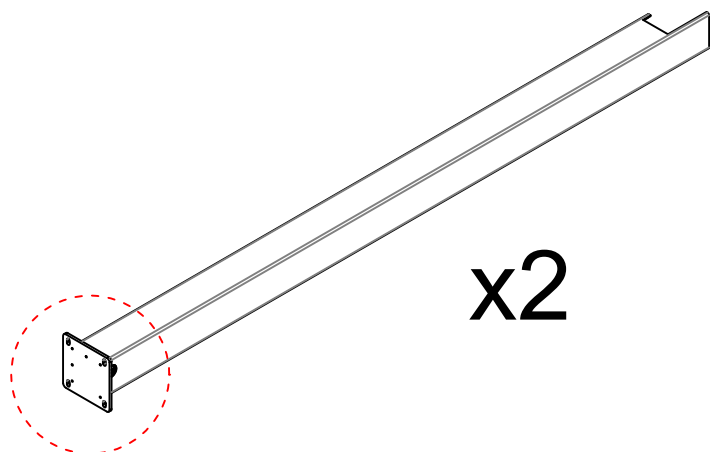


3B-01	 	2
3B-13		2
3B-22		12

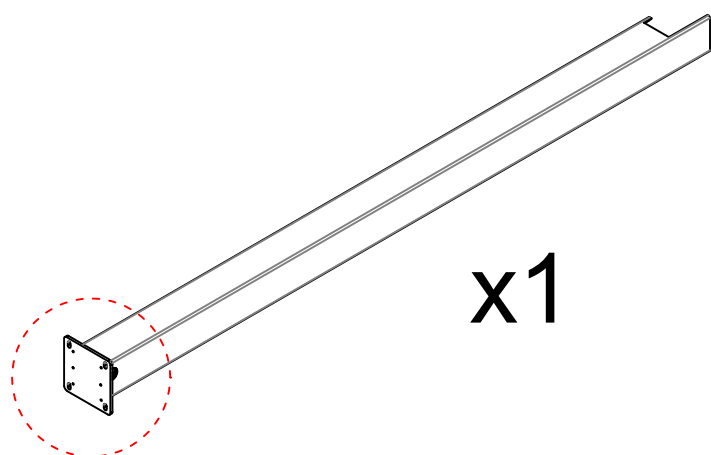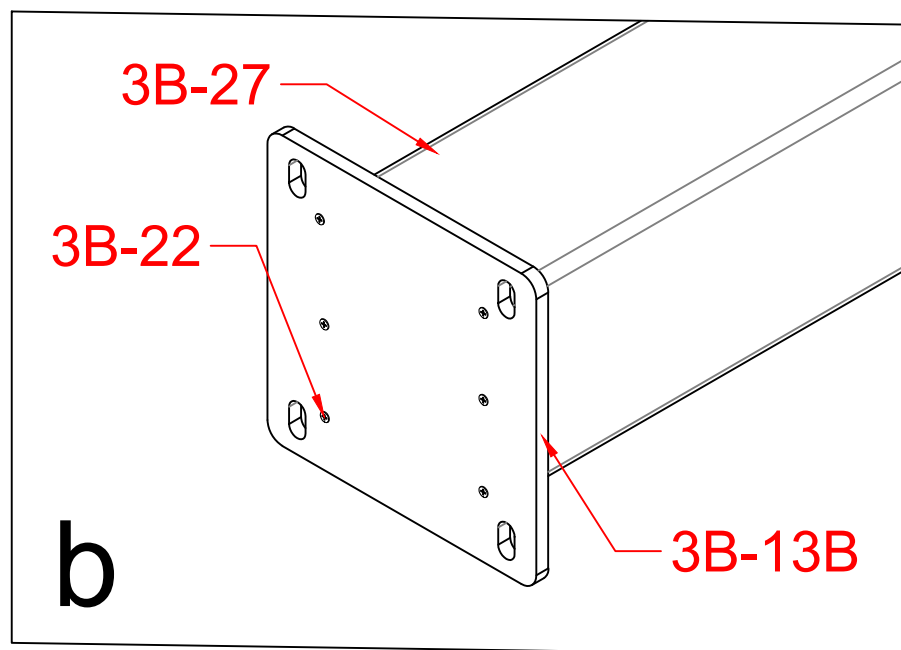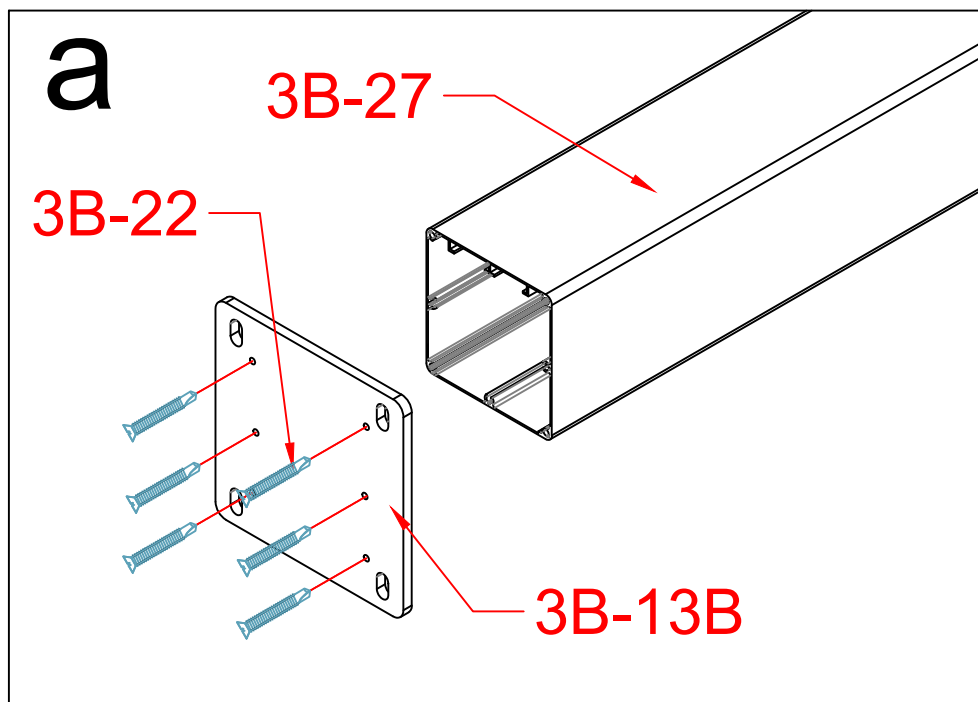





3B-27		1
3B-13B		1
3B-22		6



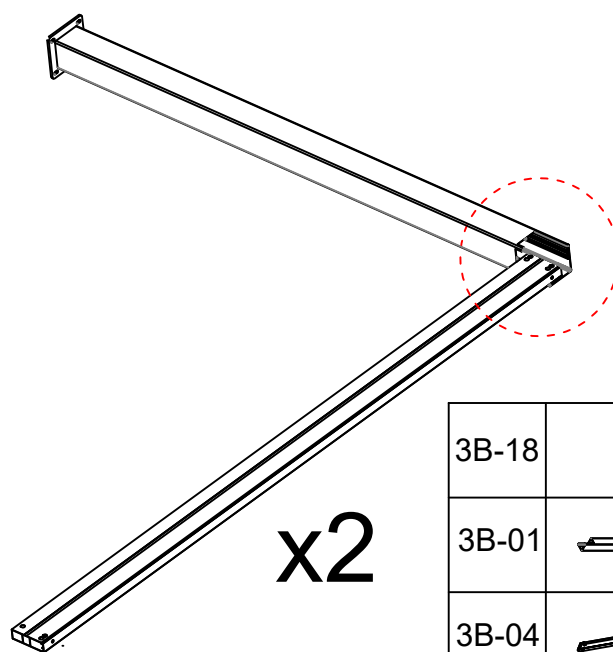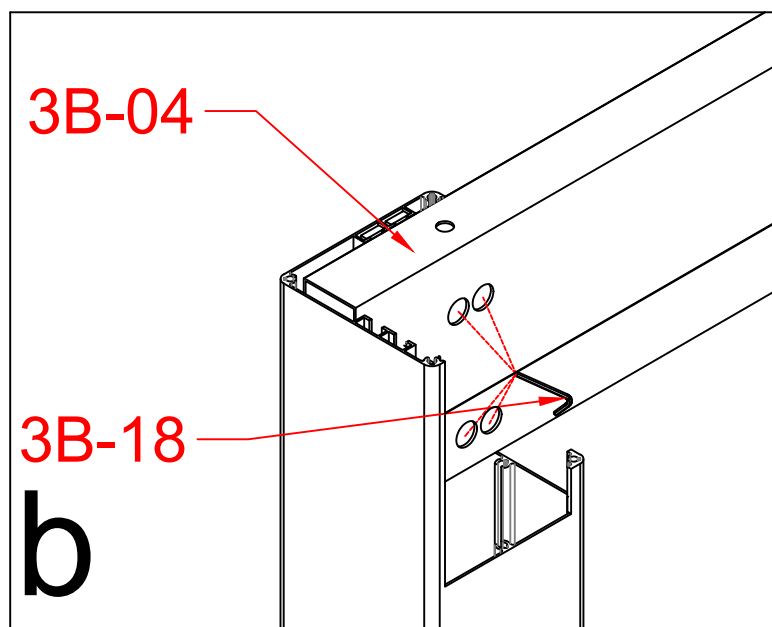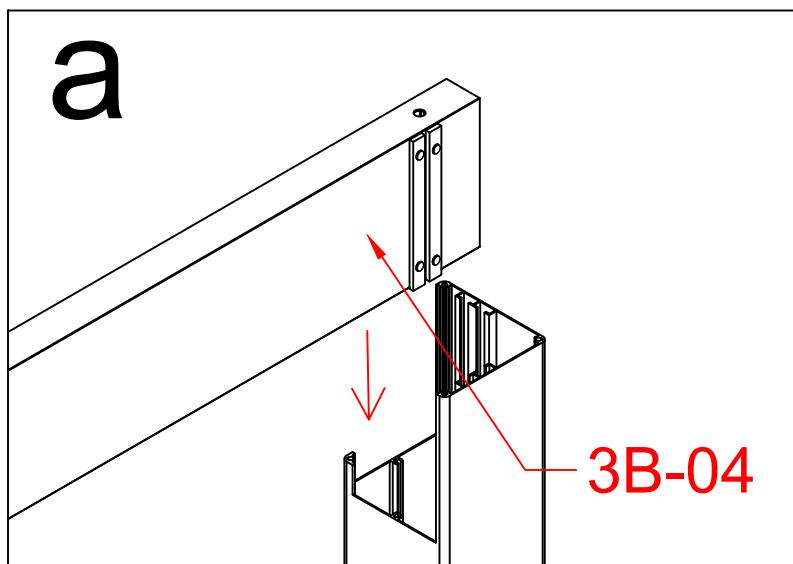





3B-18		1
3B-01		2
3B-04		2



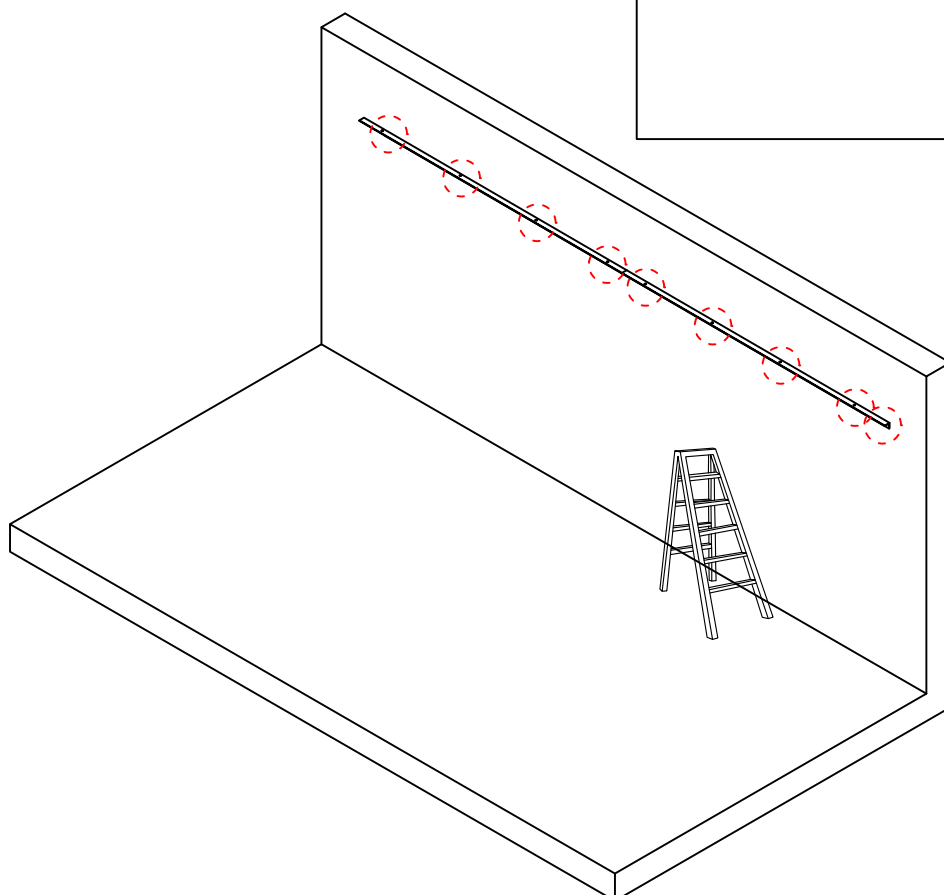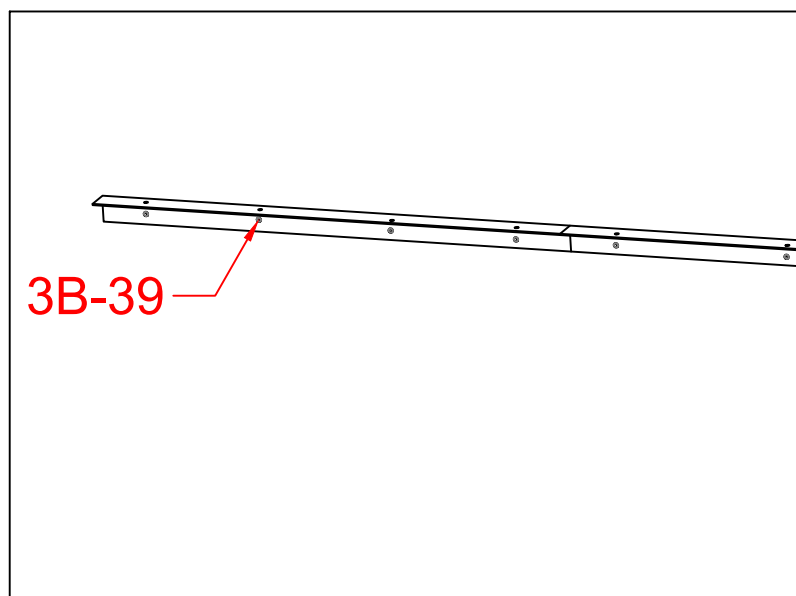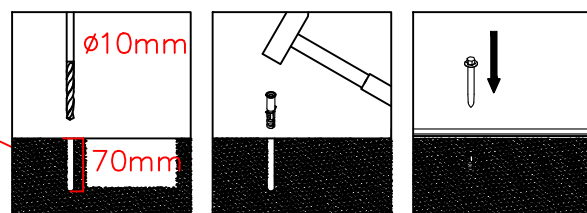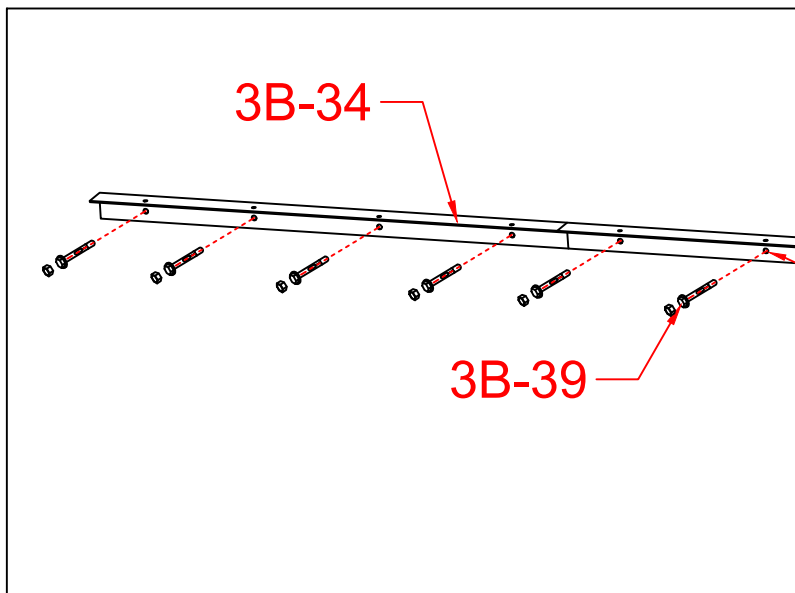








3B-34		2
3B-39		8




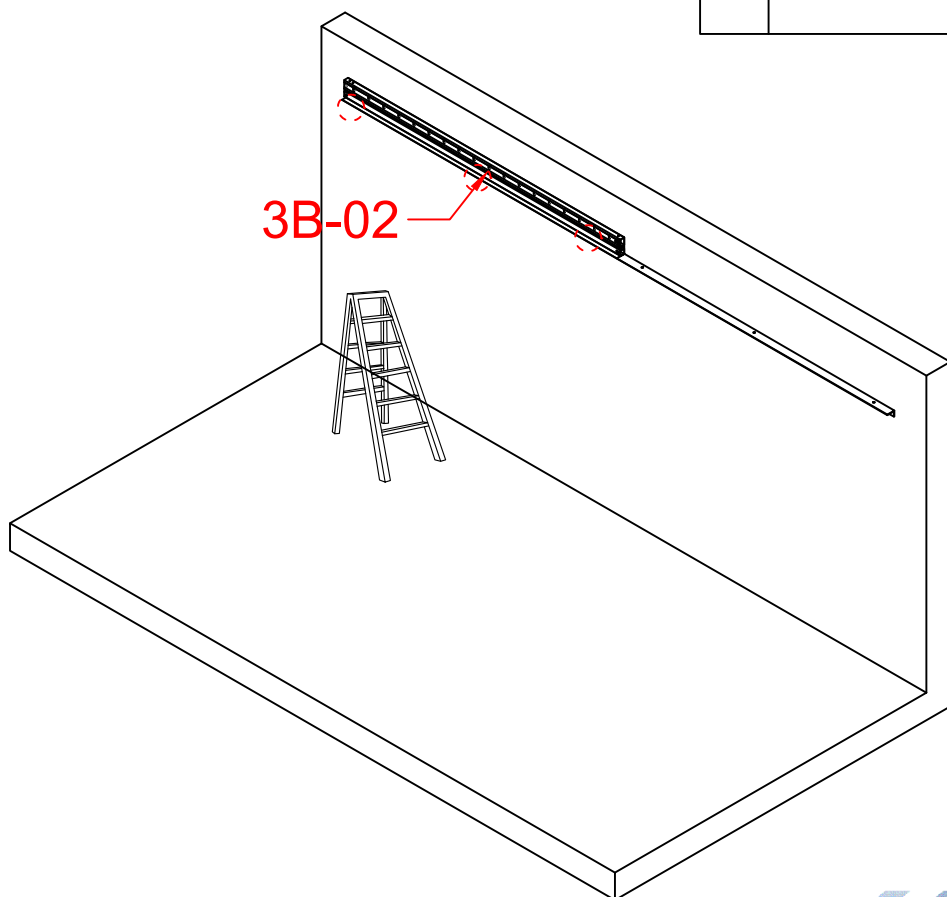
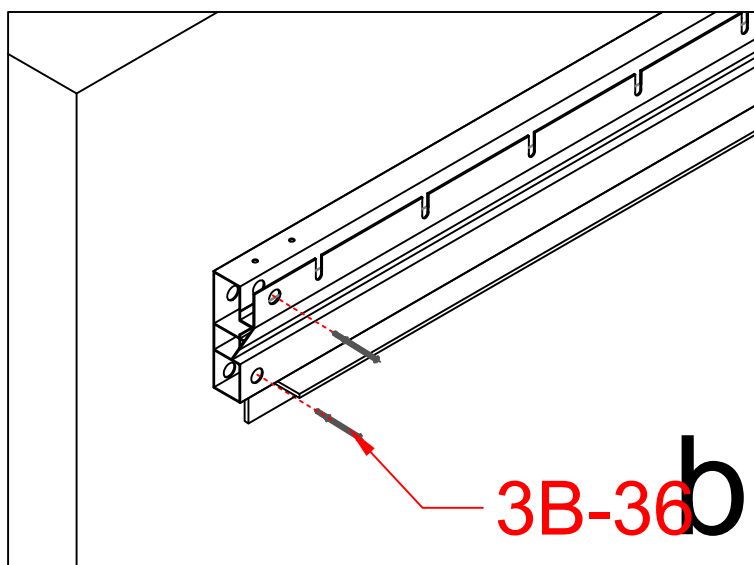
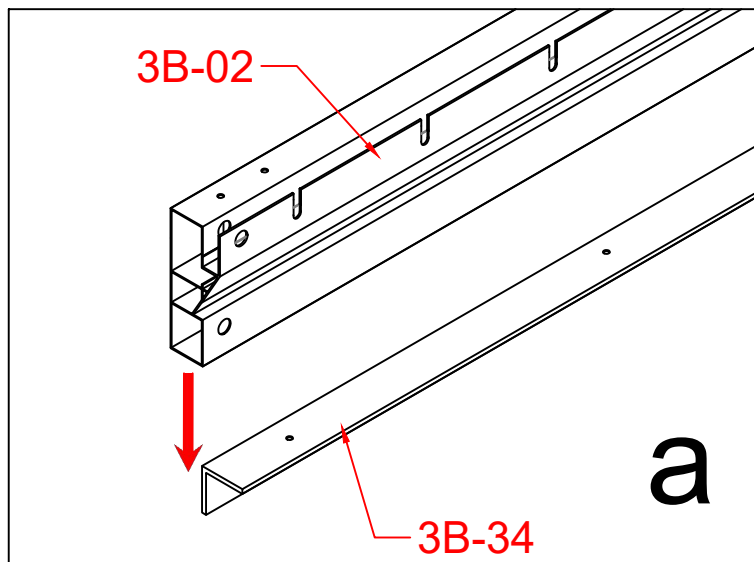
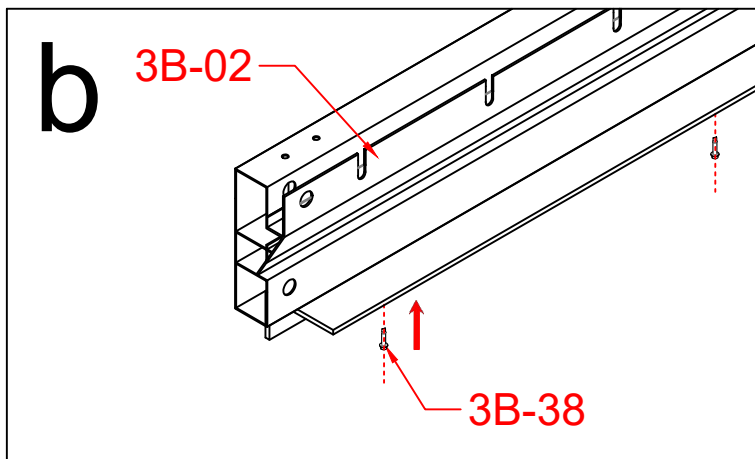


3B-36		2
3B-38		4
3B-02		1



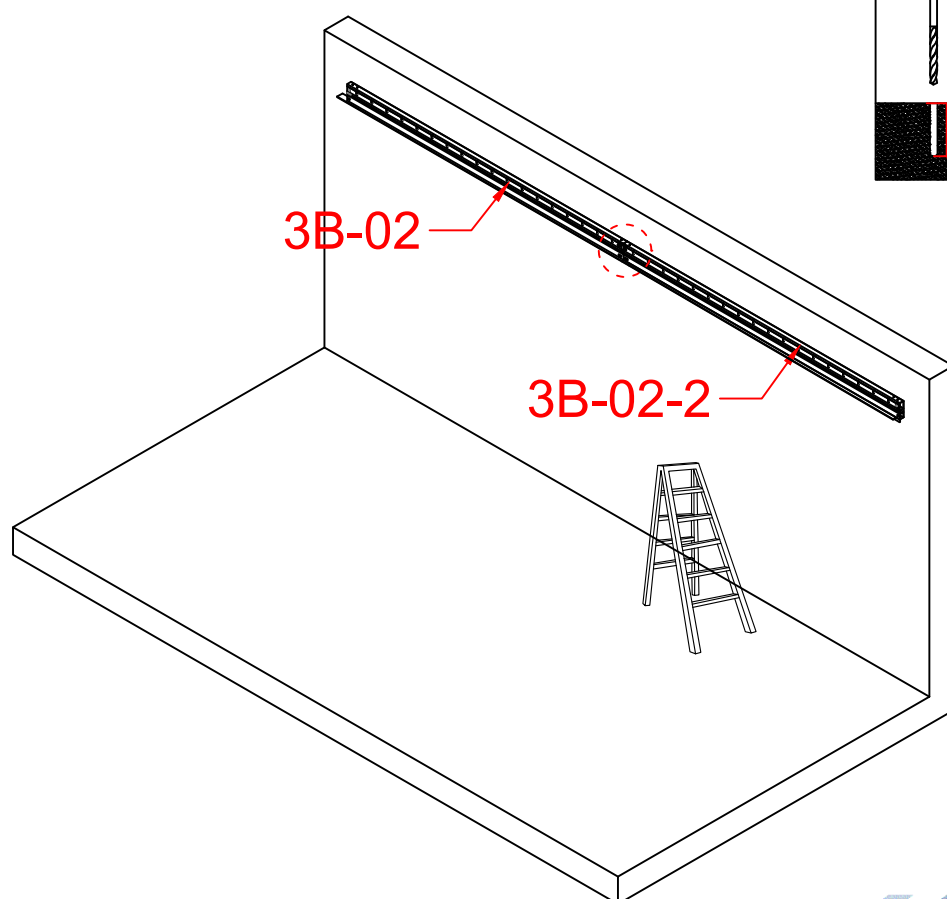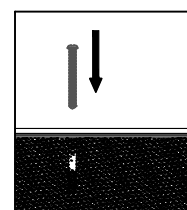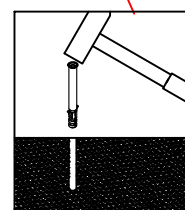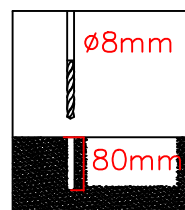
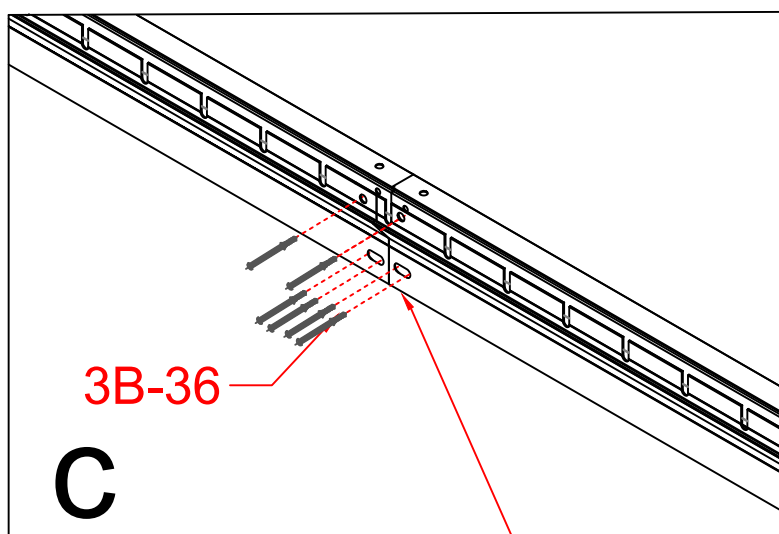
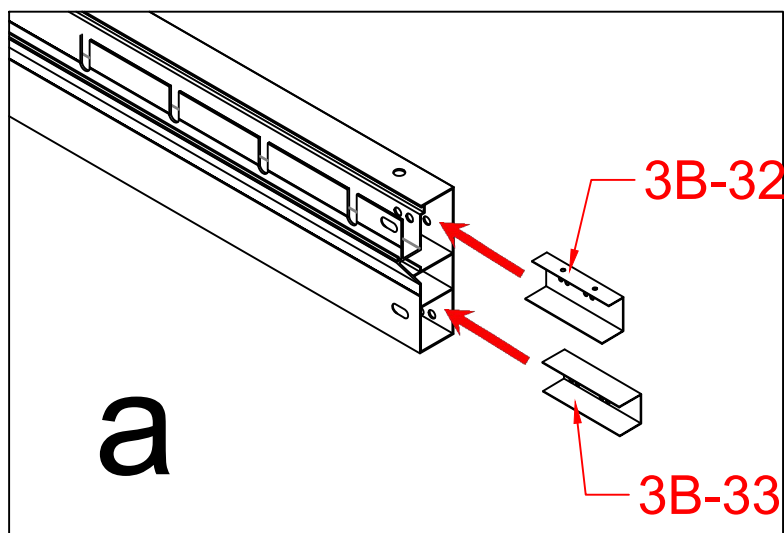
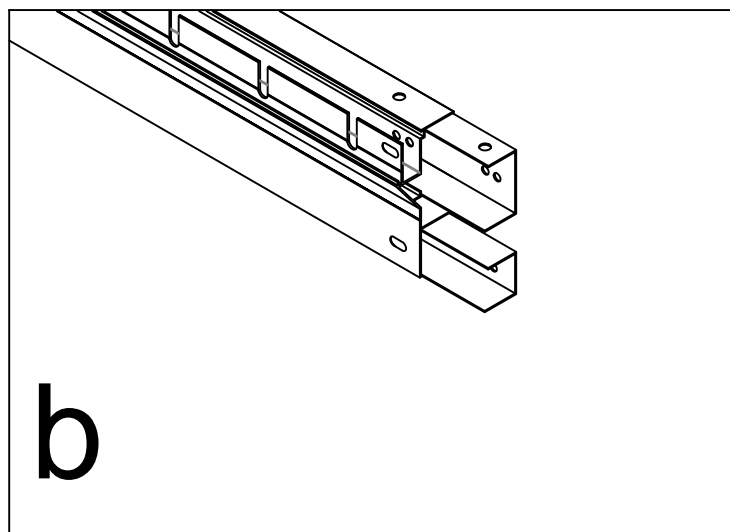




3B-38		4
3B-36		8
3B-32		1
3B-33		1
3B-02-2		1

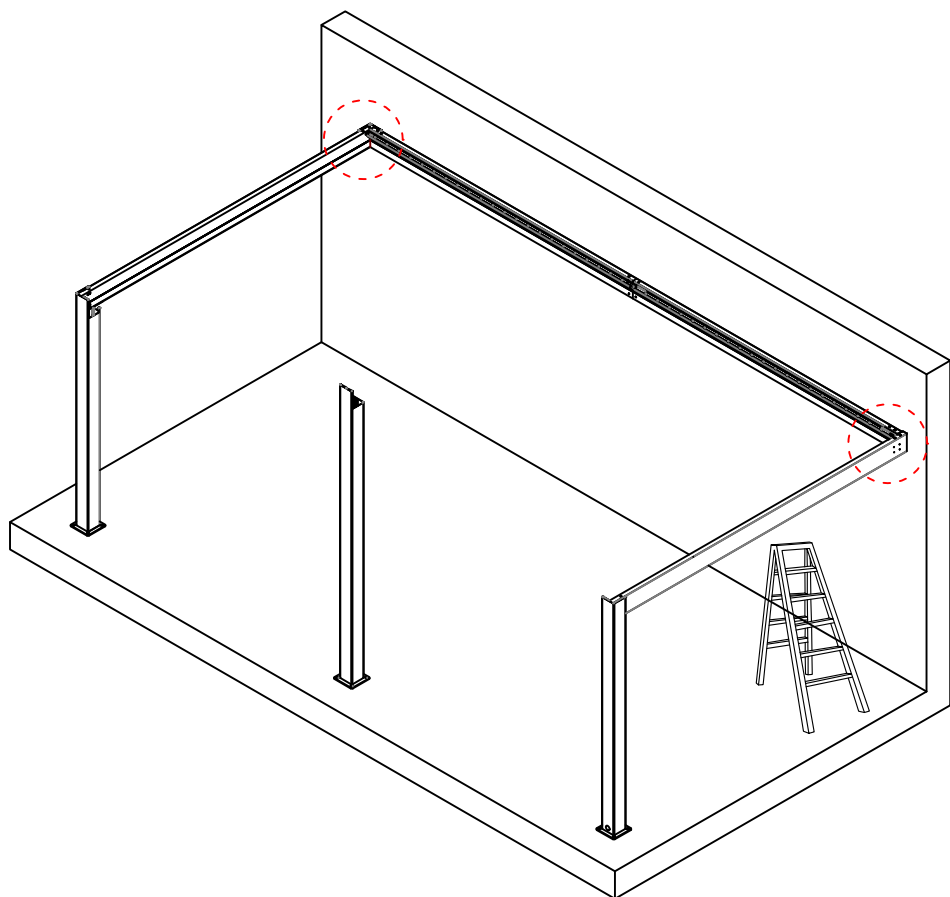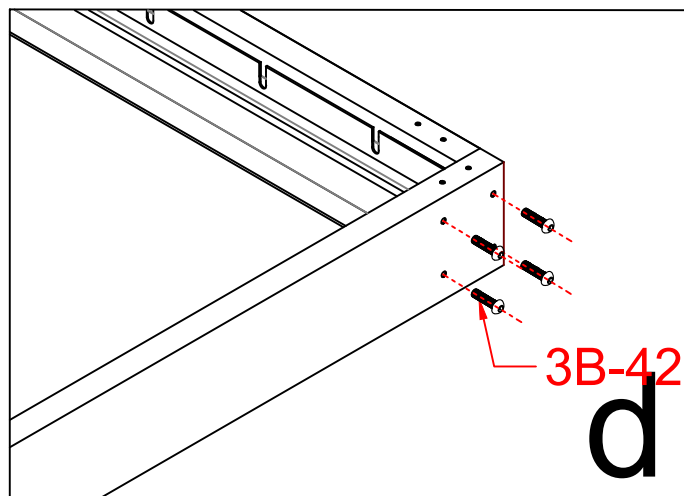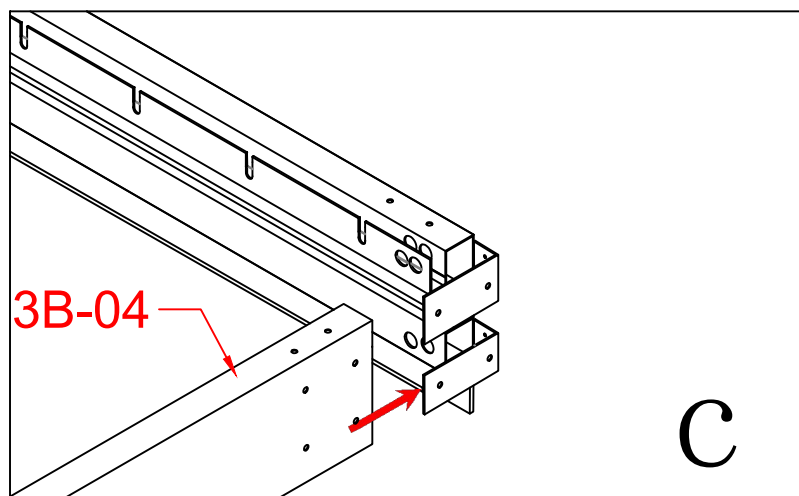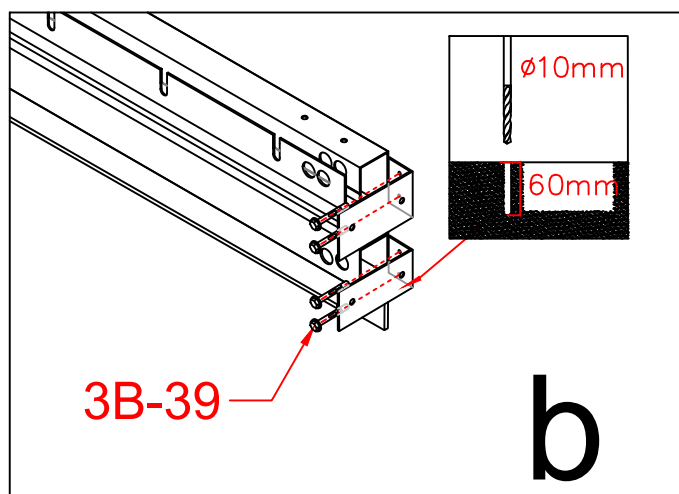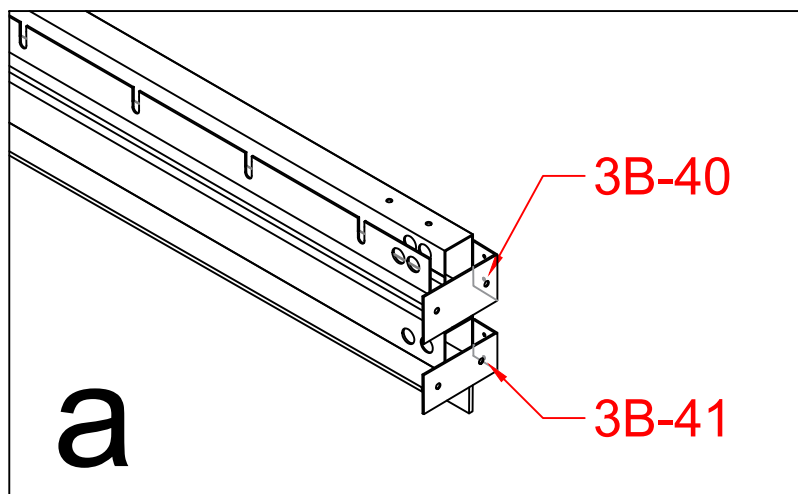







3B-42	 M10*20	8
3B-40		2
3B-41		2
3B-04		2
3B-39		8



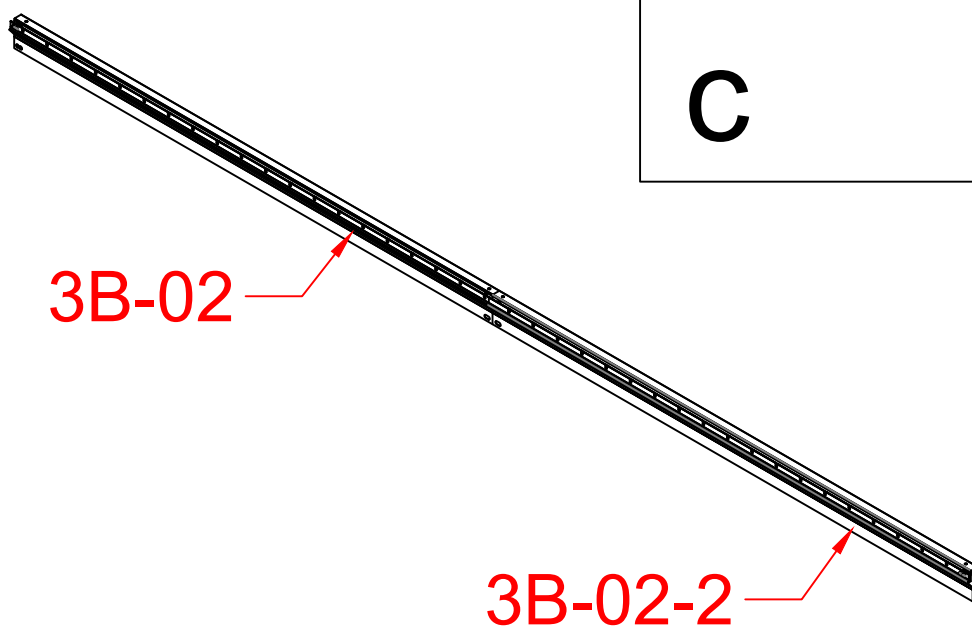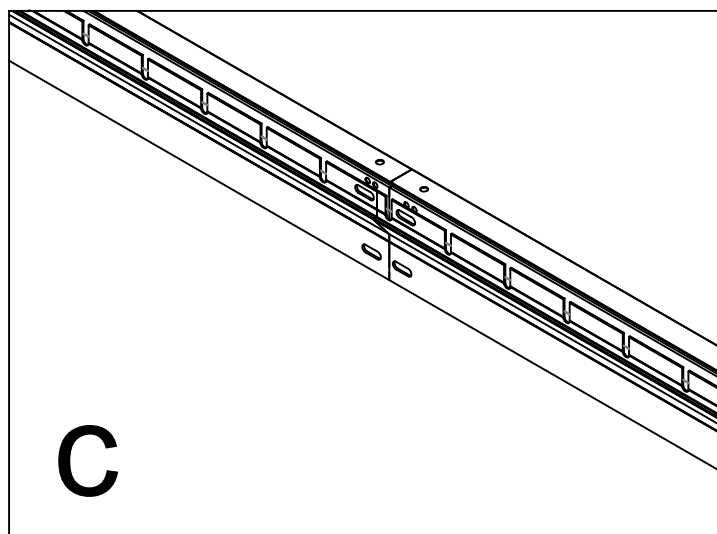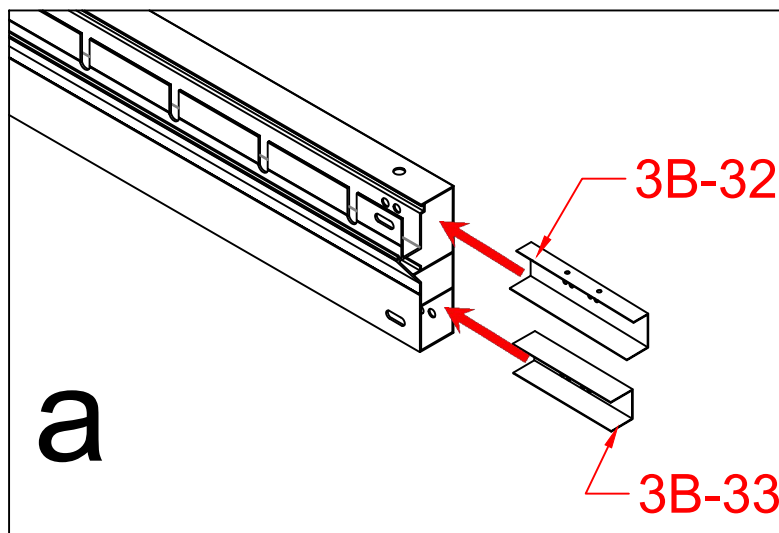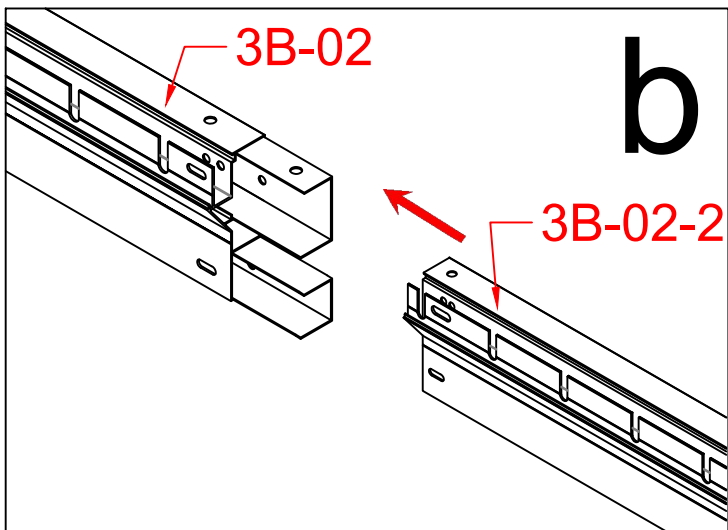


3B-02			1
3B-02-2			1
3B-32			1
3B-33			1




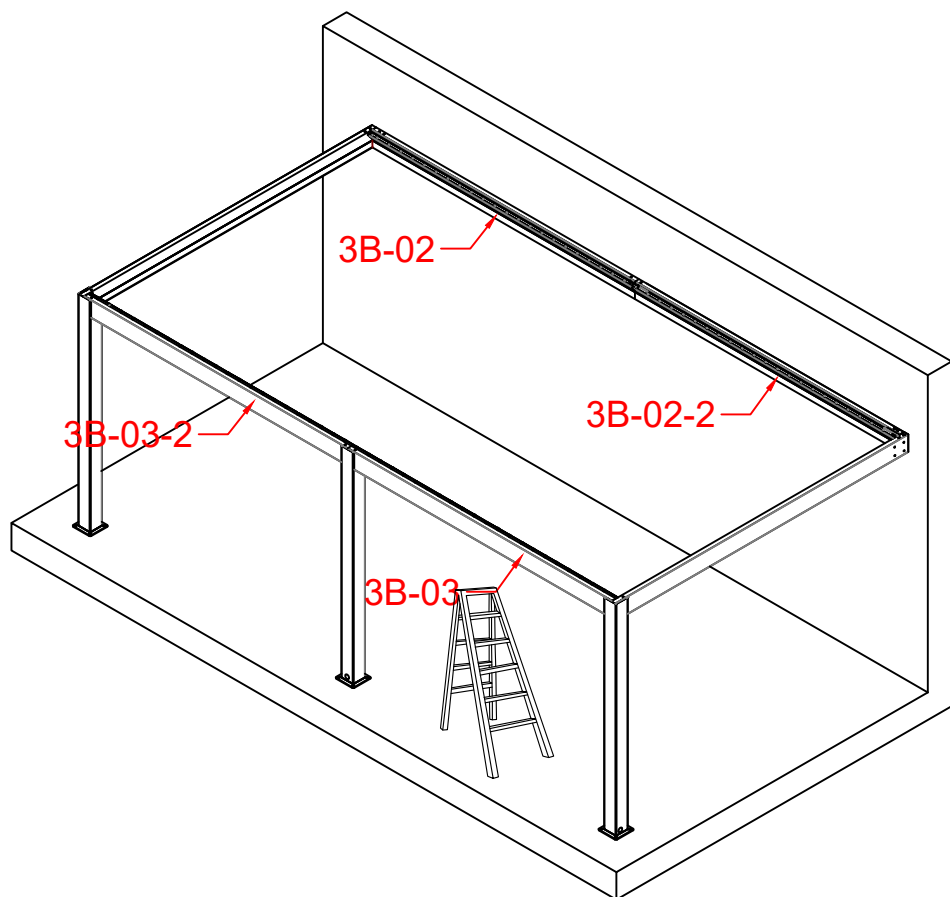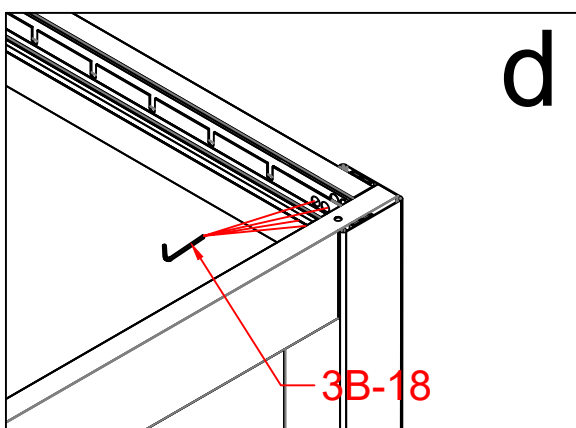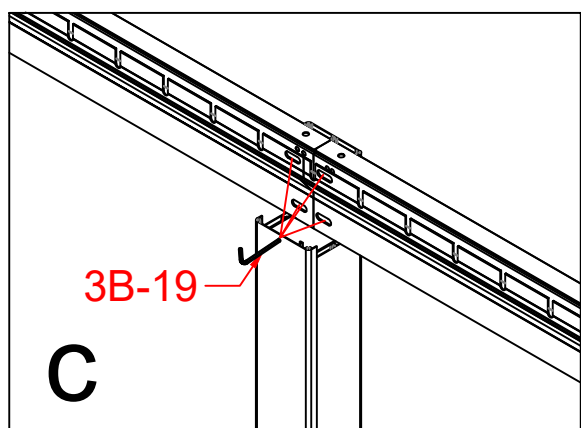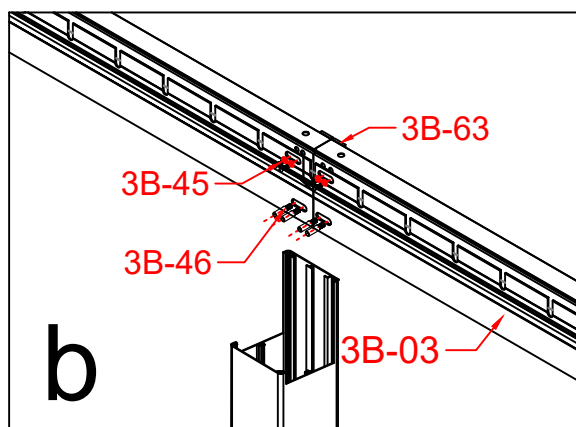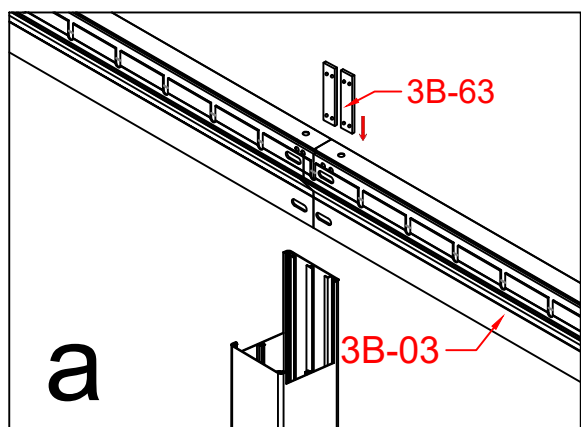


3B-63		2
3B-46		4
3B-45		4
3B-03		1
3B-03-2		1

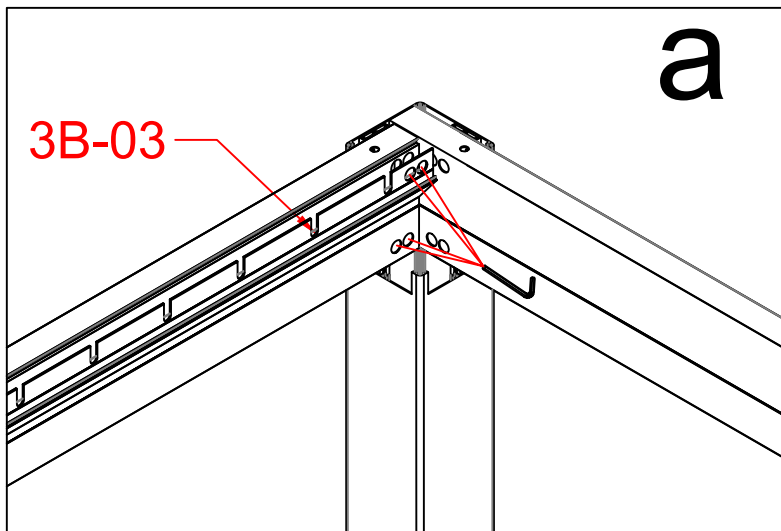


a



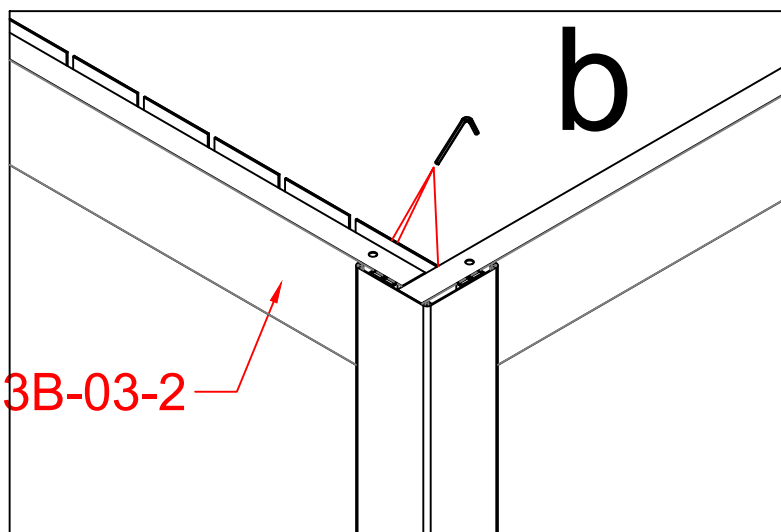


b

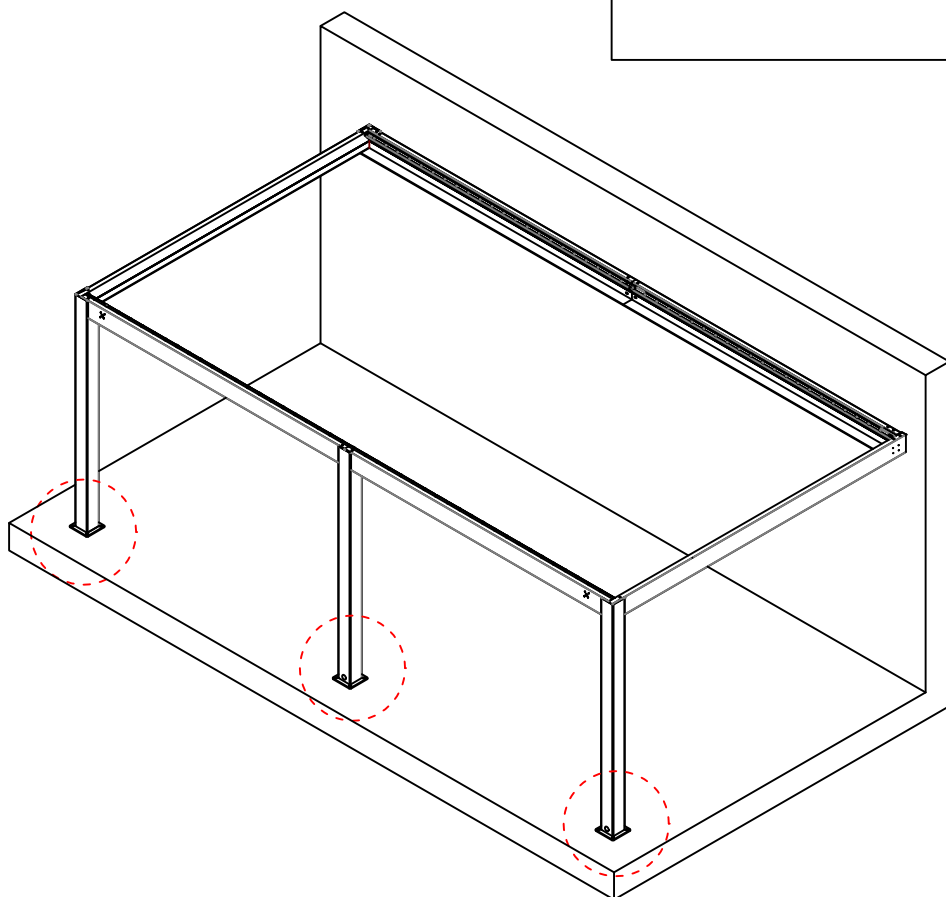




3B-18		1
-------	--	---



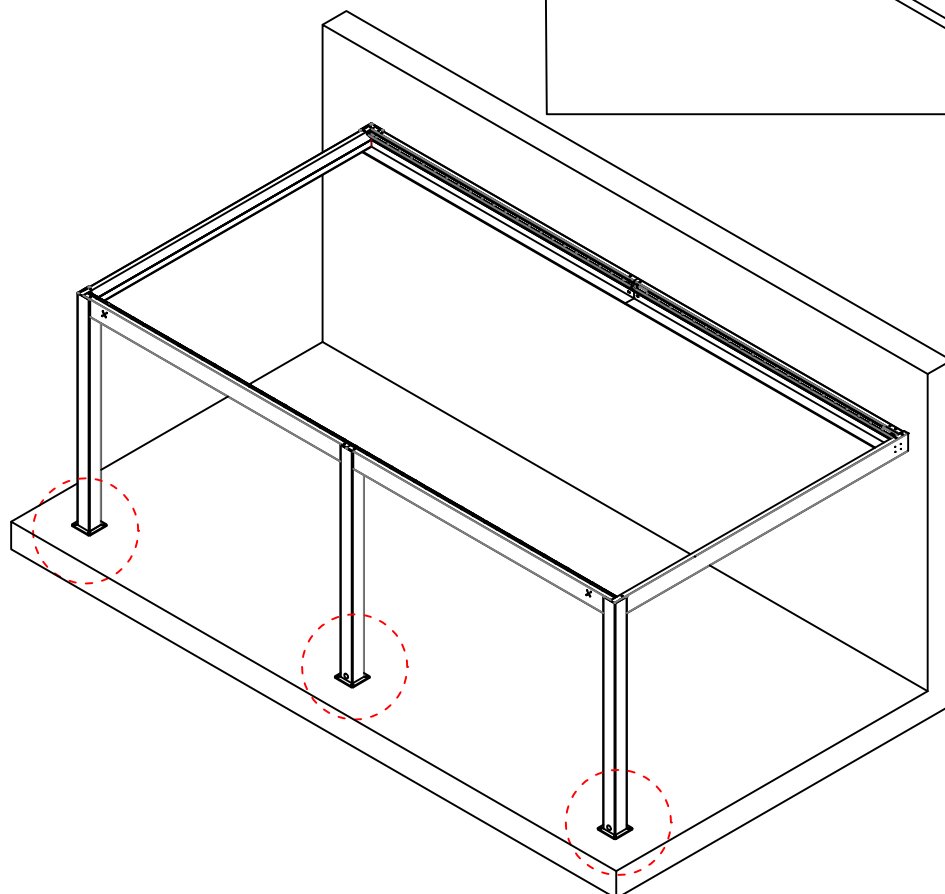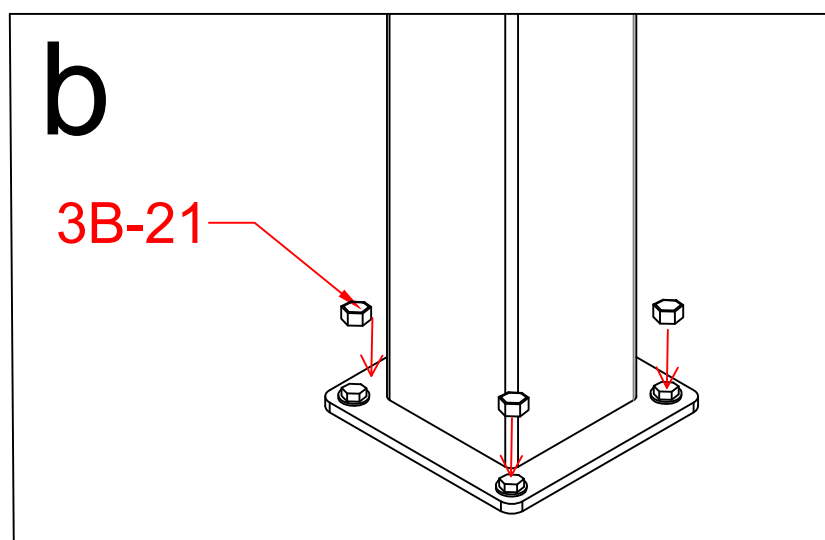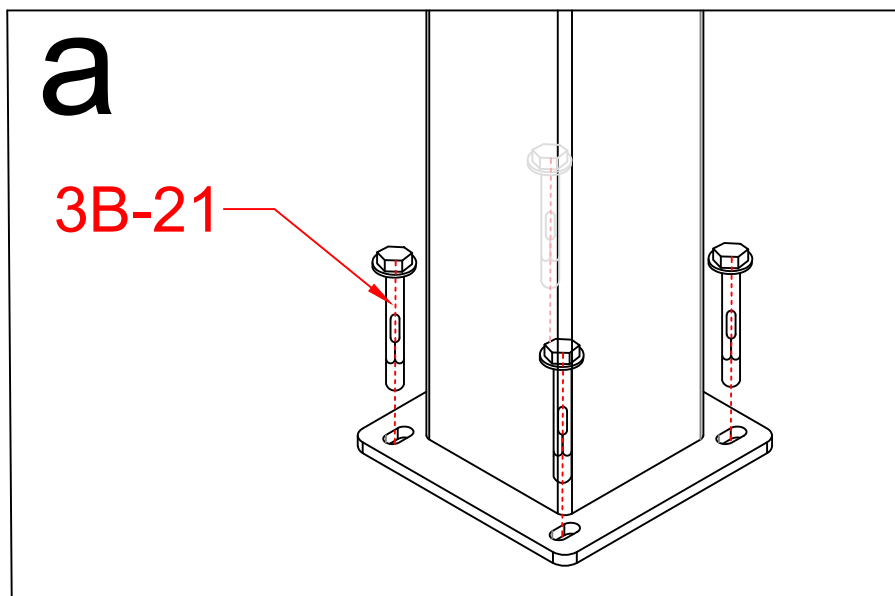



3B-21		12
-------	--	----



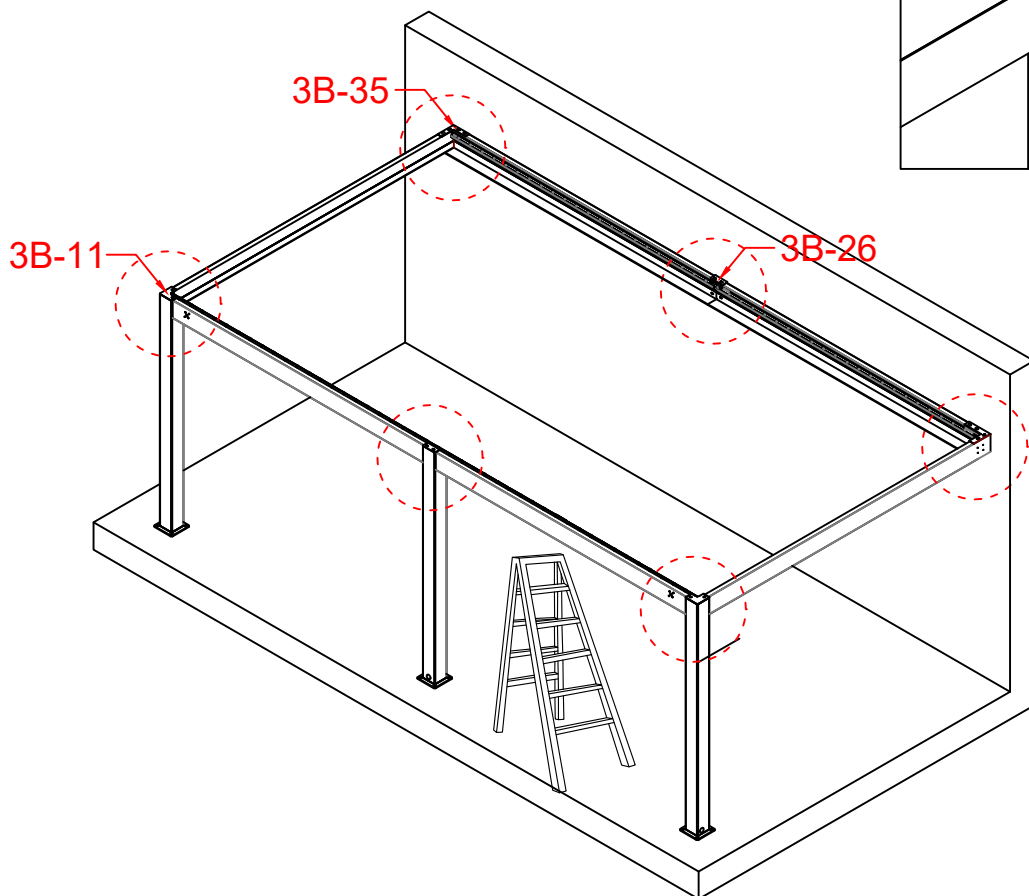
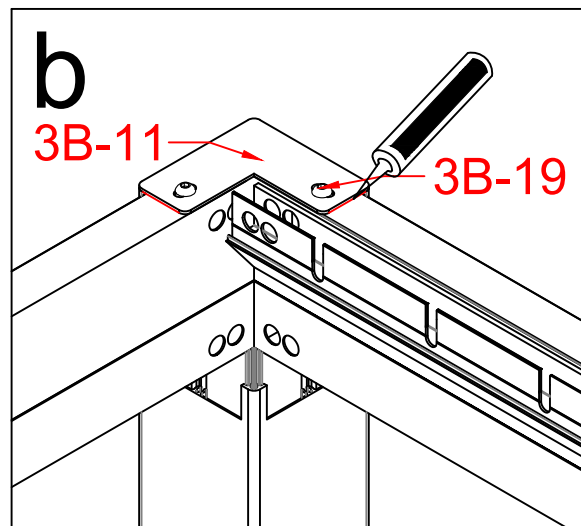
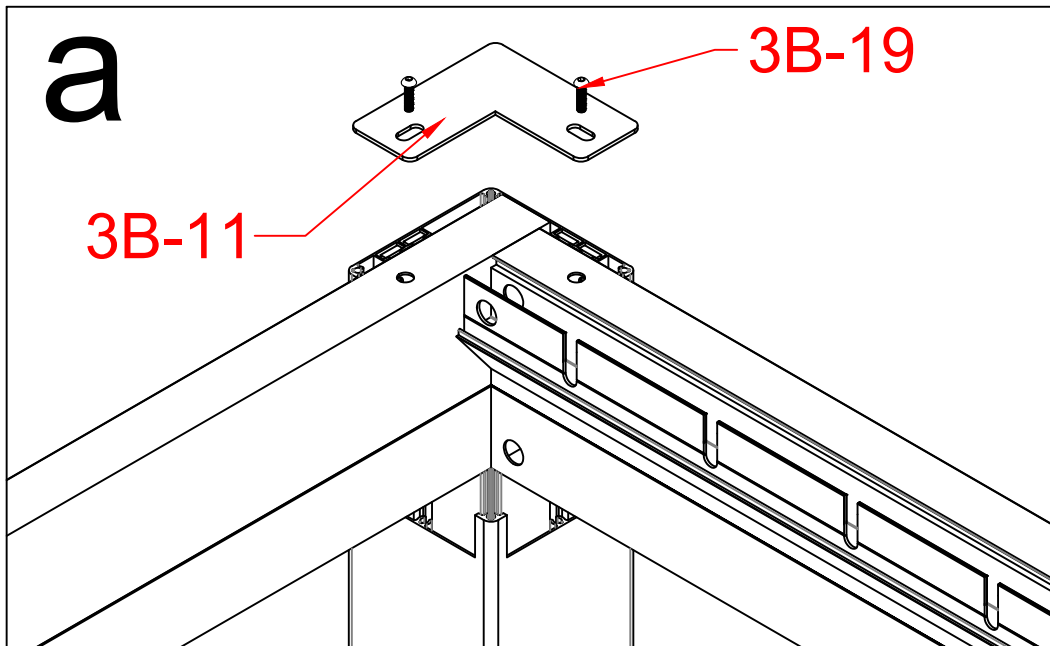


3B-35		2
3B-26		2
3B-11		4
3B-19		16






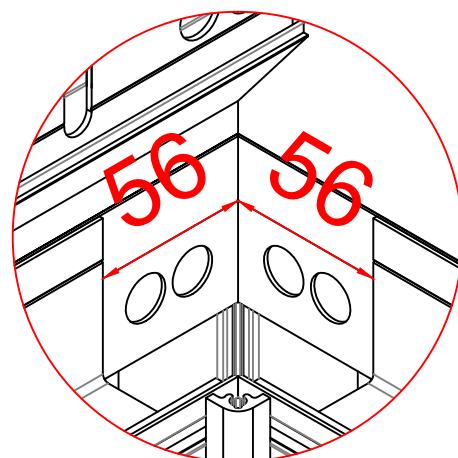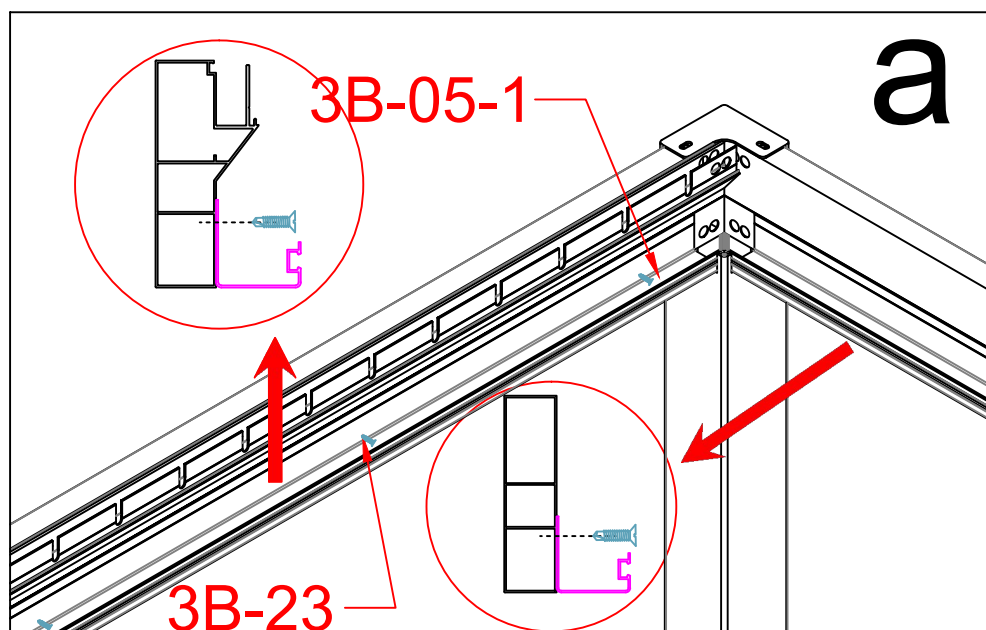




Warning:
Before installation, tear off the protective film of the tape on the back side of Gutter.

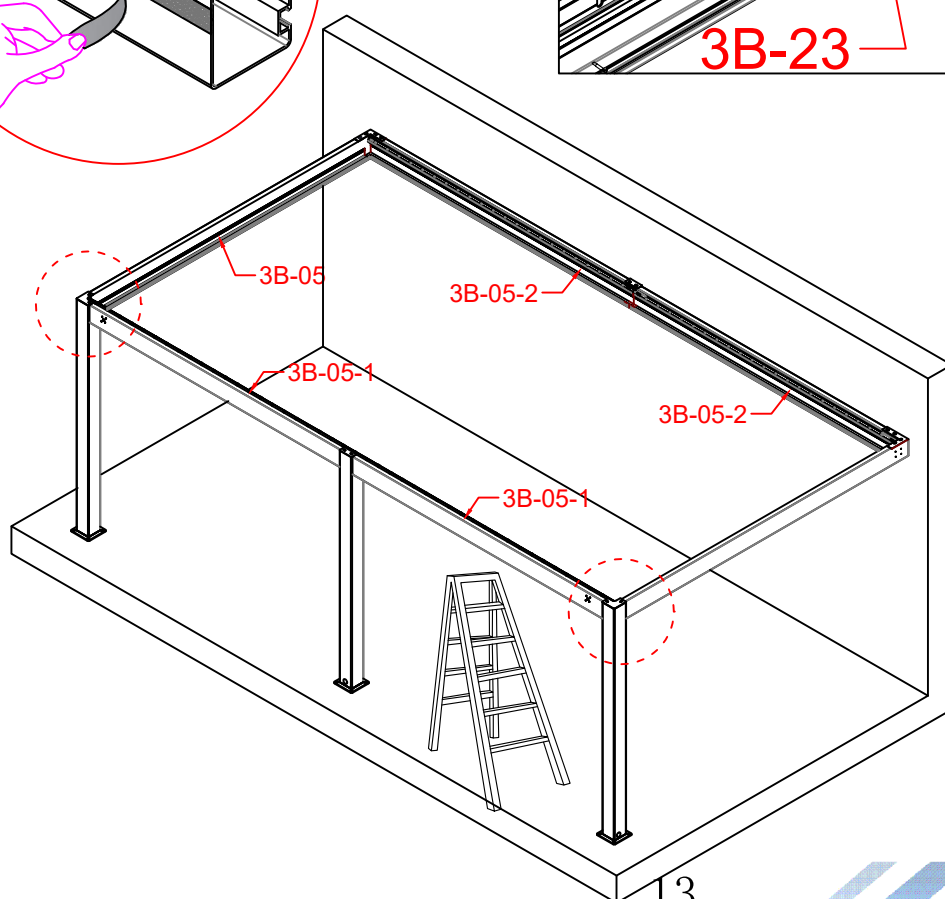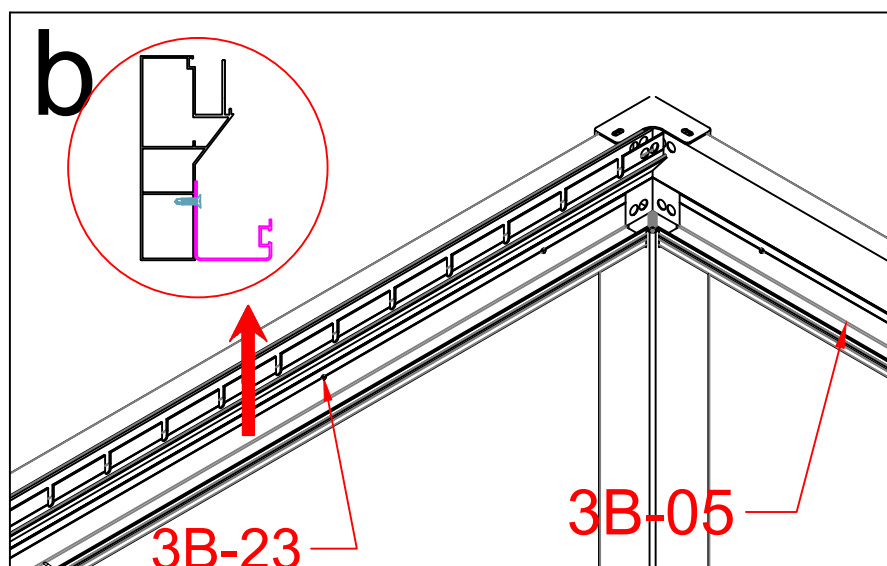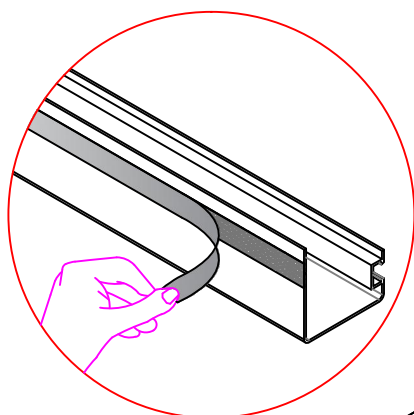


3B-05-2		2
3B-05-1		2
3B-05		2
3B-23		20

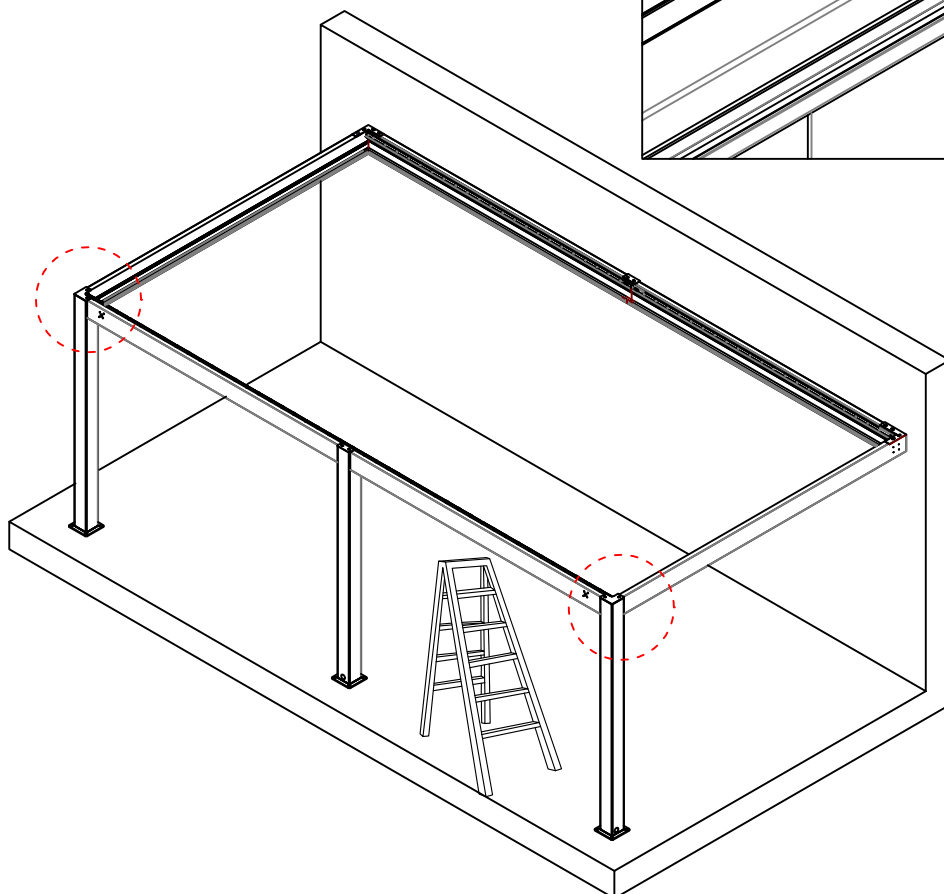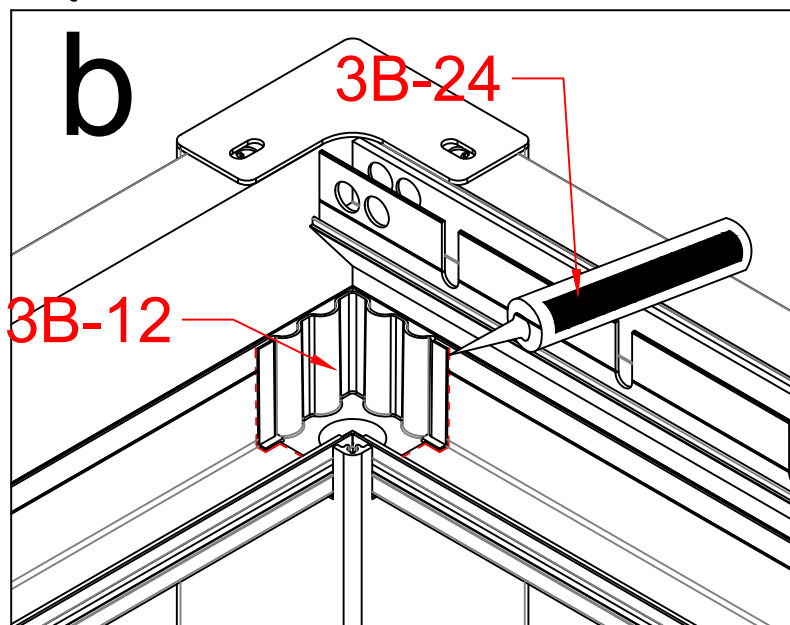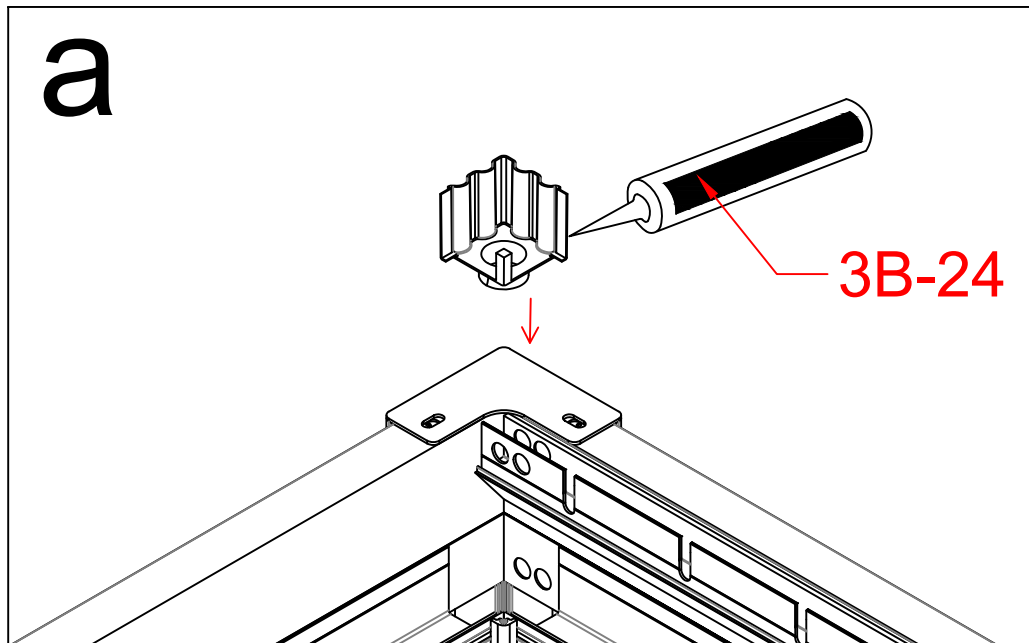


3B-24		1
3B-12		2


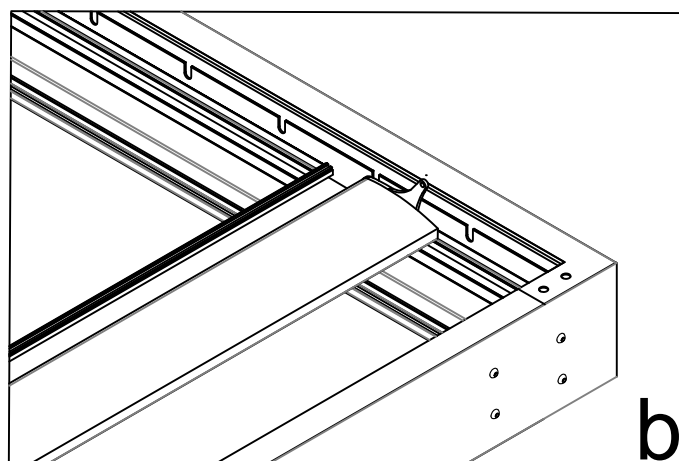
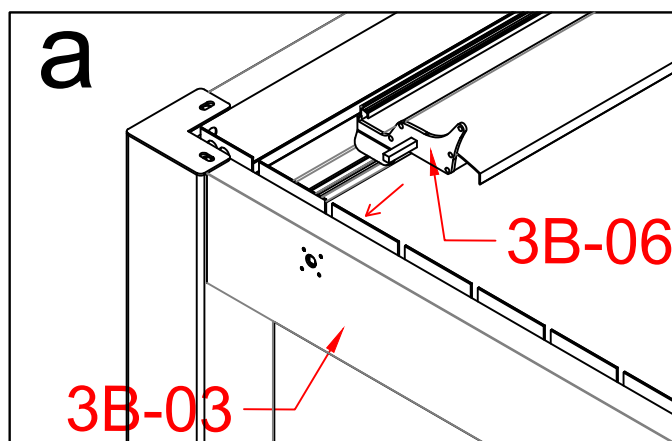
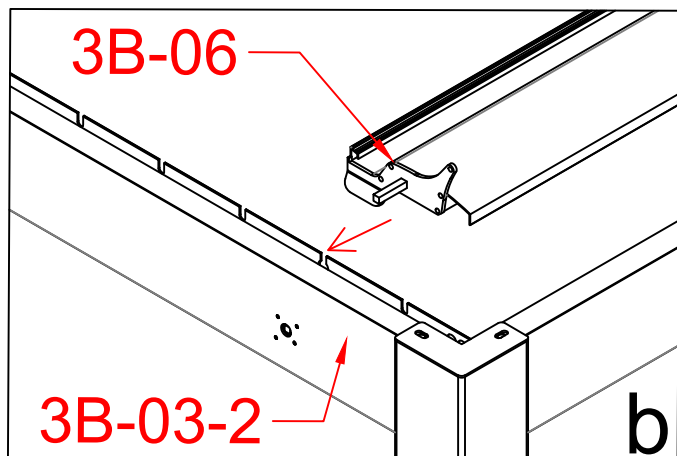


warning:
Bolts must be tightened

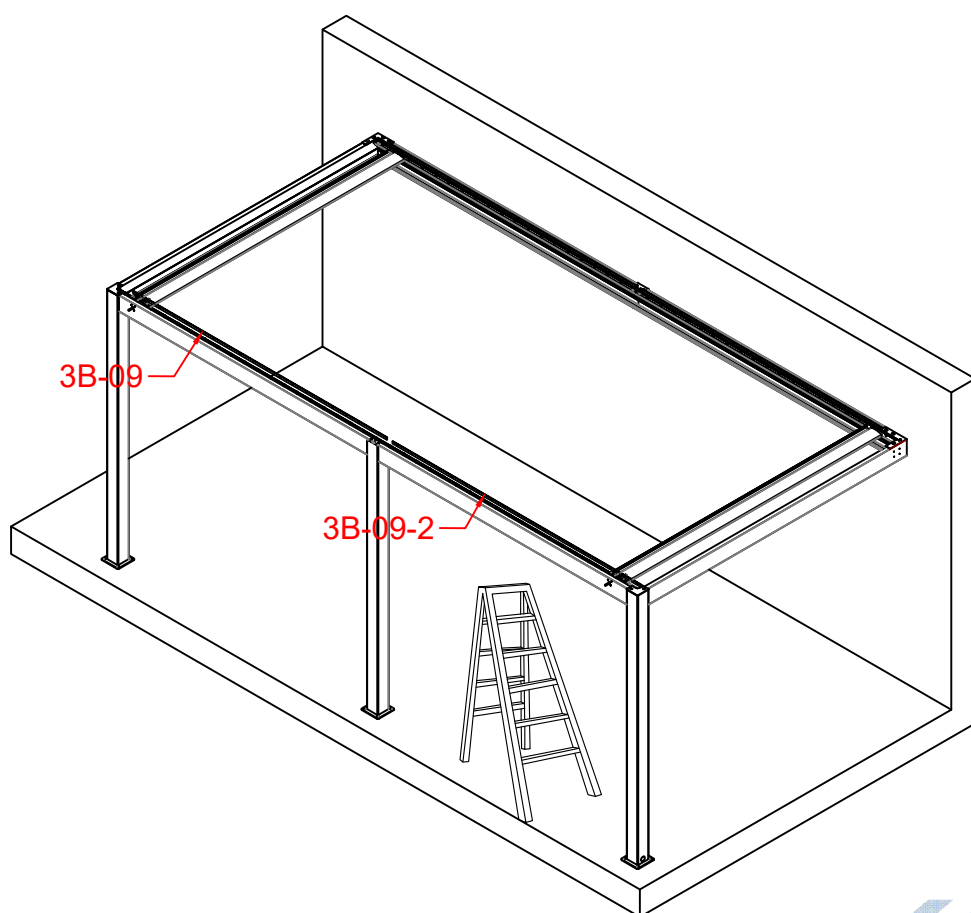


3B-06		2
-------	--	---



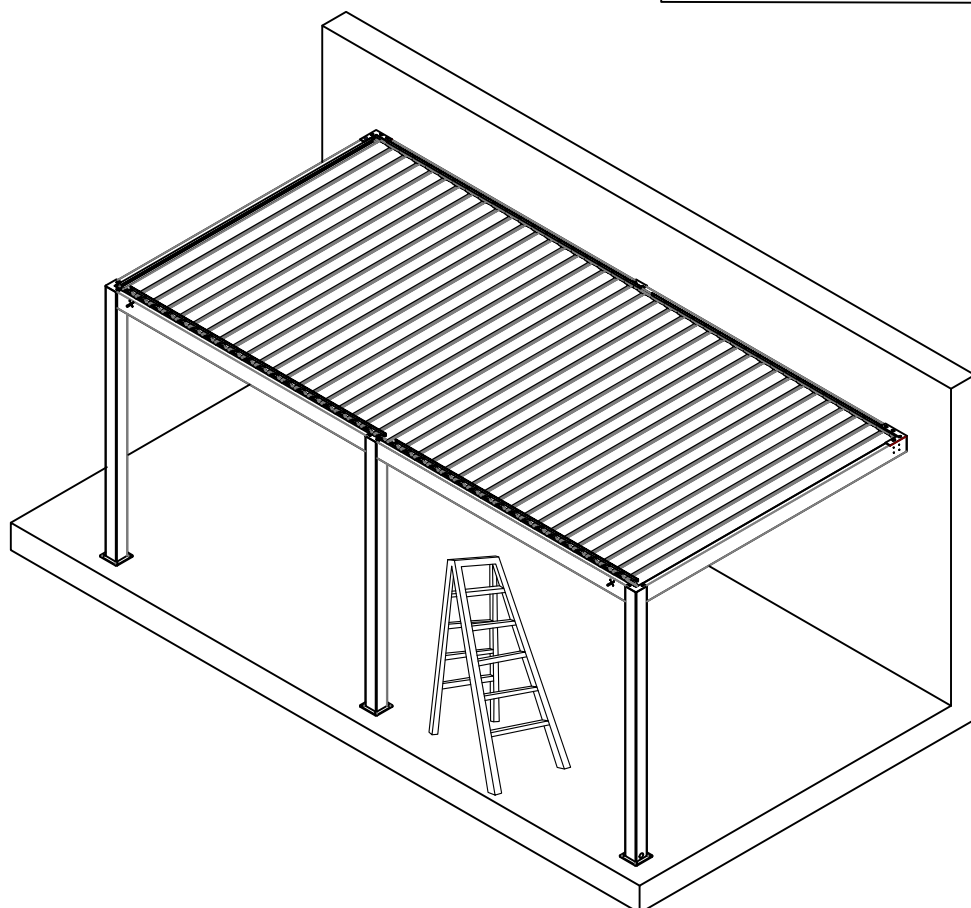
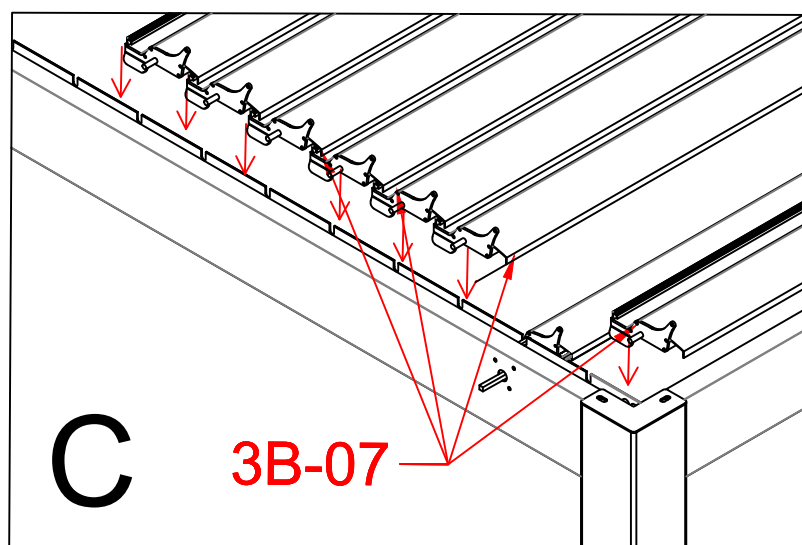
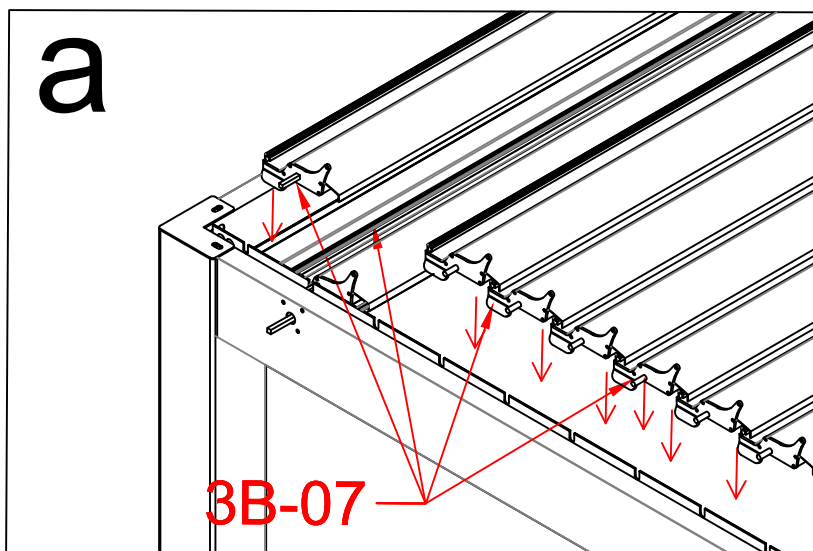
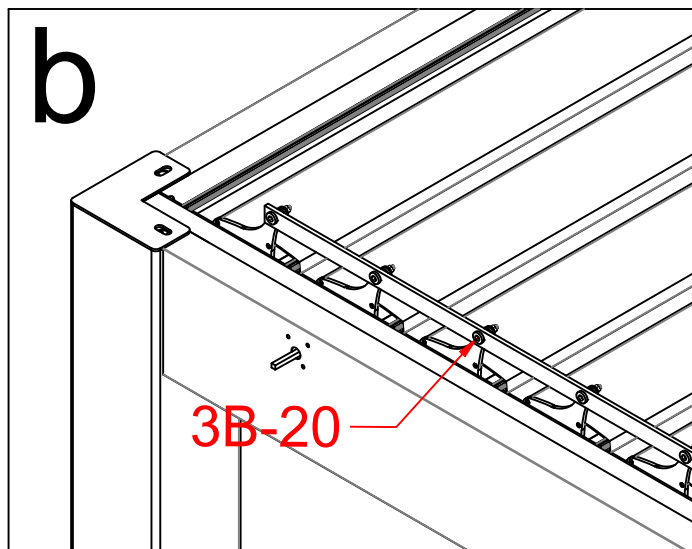


3B-20		62
3B-07		37




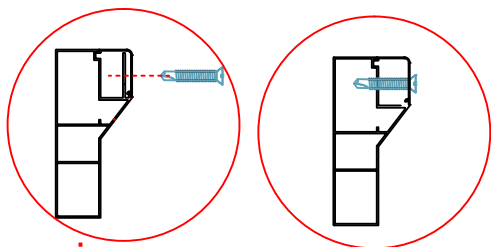





warning:
Here the screw must be
hit, do not miss

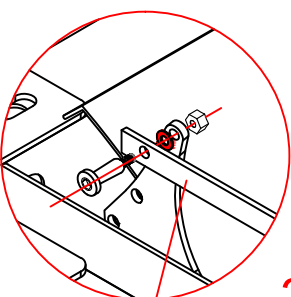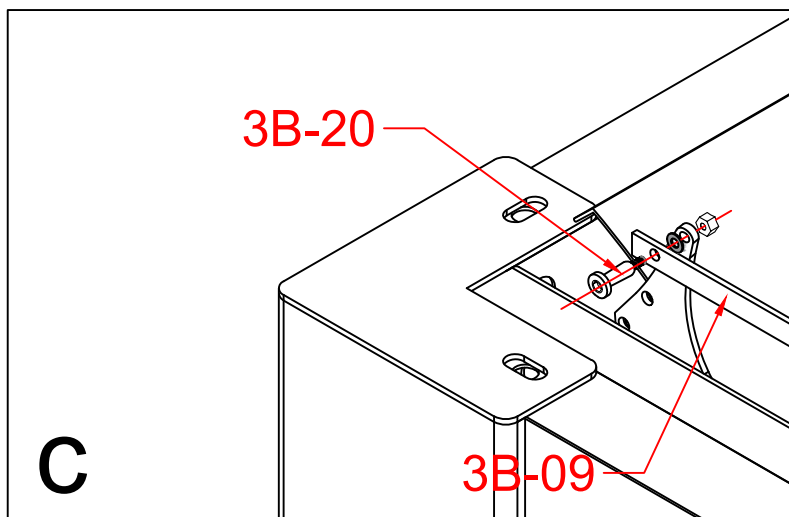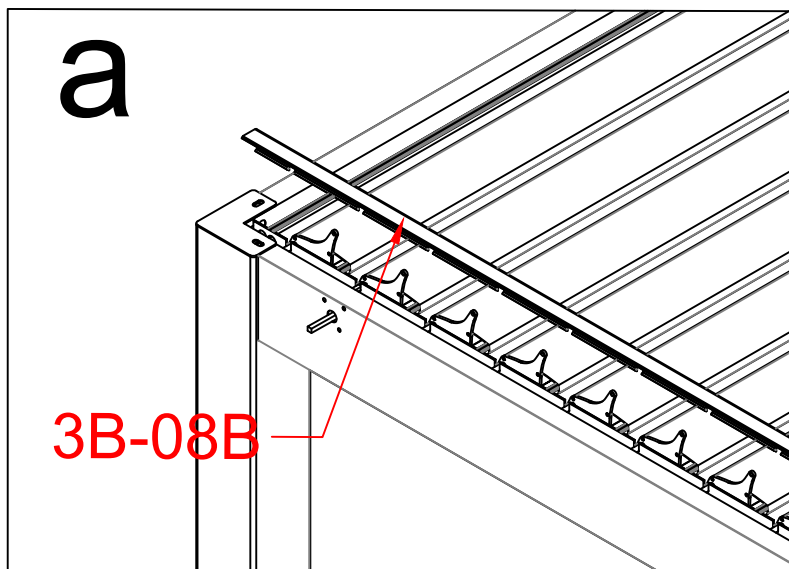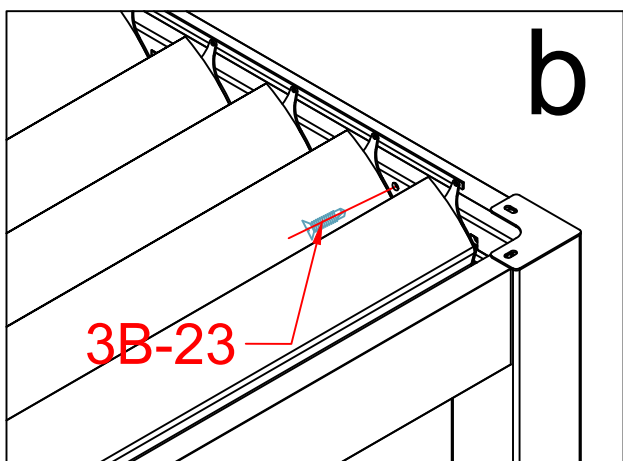





The driving bar shall be
always outside of louver
end caps. If inside, louvers
could not be opened
100%

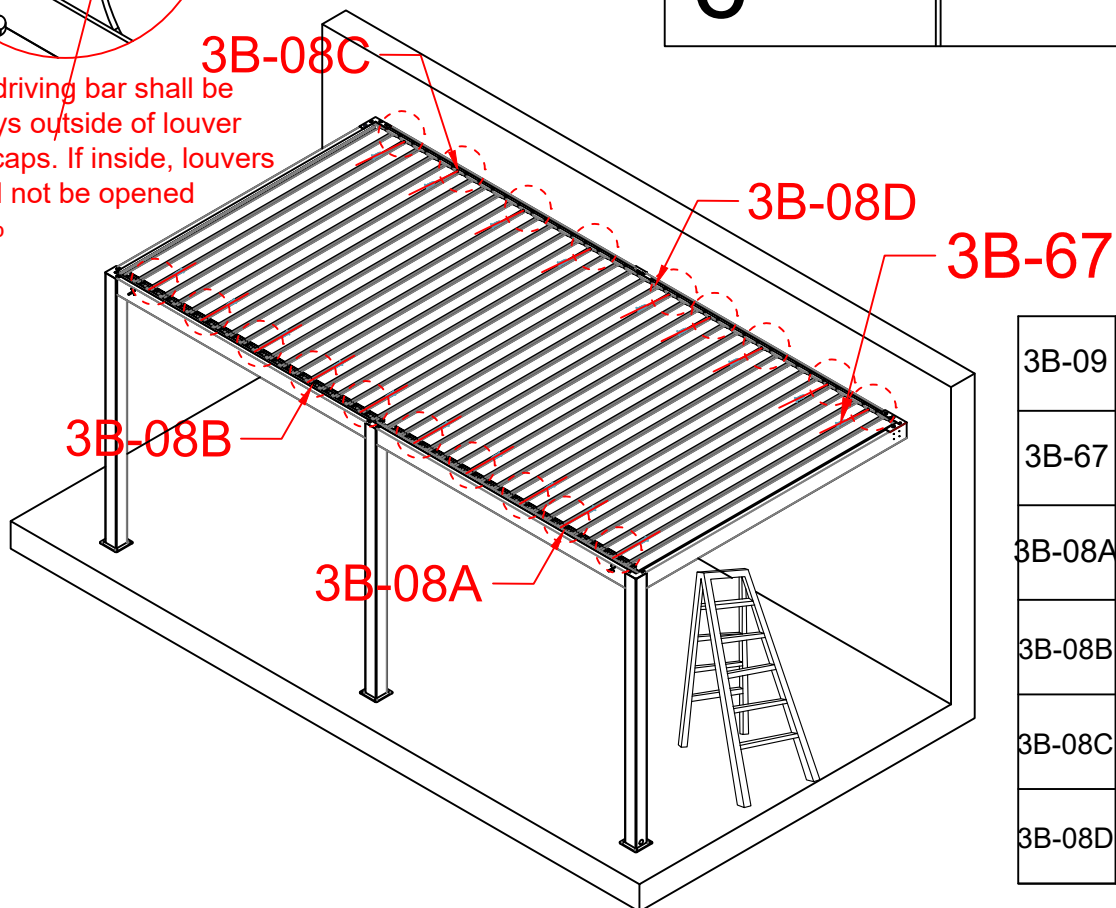


3B-09		2
3B-67		20
3B-08A		1
3B-08B		1
3B-08C		1
3B-08D		1

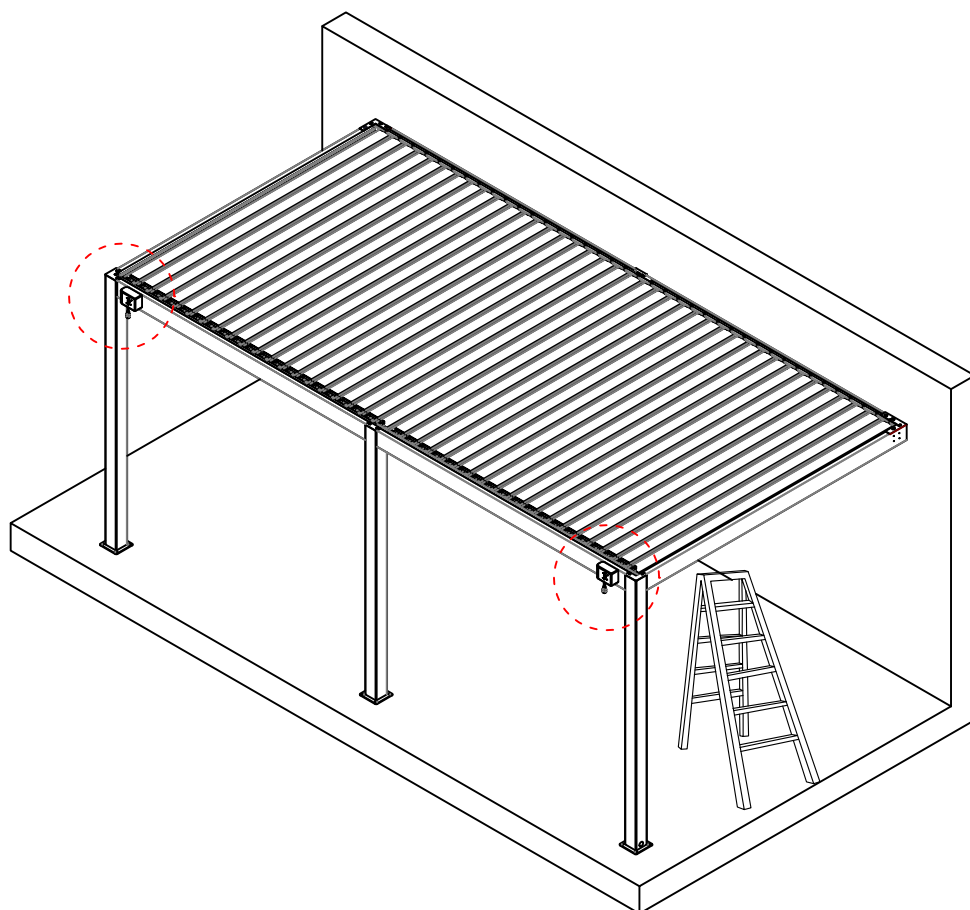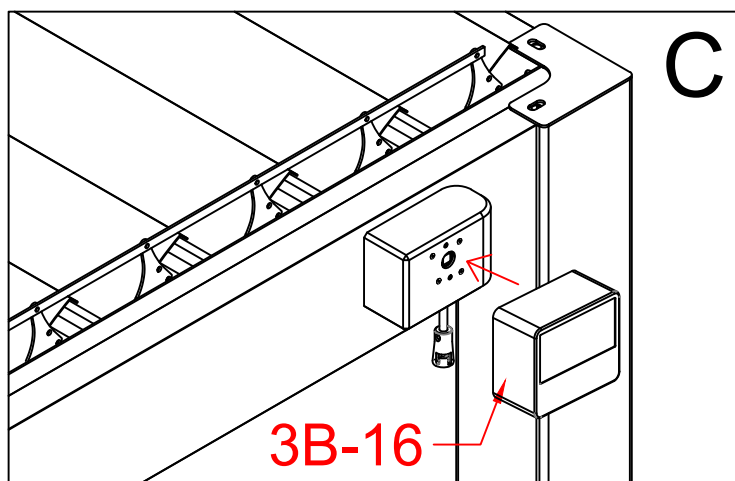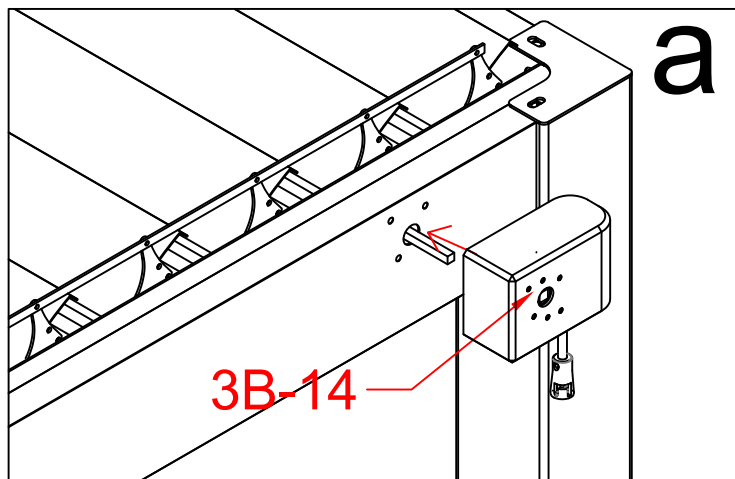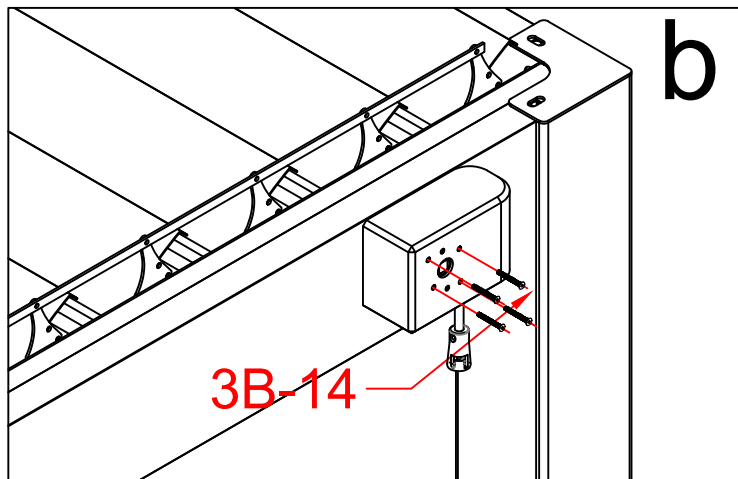



3B-14	 + 	2
3B-16		2

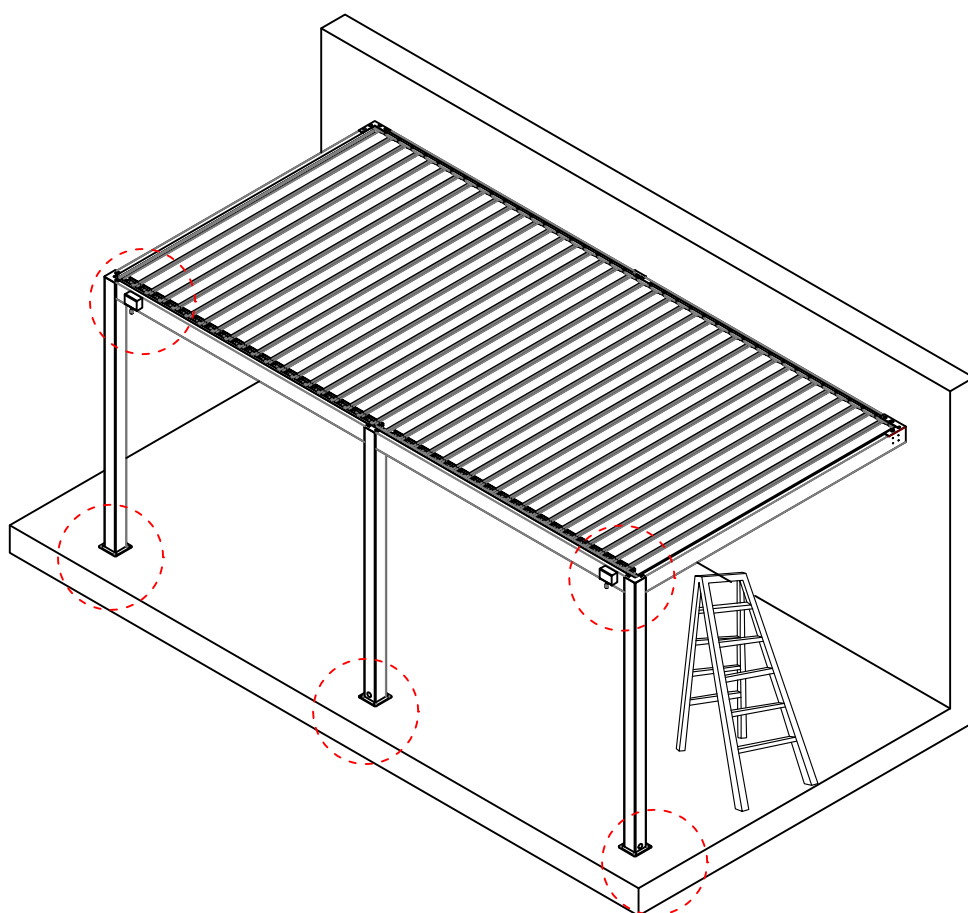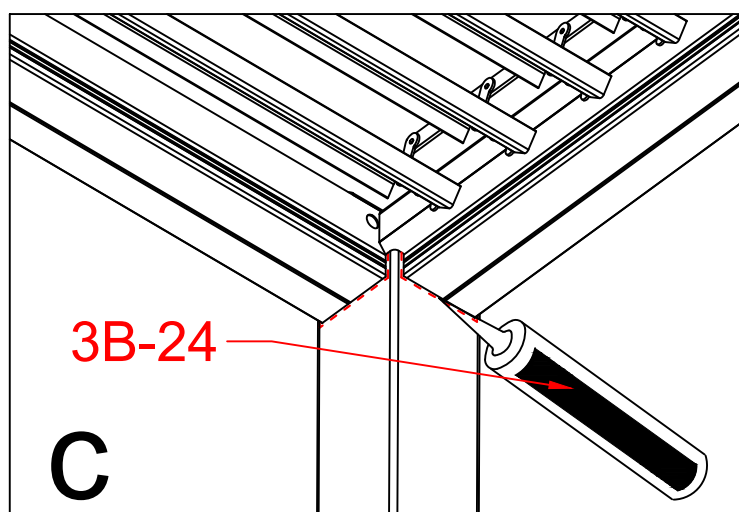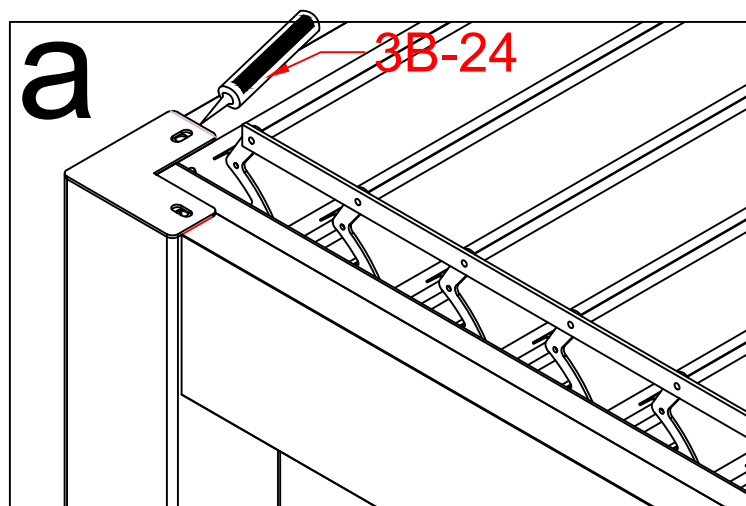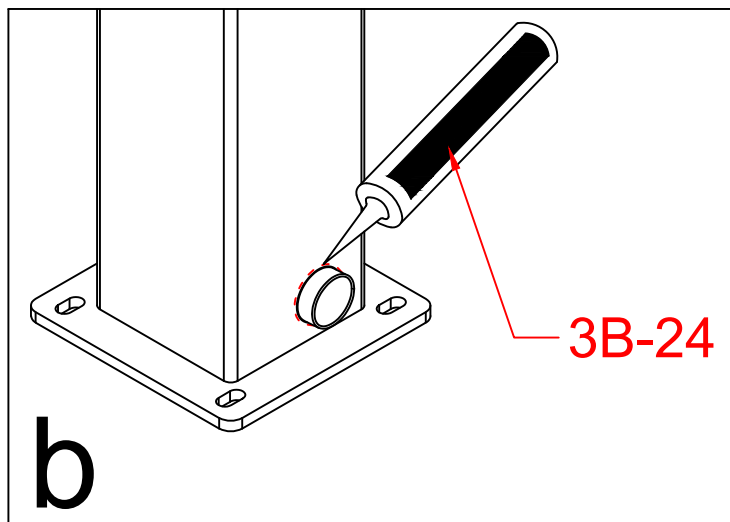

3B-24		1
-------	--	---

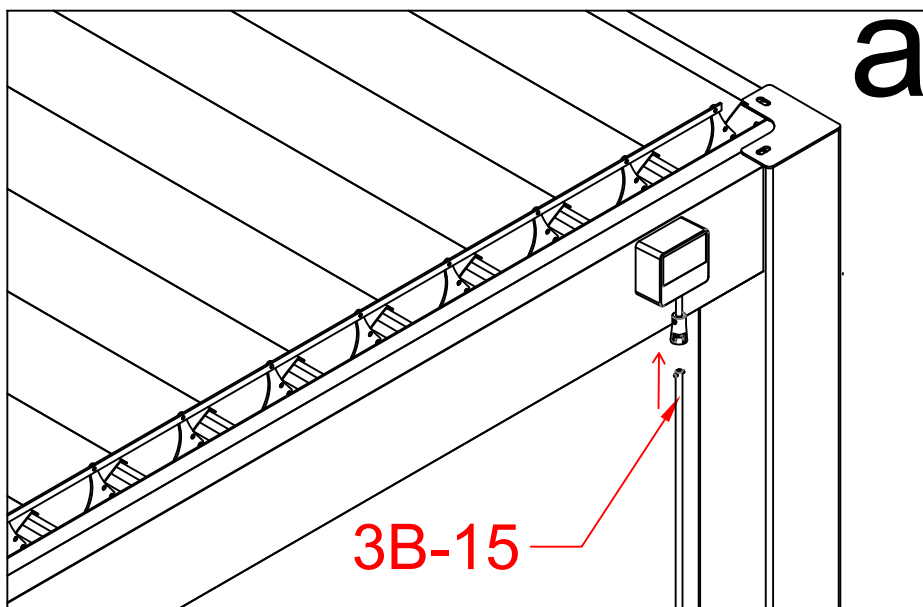

Warning
In Snow / Wind season or in case of
snow / wind forecast open up your shutters
in vertical position to avoid any damaging
on your pergola.

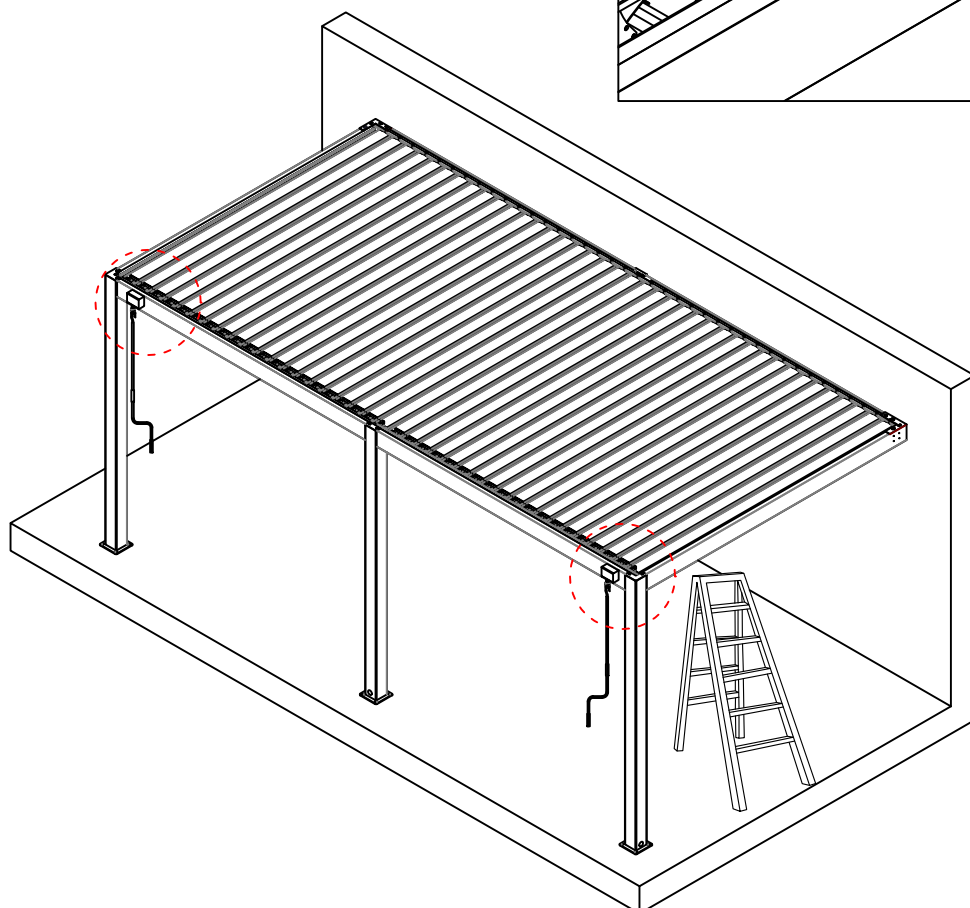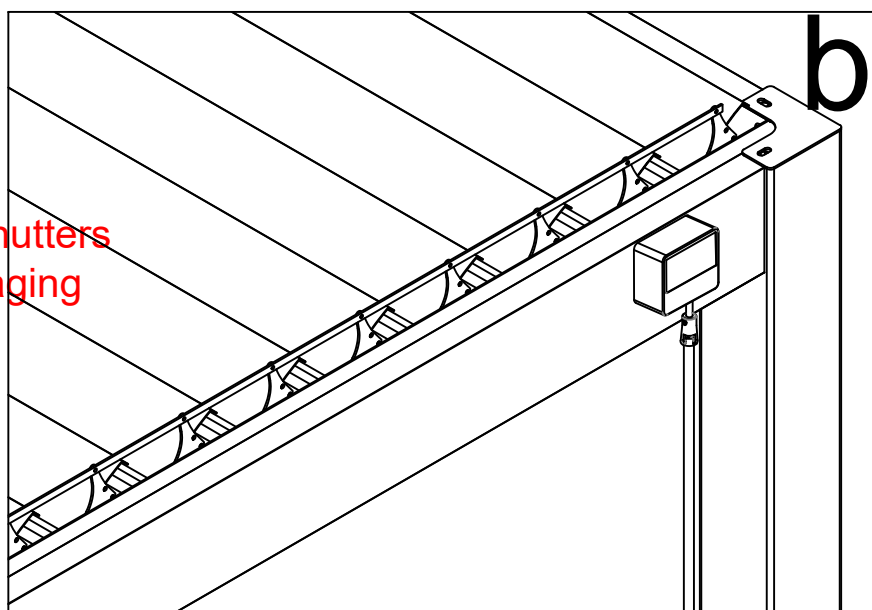

3B-15		2
-------	--	---

